



Charge the handset(s) 24 hours
before use.

PHILIPS

4	Important Information
4	For your safety
4	Installation requirements
4	Need Help?
5	What's in the box?
6	Your CD530
6	Overview of the handset
9	Overview of the base station
9	Main features of your CD530
11	Connect
12	Install
17	Call
21	Phonebook
24	Call log
26	SMS
33	Clock & Alarm
34	Personal Settings
39	Advanced Settings
46	Network Services
49	Games
50	Troubleshooting
52	Information
53	Index

For your safety

In the event of a power failure, you cannot use this handset to make or receive calls. Alternative arrangements should be made for access to emergency calls.

Your PIN code is preset to 0000. If you change your PIN code, keep the PIN details in a safe place where you have easy access to them. Do not lose the PIN code.

To avoid damage or malfunction:

- Do not allow the product to come into contact with liquid.
- Do not open it as you could be exposed to high voltages.
- Never use any battery type other than the one supplied.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Active mobile phones in the vicinity may cause interference.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.

About operating and storage temperatures:

- Operate in a place where temperature is always between 0 and 35° C (32 to 95° F).
- Store in a place where temperature is always between -20 and 45° C (-4 to 113° F).
- Battery life may be shortened in low temperature conditions.

Installation requirements

This product requires an electrical supply of 220-240 volts, alternating monophased power, excluding IT installations defined in standard EN 60-950. In case of power failure, the communication can be lost.

The electrical network is classified as hazardous according to criteria in the standard EN 60-950. The only way to power down this product is to unplug the power supply unit from the electrical outlet. Ensure the electrical outlet is located close to the apparatus and is always easily accessible.

The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60-950.

Need Help?

For more information on troubleshooting and FAQs:

Troubleshooting: page 50

Online Help

www.p4c.philips.com

What's in the box?

EN

The following accessories are included with your CD530:



Handset



Base station



Power supply for
base station



Line cord



2 AAA
rechargeable
batteries



Battery door



User Guide



Quick Start
Guide



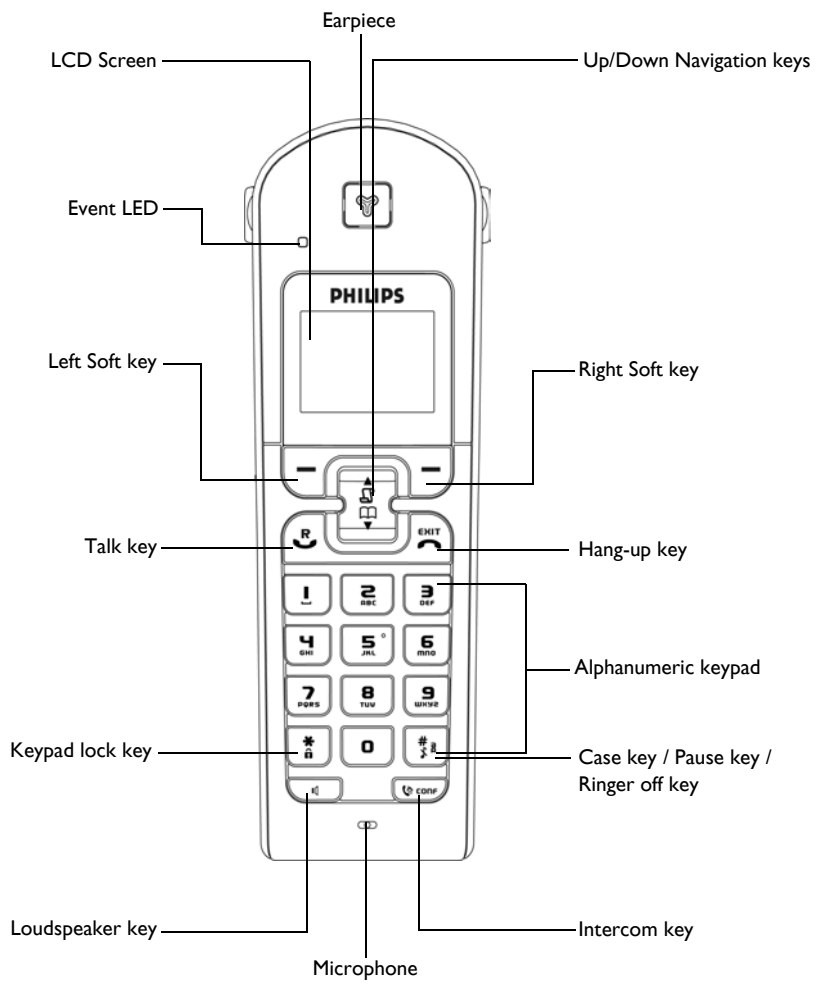
Warranty card

The line adaptor may not be attached to the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

Your CD530











Overview of the handset



 
Your CD530

EN

Handset keys

Press	To
	Enter the main menu from stand-by mode. Select the function displayed on the handset screen directly above it. Activate mute function during a call.
	Go to redial list from stand-by mode. Select the function displayed on the handset screen directly above it.
	Answer an incoming external or internal call. Insert R for operator services when on the line.
	Hang up a call. <i>Long press</i> from menu browsing to return to stand-by mode, short press to return to previous menu. <i>Long press</i> in stand-by mode to switch off the handset, short press to switch on the handset again.
	Access call log from stand-by mode. Scroll up a menu list or go to the previous phonebook or call log record. Increase earpiece volume during a call. Go to the previous character in editing mode.
	Access phonebook from stand-by mode. Scroll down a menu list or go to the next phonebook or call log record. Decrease earpiece volume during a call. Go to the next character in editing mode.
	Initiate an internal call.
	Answer an incoming call in handsfree mode. Activate and deactivate the loudspeaker* during a call.
	Dial # in stand-by mode. <i>Long press</i> to mute the ringer in stand-by mode. Insert a pause in dialling mode. Switch between upper and lower case in editing mode.
	Dial * in stand-by mode. <i>Long press</i> to activate and deactivate keypad lock.









Soft key

 BACK	Short press from menu browsing to return to the previous menu.
--	--

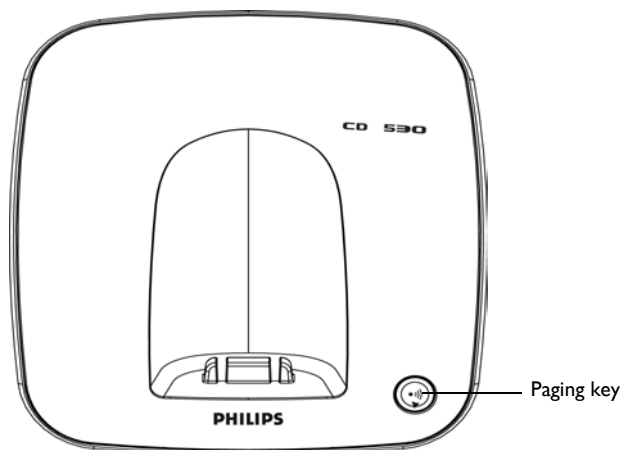
***WARNING** Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

Display icons & symbols

In stand-by mode, several icons & symbols may be displayed on the handset.







 
	The handset is registered and within range of the base station. It blinks when the handset is out of range or is searching for a base.
	Battery symbol indicating 3 different battery levels.
	The ringer volume is set to zero.
	There is an external incoming call, an external call is connected or an external call is held.
	There is an internal incoming call, an internal call is connected or an internal call is held.
	The loudspeaker is ON.
	Alarm clock is activated.
	Blinks when there is a missed call, or when new SMS or voicemail messages are received and not read yet. Steady when there are received SMS messages in the SMS box.

Overview of the base station



 
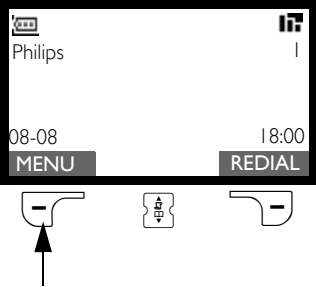


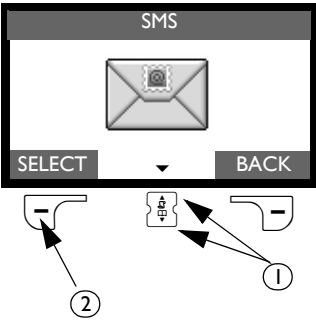

 

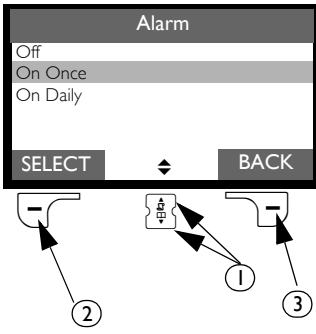
Main features of your CD530

The following is an overview of the menu options that are available in your CD530. For detailed explanation of the menu options, please refer to the corresponding sections in this User Guide.

Menu	To	Page
SMS 	Setup, write/read SMS, etc	26
PHONEBOOK 	Add, edit and manage phonebook entries	21
CLOCK & ALARM 	Set date and time, alarm and alarm tone	33
PERSONAL SET 	Set Handset tone, Wallpaper, Contrast level, Screensaver, Handset name, Auto pickup/Hang-up, Languages and Babysit mode	34
ADVANCED SET 	Set Recall time, Dial mode, Call barring, Baby call mode, Register/Unregister handset, Select Base, Change PIN, Reset phone, Auto prefix, Country and Conference mode	39
NET. SERVICE 	Set Call forwarding, Voice mail, Call back, Caller ID	46
GAMES 	Play games	49

Menu navigation

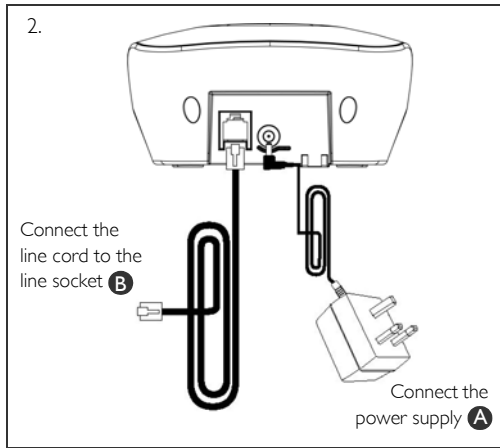
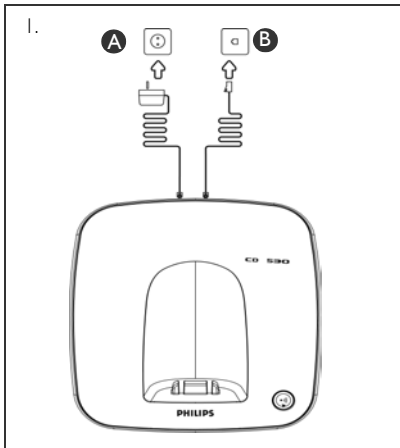
The basic steps of navigating through the menus and options are as follows:

Task	Action	Illustration
Enter main menu/menu options.	Choose MENU by pressing the key directly below it (left soft key ).	
<ul style="list-style-type: none"> • Go to a specific menu/option • Confirm your selection 	<ol style="list-style-type: none"> 1. Press  key to scroll to your desired menu/option. 2. Choose SELECT by pressing the key directly below it (left soft key . 	
<p>In this example, the alarm is On Once.</p> <ul style="list-style-type: none"> • To change your selection • To confirm your selection • Return to previous menu level or stand-by screen 	<ol style="list-style-type: none"> 1. Press  key to scroll to your desired option. 2. Choose SELECT by pressing the key directly below it (left soft key . 3. Choose BACK by pressing the key directly below it (right soft key . 	

The location of your base station can have an effect on the range and performance of your CD530 (see TIP below).

Connecting the Base Station

1. Place the base station in a central location near the telephone line socket and electricity sockets.
2. Connect the line cord and the power cable to the proper connector at the back of the base station.



3. Connect the other end of the line cord to the telephone line socket and the other end of the power cable to the electricity socket.

The line adaptor may not be attached to the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

TIP Avoid placing the base station too close to large metal objects such as filing cabinets, radiators or electrical appliances. This can impair the range and sound quality. Buildings with thick internal and external walls may impair transmission of signals to and from the base.

WARNING The base station does not have an ON/OFF switch. Power is applied when the power adaptor is plugged into the unit and connected to the electricity socket. The only way to power down the unit is to unplug the power adaptor from the electricity socket. Therefore, ensure that the electricity socket is easily accessible.

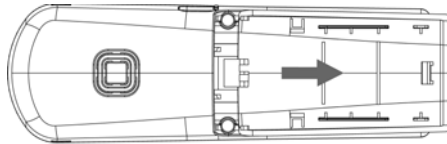
The power adaptor and telephone line cord have to be connected correctly, as incorrect connection could damage the unit.

Always use the telephone line cord supplied with the unit. Otherwise, you may not get a dial tone.

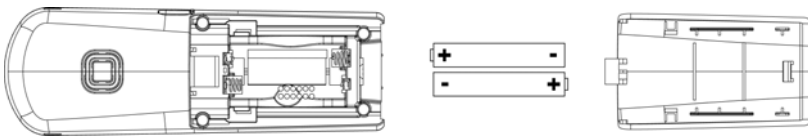
Install battery

Your CD530 is supplied with 2 rechargeable batteries allowing approximately up to 12 hours of talk-time and up to 150 hours stand-by time. Before using the handset, the batteries have to be installed and fully charged.

1. Slide out the battery cover.

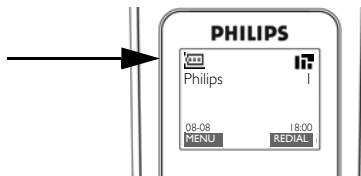



2. Place the batteries as indicated and replace the cover.



Charge battery

1. Place the handset on the charging cradle of the base station. A beep is emitted if the handset is placed correctly.
2. A charging animation on the handset indicates that the battery is charging.



3. Leave it there until the batteries are fully charged (at least 24 hours).
4. The handset is fully charged when the charging animation stops and  is displayed.

The handset must be charged for at least 24 hours before using it for the first time.

Battery life and range

Talk time and stand-by time


When the battery is fully charged, the talk time of your CD530 is approximately 12 hours and the stand-by time is approximately 150 hours.

Low battery warning


The battery level is shown at the top left of the handset screen. When the battery level becomes low, the low battery sensor alerts you by sounding an audible tone and blinking the battery icon.

If the battery level becomes exceedingly low, the phone automatically switches off shortly after the alert and any function in progress will not be saved.

The approximate power levels of your battery are indicated as follows:


 *Battery is fully charged* - 3 bars in the battery icon

 *Battery is partially charged* - 2 bars in the battery icon

 *Battery is running low* - 1 bar in the battery icon




 
 *Battery is fully discharged* - 0 bar in the battery icon

Out of range warning

The indoor and outdoor range of the phone is up to 50 metres and 300 metres respectively. When the handset moves beyond operation range, the antenna icon  will blink.

Configure your CD530

 

 

Before you use your CD530, you need to configure it according to the country of use. After charging it for a few minutes, the WELCOME screen appears. Follow these steps to configure your phone:

1. Press any key to display the list of countries.
2. Scroll  to your country.
3. Press  **SELECT** to confirm your selection.
4. Scroll  to your operator (if necessary).
5. Press  **SELECT** again to confirm your selection.
6. The default line settings and menu language for the selected country will be automatically configured.

You can still make outgoing calls or receive incoming calls without first defining your country selection.

Depending on your country, the WELCOME screen may not appear. In this case, you are not required to select your country/operator/language settings.

Set date and time

1. Press  MENU.
2. Scroll  to Clock & Alarm and press  SELECT.
3. Press  SELECT to enter Set Date/Time.
4. Enter current time (HH:MM) and current date (DD/MM/YY) and press  SELECT.

WARNING If your phone is connected to an ISDN line through an adaptor, the date & time may be updated after each call. The availability of date & time update is dependent on your network provider. Please check the date & time settings in your ISDN system or contact your network provider.

Now, you are ready to use your phone.

Basic operations of your CD530


Make a call

Enter the phone number (maximum 24 digits) and press  to dial the number.

For details, please refer to "Make a call" on page 17.


Answer or end a call

Press  key to answer a call.

Press  key to end a call.

For details, please refer to "Answer a call" and "End a call" on page 18.

Switch the handset on/off

Press and hold  key for 5 seconds to switch off the handset in stand-by mode.


Short press  key to switch on the handset again.

Keypad lock/unlock

Press and hold  key for 2 seconds to lock and unlock the keypad in stand-by mode.

Paging

The paging feature enables you to locate a missing handset if the handset is in range and contains charged batteries.

Press  key on the base until the handset starts to ring.

Once retrieved, press  to end the paging.

Stand-by mode

If the handset is idle for 30 seconds in settings mode, review mode, edit mode, etc. it will automatically return to stand-by mode. It will also return to stand-by mode automatically when the handset is placed back on the base station.

Screen and keypad backlight

The backlight remains on for 20 seconds after each activation such as an incoming call, key presses, lifting up the handset off the base station, etc. The color of the keypad backlight is AMBER.

Event LED


If you have subscribed to Caller Line identification, the event LED on your handset blinks when there is a new event such as a new call, a new SMS or a new voice mail message.


Text and number entry

Key	Assignment
	space 1 @ _ # = < > () & £ \$ ¥ [] { } □ §
	a b c 2 à ä ç å æ
	d e f 3 é è Δ Φ
	g h i 4 ï Γ
	j k l 5 Λ
	m n o 6 ñ ò ö
	p q r s 7 β Π Θ Σ
	t u v 8 ù ü
	w x y z 9 ø Ω Ξ Ψ
	. 0, / ; ; “ ‘ ! i ? * + - % \ ^ ~


For example, to enter the name "Philips":

1. Press once: P
2. Press twice: Ph
3. Press three times: Phi
4. Press three times: Phil
5. Press three times: Phili
6. Press once: Philips

7. Press  four times: Philips


By default, the first letter of a word is in upper case. Press  to switch between upper and lower case.

Default settings



Ringer Volume	Medium
Earpiece Volume	Volume 3
Speaker Volume	Volume 3
Key Beep	On
Wallpaper	
Contrast	Level 2
Screensaver	On
Auto Pick-up	Off
Auto Hang-up	On
Babysit mode	Off
Alarm clock	Off
Barring mode	Off
SMS reception	On
Master PIN	0000

Make a call




Predialling

1. Enter the phone number (maximum 24 digits).
2. Press  to dial the number.

Direct dialling





1. Press  or  to take the line.
2. Enter the phone number.

Call from redial list

1. Press  in stand-by mode.
2. Scroll  to an entry in the redial list.
3. Press  to dial the number.




TIP The handset stores the last 20 numbers dialled. The last number dialled will appear first in the redial list. If the redial number matches a phonebook entry, the name will be displayed instead.


 

Call from the call log

1. Press  in stand-by mode.
2. Press  **SELECT** to enter call log.
3. Scroll  to an entry in the call log.
4. Press  to dial the number.

You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log. See "Call log" on page 24 for details.

Call from the phonebook

1. Press  in stand-by mode.
2. Scroll  to a phonebook entry.
3. Press  to dial the number.

TIP Instead of scrolling  to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing  will show the entries starting with A. Pressing  again will show the entries starting with B, etc...

Answer a call

When the phone rings, press  key.

Handsfree answering

When the phone rings, press  key.

Incoming call has priority over other events. Whenever there is an incoming call, other status in progress such as phone setting, menu navigation, etc will be aborted.

TIP If Auto Pick-up mode (see page 37) is activated, you can simply lift up the handset from its base station to answer the call. This feature is deactivated by default.

WARNING When the handset rings during an incoming call, please do not hold the handset too close to your ear as the volume of the ringing tone may damage your hearing.

End a call

Press  key.

The call duration will be displayed on the handset screen for about 5 seconds.

TIP If Auto Hang-up mode (see page 37) is activated, you can simply place the handset back to its base station to end the call. This feature is activated by default.



Calls in-progress

The following options are available during a call:

Adjust earpiece volume


1. Press  to select from Volume 1 to Volume 5.

Mute/unmute the handset

1. During a call, press  **MUTE** to turn off the microphone so that your correspondent cannot hear you.
2. Press  **UNMUTE** to turn on the microphone.


Loudspeaker mode

1. Press  key to activate loudspeaker mode.

2. Press  key again to return to normal mode.

WARNING Activation of loudspeaker can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

Adjust loudspeaker volume




1. Press  key to select from Volume 1 to Volume 5.

Intercom

This feature is only available when there are at least 2 registered handsets. It allows you to make free internal calls, transfer external calls from one handset to another and use the conference option.




Intercom another handset

To be able to use intercommunication feature, you must have at least 2 handsets registered to your base station (see page 42 "To register an additional handset").

1. Press  key in stand-by mode.
2. Intercom is established immediately if there are only 2 registered handsets. If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Press  **ALL** to call all the handsets or press the handset number to select a specific handset, e.g. press  to call handset 2.



If the handset does not belong to CD530/535 range, this function may not be available.

Transfer an external call to another handset

1. Press  key to put the external call on hold (the caller can no longer hear you).
2. Intercom is established immediately if there are only 2 registered handsets. If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Press  **ALL** to call all the handsets or press the handset number to select a specific handset, e.g. press  to call handset 2.

The called handset rings.

If there is no answer from the called handset, press  key to resume the external call.


 

 
3. Press  key on the called handset to answer the internal call, where both internal callers can talk.
4. Press  key on the first handset to transfer the external call to the called handset.

Switch between an internal and external call

1. Press  key once to switch between an internal call and external call.

Three-party conference call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

1. Press  to put the external call on hold (the caller can no longer hear you).
2. Intercom is established immediately if there are only 2 registered handsets. If there are more than 2 registered handsets, the handset numbers which are available for establishing a conference call will be displayed. Press  ALL to call all the handsets or press the handset number to select a specific handset, e.g. press  to call handset 2.
The called handset rings.
3. Press  key on the called handset to answer the internal call, where both internal callers can talk.
4. Press CONF soft key on the first handset to start the three-party conference.

TIP If Conference mode is activated (see page 45), a three-party conference call is automatically established if the second handset takes the line when there is already an external call in progress.

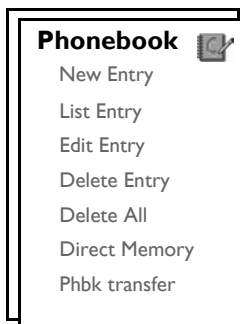
Call waiting

If you have subscribed to Call Waiting service, the earpiece will emit a beep tone to inform you that there is a second incoming call. The number or name of the second caller will also be displayed if you have subscribed to Caller Line Identification service (CLI). Please contact your network provider for more information on this service.

To answer the second call, press  +  (may be different according to your network).

Caller Line Identification

Caller Line Identification (CLI) is a special service that you may subscribe from your network operator. If you have subscribed to CLI service, and provided the identity of the caller is not withheld, the number or name of the caller (if stored in the phonebook) will be displayed when the phone rings so that you may decide whether to answer the call or not. Please contact your network provider for more information on this service.



Your CD530 can store up to 50 phonebook memories, including 9 direct access memories (☐ to ☐). Each phonebook entry can have a maximum of 24 digits for the phone number and 12 characters for name.

Access phonebook

1. Press in stand-by mode or press MENU, scroll to Phonebook and press SELECT, scroll to List Entry and press SELECT.
2. The phonebook entries will be listed in alphabetical order.
3. Press to browse the phonebook.

To view the details of a phonebook entry, press VIEW.

To dial a number from the phonebook, scroll to the phonebook entry and press .

TIP Instead of scrolling to browse the phonebook entries, you can press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing will show the entries starting with A. Pressing again will show the entries starting with B, etc...

Store a contact in the phonebook

1. Press MENU, scroll to Phonebook and press SELECT, press SELECT to enter New Entry.
2. Enter the name of the contact (maximum 12 characters) and press OK.
3. Enter the number (maximum 24 digits) and press OK.
4. Enter the SMS Box number and press OK (only for UK).

Phonebook

5. Scroll to choose a group (<No Group>, <Group A>, <Group B>, <Group C>) and press **SELECT** to confirm.
A long confirmation beep tone is emitted.

You can assign individual contacts to specific groups of your choice. For example, Group A contains phone numbers of all your co-workers. You can also assign a specific ring melody to that group (see "Group Melody" on page 35) . If you have subscribed to Caller Line Identification service from your network provider, every time someone from that group calls you, you will hear the designated ringtone for that group.

TIP You can store up to 50 phonebook entries. You cannot store a new phonebook entry when the memory is full. In this case, you have to delete existing entries to make space for new entries.

Edit a phonebook entry

1. Press **MENU**, scroll to Phonebook and press **SELECT**, scroll to Edit Entry and press **SELECT**.
2. Scroll to the entry you wish to edit and press **SELECT**.
3. Press **CLEAR** to erase the letters one by one, edit the name and press **OK**.
4. Press **CLEAR** to erase the digits one by one, edit the number and press **OK**.
5. Enter the SMS Box number and press **OK** (only for UK).
6. Scroll to a group (<No Group>, <Group A>, <Group B>, <Group C>) and press **OK** to confirm.
A long confirmation beep tone is emitted.



Delete a phonebook entry












1. Press **MENU**, scroll to Phonebook and press **SELECT**, scroll to Delete Entry and press **SELECT**.
2. Scroll to the entry you wish to delete and press **SELECT**.
A long confirmation beep tone is emitted.

Delete all phonebook entries









 
1. Press **MENU**, scroll to Phonebook and press **SELECT**, scroll to Delete All and press **SELECT**.
2. Press **SELECT** again to confirm.
A long confirmation beep tone is emitted.

Store direct access memory

You can store up to 9 direct access memories (Key  to ). A long press on the keys in stand-by mode will automatically dial the stored phone number.







 

 
1. Press  **MENU**, scroll  to Phonebook and press  **SELECT**, scroll  to Direct Memory and press  **SELECT**.
2. Select a key (Key 1 to Key 9) and press  **VIEW**. If there is a stored number in that key, the number/ name will be displayed.
3. If there is no number stored for the selected key or if you want to change the number currently stored, press  **SELECT** and press  **SELECT** again to select Add.
4. Press  **OK** to display the phonebook list and scroll  to the entry you wish to store as direct access memory.
5. Press  **OK** to confirm.
A long confirmation beep tone is emitted.

Delete a direct access memory

1. Press  **MENU**, scroll  to Phonebook and press  **SELECT**, scroll  to Direct Memory and press  **SELECT**.
2. Select a key (Key 1 to Key 9) and press  **VIEW**.
3. Press  **MENU** and scroll  to Delete.
4. Press  **OK** to confirm.
A long confirmation beep tone is emitted.

Transfer phonebook

This feature allows you to transfer the phonebook from one handset to another handset when there are at least 2 handsets registered to your base station.

1. Press  **MENU**, scroll  to Phonebook and press  **SELECT**, scroll  to Phbk transfer and press  **SELECT**.
2. The handset numbers which are available for transfer will be displayed. If there are more than 2 handsets, you can scroll  to select a specific handset.
3. Press  **SELECT** to confirm.
4. The called handset will be prompted with a message Transfer from Handset X.
5. To accept the transfer of phonebook, press  **SELECT** on the called handset; to reject the transfer, press  **CANCEL**.
6. A message Transferred! will be displayed upon successful completion.

The call log can store up to 50 entries. If you have subscribed to Caller Line Identification (CLI), and provided the identity of the caller is not withheld, the name (or number) of the caller will be displayed together with the date & time of the call (if provided by the network). The calls (missed and received) are displayed in chronological order with the most recent call at the top of the list. When the call log is empty, the screen displays List Empty.

Access call log

1. Press in stand-by mode, press SELECT to enter Call Log and scroll to view the entries.

Save call log entry to phonebook

1. Press in stand-by mode, press SELECT to enter Call Log and scroll to select an entry.
2. Press SELECT and press SELECT again to Copy to Phbk.
3. Enter name and press OK.
4. Edit number if necessary and press OK.
5. Enter the SMS Box number and press OK (only for UK).
6. Scroll to choose a group (<No Group>, <Group A>, <Group B>, <Group C>) and press SELECT to confirm.
A long confirmation beep tone is emitted.

Delete call log entry

1. Press in stand-by mode, press SELECT to enter Call Log and scroll to select an entry.
2. Press SELECT and scroll to Delete.
3. Press SELECT to confirm.
A long confirmation beep tone is emitted.




Delete all call log

1. Press in stand-by mode, press SELECT to enter Call Log.
2. Press SELECT and scroll to Delete All and press SELECT.
3. Press SELECT again to confirm.
A long confirmation beep tone is emitted.







 
 


Access redial list

1. Press in stand-by mode and scroll to view the entries.






View details of a redial list entry

1. Press  in stand-by mode and scroll  to select an entry.
2. Press  **SELECT** and press  **SELECT** again to View.


 



Save redial list entry to phonebook

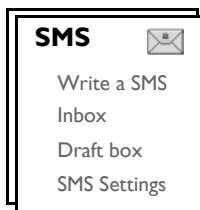
1. Press  in stand-by mode and scroll  to select an entry.
2. Press  **SELECT**, scroll  to Copy to Phbk and press  **SELECT**.
3. Enter name and press  **OK**.
4. Edit number if necessary and press  **OK**.
5. Enter the SMS Box number and press  **OK** (only for UK).
6. Scroll  to choose a group (<No Group>, <Group A>, <Group B>, <Group C>) and press  **SELECT** to confirm.
A long confirmation beep tone is emitted.

Delete a number from redial list

1. Press  in stand-by mode and scroll  to select an entry.
2. Press  **SELECT** and scroll  to Delete and press  **SELECT**.
A long confirmation beep tone is emitted.

Delete all redial list

1. Press  in stand-by mode.
2. Press  **SELECT** and scroll  to Delete All and press  **SELECT**.
3. Press  **SELECT** again to confirm.
A long confirmation beep tone is emitted.



SMS stands for Short Message Service. To benefit from this service, you must subscribe to Caller Line Identification Service (CLI) together with SMS service from your network provider. SMS messages can be exchanged with a phone (mobile or compatible fixed lines), provided the receiver has also subscribed to CLI and SMS services.

The factory settings on your CD530 correspond to the main national operator. If you wish to send or receive SMS messages through another service provider, you must set the corresponding numbers (see page 31).

You can create up to 10 SMS boxes (Box 0 to Box 9) and protect each box with a password (only for UK). Your CD530 can store up to 50 SMS messages (40 SMS in the Inbox and 10 SMS in the Draft box) shared by all the SMS boxes and the maximum length of each message is 160 characters.

In order to send and receive SMS messages, there must be at least one SMS Box. Box 9 with empty password is created by default (only for UK). For more information, please refer to "SMS Box (only for UK)" on page 30.

Write and send new SMS

1. Press MENU, press SELECT to enter SMS, press SELECT again to enter Write a SMS.
2. Scroll to the desired SMS Box (Box 0 to Box 9) and press SELECT to enter password (only for UK).
3. Enter the password (if needed) and press OK.

Key	Operation
	Press to move cursor left by 1 position. Press and hold to jump to the 1st character/digit.
	Press to move cursor right by 1 position. Press and hold to jump to the last character/digit.
CLEAR	Press to erase the previous character/digit. Press to return to the previous menu if there are no characters/digits on the input screen. Long press to delete all characters/digits.

4. Enter the text and press OK.

You can enter up to 160 characters for an SMS.

If you receive a call while writing an SMS, the operation will be interrupted. However, your SMS will be saved in the Draft box. To retrieve it, go to Draft box in your SMS menu (see page 29).

5. Enter the destination phone number and press **OK**. Or press **PHBK** to browse the phonebook list to select a phone number; press **SELECT** and press **OK**.
6. Enter the destination box number (0 to 9) directly and press **OK** (only for UK).

By default, the destination box is 9 (the default destination box depends on the country).

7. Press **SELECT** to Send the message or scroll to Save as Draft to save the message in the Draft box and press **SELECT** to confirm.
8. If you select Send, the message will be sent immediately. SMS Sent! will be displayed if the message has been sent successfully.

If the message cannot be sent successfully, the screen will display SMS not Sent! and the message will be saved in the Draft box.

WARNING When composing your SMS, if no keys are pressed for 60 seconds, the handset will return to stand-by mode. The edited message will be automatically saved in the Draft box.

Inbox

The messages in the Inbox are listed according to the time of receipt, with the newest message appearing first. The Inbox can store up to 40 messages (shared between Box 0 to Box 9).

 
Each time an SMS is received, you will be alerted by a beep tone (see "SMS Tone" on page 35) and the screen displays the number of new messages received. If LED is activated, the event LED will blink until the SMS has been reviewed.

WARNING When the message box is full, you will not be able to receive new messages. In this case, you need to delete some old messages in order to receive new ones

View Inbox messages


1. Press **MENU**, press **SELECT** to enter SMS, scroll to Inbox press **SELECT**.
2. Scroll to your desired box number and press **SELECT** (only for UK).
3. Enter the password and press **OK** (Password is not required for Box 9).
4. Browse the list of SMS messages and select the message you wish to read. The message list will be displayed with the sender's phone number or corresponding name (if the number matches the phonebook record).
5. Press **VIEW** to view the message content.


TIP While reading an SMS, press to scroll to the next or previous row. At the end of the message, the sender's phone number and the date and time of reception are shown.

6. When viewing the message content, you can press  **MENU** to access the following options:

 



Reply	Send a reply to the sender of the message.
Edit	Forward the message to another recipient.
Copy to Phbk	Save the sender's number to your phonebook.
Delete	Delete the selected message.
Delete All	Delete all messages in the Inbox.

7. To return to SMS menu, press .

 

 

Press  while viewing the message content/sender number/date/time stamp will abort the SMS function and dial the sender's phone number.

Press  to return to Inbox message list.

 

 





Reply to an Inbox message

1. While viewing the message content, press  **MENU** to display the Inbox menu options.
2. Scroll  to Reply and press  **SELECT** to start editing.
3. After editing, press  **OK** to confirm the message.
4. Refer to steps 5 to 7 in "Write and send new SMS" on page 26 to send the message or select Save as Draft to save the message in the Draft box.

Forward an Inbox message

1. While viewing the message content, press  **MENU** to display the Inbox menu options.
2. Scroll  to Edit and press  **SELECT** to start editing it if you wish.
3. After editing, press  **OK** to confirm message.
4. Refer to steps 5 to 7 in "Write and send new SMS" on page 26 to forward the message or select Save To Draft to save the message in the Draft box.

Save sender's phone number to phonebook

1. While viewing the message content, press  **MENU** to display the Inbox menu options.
2. Scroll  to Copy to Phbk and press  **SELECT** to enter a name for this new contact.
3. Enter the name and press  **OK** to modify number.
4. To confirm the number, press  **OK** again.
5. Enter the SMS Box number and press  **OK** (only for UK).
6. Scroll  to select a group you wish to assign for this contact and press  **SELECT** to confirm. A long confirmation beep is emitted and the screen returns to display the message content.

Delete an Inbox message

1. While viewing the message content, press  **MENU** to display the Inbox menu options.
2. Scroll  to Delete and press  **SELECT** to confirm deletion.


 

 


 


Delete all Inbox messages

1. While viewing the message content, press  MENU to display the Inbox menu options.
2. Scroll  to Delete All and press  SELECT.
3. Press  SELECT again to confirm deletion.

Draft box

 

 

 
In addition to SMS messages saved as drafts, all the SMS messages that are not successfully sent will be automatically stored in the Draft box. The Draft box can store up to 10 messages.

Review Draft messages

 



1. Press  MENU, press  SELECT to enter SMS, scroll  to Draft box and press  SELECT.
2. Scroll  to your desired box number and press  SELECT (only for UK).
3. Enter the password and press  OK (Password is not required for Box 9).
4. Browse the list of SMS messages and select the message you wish to review.
5. Press  VIEW to view the message content.
6. When viewing the message content, you can press  MENU to access the following options:

Send	Send the message immediately.
Edit	Edit the message and send or save as draft.
Delete	Delete the message.
Delete All	Delete all messages in the Draft box.

Send a message from Draft box

1. While viewing the message content, press  MENU to display the Draft box menu options.
2. Press  SELECT to Send the message.
3. Press  SELECT again to confirm or scroll  to Save as Draft to save the message in the Draft box and press  SELECT.
4. If you select Send, the message will be sent immediately. SMS Sent! will be displayed if the message has been sent successfully.

Edit a Draft message

1. While viewing the message content, press  MENU to display the Draft box menu options.
2. Scroll  to Edit and press  SELECT to start editing.
3. After editing, press  OK to confirm message.
4. Refer to steps 5 to 7 in "Write and send new SMS" on page 26 to send the message or select Save as Draft to save the message in the Draft box.

Delete a Draft message

1. While viewing the message content, press  MENU to display the Draft box menu options.

2. Scroll to Delete and press SELECT to confirm deletion.

Delete all Draft messages

1. While viewing the message content, press MENU to display the Draft box menu options.
2. Scroll to Delete All and press SELECT.
3. Press SELECT again to confirm deletion.

SMS settings

This menu allows you to set up the server for sending and receiving SMS messages. Your CD530 can receive messages from 3 service centers.

Each service center consists of 2 numbers:

- Incoming number
- Outgoing number

The maximum length of an incoming/outgoing number is 24 digits.

The incoming and outgoing numbers of your CD530 are already set to work on your country network. We advise you not to modify these settings. For more details or in case of any problems, please contact your local network provider.

SMS reception

Your CD530 can receive SMS messages from another phone if you have subscribed to the CLI and SMS services from your network provider. By default, SMS reception is set to On so that you can receive SMS messages.

To activate or deactivate the reception of SMS

1. Press MENU, press SELECT to enter SMS, scroll to SMS Settings and press SELECT, press SELECT to enter SMS Reception.
2. Scroll to On or Off and press SELECT to confirm.

Even if SMS reception is Off, you can still send SMS messages.

SMS Box (only for UK)

In order to send and receive SMS messages, there must at least be 1 SMS Box created. Box 9 with empty password is created by default.

You can create a maximum of 10 SMS boxes (Box 0 to Box 9), and you can protect each box with a password.

To create a new SMS Box (only for UK)

1. Press MENU, press SELECT to enter SMS, scroll to SMS Settings and press SELECT, scroll to SMS Boxes and press SELECT.
2. Press MENU and press SELECT to Add New Box.

3. Enter box name (maximum 12 characters) and press OK.
4. Enter a password (maximum 8 digits) and press OK.
5. Enter the password again and press OK.

You can choose to leave the password empty. If no password is required, simply press OK when prompted to enter password.

6. Enter the SMS box number and press OK.
If the confirmation password is correct, the new SMS box will be created. A long confirmation beep is emitted and the screen returns to SMS box list.

To change the password of an SMS Box (only for UK)

1. Press MENU, press SELECT to enter SMS, scroll to SMS Settings and press SELECT, scroll to SMS Boxes and press SELECT.
2. Scroll to the SMS box for which you wish to change password and press SELECT.
3. Scroll to Change Passwd and press SELECT.
4. Enter old password and press OK.
5. Enter new password, press OK and enter the new password again for confirmation.
6. Press OK to confirm password change.

To delete an SMS Box (only for UK)

1. Press MENU, press SELECT to enter SMS, scroll to SMS Settings and press SELECT, scroll to SMS Boxes and press SELECT.
2. Scroll to the SMS box you wish to delete and press MENU.
3. Scroll to Delete Box and press SELECT.
4. Enter password (if needed) and press OK to confirm box deletion.

 
To change the box number of an SMS Box (only for UK)

1. Press MENU, press SELECT to enter SMS, scroll to SMS Settings and press SELECT, scroll to SMS Boxes and press SELECT.
2. Scroll to the SMS box you for which wish to change the box number and press MENU.
3. Scroll to Change Box Nr and press SELECT.
4. Enter the new box number and press OK to confirm box number change.

To set outgoing number





 


 
 
The incoming and outgoing numbers of your CD530 are already set to work on your country network. We advise you not to modify these settings. For more details or in case of any problems, please contact your local network provider.

1. Press MENU, press SELECT to enter SMS, scroll to SMS Settings and press SELECT, scroll to SMS Center 1, SMS Center 2 or SMS Center 3 and press SELECT.
2. Press SELECT to enter Outgoing Nr..

3. Enter the number and press  **OK** to confirm.
A confirmation beep is emitted.

The maximum length of an outgoing number is 24 digits.

To set incoming number









1. Press  **MENU**, press  **SELECT** to enter SMS, scroll  to SMS Settings and press  **SELECT**, scroll  to SMS Center 1, SMS Center 2 or SMS Center 3 and press  **SELECT**.
2. Scroll  to Incoming Nr. and press  **SELECT**.
3. Enter the number and press  **OK** to confirm.
A confirmation beep is emitted.

The maximum length of an incoming number is 24 digits.

Default SMS center

The default SMS center number is 1.









To set default SMS center

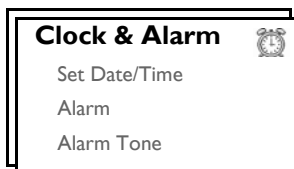
1. Press  **MENU**, press  **SELECT** to enter SMS, scroll  to SMS Settings and press  **SELECT**, scroll  to Default Ctr. and press  **SELECT**.
2. Scroll  to SMS center that you wish to set as default center (SMS Center 1, SMS Center 2 or SMS Center 3) and press  **SELECT**.
A confirmation beep is emitted.

Ist ring

When this function is set to Off, the first ring from a voice call will not sound. This is particularly useful in countries where calling line identity is sent after the first ring, so no phones in the house would ring when a message arrives.

To set Ist ring

1. Press  **MENU**, press  **SELECT** to enter SMS, scroll  to SMS Settings and press  **SELECT**, scroll  to Set Ist Ring and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.



Set date and time

1. Press **MENU**, scroll **↓** to Clock & Alarm and press **SELECT**, press **SELECT** again to enter Set Date/Time.
2. Enter the current time (HH:MM) and current date (DD/MM/YY) and press **SELECT**.

Enter the date in Day/Month/Year format and the time in 24-hour format.

3. A confirmation beep is emitted and the screen returns to Clock & Alarm menu.

Once the date and time are set, there will be time & date recovery when the batteries are removed, or when there is a power failure.

Set Alarm

1. Press **MENU**, scroll **↓** to Clock & Alarm and press **SELECT**, scroll **↓** to Alarm and press **SELECT**.
2. Scroll **↓** to Off, On Once or On Daily and press **SELECT**.
3. If you have selected On Once or On Daily, enter the time for the alarm and press **SELECT**. A confirmation beep is emitted and the screen returns to previous menu.

The alarm tone and alarm icon will only sound/blink for 1 minute when the alarm time is reached. To mute the alarm tone, simply press any key on the handset.

Alarm tone

1. Press **MENU**, scroll **↓** to Clock & Alarm and press **SELECT**, scroll **↓** to Alarm Tone and press **SELECT**.
2. Scroll **↓** to the desired melody (Melody 1, Melody 2 or Melody 3) to play the melody.
3. Press **SELECT** to set the alarm tone.







 


Handset Tones

Ring Volume

There are 5 ringer volume options (Silence, Low, Medium, High and Progressive). The default level is Medium.

To set ring volume

1. Press  MENU, scroll  to Personal Set and press  SELECT, press  SELECT to enter Handset Tones and press  SELECT again to enter Ring Volume.
2. Scroll  to your desired volume level and press  SELECT to confirm. A confirmation beep is emitted and the screen returns to previous menu.








When Silence is activated, the icon  is displayed on the screen.


WARNING When the handset rings during an incoming call, please do not hold the handset too close to your ear as the volume of the ringing tone may damage your hearing.

Ring Melody

There are 10 ring melodies available on your handset.

To set Ring Melody

1. Press  MENU, scroll  to Personal Set and press  SELECT, press  SELECT to enter Handset Tones, scroll  to Ring Melody and press  SELECT.
2. Scroll  to your desired melody to play the melody.

3. Press  **SELECT** to set the ring melody.
A confirmation beep is emitted and the screen returns to previous menu.










 
Group Melody

To benefit from this feature, you must subscribe to the Caller Line Identification service. See "Caller Line Identification" on page 20.

This menu enables you to select and set the melodies to be played when there is an external incoming call from a contact whose name is stored in your phonebook and is part of a group. You can associate 1 ring melody to each group.

There are three phonebook groups (Group A, B, C) available for you to organize your contacts. Each group can be assigned a unique melody.






 

 
To set Group Melody

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, press  **SELECT** to enter Handset Tones, scroll  to Group Melody and press  **SELECT**.
2. Scroll  to the group for which you wish to set melody and press  **SELECT**.
3. Scroll  to the desired melody to play the melody.
4. Press  **SELECT** to set the group melody.
A confirmation beep is emitted and the screen returns to previous menu.

Key Beep

A single beep is emitted when a key is pressed. You can enable or disable this key beep. By default, the key beep is On.

 

 
 

 

 
To set key beep On/Off

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, press  **SELECT** to enter Handset Tones, scroll  to Key Beep and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

SMS Tone

A tone is emitted when a new SMS is received. You can enable or disable this SMS Tone. By default, SMS tone is On.




 
 


To set SMS tone On/Off

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, press  **SELECT** to enter Handset Tones, scroll  to SMS Tone and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Wallpaper

This feature allows you to select the wallpaper to be displayed in stand-by mode. There are 4 wallpapers pre-installed on your phone. Please see "Default settings" on page 16 for the default wallpaper.





 


To set wallpaper

1. Press  MENU, scroll  to Personal Set and press  SELECT, scroll  to Wallpaper and press  SELECT.
2. Scroll  to your desired wallpaper and press  SELECT to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Contrast level

There are 3 contrast level options (Level 1, Level 2 or Level 3). The default contrast level is Level 2.





 


To set contrast level

1. Press  MENU, scroll  to Personal Set and press  SELECT, scroll  to Contrast and press  SELECT.
2. Scroll  to your desired contrast level (Level 1, Level 2 or Level 3) and press  SELECT to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Screensaver

Screensaver will be activated automatically after 1 minute in stand-by mode.






To set screensaver

 
1. Press  MENU, scroll  to Personal Set and press  SELECT, scroll  to Screensaver and press  SELECT.
2. Scroll  to On or Off and press  OK to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Handset Name

You can name the handset and display the handset name in stand-by mode. The default handset name of your handset is PHILIPS.

To rename the handset

1. Press  MENU, scroll  to Personal Set and press  SELECT, scroll  to Handset Name and press  SELECT.

 



 


2. Edit the handset name and press  **OK** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Maximum length of the handset name is 12 characters and the default handset name is PHILIPS.

Auto Pick-up

This function enables you to answer a call automatically by simply lifting the handset from the base station. By default, the Auto Pick-up feature is Off.

 



 


To set Auto Pick-up mode

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Auto Pick-up and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Auto Hang-up

This function enables you to end a call automatically by simply replacing the handset on the base station. By default, the Auto Hang-up feature is On.





 


To set Auto Hang-up mode

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Auto Hang-up and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Language

Your CD530 can support different display languages.

To change the language

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Language and press  **SELECT**.
2. Scroll  to your desired language and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.






 
Babysit mode


You must have at least 2 handsets registered to your base station to be able to use this feature (see page 42 "To register an additional handset").

This feature allows you to monitor, e.g. the baby's room. Place the handset in the room to be monitored. If the sound level around the microphone of the handset exceeds a certain threshold, the handset can automatically call another handset registered on the same base station.

To use the Babysit feature you need to activate it (e.g. on handset 1) and enter the number of the handset to be called (e.g. handset 2) in the event that there are noises in the monitored room. Place the handset which is in Babysit mode (e.g. handset 1) in the room to be monitored. If this handset detects a sound level greater than a certain threshold, it will automatically initiate an internal call to the selected handset (e.g. handset 2).

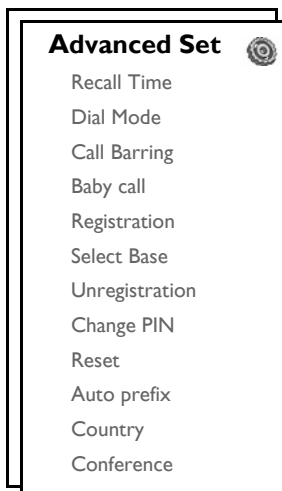
To activate Babysit mode

1. Press  MENU, scroll  to Personal Set and press  SELECT, scroll  to Babysit mode and press  SELECT.
2. Enter the number of the handset you wish to call to and press  OK to activate.


In Babysit mode, all keys are deactivated except for  key. Babysit mode is displayed on the screen when this function is activated and the handset cannot make or receive calls.

To deactivate Babysit mode

1. Press , select Off and press  OK.










 
 


Recall Time

Recall time (or dial delay) is the time delay by which the line will be disconnected after you press  key. It can be set to short, medium or long.

The default value of recall time that is preset in your CD530 should be the best suited for your country network and therefore you should not need to change it.

To set recall time

1. Press  MENU, scroll  to Advanced Set and press  SELECT and press  SELECT to enter Recall Time.
2. Scroll to select Short / Medium / Long and press  SELECT to confirm. A confirmation beep is emitted and the screen returns to previous menu.

This setting is useful when using network services. The use of some services accessed with [ + ], [ + ], [ + ] (call waiting, call forward...) will depend on your recall time setting. Please contact your network provider for more details on this feature.

Dial Mode

The default value for dial mode that is preset in your CD530 should be the best suited for your country network and therefore you should not need to change it.

There are 2 dial modes: Tone or Pulse.

To set dial mode

1. Press MENU, scroll to Advanced Set and press SELECT, scroll to Dial Mode and press SELECT.
2. Scroll to Tone or Pulse and press SELECT to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Call Barring

Call barring enables you to restrict selected handsets from dialling a phone number beginning with certain numbers. You can set up to four different barring numbers, with each number containing up to 4 digits.

If you have modified the Master PIN before and it is not the default 0000, you will be required to enter the Master PIN before you can activate or deactivate call barring mode, add or modify call barring number.

To activate/deactivate Call Barring mode

1. Press MENU, scroll to Advanced Set and press SELECT, scroll to Call Barring and press SELECT.
2. Enter the Master PIN when prompted and press OK to confirm.
3. Press SELECT to enter Barring Mode.
4. Scroll to On or Off and press SELECT to confirm.
A confirmation tone is emitted and the screen returns to previous menu.

To modify Call Barring number

1. Press MENU, scroll to Advanced Set and press SELECT, scroll to Call Barring and press SELECT.
2. Enter the Master PIN when prompted and press OK to confirm.
3. Scroll to Barring Number and press SELECT.
4. Scroll to Number 1, Number 2, Number 3 or Number 4 and press SELECT to confirm.
5. Enter a maximum of 4 digits and press OK to confirm.
A confirmation beep is emitted and the screen returns to stand-by mode.

If a restricted number is dialled, the call will not be connected. When this happens, the phone emits an error tone and returns to stand-by mode.





 



 
Baby Call

When activated, the Baby Call feature enables you to dial a number by pressing any key on your handset. This feature is very useful for direct access to emergency services.

 
You can enter up to 24 digits for baby call number.

If you have modified the Master PIN before and it is not the default 0000, you will be required to enter the Master PIN before you can activate or deactivate Baby Call mode or change Baby Call number.

To activate Baby Call mode

1. Press  **MENU**, scroll  to **Advanced Set** and press  **SELECT**, scroll  to **Baby call** and press  **SELECT**.
2. Enter the Master PIN when prompted and press  **OK** to confirm.
3. Press  **SELECT** to enter Mode.
4. Scroll  to **On** and press  **OK** to confirm.

 

 




 
 
When Mode is activated but the Baby Call number is not set yet, your handset will prompt you to enter a number.

5. Enter the Baby Call number and press  **OK** to confirm.
A confirmation message will be displayed on the screen.

To deactivate Baby Call mode

1. Long press  **MENU** (when Baby Call mode has been activated before).
2. Scroll  to **Off** and press  **SELECT** to confirm.

To change Baby Call number

1. Press  **MENU**, scroll  to **Advanced Set** and press  **SELECT**, scroll  to **Baby call** and press  **SELECT**.
2. Enter the Master PIN when prompted and press  **OK** to confirm.
3. Scroll  to **Number** and press  **SELECT**.
4. The last stored Baby Call number is displayed (if any).
5. Enter the new Baby Call number and press  **OK** to confirm.
A long confirmation beep is emitted and the screen returns to previous menu.


Registration

The procedures described below are the procedures that you will find in your CD530 handset. The procedures may vary according to the handset you want to register. In this case, please refer to the manufacturer of the additional handset.





 



Additional handsets must be registered to the base unit before you can use them. Up to 5 handsets can be registered to one base station.

The Master PIN is required before you can register or unregister handsets. The default PIN is 0000.

To register an additional handset

1. On the base station, press and hold  for 3 seconds in stand-by mode. After that, the registration procedure has to be done within 1 minute.

Within 1 minute, the base station is able to accept registration from a handset. If no key is pressed within 10 seconds, the registration procedure will be aborted.

2. At the same time, on the handset, press  MENU, scroll  to Advanced Set and press  SELECT, scroll  to Registration and press  SELECT.
3. Enter the Master PIN when prompted and press  OK to start registration.
4. Press  to select the Base to be registered to and press  OK to confirm.

If the base is found and the PIN is correct, the unused handset numbers will be displayed and you can select a handset number by entering the number directly.

 

 




If the PIN is incorrect, Incorrect PIN will be displayed and the handset returns to stand-by mode.

A long confirmation tone is emitted to indicate successful registration and the screen returns to stand-by mode.

Select Base



 



One CD530 handset can register up to 4 different CD530 Base stations. By default, the handset will register to BASE 1. If you select Any Base, the handset will register to the nearest base station.

To manually select a base station

1. Press  MENU, scroll  to Advanced Set press  SELECT, scroll  to Select Base and press  SELECT.
2. Scroll  to the desired base station and press  OK to confirm.
3. The handset will start searching for the base station. If the selected base is found, a long confirmation tone is emitted.

Unregistration

To unregister a handset

1. Press  MENU, scroll  to Advanced Set and press  SELECT, scroll  to Unregistration and press  SELECT.
2. Enter the Master PIN when prompted and press  OK to confirm.
3. Press on the handset keypad the handset number corresponding to the handset that you wish to unregister.

 

 

 
 
If there are no key presses within 15 seconds, the unregistration procedure will be aborted and the handset returns to stand-by mode.

A long confirmation beep is emitted to indicate successful unregistration and the screen shows Unregistered.

Change Master PIN

 

The Master PIN is used for setting call barring/baby call number and for registration/unregistration of handsets. The default Master PIN number is 0000. The length of the PIN is 4 digits. This PIN is also used to protect the settings of your handset. Your handset will prompt you whenever the PIN is required.

To change Master PIN

1. Press  MENU, scroll  to Advanced Set and press  SELECT, scroll  to Change PIN and press  SELECT.
2. Enter the current Master PIN when prompted and press  OK to confirm. The PIN entered will be shown as asterisks (*) on the screen.

If an incorrect PIN is entered, Incorrect Pin will be displayed and the screen returns to stand-by mode.

If your PIN number is the default 0000, step 2 is skipped.

 

 

 

3. Enter new PIN and press  OK.
4. Enter new PIN again and press  OK to confirm PIN change.
A confirmation tone is emitted, the message New PIN Stored appears and the screen returns to previous menu.

If the Master PIN is modified, you will be required to enter the Master PIN before you can modify Call Barring and Baby Call settings.



Advanced Settings

Reset

Reset to default settings

1. Press  MENU, scroll  to Advanced Set and press  SELECT, scroll  to Reset and press  SELECT.
2. Enter the Master PIN when prompted and press  OK.

If your PIN number is the default 0000, step 2 is skipped.






 
3. Scroll  to Yes and press  SELECT.
A confirmation beep is emitted, and the unit is reset to its default settings (please see "Default settings" on page 16).

The WELCOME mode will appear again after master reset.

Auto Prefix

The maximum length of an auto prefix number is 5 digits. Once the number is set, it will be automatically inserted at the beginning of each number that will be dialled.





To set auto prefix number

1. Press  MENU, scroll  to Advanced Set and press  SELECT, scroll  to Auto prefix and press  SELECT.
2. The last stored auto prefix number is displayed (if any).
3. Enter the number and press  SELECT to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Country Setting

The availability of this menu is dependent on your country.



You can select another country different from the one chosen during Welcome mode.

1. Press  MENU, scroll  to Advanced Set and press  SELECT, scroll  to Country and press  SELECT.
2. Enter the Master PIN when prompted and press  OK to confirm.

You need to enter the Master PIN even if your PIN is 0000 (default PIN).

Advanced Settings

EN

3. Scroll  to the country of your choice and press  **SELECT** to confirm.

 

 




Once the country is selected, the default line settings for the selected country will be applied to the phone automatically (e.g. Recall time, Dial mode, Language, etc).

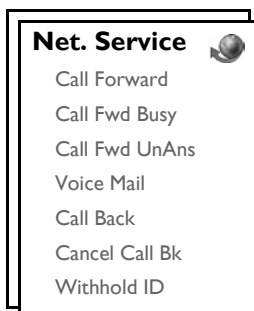
Conference Mode

When Conference mode is activated, you can initiate a three-party conference call with a second handset registered to your base station automatically if the second handset takes the line when there is already an external call in progress.

The default setting for this mode is Off.

To activate/deactivate conference mode

1. Press  **MENU**, scroll  to Advanced Set and press  **SELECT**, scroll  to Conference and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.



This menu provides a convenient means for you to access, activate or deactivate some network services that are **country/subscription** dependent. Contact your network provider for more information about these services.

The default numbers and values that are preset in your CD530 should be the best suited for your country network and therefore you should not need to change them.

Call Forward

There are 3 call forwarding options available: Unconditional Call Forwarding, When Busy and When Unanswered.

Set up Call Forward number

1. Press MENU, scroll to Net. Service and press SELECT.
2. Scroll to the type of call forwarding option you wish to set (Call Forward / Call Fwd Busy / Call Fwd UnAns) and press SELECT.
3. Scroll to Settings and press SELECT to enter the number for forwarding.
4. Press OK to confirm.






Activate Call Forward

1. Press MENU, scroll to Net. Service and press SELECT.
2. Scroll to the type of call forwarding option you wish to set (Call Forward / Call Fwd Busy / Call Fwd UnAns) and press SELECT.
3. Press SELECT to Activate.
4. The number string for that selected service will be dialed.
5. When the number has been dialed, press to return to stand-by mode.

When this feature is activated, depending on the call forwarding option you have set, your incoming calls will be forwarded to the number of your choice.

Deactivate Call Forward











1. Press MENU, scroll to Net. Service and press SELECT.

2. Scroll  to the type of call forwarding option you wish to set (Call Forward / Call Fwd Busy / Call Fwd UnAns) and press  SELECT.
3. Scroll  to Deactivate and press  SELECT to confirm.
4. The number string for that selected service will be dialed.
5. When the number has been dialed, press  to return to stand-by mode.










Voice Mail

This feature allows the caller to leave a voice message when you are unable, or do not wish to take a call yourself. The availability of this feature is dependent on your country and your subscription with your network provider. Charges often apply for you to retrieve messages, as these are stored by the network rather than on the handset itself. Contact your network provider for more information about this feature.

Set up Voice Mail number

1. Press  MENU, scroll  to Net. Service and press  SELECT, scroll  to Voice Mail and press  SELECT.
2. Scroll  to Voice Mail 1 or Voice Mail 2 and press  SELECT.
3. Scroll  to Settings and press  SELECT.
4. Modify the voice mail number and press  OK.

Activate Voice Mail







1. Press  MENU, scroll  to Net. Service and press  SELECT, scroll  to Voice Mail and press  SELECT.
2. Scroll  to Voice Mail 1 or Voice Mail 2 and press  SELECT.
3. Press  SELECT to Activate.
4. The number string for that selected service will be dialed.
5. When the number has been dialed, press  to return to stand-by mode.

Call Back

Setting

1. Press  MENU, scroll  to Net. Service and press  SELECT, scroll  to Call Back and press  SELECT.
2. Scroll  to Settings and press  SELECT.
3. Enter the required number for call back and press  OK.

 

 

 

 
 
Activate Call Back

1. Press  MENU, scroll  to Net. Service and press  SELECT, scroll  to Call Back and press  SELECT.
2. Press  SELECT to Activate.
3. The number string for that selected service will be dialed.

 

 

 
 

- When the number has been dialled, press  to return to stand-by mode.

Cancel Call Back

Setting

 

 



 

- Press  MENU, scroll  to Net. Service and press  SELECT, scroll  to Cancel Call Bk and press  SELECT.
- Scroll  to Settings and press  SELECT.
- Enter the required number for cancelling of call back and press  OK.

Activate Cancel Call Back

 

 


 

- Press  MENU, scroll  to Net. Service and press  SELECT, scroll  to Cancel Call Bk and press  SELECT.
- Press  SELECT to Activate.
- The number string for that selected service will be dialled.
- When the number has been dialled, press  to return to stand-by mode.

Withhold ID

 





 

Setting

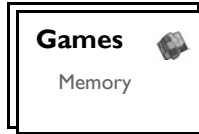
- Press  MENU, scroll  to Net. Service and press  SELECT, scroll  to Withhold ID and press  SELECT.
- Scroll  to Settings and press  SELECT.
- Enter the required number for withholding ID and press  OK.

Activate Withhold ID

- Press  MENU, scroll  to Net. Service and press  SELECT, scroll  to Withhold ID and press  SELECT.
- Press  SELECT to Activate.
- The number string for that selected service will be dialled.
- When the number has been dialled, press  to return to stand-by mode.

Deactivate Withhold ID

- Press  MENU, scroll  to Net. Service and press  SELECT, scroll  to Withhold ID and press  SELECT.
- Scroll  to Deactivate and press  SELECT to confirm.
- The number string for that selected service will be dialled.
- When the number has been dialled, press  to return to stand-by mode.



Memory

The objective of this game is to find and match different pairs of graphics in the shortest possible time using your memory. To win, you have to complete matching all 8 pairs of graphics in a 4x4 matrix.



To start the game

1. Press MENU, scroll to Games and press SELECT, press SELECT to enter Memory game.
2. An instruction screen is displayed.

Press / / / keys to move up / down / left / right respectively.
Press to select.

3. Press SELECT or press to start the game.
4. To exit from the game, press .

Troubleshooting of the phone

Problem	Causes	Solution
The  icon is not blinking when the handset is placed on the base	<ul style="list-style-type: none"> • Bad battery contact • Dirty contact • Battery is full 	<ul style="list-style-type: none"> • Move the handset slightly • Clean the battery contact with a cloth moistened with alcohol • No need to charge
No dialling tone	<ul style="list-style-type: none"> • No power • Batteries are empty • You are too far from the base station • Wrong line cable • Line adaptor (when needed) is not connected to the line cord 	<ul style="list-style-type: none"> • Check the connections. Reset the phone: unplug and plug back in the mains • Charge the batteries for at least 24 hours • Move closer to the base station • Use the line cable provided • Connect the line adaptor (when needed) to the line cord
Poor audio quality	<ul style="list-style-type: none"> • You are too far from the base station • The base station is too close to electrical appliances, reinforced concrete walls or metal doorframes 	<ul style="list-style-type: none"> • Move closer to the base station • Move the base station at least one metre away from any electrical appliances
The  icon is blinking	<ul style="list-style-type: none"> • Handset is not registered to the base station • The handset is too far from the base station 	<ul style="list-style-type: none"> • Register the handset to the base station • Move closer to the base station

Troubleshooting

EN

Problem	Causes	Solution
<p>The handset displays "not available"</p> <ul style="list-style-type: none"> • when attempting to add another handset to the base station • when using a handset 	<ul style="list-style-type: none"> • The procedure to add a handset has failed • Maximum number of handsets (5) has been reached • Base station is already busy with another handset 	<ul style="list-style-type: none"> • Try again by disconnecting and connecting the base station power supply and follow the procedure to register a handset (see page 42) • Remove and place back the handset batteries • Unregister a handset so as to register the new handset • Wait until it is available
Noise interference on your radio or television	Your CD530 base station or mains power pack are too close to electrical appliances	Move the power pack or base station as far away as possible
Caller Line Identification (CLI) service does not work	The service is not activated	Check your subscription with your network operator
No ring tone	The ring tone is deactivated	Increase the volume
A phonebook entry cannot be stored	The phonebook is full	Delete an entry to free memory
Cannot receive new SMS	<ul style="list-style-type: none"> • SMS storage space is full • Wrong SMS settings 	<ul style="list-style-type: none"> • Delete old SMS • Check your SMS settings (see page 30)
Cannot send or receive new SMS	<ul style="list-style-type: none"> • The outgoing or incoming SMS center numbers are not set or are wrong • You have no subscription • Another SMS-enabled phone is also on your line • There is a problem of compatibility between operators • The identity is withheld 	<ul style="list-style-type: none"> • Refer to "SMS settings" on page 30 • Contact your provider for more information • Deactivate the SMS reception mode on one of the device • Contact your provider for more information • Show identity (see "Withhold ID" on page 48)

Electric, Magnetic and Electromagnetic Fields ("EMF")

1. Philips Royal Electronics manufactures and sells many consumer oriented products which usually, as with any electronic apparatus, have the ability to emit and receive electro magnetic signals.
2. One of Philips' leading Business Principles is to take all necessary health and safety precautions for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
3. Philips is committed to develop, produce and market products that cause no adverse health effects.
4. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
5. Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Conformity

The Declaration of conformity is available on www.p4c.philips.com.

Hereby, Philips Consumer Electronics, BLC P&ACC, declares that the CD530x is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Recycling and disposal

Disposal instructions for old products

The WEEE Directive (Waste Electrical and Electronic Equipment: 2002/96/EC) has been put in place to ensure that products are recycled using best available treatment, recovery and recycling techniques to ensure human health and give utmost protection to the environment.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Do not dispose of your old product in your general household waste bin. Inform yourself about the local separate collection system for electrical and electronic products marked by this symbol:

Use one of the following disposal options:

1. Dispose of the complete product (including its cables, plugs and accessories) in the designated WEEE collection facilities
2. If you purchase a replacement product, return your old product, in its entirety, to the retailer. He should accept it as required by the WEEE Directive.

Philips has marked the packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.



A financial contribution has been paid to the associated national recovery & recycling system.



The labelled packaging material is recyclable.

A

Accessories 5
 Alarm 33
 Alarm tone 33
 Answer a call 14, 18
 Auto Hang-up 37
 Auto Pick-up 37
 Auto Prefix 44

B

Baby Call 41
 Babysit mode 38
 Backlight 15
 Basic operations 11
 Battery level 13

C

Call 40
 Call Back 47
 Call Barring 40
 Call Forward 46
 Call log 17, 24
 Call waiting 20
 Caller Line Identification 20
 Calls in-progress 18
 Charge battery 12
 Clock & Alarm 33
 Conference call 20
 Conformity 52
 Connect Base Station 11
 Contrast 36
 Country Setting 45

D

Date & time 33
 Date and time 14
 Default SMS center 32
 Default settings 16
 Delete SMS message 28
 Delete call log 24
 Delete phonebook 22
 Dial Mode 39
 Direct access memory 23
 Direct dialling 17
 Draft box 29

E

Earpiece volume 18
 Edit Draft message 29
 Edit phonebook 22
 End a call 14, 18
 Event LED 15

F

Forward SMS message 28

G

Group melody 35

H

Handset Name 36
 Handset Tones 34
 Handsfree answering 18

I

Icons & symbols 8
 Inbox 27
 Incoming number 32
 Install battery 12, 13, 14, 16
 Intercom 19
 Intrusion Mode 45

K

Key Beep 35
 Keypad lock 14
 Keypad lock/unlock 14
 Keypad unlock 14

L

Language 37
 Loudspeaker 18
 Loudspeaker mode 18
 Loudspeaker volume 19

M

Make a call 14
 Master PIN 43
 Memory 49
 Menu navigation 10
 Mute 18
 Mute handset 18

N

Noise interference 51

O

Other network services 48
 Out of range 13
 Outgoing number 31
 Overview of the base station 9
 Overview of the handset 6

P

Paging 14
 Personalize 34
 Phonebook 17, 21
 Predialling 17

R

Recall Time 39
 Recycling and disposal 52
 Redial list 17, 24
 Registration 42
 Reply SMS message 28
 Reset Unit 44
 Ring Melody 34
 Ring Volume 34

S

SMS 26
 SMS Boxes 30
 SMS Tone 35
 SMS reception 30
 SMS settings 30
 Save redial list 25
 Screensaver 36
 Select Base 42
 Send SMS 26
 Stand-by mode 14
 Store a contact 21
 Switch handset on/off 14

T

Text and number entry 16
 Transfer an external call 19
 Transfer phonebook 23

U

Unmute 18
 Unregister 43

V

Voice Mail 47

W

Wallpaper 36
 Withhold ID 48
 Write a SMS 26



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.
2006 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

3111 285 26093

