

Consumo de energía en modo de espera de bajo consumo	< 0,5 W
Dimensiones	
- Unidad principal (ancho x alto x profundidad)	180 x 121 x 227 mm
- Parlante (ancho x alto x profundidad)	120 x 195 x 143 mm
Peso	
- Unidad principal	1,54 kg
- Parlante	2 x 0,81 kg

EN

Safety

Read and understand all instructions before you use this micro music system. If damage is caused by failure to follow the instructions, the warranty does not apply.



This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering.

The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device.

CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

Safety

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never look into the laser beam inside this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.


- The device shall not be exposed to dripping or splashing.
- Do not place any source of danger on the device (e.g. liquid filled objects, lit candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Make sure that there is enough free space around the product for ventilation.
- Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Batteries (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Remove batteries when the unit is not used for a long time.
- Only use attachments/accessories specified by the manufacturer.

Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

Compliance

This apparatus includes this label:

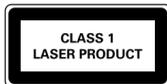

Care of the environment



WARNING: Care with the use and disposal of batteries.

- Do not dispose of batteries along with normal household waste.
- The improper disposal of batteries may present risks to the environment and human health.
- In order to contribute to environmental quality and your health, Philips will accept batteries sold or supplied with its products that have reached the end of their life; these will be forwarded for environmentally correct disposal. Philips provides collection points at Technical Assistance.


Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOOX Innovations is under license.

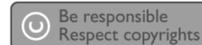

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfibre cloth to clean the product.

Note

- The type plate is located on the back of the product.

Specifications

Amplifier	
Total Output Power	Maximum 30 W
Frequency Response	60 Hz - 20 kHz; ±3 dB
Signal to Noise Ratio	≥75 dB
Total Harmonic Distortion	<1%
Aux Input	600 mV ± 100 mV RMS 22 kohm
Speakers	
Speaker Impedance	4 ohm
Speaker Driver	Full range 3.5"
Sensitivity	83 ± 3dB/mV

Tuner (FM)

Tuning Range	87.5-108 MHz
Tuning grid	50 KHz
Sensitivity	- Mono, 26dB S/N Ratio <22 dBf - Stereo, 46dB S/N Ratio <45 dBf
Search Selectivity	<30 dBf
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>45 dB

USB

USB Direct Version	2.0 Full Speed
Charging support	5V, 500mA

Disc

Laser Type	Semiconductor
Disc Diameter	12 cm/8 cm
Support Disc	CD-DA, CD-R, CD-RW, MP3-CD
Audio DAC	24 Bits/44.1 KHz
Total Harmonic Distortion	<3% (1 KHz)
Frequency Response	20 Hz - 20 kHz (44.1 KHz)
S/N Ratio	≥80 dB

Bluetooth

Bluetooth Version	V4.0
Bluetooth Frequency Band	2.4 GHz ~ 2.48 GHz ISM Band
Bluetooth Range	10 m (free space)




General information

AC power	100-240 V~, 50/60 Hz
Operation Power Consumption	< 20 W
Eco Standby Power Consumption	< 0.5 W
Dimensions	
- Main Unit (W x H x D)	180 x 121 x 227 mm
- Speaker Box (W x H x D)	120 x 195 x 143 mm
Weight	
- Main Unit	1.54 kg
- Speaker Box	0.81 kg x 2




ES-AR Para descargar el manual del usuario completo, visite www.philips.com/support.

EN To download the full user manual, visit www.philips.com/support.

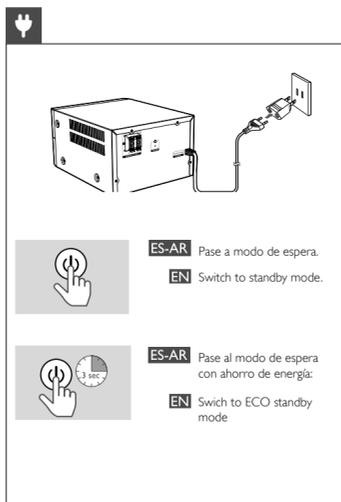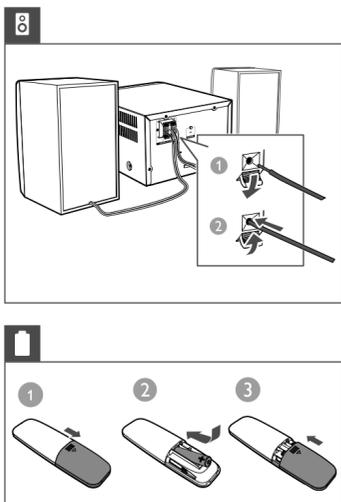
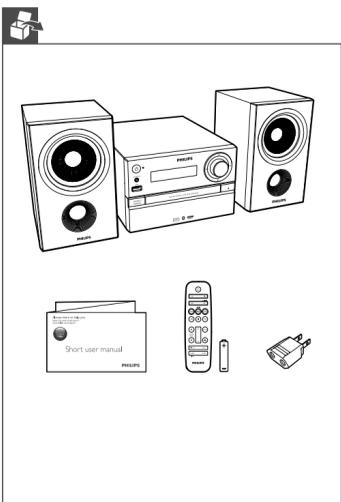


ES-AR Pase a modo de espera.
EN Switch to standby mode.

ES-AR Pase al modo de espera con ahorro de energía.
EN Switch to ECO standby mode.

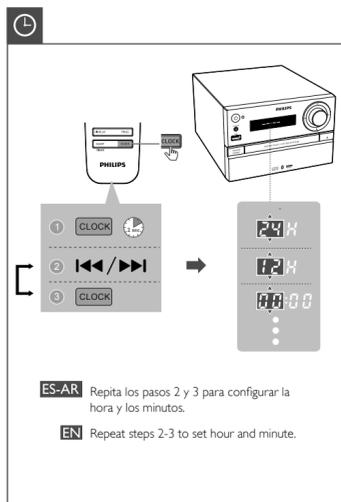

ES-AR Repita los pasos 2 y 3 para configurar la hora y los minutos.
EN Repeat steps 2-3 to set hour and minute.

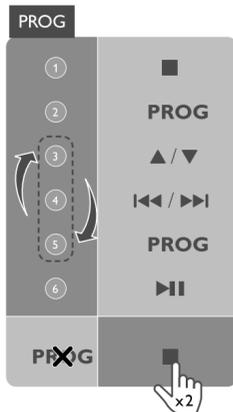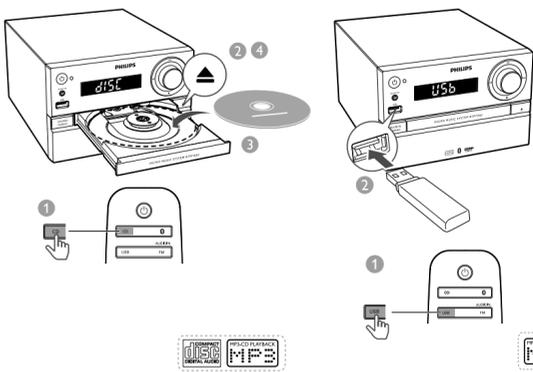

ES-AR


Controles de la reproducción

- ▶▶ Iniciar; hacer una pausa o reanudar la reproducción.
- Detiene la reproducción.
- ▲▼ Selección un álbum o una carpeta.
- ◀◀▶▶ Presiónelo para pasar a la pista anterior o siguiente. Manténgalo presionado para realizar una búsqueda hacia adelante/hacia atrás en una pista.
- ↺ Reproduce varias veces una canción o todas las canciones.
- ↻ Reproduce las pistas en forma aleatoria (no se aplica a las pistas programadas).
- DISPLAY Ajusta el brillo de la pantalla.

EN


Control play

- ▶▶ Start, pause, or resume play.
- Stop play.
- ▲/▼ Select an album or a folder.
- ◀◀▶▶ Press to skip to the previous or next track. Press and hold to search backward/forward within a track.
- ↺ Play a track or all tracks repeatedly.
- ↻ Play tracks randomly.(not applicable for the programmed tracks.)
- DISPLAY Adjust display brightness.

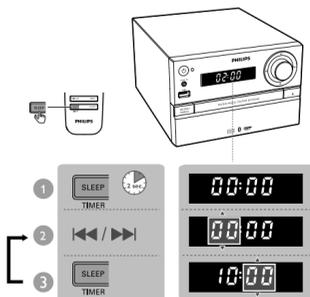

ES-AR • Asegúrese de configurar el reloj correctamente.
• Repita los pasos 2 y 3 para ajustar los minutos, seleccionar una fuente y ajustar el volumen de la alarma.

EN • Make sure that you have set the clock correctly.
• Repeat steps 2-3 to set minute, select a source, and set the alarm volume.

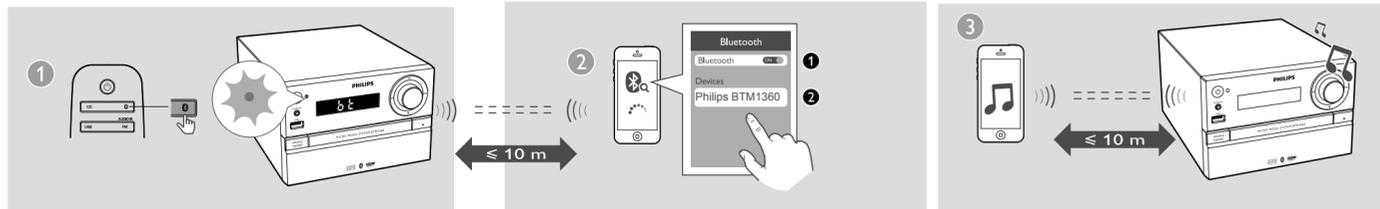

ES-AR

Pulse **BT** para seleccionar la fuente Bluetooth.

- Se muestra **[BT]** (Bluetooth), y el indicador de Bluetooth parpadea en azul.
- En su dispositivo Bluetooth, active la función Bluetooth y busque los dispositivos.
- En la lista de dispositivos, seleccione "Philips BTM1360" y escriba "0000" si se le solicita una contraseña. Cuando el emparejamiento y la conexión se realicen correctamente, el indicador de Bluetooth se iluminará en azul de forma permanente y el producto emitirá dos pitidos.

3 Reproduzca audio en el dispositivo conectado.

Nota:

- Si no obtiene resultados al buscar "Philips BTM1360" o si no puede realizar el emparejamiento con este producto, mantenga pulsado **SOURCE/PAIRING** (o **BT** en el control remoto) durante tres segundos hasta que oiga un pitido para acceder al modo de emparejamiento mediante Bluetooth.

EN



Press **BT** to select the Bluetooth source.

- [BT]** (Bluetooth) is displayed, and the Bluetooth indicator flashes blue.
- On your Bluetooth device, enable Bluetooth function and search for devices.
- In the device list, select "Philips BTM1360" input "0000" if a password is required.
- After successful pairing and connection, the Bluetooth indicator turns solid blue, and the product beeps twice.


3 Play audio on the connected device.

Note:


- If you fail to search for "Philips BTM1360" or cannot pair with this product, press and hold **SOURCE/PAIRING** (or **BT** on the remote control) for three seconds until you hear a beep sound to enter Bluetooth pairing mode.

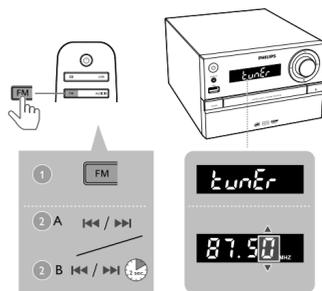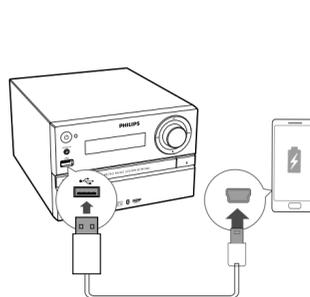



ES-AR Sintonización de estaciones de radio FM
EN Tune to FM radio stations

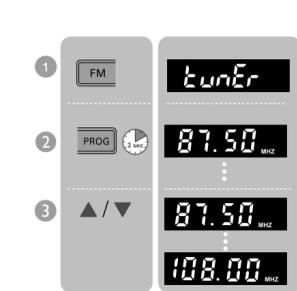

ES-AR Almacena las emisoras de radio FM automáticamente
EN Store FM radio stations automatically

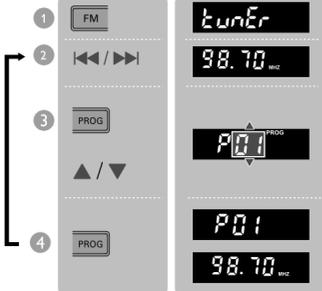

ES-AR Almacenamiento manual de la emisora de radio FM
EN Store FM radio station manually

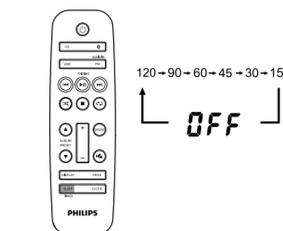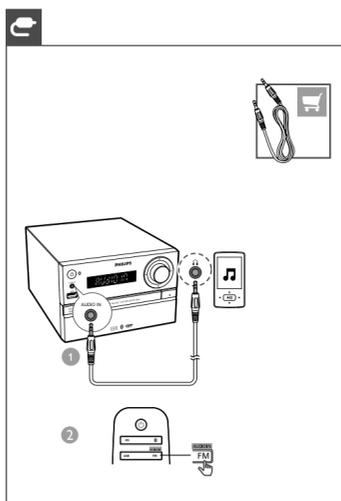

ES-AR
EN Press to select the sleep timer period. When **[OFF]** (off) is displayed, the sleep timer is deactivated.