## Quick Start Guide




#### What's in the Box?


You should find these items upon opening the box.







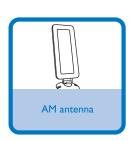

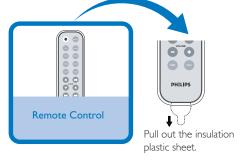



#### **Connection**

- 1 For radio reception, connect the supplied AM antenna to the AM aerial terminal.
- 2 Connect the speaker wires to the **SPEAKERS** terminals.

Connect the power cord of the system to the AC power outlet.

FM wire antenna

AM loop antenna

AM loop antenna


AC power cord

AC power cord

AC power cord

#### Setting the clock

- 1 In standby mode, press **PROG/CLOCK** button. The clock digits for the hours flash.
- 2 Press | to set the hours.
- **3** Press **PROG/CLOCK** again. The clock digits for the minutes flash.
- 4 Press | I bo set the minutes.
- 5 Press PROG/CLOCK to confirm the time.

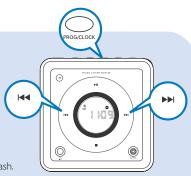

Tip


It is unnecessary to

connect the FM pigtail

### Step B Enjoy

#### Playing a disc

- 1 Select CD source.
- 2 Press **OPEN•CLOSE** on the top of the system to open the CD door.
- 3 Insert a disc with the printed side facing up and press down on **OPEN•CLOSE** to close the CD door.
- 4 Press ▶ **II** to start playback.
- 5 Press to stop playback.

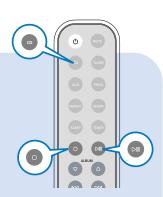

#### Listening to radio

- 1 Select TUNER source.
- 2 Press BAND (TUNER on the remote control) to select your waveband.
- **3** Turn **TUNING** to tune to a station.

# SOURCE BAND TUNING

#### Tip

Detailed playback features and additional functions are described in the accompanied owner's manual.

#### Notes for the remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or AUX, for example).
- Then select the desired function (►II,
   I✓, ►I for example).



