Always there to help you

Register your product and get support at www.philips.com/welcome



User manual



Contents

1	Important Safety	3 3
	Care for your product Care of the environment	4 4
2	Your home theater	5
	Main unit Remote control	5 5 5
3	Connect and setup	8
	Speakers	8
	Connectors	9
	Connect to TV	9
	Connect audio from TV and other	11
	devices	11
4	Use your home theater	12
	Choose sound	12
	Discs	12
	USB storage devices	13
	DivX	14
	Audio, video, and picture options	15
	Radio	16
	MP3 player	16
	Create MP3 files	17
	EasyLink	17
5	Change settings	19
	Picture	19
	Sound	19
	Language	19
	Parental control	20
	Energy saving	21
	Apply factory settings	22
6	Update software	23
	Check software version	23
	Update software through USB or CD-R	23
7	Product specifications	24

8	Troubleshooting	26
9	Notice	28
	Copyright	28
	Compliance	28
	Trademarks	28
10) Language code	29
11	Index	30

-

1 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

• Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

• For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the

wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.

- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

Risk of overheating!

• Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaine, etc.).
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Risk of swallowing batteries!

• The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.

- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.



This is CLASS II apparatus with double insulation, and no protective earth provided.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

 


Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

2 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

Main unit



- 1 Disc compartment
- 2 Display panel
- ③ ▲ (Open/Close)

Open or close the disc compartment, or eject the disc.

(4) ► II (Play/Pause)

Start, pause or resume play.

5 SOURCE


Select an audio or video source for the home theater.

(6) ⊕ (Standby-On)

Switch the home theater on or to standby.

Remote control

This section includes an overview of the remote control.

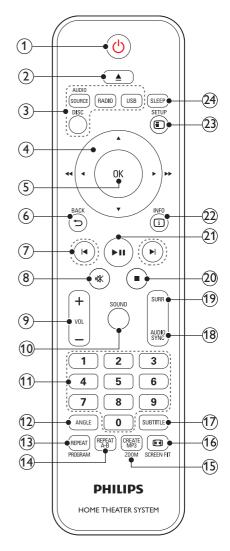

1 (Standby-On)

Switch the home theater on or to standby.

• When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

② ▲ (Open/Close)

Open or close the disc compartment, or eject the disc.

3 Source buttons

- DISC: Switch to disc source. Access or exit the disc menu when you play a disc.
- AUDIO SOURCE: Select an audio input source.
- **RADIO**: Switch to FM radio.
- USB: Switch to USB storage device.

(4) Navigation buttons

- Navigate menus.
- In video mode, press left or right to fast backward or fast forward; press up or down to slow forward or slow backward.
- In radio mode, press left or right to search a radio station; press up or down to fine tune a radio frequency.

5 OK

Confirm an entry or selection.

⑥ ➔ BACK

Return to a previous menu screen.

(7) I◀ / ►I (Previous/Next)

- Skip to the previous or next track, chapter or file.
- In radio mode, select a preset radio station.

⑧ 咪 (Mute)

Mute or restore volume.

9 VOL +/-

Increase or decrease volume.

10 SOUND

Select a sound mode.

(1) Numeric buttons Select an item to play.

(12) ANGLE

Select video scenes recorded in different camera angels.

(13) REPEAT / PROGRAM

- Select or turn off repeat mode.
- In radio mode, set a radio station.

(14) REPEAT A-B

Mark two points within a chapter or track to repeat play, or turn off the repeat mode.

(15) CREATE MP3/ZOOM

- Access the create MP3 menu.
- Zoom into a video scene or picture. Press the Navigation buttons (left/ right) to select a zoom factor.

16 E SCREEN FIT

Fit the picture format to the TV screen.

(17) SUBTITLE

Select subtitle language for video.

(18) AUDIO SYNC

- Select an audio language or channel.
- Press and hold to access audio delay setting, then press +/- to delay the audio to match the video.
- (19) SURR

Select surround sound or stereo sound.

20 **(Stop)** Stop play.

(21) ►II (Play/Pause)

Start, pause or resume play.

22 🗉 INFO

Access more play options while playing a disc or a USB storage device.

23 E SETUP

Access or exit the setup menu.

24 SLEEP

Switch the home theater to standby mode after the elapsed time.

EasyLink controls

With Easylink, you can control your home theater and the TV with the following buttons on your home theater remote control (see 'EasyLink' on page 17).

- ひ (Standby-On): Press and hold to switch your home theater, TV and the connected devices to standby.
- **II** (**Play/Pause**): When a video disc is in the disc compartment, wake up the TV from standby, and then play a disc.

3 Connect and setup

This section helps you connect your home theater to a TV and other devices, and then set it up.

For information about the basic connections of your home theater and accessories, see the quick start guide.



- For identification and supply ratings, refer to the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.


Speakers

Position, connect, and set up your speakers for best surround sound.

Position

Speaker position plays a critical role in setting up a surround sound effect.

For best results, place your speakers and the subwoofer as shown below.

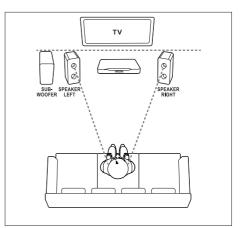

- Note

 Surround sound depends on various factors such as room shape and size, type of wall and ceiling, windows and reflective surfaces, and speaker acoustics.

Follow these general guidelines, and then set up your speakers.

- 1 Seating position: This is the center of your listening area.
- 2 SPEAKER LEFT (speaker left) and SPEAKER RIGHT (speaker right) speakers: Place the left and right speakers in the front, and equidistant from the main unit in an arc, so that the two speakers are at same distance from your seating position. For best effect, point the speakers towards the seating position and place the speakers close to the ear level (when seated).
- **3 SUBWOOFER** (subwoofer): Place the subwoofer at least one meter to the left or right of the TV. Leave about ten centimeter clearance from the wall.

 
Connect

Connect your speakers and the subwoofer to your home theater as described in the quick start guide.

Connectors

Connect other devices to your home theater.

Front




(USB)

Audio, video or picture input from a USB storage device.

2 MUSIC iLINK

Audio input from an MP3 player.

 Back connectors



1 AC MAINS

Connect to the power supply.

2 SPEAKERS

Connect to the supplied speakers and subwoofer.

3 HDMI OUT

Connect to the HDMI input on the TV.

OPTICAL

Connect to an optical audio output on the TV or a digital device.

5 VIDEO OUT

Connect to the composite video input on the TV.

6 AUDIO IN-AUX

Connect to an analog audio output on the TV or an analog device.

7 ANTENNA FM

Signal input from an antenna, cable or satellite.

Connect to TV

Connect your home theater to a TV to watch videos. You can listen to audio from TV programs through your home theater speakers. Use the best quality connection available on your home theater and TV.


Option 1: Connect to TV through HDMI (ARC)

Best quality video

manual

Your home theater supports HDMI version with Audio Return Channel (ARC). If yourTV is HDMI ARC compliant, connect your home theater to the TV through the HDMI ARC connection for easy and quick setup. With HDMI ARC, you do not need an additional audio cable to play audio from TV through your home theater.

 Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI ARC connector on the TV. The HDMI ARC connector on the TV might be labeled HDMI IN or HDMI. For details on TV connectors, see the TV user

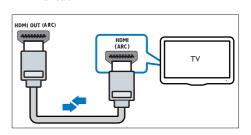

- 2 On your TV, turn on HDMI-CEC. For details, see the TV user manual.
 - When you play a disc on your home theater, the video is automatically displayed on TV and the audio is automatically played on the home theater.
- **3** If audio from the TV does not play automatically on your home theater, set up the audio manually (see 'Set up audio for connected devices' on page 11).

Option 2: Connect to TV through HDMI


Best quality video

If your TV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.

With a standard HDMI connection, you need an additional audio cable to play the audio from the TV through your home theater (see 'Connect audio from TV and other devices' on page 11).

 Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI connector on the TV.

The HDMI connector on the TV might be labeled **HDMI IN**.

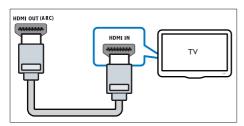

- 2 On yourTV, turn on HDMI-CEC. For details, see the TV user manual.
 - When you play a disc on your home theater, the video is automatically displayed on TV and the audio is

automatically played on the home theater.

- **3** To play audio from TV programs through your home theater, connect an additional audio cable (see 'Connect audio from TV and other devices' on page 11).
- 4 If audio from the TV does not play automatically on your home theater, set up the audio manually (see 'Set up audio for connected devices' on page 11).

Note

 If your TV has a DVI connector, you can use an HDMI/ DVI adapter to connect to TV.


Option 3: Connect to the TV through composite video

Basic quality video

If your TV does not have HDMI connectors, connect your home theater to the TV through a composite connection. A composite connection does not support high-definition video. With a composite connection, you need an additional audio cable to play the audio from the TV through your home theater (see 'Connect audio from TV and other devices' on page 11).

1 Using a composite video cable, connect the **VIDEO OUT** connector on your home theater to the composite video connector on the TV.

 The composite video connector might be labeled AV IN, VIDEO IN, COMPOSITE, or BASEBAND.



- 2 On your TV, switch to the correct video input.
- 3 To play audio from TV programs through your home theater, connect an additional audio cable (see 'Connect audio from TV and other devices' on page 11). On your home theater, press SOURCE repeatedly to select the correct audio input.

Connect audio from TV and other devices

Play audio from TV or other devices through your home theater.

Use the best quality connection available on your TV, home theater, and other devices.




 The audio connections in this user manual are only recommendations. You can use other connections too.

Option 1: Connect audio through a digital optical cable

Best quality audio

Using an optical cable, connect the **OPTICAL** connector on your home theater to the **OPTICAL OUT** connector on the TV or other device.

 
The digital optical connector might be labeled **SPDIF, SPDIF OUT**, or **OPTICAL**.



Option 2: Connect audio through analog audio cables

Basic quality audio

Using an analog cable, connect the **AUX** connectors on your home theater to the **AUDIO OUT** connectors on the TV or other device.

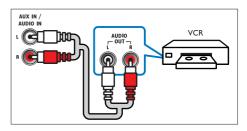

Set up audio for connected devices

When you connect a device to your home theater, check the audio settings.

- 1 On your TV and other devices, turn on HDMI-CEC. For details, see the user manual of the TV and the other device.
- 2 Select 'Amplifier' from the TV speakers menu. For details, see the TV user manual.
- 3 On your home theater, turn on System Audio Control, and then map the audio of the connected device to the correct connectors on your home theater (see 'Play audio from home theater' on page 18).

If the connected device is not HDMI-CEC compliant, press **SOURCE** repeatedly on your home theater to select the correct audio input.

4 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

Before you start

- Make the necessary connections described in the Quick start guide and the user manual.
- Switch the TV to the correct source for the home theater.

Choose sound

This section helps you choose the ideal sound for your video or music.

Sound mode

Select predefined sound modes to suit your video or music.

- 1 Press SOUND repeatedly to select a sound mode.
 - MOVIE: Enjoy a cinematic audio experience, specially enhanced for movies.
 - **MUSIC**: Recreate the original recording environment of your music, in the studio or at a concert.
 - ORIGINAL: Experience the original sound of your movies and music, without added sound effects.
 - NEWS: Hear every word with optimized speech and clear vocals.
 - GAMING: Enjoy thrilling arcade sounds, ideal for action-packed video games or loud parties.

Surround sound mode

Experience an immersive audio experience with surround sound modes.

- 1 Select SURR repeatedly to select a surround mode.
 - SURROUND: Creates a highly compelling 5.1 channel listening experience.
 - **STEREO**:Two-channel stereo sound. Ideal for listening to music.

Discs

Your home theater can play DVDs,VCDs, and CDs. It can also play discs that you've made at home, such as CD-R discs of photos and music.

What you need

- Audio and video connection between your home theater and the TV.
- An audio or a video disc.

Play discs

- 1 Insert a disc into the home theater.
 - → Your TV switches to the correct source and the disc plays automatically. If it does not, press DISC.
- 2 Press the play buttons to control play (see 'Play buttons' on page 12).

Play buttons

Button	Action
Navigation	Navigate menus.
buttons	
OK	Confirm an entry or selection.
► II (Play/	Start, pause or resume play.
Pause)	
	Stop play.
	Skip to the previous or next
	track, chapter or file.
~ / >	Fast backwards or fast forwards.
	Press repeatedly to change the
	search speed.
Navigation	Rotate the picture clockwise or
buttons	counter-clockwise.
(left/right)	

Button	Action
Navigation	Flip the picture vertically or
buttons	horizontally.
(up/down)	
SUBTITLE	Select subtitle language for video.
DISC	Access or exit the disc menu.
AUDIO	Select an audio language or
SYNC	channel.
	Fit the picture format to the TV
SCREEN	screen.
FIT	
ZOOM	Zoom into a video scene or
	picture.
REPEAT	Select or turn off repeat mode.
REPEAT	Mark two points within a chapter
A-B	or track to repeat play, or turn off
	the repeat mode.
ANGLE	Select video scenes recorded in
	different camera angels.
INFO	Access the advanced options
	when you play your audio, video,
	or media files.

Display menu for VCD and SVCD

Display the content menu on VCD and SVCD discs.

- 1 Press E SETUP.
- 2 Select [Preference Setup], and then press OK.
- 3 Select [PBC] > [On], and then press OK.

- To skip the content menu, select [Off].
- While playing a VCD/SVCD, you can press DISC to turn off or on the PBC (playback control).

Display menu for MP3/JPEG

You can choose how you want the MP3 contents to display.

- 1 Press I SETUP.
- 2 Select [Preference Setup], and then press OK.

- 3 Select [MP3/JPEG Display], and then press OK.
- 4 Select the following options, then press OK.
 - [View Folders]: Display the MP3 folders.
 - [View Files]: Display the MP3 files.

Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

- 1 Press SETUP.
- 2 Select [Audio Setup], and then press OK.
- 3 Select [Audio Sync], and then press OK.
- **4** Press the **Navigation buttons** (left/right) to synchronize the audio with the video.
- 5 Press OK to confirm.

- Note

• Press and hold **AUDIO SYNC** on the remote control for quick access to the audio sync setup menu.

USB storage devices

Enjoy pictures, audio and video on a USB storage device.

What you need

- A USB storage device that is formatted for FAT, and complies with the Mass Storage Class.
- A USB extension cable, if the USB storage device does not fit into the connector.

- Note

 You can use digital cameras connected by USB if they can play the files without using a special computer program.

Note

Play files

- 1 Connect the USB storage device to the home theater.
- Press USB.
 → A content browser is displayed.
- 3 Select a file, and then press OK.
- 4 Press the playback buttons to control play (see 'Play buttons' on page 12).

DivX

Play DivX videos from :

- a disc (see 'Discs' on page 12),
- a USB storage device (see 'USB storage devices' on page 13).

VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

- 1 Press I SETUP.
- 2 Select [General Setup], and then press OK.
- 3 Select [DivX(R) VOD Code], and then press OK.
 - → The DivX VOD registration code for your home theater is displayed.

Subtitles

If your video has subtitles in multiple languages, select a subtitle language.

1 While playing video, press **SUBTITLE** to select a language.



Note

- Make sure that the subtitle file has the same name as the video file. For example, if the video file is named 'movie.avi', save the subtitle file as 'movie.srt' or 'movie. sub'.
- Your home theater can play subtitle files in the following formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. These files do not appear in the file navigation menu.
- If the subtitles do not appear correctly, change the character set.

Subtitle character set

If the subtitles do not appear correctly, change the character set that supports the DivX subtitle.

- 1 Press SETUP.
- 2 Select [Preference Setup], and then press OK.
- 3 Select [DivX Subtitle], and then press OK.
- 4 Select a character set, and the press OK.

Character Set	Language
[Standard]	English, Albanian, Danish, Dutch, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish
[Central Europe]	Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Sorbian
[Cyrillic]	Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian and Ukrainian
[Greek]	Greek
[Hebrew]	Hebrew
[Chinese(Simp)]	Simplified Chinese

Audio, video, and picture options

Use advanced features when you play audio, video, or media files from a disc or a USB storage device.

Audio options

- 1 Press I INFO repeatedly to cycle through the following options:
 - Show the current track information and time.
 - [Disc Go To:%c%2d:%2d%C]: Skip to a specific part of the disc by entering the disc time.
 - [Track Go To:%c%2d:%2d%C]: Skip to a specific part of the track by entering the track time.
 - [Select Track:%c%2d%C/%2d]: Select a specific track.

Video options

- 1 Press 🗈 INFO.
 - → The video options menu is displayed.
- 2 Press the Navigation buttons and OK to select and change:
 - [Title]: Select a specific title.
 - [Chapter]: Select a specific chapter.
 - **[Track]**: Select a specific track (for VCD/SVCD only).
 - [Audio]: Select audio language for video.
 - [Subtitle]: Select subtitle language for video.
 - [Angle]: Select video scenes recorded in different camera angels.
 - **[TT Time]**: Skip to a specific part of the video by entering the title time.
 - [Ch Time]: Skip to a specific part of the video by entering the chapter time.
 - [Disc Time]: Skip to a specific part of the video by entering the disc time (for VCD/SVCD only).

- **[Track Time]**: Skip to a specific part of the video by entering the track time (for VCD/SVCD only).
- [Preview]: Select a content preview for disc.
- [Repeat]: Select a repeat mode.
- [Time Disp.]: Select the information of time display.

Picture options

- 1 Press I INFO to access picture preview mode.
 - \mapsto 12 thumbnail pictures are displayed.
- 2 Press I / ►I to go to previous or next preview page.
- **3** Press the Navigation buttons and OK to select a picture.

Slideshows

While playing audio, access fun features such as picture and musical slideshows.

Picture slideshows

View a slideshow of your pictures stored in your disc or a USB storage device.

- 1 Select a picture from a disc or USB storage device, and then press ► II.
- 2 Press \blacksquare to stop the slideshow.

Musical slideshows

Create a musical slideshow to play music and pictures at the same time.

- 1 Select a music track, and then press OK.
- 2 Press → BACK, and go to the picture folder.
- **3** Select a picture, and then press **OK** to start the slideshow.
- 4 Press to stop slideshow.
- 5 Press again to stop music.

Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.

What you need

FM antenna.



- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

Tune stations

- 1 Connect the FM antenna as described in the Quick start guide.
- 2 Press RADIO.
 - ➡ If you have already installed the radio stations, the last channel that you listened to is played.
 - → If you have not installed any radio stations, the message AUTO INSTALL...PRESS PLAY appears on the display panel. Press ► (Play).
- **3** Press the following buttons to listen or to change radio stations:

Button	Action
I ∢ / ►I	Select a preset radio station.
Navigation buttons (left/right)	Search for a radio station.
Navigation buttons (up/down)	Fine tune a radio frequency.
	Press to stop the installation of radio stations. Press and hold to erase the preset radio station.

PROGRAM Manual:

 Press PROGRAM. 2) Press Numeric buttons to select a preset number. 3) Press OK to store the radio station. 4) Repeat the steps above to store other radio stations. Automatic: Press and hold for three seconds to reinstall the radio stations

Listen to radio

- 1 Press RADIO.
 - To listen to a preset station, press I◀ or ▶I.
 - To search for a radio station, and then listen, press Navigation buttons (left/ right).
- 2 Press +/- (Volume) to change the volume.

MP3 player

Connect your MP3 player to play your audio files or music.

What you need

- An MP3 player.
- A 3.5mm stereo audio cable.

Play music

- 1 Connect the MP3 player to the home theater as described in the Quick start guide.
- 2 Press AUDIO SOURCE repeatedly until 'MUSIC I-LINK' appears on the display panel.
- **3** Press the buttons on the MP3 player to select and play audio files or music.

Create MP3 files

Use your home theater to convert audio CDs into MP3 files.

What you need

- An audio disc.
- A USB storage device
- 1 Connect a USB storage device to the home theater.
- 2 Play your audio CD (CDDA/HDCD).
- 3 Press CREATE MP3.
 - → The create MP3 screen is displayed.
- 4 Press the Navigation buttons and OK to select and change:
 - [Speed]: Select the write-to-file speed.
 - [Bitrate]: Select the conversion quality.
 - [Device]: Select the USB storage device which you use to store the MP3 files.
- 5 Navigate to the right panel, and then select the audio tracks and press OK.
 - To select all tracks, navigate to **[Select** All], and then press OK.
- 6 Select [Start], and then press OK to start the MP3 conversion.
 - A new folder which contains the MP3 files is created in the USB storage device.
 - To exit the menu, select **[Exit]**, and then press **OK**.

- Note

- When the conversion is in process, do not press any buttons.
- DTS CDs and copy-protected CDs cannot be converted.
- Write-protected or password-protected USB storage device cannot be used to store MP3 files.

EasyLink

The home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLinkcompliant devices that are connected through HDMI can be controlled by a single remote control.

Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

What you need

- HDMI-CEC compliant devices.
- An HDMI connection between the connected devices.

Switch on

- On the TV and other connected devices, turn on the HDMI-CEC operations. For details, see the manual of the TV or other devices.
- 2 Press I SETUP.
- 3 Select [Video Setup], and then press OK.
- 4 Select [HDMI Setup] > [EasyLink Setup] > [EasyLink], and then press OK.
- 5 Select [On], and then press OK.

Control devices

Control the home theater and the other connected HDMI-CEC compliant devices with a single remote control.

One-touch play

If you enable One-touch play, the TV automatically switches to the correct channel when you play a disc in your home theater.

One-touch standby

When you press and hold \bigcirc (**Standby**) on the remote control, the home theater and all the connected HDMI-CEC devices (that support one-touch standby) switch to the standby mode.

If one-touch standby is enabled on your home theater, you can switch to standby with the remote control of the TV or other HDMI-CEC devices.

System Audio Control

When you play a device that has its audio output routed to the home theater, the home theater switches to the corresponding audio source automatically.

To use one-touch audio, turn on System Audio Control and follow the instructions on the TV to map connected devices to the audio input connectors of the home theater.

Audio Input Mapping

When you connect a new device to your home theater, map the device to the audio input connector (see 'Play audio from home theater' on page 18).

Play audio from home theater

Play the audio from a connected device through your home theater.

- 1 Press SETUP.
- 2 Select [Video Setup], and then press OK.
- 3 Select [HDMI Setup] > [EasyLink Setup] > [System Audio Control] > [On], and then press OK.
 - To play the audio from the TV speakers, select [Off], and skip the following steps.
- 4 Select [HDMI Setup] > [EasyLink Setup] > [Audio Input Mapping], and then press OK.
- 5 Follow the instructions on the TV to map the audio of the connected device to the audio inputs on your home theater.

5 Change settings

This section helps you to change the settings of your home theater.

Caution

 Most of the settings are already configured with the best value for your home theater. Unless you have a reason to change a setting, it is best to leave it at the default value.



You cannot change a setting that is grayed out.

 To return to the previous menu, press DBACK. To exit the menu, press ESETUP.

Picture

Change the picture settings to suit your preferences.



 The best setting is automatically selected for the TV. If you change the setting, make sure that the TV supports the new settings.

Picture settings and format

- 1 Press SETUP.
- 2 Select **[Video Setup]**, and then press OK.
- 3 Change the following settings, and then press OK:
 - **[TV System]**: For TV supported video format.
 - **[TV Display]**: For TV picture display format.
 - [Picture Settings]: Predefined color settings.

Picture resolution

To enjoy high definition HDMI video output, set the HDMI video settings that best match up with your TV capability.

- 1 Press SETUP.
- 2 Select [Video Setup], and then press OK.
- 3 Select [HDMI Setup], and then press OK.
- 4 Change the following settings, and then press OK:
 - [Wide Screen Format]: For 16:9 wide screen TV display setting.
 - [HDMI Video]: HDMI resolution.

High definition picture

Support high definition JPEG pictures.

- 1 Press SETUP.
- 2 Select [Video Setup], and then press OK.
- 3 Select [HD JPEG] > [On], and then press OK.

Sound

Change the sound settings to suit your preference.

HDMI audio

HDMI audio is automatically down-mixed to two channel for TV speakers. If you do not want to output audio through your TV, disable the HDMI audio.

- 1 Press SETUP.
- 2 Select [Audio Setup], and then press OK.
- 3 Select [HDMI Audio] > [Off], and then press OK.

Language

Select a language for the home menu, audio, and subtitles.

Home menu

- 1 Press SETUP.
- 2 Select [General Setup], and then press OK.
- 3 Select [OSD Language], and then press OK.
- 4 Select a menu language for your home theater, and then press OK.

Disc audio

- 1 Press SETUP.
- 2 Select [Preference Setup], and then press OK.
- 3 Select [Audio], and then press OK.
- 4 Select an audio language for discs, and then press OK.

- Note

- If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 29).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

Disc subtitle

- 1 Press I SETUP.
- 2 Select [Preference Setup], and then press OK.
- 3 Select [Subtitle], and then press OK.
- 4 Select a subtitle language for discs, and then press OK.

Disc menu

- 1 Press E SETUP.
- 2 Select [Preference Setup], and then press OK.
- 3 Select [Disc Menu], and then press OK.

4 Select a menu language for discs, and then press OK.

- Note

- If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 29).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

Parental control

Restrict access to discs.

Password

You can set or change your password to play a restricted disc.

- 1 Press I SETUP.
- 2 Select [Preference Setup], and then press OK.
- Select [Password], and then press OK.
 → A change password menu is displayed.
- 4 Follow the instructions on the TV to set or change password.
 - If you do not have a password or you have forgotten, enter **0000**.
- 5 Press OK.

Ratings

Some discs are recorded with ratings according to age. You can set up your home theater to play only discs with an age rating lower than your child's age.

- 1 Press I SETUP.
- 2 Select [Preference Setup], and then press OK.
- 3 Select [Parental], and then press OK.
- 4 Select an age rating, and then press OK.

- To play all discs irrespective of the rating, select level **8**.
- 5 Use the Numeric buttons to enter the password.

Lock disc

To restrict access to discs that are not encoded with ratings and parental control, lock the disc manually. You can lock upto 20 discs on your home theater:

- 1 While playing a disc, press 🗈 SETUP.
- 2 Select [General Setup], and then press OK.
- 3 Select [Disc Lock] > [Lock], and then press OK.
 - → A message prompts you to enter the password.
- 4 Enter the password with the Numeric buttons.
 - → The disc is locked.
 - To play the locked disc, enter the password.

Energy saving

Save energy by changing the following settings.

Auto standby

When playing a disc or a USB storage device, automatically switch your home theater to standby if:

- it is in pause or stop mode, and
- no button is pressed for 30 minutes.
- 1 Press E SETUP.
- 2 Select [General Setup], and then press OK.
- 3 Select [Auto Standby] > [On], and then press OK.

Sleep timer

Set timers to switch the home theater to standby after a specified time.

- 1 Press SETUP.
- 2 Select [General Setup], and then press OK.
- 3 Select [Sleep Timer], and then press OK.
- 4 Select the duration of the sleep timer.
 - → The sleep timer can be set up to 60 minutes. If the sleep timer is set to [Off], it switches off.
- 5 Press OK to activate.
 - → The home theater switches to standby after the specified time.

Screen saver

Automatically switch your home theater to screen saver mode if:

- it is in pause or stop mode, and
- no button is pressed for 10 minutes.
- 1 Press I SETUP.
- 2 Select [General Setup], and then press OK.
- 3 Select [Screen Saver] > [On], and then press OK.

Display panel

Change the brightness of the home theater display panel.

- 1 Press SETUP.
- 2 Select [General Setup], and then press OK.
- 3 Select [Display Dim], and then press OK.
- 4 Select the brightness, and then press OK.

Apply factory settings

Reset your home theater to the default settings. You cannot reset the parental control settings.

- 1 Press I SETUP.
- 2 Select [Preference Setup], and then press OK.
- 3 Select [Default], and then press OK.
- 4 Select [Reset], and then press OK.

6 Update software

To continue to get the best features and support for your home theater, update the software regularly. Compare the version of your current software with the latest version on www.philips.com/support.

Check software version

- 1 Press SETUP.
- 2 Select [Preference Setup], and then press OK.
- 3 Select [Version Info.], and then press OK.
 → The software version is displayed.

Update software through USB or CD-R

What you need

- A CD-R or a USB flash drive with at least 75MB of memory. The USB flash drive must be FAT formatted. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip[®] for Microsoft[®] Windows[®] or Stufflt[®] for Macintosh[®]).

Step 1: Download the latest software

- 1 Connect a USB flash drive or insert a CD-R to your computer.
- 2 In your web browser, go to www.philips. com/support.
- 3 At the Philips Support website, find your product and locate the Software and drivers.

- → The software update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive or CD-R.
- 5 Use the archive utility to extract the software update file in the root directory.
- 6 Remove the USB flash drive or CD-R from your computer.

Step 2: Update the software

Warning

- If you use a USB flash drive, make sure that there is no disc in the disc compartment, and the disc compartment is closed.
- 1 Connect the USB flash drive or insert the CD-R to your home theater.
- 2 Switch your TV to the correct source for your home theater.
- **3** Follow the instructions on the TV to complete the update.
 - → When the software update is complete, the home theater automatically switches off . If it does not, disconnect the power cord for a few seconds, and then reconnect it.

Note

 When the software update is in progress, do not turn off the power; or remove the USB flash drive or CD-R.

7 Product specifications

Note

• Specifications and design are subject to change without notice.

Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

Country	DVD
Europe, United Kingdom	
Asia Pacific, Taiwan, Korea	
Latin America	
Australia, New Zealand	
Russia, India	
China	

Media formats

 DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX media, USB storage device

File formats

• Audio: .mp3, .wma

- Video: .avi, .divx, .mpg, .mpeg,
- Picture: .jpg, .jpeg

Amplifier

- Total output power: 300W RMS (30% THD)
- Frequency response: 20 Hz-20 kHz / ±3 dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
 - AUX:2V
 - Music iLink: 1 V

Video

- Signal system: PAL / NTSC/Multi
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p

Audio

- S/PDIF Digital audio input:
 - Optical:TOSLINK
- Sampling frequency:
 - MP3: 32 kHz, 44.1 kHz, 48 kHz
 - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
 - MP3: 32 kbps 320 kbps
 - WMA: 64 kbps 192 kbps

Radio

- Tuning range:
 - Europe/Russia/China: FM 87.5-108 MHz (50 kHz)
 - Asia Pacific/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 200 Hz-12.5 kHz / ±6 dB

USB

Compatibility: Hi-Speed USB (2.0)

- Class support: USB Mass Storage Class
 (MSC)
- File system: FAT16, FAT32
- Maximum memory support: < 160 GB

Main unit

- Power supply:
 - Europe/China/Russia/India: 220-240V~, 50 Hz
 - Latin America/Asia Pacific: 110-240V~, 50-60 Hz
- Power consumption: 55 W
- Standby power consumption: ≤ 0.5 W
- Dimensions (WxHxD): 360 x 58 x 325 mm
- Weight: 2.50 kg

Subwoofer

- Output power: 150 W RMS (30% THD)
- Impedance: 8 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Dimensions (WxHxD): 160 x 265 x 265 mm
- Weight: 2.50 kg

Speakers

- Output power: 2 x 75 W RMS (30% THD)
- Speaker impedance: 4 ohm
- Speaker drivers: 1 x 63.5 mm (2.5") full range
- Dimensions (WxHxD): 84.5 x89 x 89 mm
- Weight: 0.27 kg/each
- Cable length: 3 m

Remote control batteries

• 2 × AAA-R03-1.5 V

Laser

- Type: Semiconductor laser GaAIAs (CD)
- Wave length: 645 665 nm (DVD), 770 -800 nm (CD)

- Output power: 6 mW (DVD), 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

8 Troubleshooting

Warning

• Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www. philips.com/support.

Main unit

The buttons on the home theater do not work.

• Disconnect the home theater from the power supply for a few minutes, then reconnect.

Picture

No picture.

• Make sure that the TV is switched to the correct source for the home theater.

No picture on a TV connected through HDMI.

- Make sure that the HDMI cable is not faulty. If it is faulty, replace it with a new cable.
- If this happens when you change the HDMI video resolution, switch to its default mode: Press ▲ to open the disc compartment, and then press 304 on the remote control.
- Wait for 10 seconds for auto recovery, or change the HDMI video setting (see 'Picture resolution' on page 19).

Disc does not play high-definition video.

• Make sure that the disc contains highdefinition video.

- Make sure that the TV supports highdefinition video.
- Use an HDMI cable to connect to the TV.

Sound

No sound from home theater speakers.

- Connect the audio cable from your home theater to your TV or other devices. You do not need a separate audio connection when the home theater and TV are connected through an HDMI ARC connection.
- Set up the audio for the connected device (see 'Set up audio for connected devices' on page 11).
- Reset your home theater to its factory settings (see 'Apply factory settings' on page 22), then switch it off and switch on again.
- On your home theater, press SOURCE repeatedly to select the correct audio input.

Distorted sound or echo.

 If you play audio from the TV through the home theater, make sure that the TV is muted.

Audio and video are not synchronized.

1) Press and hold AUDIO SYNC. 2) Press
 +/- within five seconds to synchronize the audio with the video.

Play

Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 24).
- Make sure that the home theater supports the region code of the disc (see 'Region codes' on page 24).
- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized.

Cannot play a DivX file.

- Make sure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder:
- Make sure that the DivX file is complete.

DivX subtitles do not display correctly.

- Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 14).
- Select the correct character set: 1) Press
 E SETUP. 2) Select [Preference Setup] > [DivX Subtitle]. 3) Select the supported character set. 4) Press OK.

Cannot read the contents of a USB storage device.

- Make sure that the format of the USB storage device is compatible with the home theater:
- Make sure that the file system on the USB storage device is supported by the home theater.

'input invalid' or 'x' sign appears on the TV.

• The operation is not possible.

EasyLink does not work.

 Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is on (see 'EasyLink' on page 17).

When you switch on the TV, the home theater automatically switches on.

 This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

9 Notice

This section contains the legal and trademark notices.

Copyright

Be responsible Respect copyrights

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Compliance

(6

This product complies with the radio interference requirements of the European Community.

Trademarks

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



DivX °, DivX Certified ° and associated logos are registered trademarks of DivX, Inc. and are used under license.

ABOUT DIVX VIDEO: DivX ° is a digital video format created by DivX, Inc. This is an official

DivX Certified [®] device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified [®] device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

HDMI, and HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



10 Language code

Abkhazian	6566
Afar	6565
Afrikaans	6570
Amharic	6577
Arabic	6582
Armenian	7289
Assamese	6583
Avestan	6569
	6589
Aymara	6590
Azerhaijani Bahasa Malawa	
Bahasa Melayu	7783
Bashkir	6665
Belarusian	6669
Bengali	6678
Bihari	6672
Bislama	6673
Bokmål, Norwegian	7866
Bosanski	6683
Brezhoneg	6682
Bulgarian	6671
Burmese	7789
Castellano, Español	6983
Catalán	6765
Chamorro	6772
Chechen	6769
Chewa; Chichewa; Nyanj	
中文	9072
Chuang; Zhuang	9065
Church Slavic; Slavonic	6785
Chuvash	6786
Corsican	6779
Česky	6783
Dansk	6865
Deutsch	6869
Dzongkha	6890
English	6978
Esperanto	6979
Estonian	6984
Euskara	6985
Ελληνικά	6976
Faroese	7079
Français	7082
Frysk	7089
Fijian	7074
Gaelic; Scottish Gaelic	7168
Gallegan	7176
	7565
Georgian Cilenau Kilenau	7573
Gikuyu; Kikuyu	
Guarani	7178
Gujarati	7185
Hausa	7265
Herero	7290
Hindi	7273
Hiri Motu	7279
Hrwatski	6779
Ido	7379
Interlingua (Internationa	I)7365
Interlingue	7365
Inuktitut	7385

Inupiaq	7375
Irish	7165
Íslenska	7383
Italiano	7384
lvrit	7269
Japanese	7465
Javanese	7486
Kalaallisut	7576
Kannada	7578
Kashmiri	7583
Kazakh	7575
Kernewek	7587
Khmer	7577
Kinyarwanda	8287
Kirghiz	7589
Komi	7586
Korean	7579
Kuanyama; Kwanyama	7574
Kurdish	7585
Lao	7679
Latina	7665
Latvian	7686
Letzeburgesch;	7666
Limburgan; Limburger	7673
Lingala	7678
Lithuanian	7684
Luxembourgish;	7666
Macedonian	7775 7771
Malagasy	7285
Magyar Malayalam	7285
Malayalam Maltese	7784
Manx	7186
Maori	7773
Marathi	7782
Marshallese	7772
Moldavian	7779
Mongolian	7778
Nauru	7865
Navaho; Navajo	7886
Ndebele, North	7868
Ndebele, South	7882
Ndonga	7871
Nederlands	7876
Nepali	7869
Norsk	7879
Northern Sami	8369
North Ndebele	7868
Norwegian Nynorsk;	7878
Occitan; Provencal	7967
Old Bulgarian; Old Slavonic	6785
Oriya	7982
Oromo	7977
Ossetian; Ossetic	7983
Pali	8073
Panjabi	8065
Persian	7065
Polski	8076
Português	8084

Pushto	8083
Russian	8285
Quechua	8185
Raeto-Romance	8277
Romanian	8279
Rundi	8278
Samoan	8377
Sango	8371
Sanskrit	8365
Sardinian	8367
Serbian	8382
Shona	8378
Shqip	8381
Sindhi	8368
Sinhalese	8373
Slovensky	8373
Slovenian Somali	8376 8379
Somail Sotho; Southern	8384
South Ndebele	7882
Sundanese	8385
Suomi	7073
Swahili	8387
Swati	8383
Svenska	8386
Tagalog	8476
Tahitian	8489
Tajik	8471
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga (Tonga Islands)	8479
Tsonga -	8483
Tswana	8478
Türkçe	8482
Turkmen Twi	8475 8487
	8571
Uighur Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapuk	8679
Walloon	8765
Welsh	6789
Wolof	8779
Xhosa	8872
Yiddish	8973
Yoruba	8979
Zulu	9085

11 Index

A

amplifier	24
audio	
HDMI audio	19
predefined modes	12
quality	11
settings	19
specifications	24
audio input mapping	18
audio language	20
audio options	15
auto standby	21

В

brightness

С

care	
environment	4
product	4
connect	
speakers	8
TV (Composite)	10
TV (HDMI)	10
connectors	
front connectors	9
control	
disc play	12
Easylink (HDMI-CEC)	7
main unit	5
parental control	20
radio	16
create MP3	

D

17
20
15
12

DivX	14
lock/unlock	21
menu language	20
options	15
picture	15
play	12
subtitle	20
synchronize picture and sound	13
time search	15
titles	15
display	
MP3/JPEG menu	13
VCD/SVCD menu	13
display panel	5
DivX	
character set	14
subtitles	14
VOD code	14

Ε

21

EasyLink (HDMI-CEC)

audio input mapping	18
control buttons	7
one-touch play	17
one-touch standby	17
play audio	18
system audio control	17
enable	
auto standby	21
HDMI-CEC	17
screen saver	21
energy	
auto standby	21
brightness	21
screen saver	21
sleep timer	21

F

•	
factory settings	22
FM antenna	9

н

HDMI	
audio	19
video settings	19

HDMI-CEC

17

L

language

audio	20
disc menu	20
language code	29
onscreen menu	20
subtitle	20

Μ

main unit	
overview	5
specifications	25
troubleshooting	26
media formats	24
MP3	
connector	9
create MP3	17
display contents	13
play	16

0

one-touch play one-touch standby overview	17 17
connectors	9
HDMI-CEC	17
main unit	5
remote control	5
settings	19

Ρ

parental control

lock disc	21
password	20
ratings	20
password	20
Philips Easylink	17
picture	
high resolution JPEG	19
settings	19
slideshows	15
troubleshooting	26

picture options	15
play discs	12
MP3	16
radio	24
slideshows	15
troubleshooting	26
USB	13
position	
connectors	9
position	8
preference	
audio	19
auto standby	21
change password	20
disc menu	20
display panel	21
menu language	20
screen saver	21
sleep timer	21
subtitle	20
product specifications	24

R

radio		
control buttons	16	
FM antenna	9	
listen to radio	16	
specifications	24	
tune stations	16	
ratings	20	
recycling	4	
region codes	24	
remote control		
batteries	25	
overview	5	
repeat	15	

S

safety		
disposal	4	
use of the product	3	
screen saver	21	
settings		
audio	19	
auto standby	21	

default disc language HDMI audio HDMI video HDMI-CEC menu language parental rating password picture power restore screen saver sleep timer subtitle language video sleep timer	22 20 19 17 20 20 20 20 20 20 20 21 21 21 20 19 21
slideshows	
musical	15
picture	15
software	
check current version	23
update	23
sound	
predefined sound mode	12
surround sound	12
synchronize picture and sound	13
troubleshooting	26
sound mode	12
speakers	
connect	8
position	8
specifications	25
surround sound	12
subtitle	
character set	14
language	20
subwoofer	
specifications	25
synchronize picture and sound	13
system audio control	17

т			
	-	Т	•
		I	

•	
time search	15
titles	15
trademarks	28

troubleshooting	
connection	26
main unit	26
picture	26
play	26
sound	26

U

23
23
24
15
14
24

V

video	
picture settings	19
synchronize picture and sound	13
VOD code for DivX	14
video formats	24
video options	15
VOD code for DivX	14



Specifications are subject to change without notice \circledcirc 2012 Koninklijke Philips Electronics N.V. All rights reserved.

