Quick Start Guide






Step C


Enjoy

What's in the Box?

You should find these items upon opening the box.

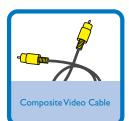



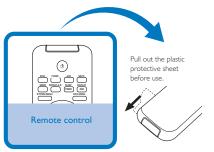











Tips


See the User Manual for other TV connection options.

Connect the speaker cables.

Connect the MW and FM antennas.

Connect the component video cables (red/blue/green) and audio cables (white/red) to a TV.

Connect the power cords of the system and TV.

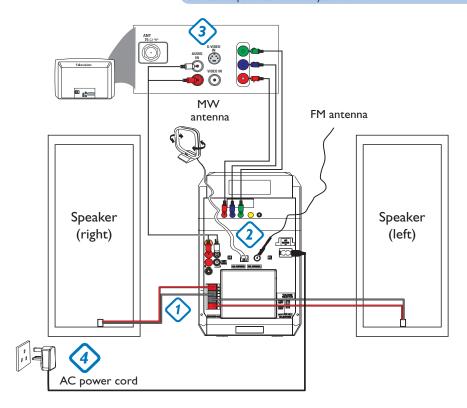




Setting up the TV

Press SOURCE (DISC on the remote) to select disc source.


Turn on the TV and set it to the correct Video In channel.






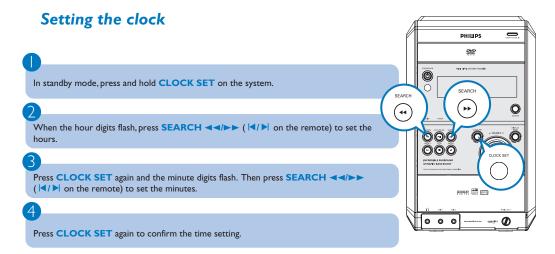

Setting system menu options

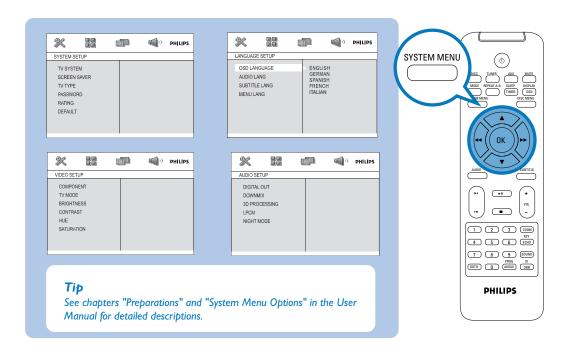

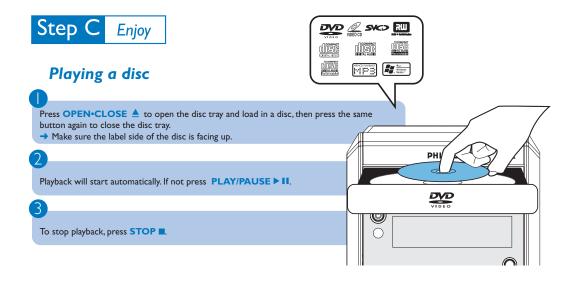

Programming and tuning to radio stations

- Press **SOURCE** (**TUNER** on the remote) to select tuner source.
- Press **PROGRAM** for more than three seconds to program all available stations in order of waveband.
- Press PRESET | ◀/ ▶ until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



