


Multimedia Speakers
SPA2380



EN User manual
ZH-CN 用户手册

PHILIPS

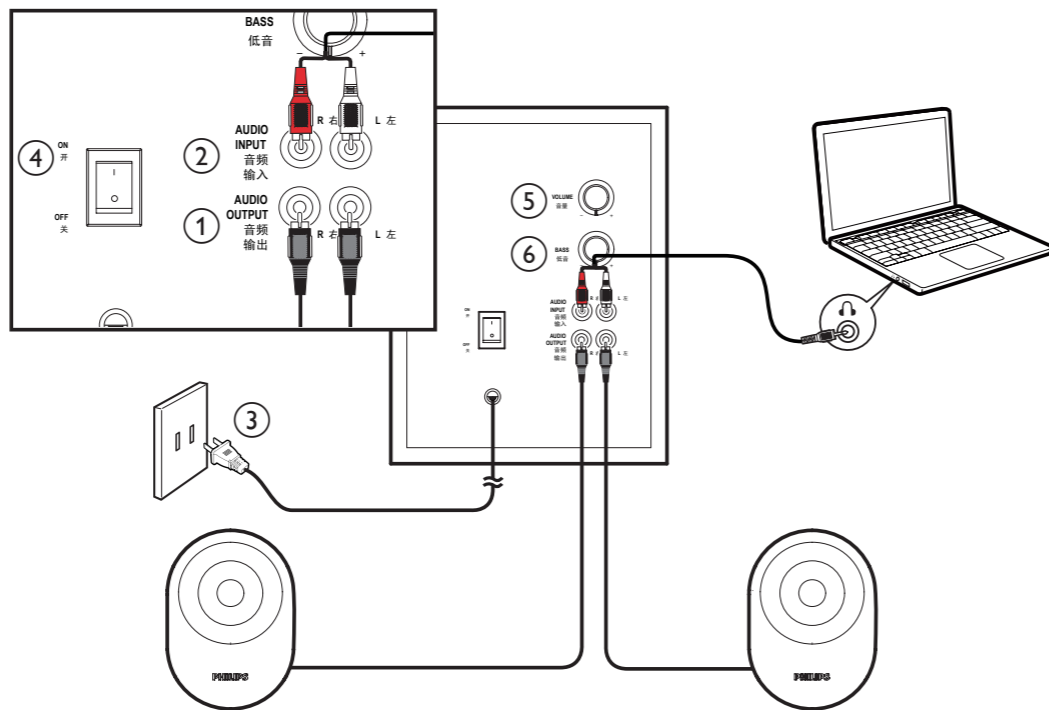

EN

Warning: 1. The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product. 2. To completely disconnect the power input, the mains plug of the product shall be disconnected from the mains. 3. The mains plug of the product should not be obstructed OR should be easily accessed during intended use. 4. No naked flame sources, such as lighted candles, should be placed on the products.

NOTE: Ensure that the multimedia speaker is installed properly before using.

Installation:

- 1 Connect the speaker plug to the audio output socket. (1)
- 2 Connect the audio input plug to the audio output of your computer. (2)
- 3 Plug the AC plug into AC power socket. (3)
- 4 Switch on the speaker. (4)
- 5 Rotate the volume knob to adjust the volume. (5)
- 6 Rotate the bass knob to adjust the bass. (6)
- 7 Switch off the speaker and unplug.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Please inform yourself about the local separate collection system for electrical and electronic products, including those marked by the crossed-out wheely bin symbol. Please act according to your local rules and do not dispose of your old products with your normal household waste.

ZH-CN















警告: 1. 切勿将本产品暴露在滴漏或溅漏环境下, 也不要产品在产品上面放置装有液体的物体 (如花瓶)。2. 要完全断开电源输入, 应从电源上拔下产品的电源插头。3. 产品的电源插头应触手可及, 或者在需要使用时应能轻易插拔。4. 切勿将无遮盖的火源 (如点燃的蜡烛) 置于产品上。

注意: 使用之前, 请确保多媒体扬声器安装正确。

安装:

- 1 将扬声器插头连接至音频输出插孔。(1)
- 2 将音频输入插头连接到电脑的音频输出插孔。(2)
- 3 将交流电源插头插入交流电源插座。(3)
- 4 打开扬声器。(4)
- 5 旋转音量旋钮以调节音量。(5)
- 6 旋转低音旋钮以调节低音。(6)
- 7 关闭扬声器并拔出插头。

本产品采用可回收利用的高性能材料和组件制造而成。请熟悉当地专门为电子和电器产品, 包括那些标有叉线有轮垃圾箱符号的产品所制订的分门别类的收集机制。请遵守当地规定, 不要将旧产品丢弃到普通生活垃圾中。

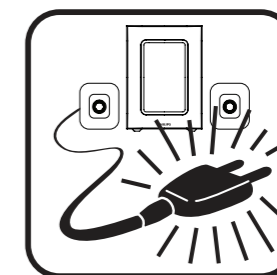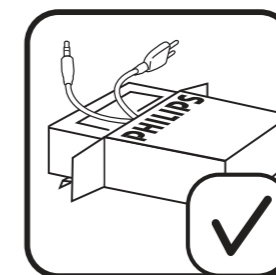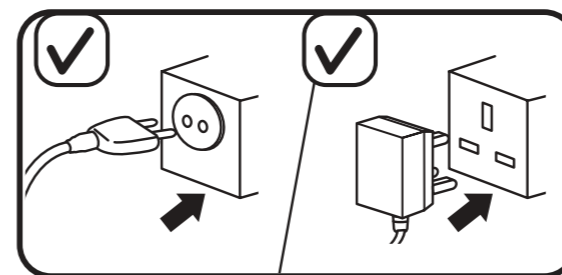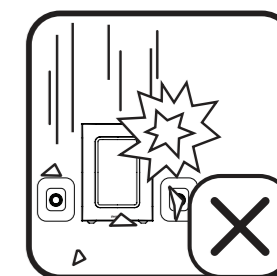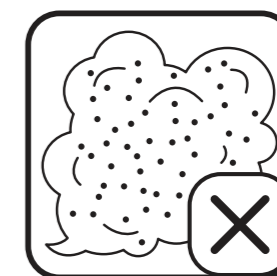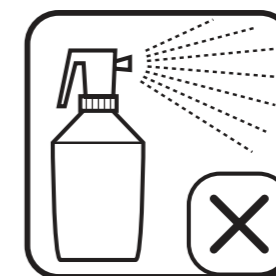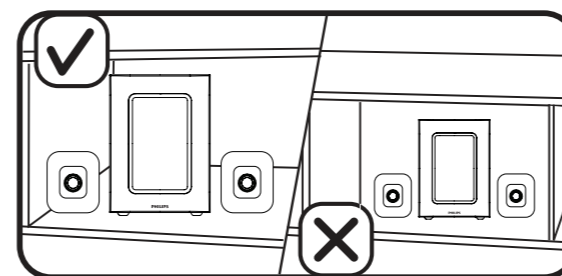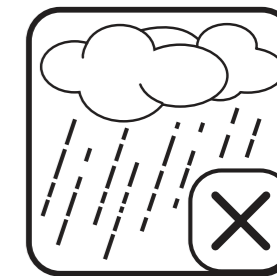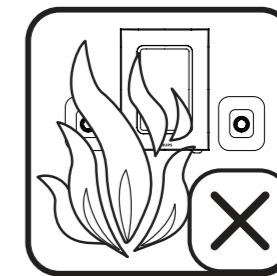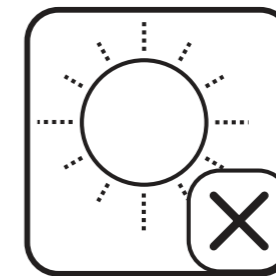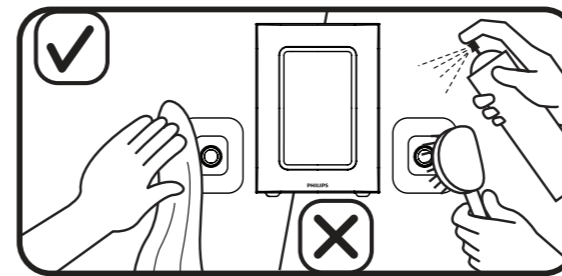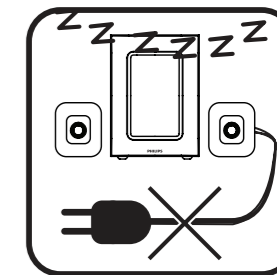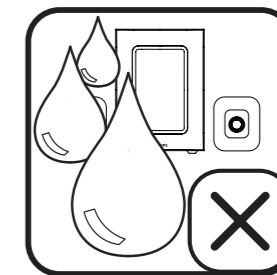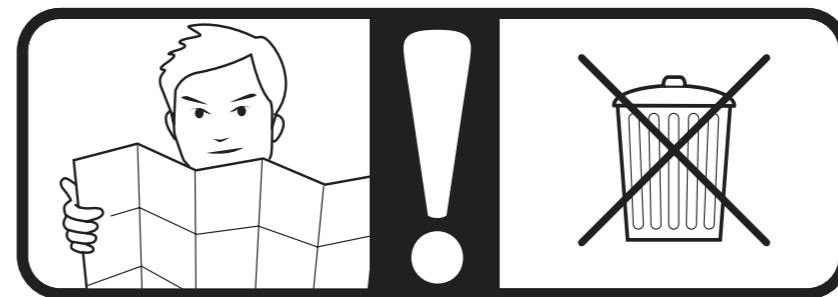

Service
Service
Service
GUARANTEE

This guarantee card is valid in China.
This guarantee card should be retained by
The USER.
此保用卡在中国通用，用户请保留此卡。



PHILIPS

No.

This product is made of high quality material and great care has been taken in its manufacture. It is designed to give good performance provided it is properly operated and maintained. The product is sold subject to the understanding that if any defect in manufacture or material shall appear within 12 months from date of consumer sale, if any defect in main parts over 12 months, the warranty period is subject to country Consumer Law, Philips Consumer Lifestyle China Service will arrange for such defect to be rectified without charge under the following warranty items and conditions.

Warranty Terms and Conditions:

- The defect is not due to use of the product for other than domestic purposes, or an incorrect voltage, or use of improper accessories, or contrary to operating instructions, or to accidental damage (whether in transit or otherwise), misuse, neglect or inexpert repair, or incorrect installation, or accessories belonging to the product, transportation.
- Present this warranty card and sales invoice when demanding service from Philips authorized service centres;
- This guarantee card will be void if correction is made.
- This guarantee card is valid only when it is sealed by the dealer.

此产品是一件设计精良，有高品质元件制造之家庭电器，在正确使用及保养下应能正确地表现其优越性能。

自购买日期始，整机保修一年。关于主要部件保修期限，按照国家消法规定执行。飞利浦优质服务部将按下列保用条例为持卡用户提供免费保修服务。

保用条例:

- 保用服务只限于一般正常使用下有效。一切人为损坏，例如接入不适当电源，使用不适当配件，不依说明书使用，因运输及其他意外而造成之损坏，非经本公司认可之维修和改装，错误使用或疏忽而造成损坏，不适当之安装或因天灾造成损坏等，保用服务立即失效。此保用服务并不包括附件，辅助装置，运输费。
- 维修时请带上此卡及正本发票。
- 此卡若经涂改即作废。
- 此卡须经购买商号盖章为有效。
- 对不依照上述保用条例办理之用户，本公司对上述条例负解释权。

User's Name

用户姓名

Address :

地址

Tel. No :

电话

Post Code :

邮编

Model No :

型号

Serial No :

机身编号

Product Place :

产地

Company Seal :

购买商号印章

Date of Purchase :

购买日期

Shop name and address :

购买商号名称及地址

Tel. No/Post Code :

电话 / 邮编

Invoice No. :

发票号

Installation Registration

调试记录

Purchase Date 购买日期	Installation Date 调试日期	Fix Content & Result 调试内容和结果	Technician 调试员

Remark: Fill in the table when install the set in the market
备注: 在商场试机时, 请将试机情况填写在表格内

服务须知:

SERVICE INFORMATION:

For after-sales and maintenance service, please call service hot line 4008 800 008.

Any comments and enquiries during the service, please contact our Philips Consumer Lifestyle Service Offices.

如需要此产品的售后服务, 请拨打服务热线 4008 800 008。

如在维修服务过程中有任何意见, 欢迎致函飞利浦优质服务办事处解决疑难。

Philips(China) Investment Co.,Ltd.

Consumer Care China Philips Consumer Lifestyle

Philips Innovation Campus Shanghai NO.1 Building, NO.10 ,Lane 888

Tian Lin Road Shanghai, P. R. C. 200233

Fax: +86 21 54452663

飞利浦(中国)投资有限公司

飞利浦优质服务客户服务部

中国上海市田林路888弄10号 飞利浦创新科技园1号楼

邮政编码: 200233

传真: (021) 54452663

服务热线: 4008 800 008

(用户需承担本地通话费)

网址: //www.philips.com.cn



Repair Registration 维修记录							
Claim Date 报修日期	Repair Date 修理日期	Defect Description 故障现象	Reason 故障原因	Fix Content 修理详情	Collection Date 取机日期	Technician 修理员	

* Present this warranty card to register 修理时请出示此卡以便记录