


Register your product  
and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)


Universal remote control

SRP 1001/10

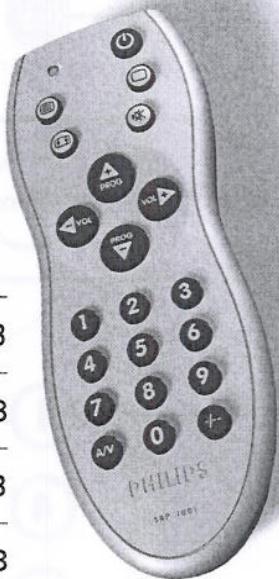

EN	User manual	3
DE	Bedienungsanleitung	8
FR	Mode d'emploi	13
IT	Manuale d'uso	18
ES	Instrucciones de manejo	23
RU	Пользовательское руководство	28
PL	Instrukcja obsługi	33
NL	Gebruikershandleiding	38
GR	Εγχειρίδιο χρήστης	43
CZ	Uživatelský manuál	48
SV	Bruksanvisning	53
PT	Manual do utilizador	58
DK	Brugervejledning	63
FI	Käyttöopas	68
NO	Bruksanvisning	73

**PHILIPS**

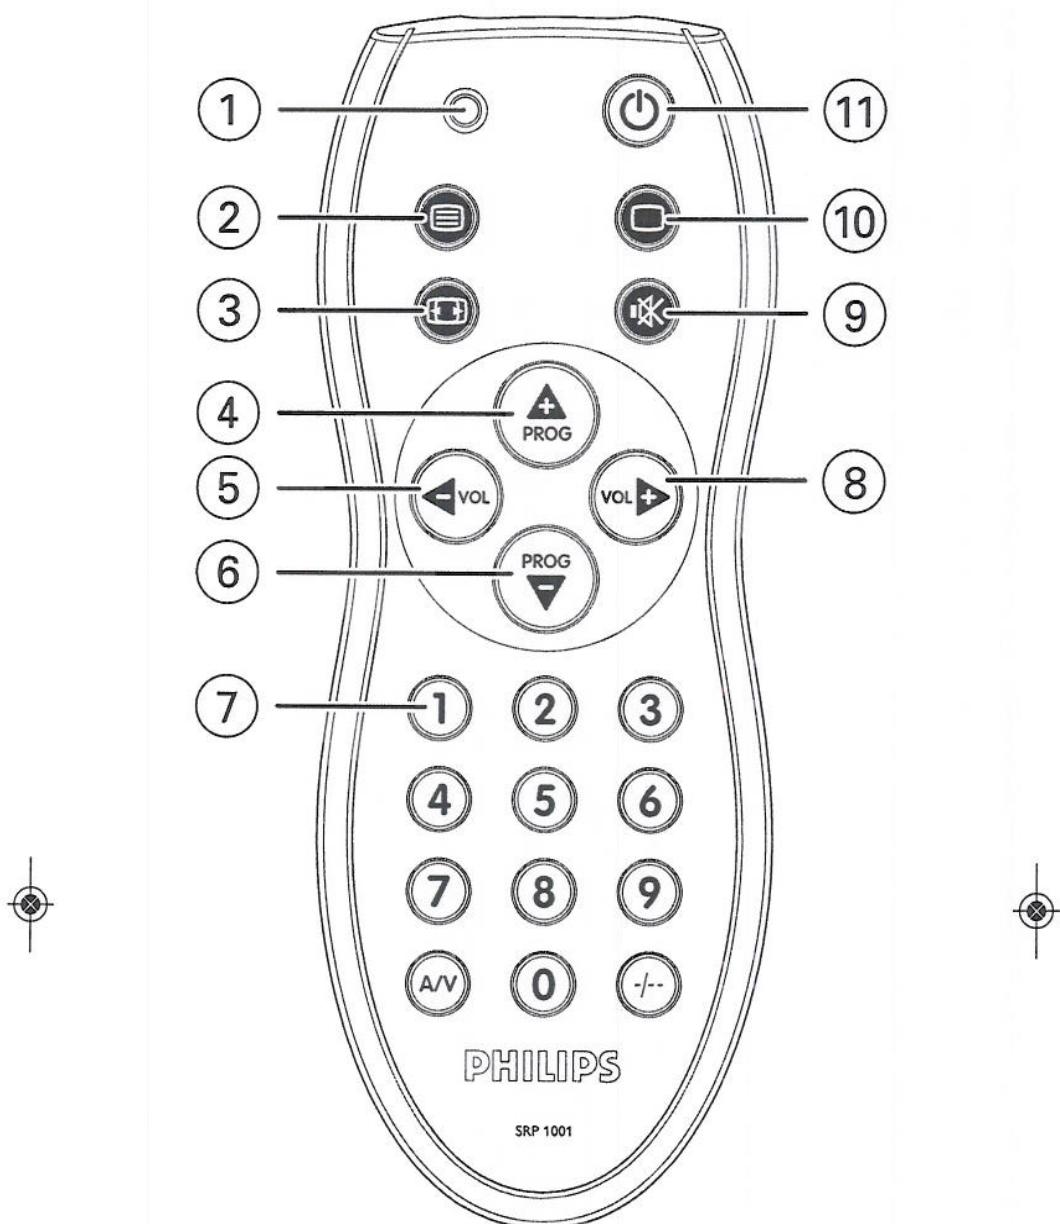

## Contents

1.	Introduction .....	3
2.	Installing the remote control .....	3-5
	Inserting the batteries .....	3
	Testing the remote control .....	3-4
	Setting the remote control .....	4-5
3.	Keys and functions .....	6
4.	Troubleshooting .....	6
5.	Need help? .....	7
	Code list of all brands / equipment .....	78-85
	Helpline.....	86
	Information to the Consumer .....	87

English

Installing the remote control

## 1. Introduction

Congratulations on your purchase of the Philips SRP 1001 universal remote control. The SRP 1001 is a handy zapper with all main keys and ergonomic shape for comfortable control.


After installing the remote control it can operate the most-used functions of almost any brand of TV.

You can find information about how to prepare this remote control for use in the chapter 'Installing the remote control'.

## 2. Installing the remote control

### Inserting the batteries

- 1 Press the cover inwards and lift it up.
- 2 Place two R03, UM4 or AAA type batteries into the battery compartment, as shown.
- 3 Replace the cover and click it firmly into place.

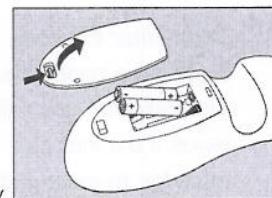

### Testing the remote control

Because the SRP 1001 may use different signals for each brand and even for different models of the same brand, it is advisable to test whether your TV responds to the SRP 1001.

The example below instructs you how to do this.

- 1 Turn your TV on manually or use the original remote control. Tune to channel 1.
- 2 Check whether all the keys are working. For an overview of the keys and their functions see '3. Keys and functions'.
  - If the TV responds as it should to all of the key commands the SRP 1001 is ready for use.



- **If the device does not respond at all or not to all of the key commands, follow the instructions under 'Setting the remote control' or for online setup go to: [www.philips.com/urc](http://www.philips.com/urc).**

## Setting the remote control

This is only necessary if your TV does not respond to the SRP 1001. If that is the case, the SRP 1001 does not recognize the brand and/or model of your TV and you need to program the remote control to do so. The example below instructs you how to do this. You can set the remote control either manually or automatically.


### Manually setting the remote control

- 1 Turn on the TV manually or use the original remote control.


Tune in to channel 1.

- 2 Look up the brand of your TV in the code list at the back of this manual.

One or more 3-figure key codes are shown for each brand.  
Note the first code.

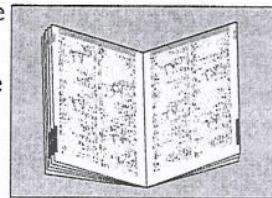


- 3 Keep keys 1 and 3 on the SRP 1001 pressed simultaneously for five seconds until the indicator light remains lit.

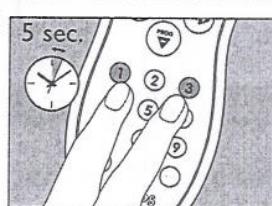

- 4 Then enter the code noted in step 2 using the code keys.

- The indicator light will now flash twice. If the indicator light flashes once for an extended period, the code has not been entered properly or the wrong code has been entered. Start again from step 2.

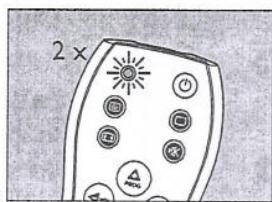

- 5 Point the SRP 1001 at the TV and check that it responds as it should.

- If the TV responds to all of the key commands, the SRP 1001 is ready for use.

Do not forget to note your code.

- **If the device does not respond at all, or not to all of the key commands, start again from step 2 and try the next code from the list.**


English

**Automatically setting the remote control**


If you cannot find the right code for your brand device, the remote control can automatically search for the right code.

- 1 Make sure the TV is switched on and select a channel using the original remote control or the keys on the TV (for example channel 1).


- 2 Keep keys 1 and 3 on the SRP 1001 SRP 1001 pressed simultaneously for five seconds, until the indicator light remains lit.

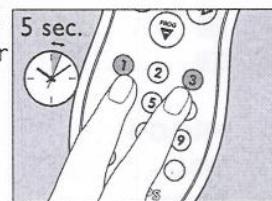

- 3 Press the Ⓛ key of the SRP 1001 . and keep it pressed

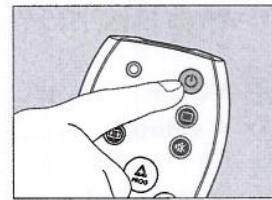

- The SRP 1001 now starts emitting all known 'TV off' signals, one by one. Each time a code is sent, the indicator light flashes.

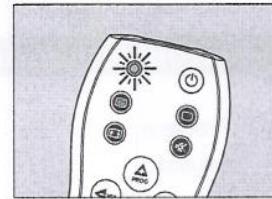

- 4 When your TV switches off (stand-by), immediately release the Ⓛ key of the SRP 1001 to confirm.


- The SRP 1001 has now found a code that works on your TV.

- 5 Check if you can operate all functions on your TV with the SRP 1001.

- If this is not the case, you can redo the automatic setting. The SRP 1001 will then search for a code that perhaps works better.***

- After the SRP 1001 has run through all the known codes, the search will stop automatically and the indicator light stops flashing.
- Automatic programming of a TV takes a maximum of 6 minutes.

Installing the remote control

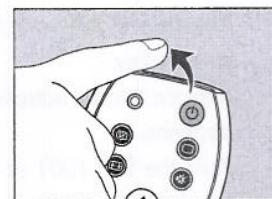

### 3. Keys and functions

The illustration on page 3 gives an overview of all keys and their functions.

- ① **Indicator light** .... flashes / lights up when a key / key combination is pressed.
- ②  ..... switches Teletext on.
- ③  ..... selects between regular (4:3) and wide screen (16:9) TV.
- ④ **PROG +** ..... selects a following channel.
- ⑤ **VOL -** ..... reduces the TV volume.
- ⑥ **PROG -** ..... selects a previous channel.
- ⑦ **Digit keys** ..... direct choice of channels and other functions.
- ⑧ **VOL +** ..... increases the TV volume.
- ⑨  **(Mute)** ..... mutes the sound of the TV.
- ⑩  ..... switches Teletext off.
- ⑪  **(Standby)** ..... switches the TV on or off.

### 4. Troubleshooting

- Problem
- Solution
  
- The device you want to operate does not respond when you press a key.
- Replace the old batteries with two new R03, UM4 or AAA type batteries.
- Point the SRP 1001 at the device and make sure that there are no obstructions between the SRP 1001 and the device.
- The SRP 1001 does not respond properly to commands.
- Maybe you are using the wrong code. Try programming the SRP 1001 again using another code, which is mentioned under the brand of your device, or reset for automatic search to find the right code.
- Your brand of device is not in the code list.
- Try to set the SRP 1001 automatically. See 'Automatically setting the remote control'.
- None of the codes works during manual setting of the remote control.
- If that is the case, follow the instructions under 'Automatically setting the remote control'.

## 5. Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP 1001 you can always contact us.

You will find our contact details at the end of this user manual. The model number of your Philips universal remote control is SRP 1001/10.

English

Need help?

Date of purchase: ...../...../.....  
(day/month/year)



**SETUP CODES FOR TV****A**

A.R. Systems ..... 152  
 Acura ..... 136  
 Admiral ..... 217, 261  
 Adyson ..... 125, 126, 184, 187  
 Agashi ..... 125, 126  
 AGB ..... 132  
 Aiko ..... 125, 126, 136, 146, ..... 152, 164, 184, 187  
 Aim ..... 152  
 Aiwa ... 038, 040, 108, 173, 263  
 Akai ... 026, 029, 031, 033, 046, ..... 080, 084, 125, 126, 132, ..... 136, 146, 152, 164, 187, ..... 188, 200, 201, 234, 280, ..... 282  
 Alaron ..... 125  
 Alba .. 011, 012, 027, 029, 042, ..... 095, 125, 131, 136, 139, ..... 151, 152, 184, 188, 194, ..... 201, 209, 217, 247, 282  
 Alycon ..... 166  
 Alorgan ..... 126, 187, 199  
 Allstar ..... 152, 200  
 Amplivision ..... 126, 131, 187, ..... 202, 252,  
 Amstrad ... 013, 029, 031, 132, ..... 136, 152, 178, 188, 207, 282  
 Anglo ..... 136  
 Anitech ..... 136, 152, 166  
 Ansonic .... 130, 131, 136, 141, ..... 152, 170, 194, 196, 213  
 Apollo ..... 221  
 Arc en Ciel ..... 203  
 Arcam ..... 125, 126, 184, 187  
 Aristona ... 141, 152, 200, 201, ..... 234  
 Arthur Martin ..... 252  
 Asa ..... 162, 171  
 Asuka ..... 125, 126, 184, 187, ..... 188, 198, 282  
 Atlantic ..... 125, 152, 184, 196, ..... 200, 201, 202  
 Atori ..... 136  
 Auchan ..... 252  
 Audiosonic ..... 126, 131, 152, ..... 187, 188, 200, 201, 205, 282  
 AudioTon ..... 126, 131, 187  
 Ausind ..... 166

Autovox .... 126, 166, 187, 194, ..... 206  
 Awa ..... 125, 126, 140  
 Ayomi ..... 254

**B**

Baird .. 126, 164, 180, 181, 187  
 Bang & Olufsen ..... 118  
 Basic Line.. 126, 136, 152, 188, ..... 198, 200, 2822  
 Bastide ..... 126, 187  
 Baur... 084, 138, 152, 182, 201, ..... 206, 231  
 Bazin ..... 126, 187  
 Beko.. 007, 014, 042, 068, 069, ..... 094, 131, 152, 258  
 Beon ..... 152, 200, 201, 217  
 Best ..... 131, 205  
 Bestar ..... 131, 152, 200  
 Binatone ..... 126, 187  
 Black Star ..... 194  
 Blacktron ..... 198  
 Blackway ..... 198  
 Blaupunkt.. 047, 064, 081, 182  
 Blue Sky .... 152, 188, 198, 247, ..... 253, 282  
 Blue Star ..... 198  
 Bondstec ..... 194  
 Boots ..... 126, 187  
 BPL ..... 152, 198  
 Brandt ..... 009, 018, 021, 034, ..... 077, 133, 203, 204, 233  
 Brinkmann ..... 152, 217  
 Brionvega ..... 152, 200, 201  
 Britannia.... 125, 126, 184, 187  
 Bruns ..... 007  
 BTC ..... 188, 282  
 Bush .. 010, 011, 012, 014, 027, ..... 029, 038, 065, 069, 101, ..... 126, 136, 148, 151, 152, ..... 163, 167, 187, 188, 198, ..... 199, 200, 201, 206, 209, ..... 247, 270, 282

**C**

Carena ..... 152, 253  
 Carrefour ..... 011, 151, 162  
 Cascade ..... 136, 152  
 Cathay ..... 152, 200, 201  
 CCE ..... 126  
 Centurion..... 152, 200, 201  
 Century ..... 194  
 CGE ..... 131, 166, 194, 217

Cimline.....012, 136, 188   **E**  
 City .....136  
 Clarivox .....201  
 Clatronic..013, 042, 126, 131,  
        .....136, 152, 166, 170, 187,  
        .....188, 194, 200, 202, 282  
 CMS .....125  
 CMS Hightec.....126  
 Concorde.....136  
 Condor.....042, 125, 131, 136,  
        .....152, 170, 184, 194, 198,  
        .....200, 202, 213  
 Contec.....011, 013, 125, 136,  
        .....140, 151, 175, 184  
 Continental Edison...018, 021,  
        .....203  
 Cosmel .....136, 205  
 Crosley .....166, 194  
 Crown.....042, 131, 136, 152,  
        ...166, 200, 201, 217, 236, 255  
 CS Electronics..125, 184, 188,  
        .....194, 282  
 CTC .....194  
 Cybertron .....188, 282  
 Elbe...126, 130, 131, 132, 152,  
        .....188, 196, 213, 243, 254  
 Elbe-Sharp .....132  
 Elcit .....132, 170, 194  
 Elektra .....198  
 Elin.....125, 136, 152, 171,  
        .....184, 200, 201, 206  
 Elite .....152, 188, 200, 282  
 Elman .....170  
 Elta.....125, 136  
 Emerson...077, 084, 131, 152,  
        .....162, 178, 194  
 Emperor .....198  
 Epson .....273, 279  
 Erres.....141, 152, 200, 201  
 ESC .....126  
 Eurofeel .....126  
 Euroline .....201  
 Euroman....125, 126, 131, 198  
 Euromann ..152, 184, 187, 200  
 Europhon..125, 126, 132, 152,  
        .....170, 187, 194, 200  
 Expert.....196, 252  
 Exquisit .....152

**D**

Daewoo ....035, 055, 065, 115,  
        .....125, 126, 136, 152, 184,  
        .....187, 188, 200, 228, 289  
 Dainichi ....125, 184, 188, 282  
 Dansai.....125, 126, 146, 152,  
        .....184, 200, 201  
 Dantax .....014, 131, 201  
 Datsura .....255  
 Dawa .....152  
 Daytron .....136  
 De Graaf .....280  
 Decca.....013, 126, 132, 152,  
        .....164, 187, 200, 201  
 DeGraaf .....156, 191  
 Desmet.....152, 200, 201, 202  
 Diamant.....152  
 Diamond.....125  
 Dixi ....126, 136, 152, 200, 201  
 DTS.....136  
 Dual.....126, 152, 187, 196,  
        .....206, 270  
 Dual-Tec.....187, 196  
 Dumont....126, 162, 170, 187  
 Dux .....201  
 Dynatron.....152, 200, 201  
 Fenner.....136  
 Ferguson ...017, 018, 023, 024,  
        ..032, 034, 039, 077, 099, 180,  
        .....181, 201, 204, 244, 254  
 Fidelity.....029, 125, 152, 184  
 Filsai .....126  
 Finlandia .....280  
 Finlux .....026, 101, 126, 132,  
        ..152, 162, 164, 166, 170, 171,  
        .....179, 187, 200, 201, 213  
 Firstline.....027, 125, 126, 136,  
        .....152, 164, 170, 184, 187,  
        .....194, 199, 200, 206, 213,  
        .....247, 254  
 Fisher .....011, 019, 042, 126,  
        .....131, 151, 157, 164,  
        .....175, 187, 206, 280  
 Flint....152, 164, 188, 200, 253  
 FNR.....170  
 Formenti ...080, 125, 166, 184,  
        .....201, 202  
 Formenti-Phoenix.....125  
 Fortress .....261  
 Fraba .....131, 152  
 Friac .....131

Frontech....029, 126, 136, 194, HCM.....126, 136, 152, 187,  
 .....206 .....188, 198, 217  
 Fujitsu .....126, 164, 170, 187 Hema.....126, 136, 187  
 Fujitsu General.....126 Hemmermann.....206  
 Funai.....179, 199 Higashi .....125  
**G** HiLine.....152  
 Galaxi.....152, 170 Hinari.....011, 136, 151, 152,  
 Galaxis .....131, 152, 170, 217 .....179, 188, 200, 201,  
 Galaxy .....042 Hisawa .....188, 198, 252, 253,  
 GBC .....011, 136, 188 .....282  
 Geant Casino .....252 Hitachi .....011, 021, 022, 035,  
 GEC ..084, 126, 132, 152, 155, .....044, 053, 070, 072,  
 .....164, 187, 200, 201, 206 .....080, 083, 084, 085,  
 Geloso .....136, 194 .....113, 126, 132, 151,  
 General .....220 .....152, 155, 156, 164,  
 General Technic .....136 .....171, 174, 187, 189,  
 Genexxa....152, 188, 200, 282 .....191, 206, 211, 221,  
 Giant.....126 .....223, 228, 251  
 GoldHand .....125 Hornyphon .....200  
 Goldline .....152 Hornyphone .....152  
 GoldStar....008, 014, 043, 054, Hoshai.....188, 253, 282  
 ..125, 126, 127, 131, 136, 152, Huanyu .....125, 184  
 ...184, 187, 194, 200, 201, 212 Hygashi.....125, 126, 184, 187  
 Goodmans..011, 012, 029, 54, Hyper.....125, 126, 136, 184,  
 ..077, 088, 126, 127, 132, 136, .....187, 194  
 .....146, 151, 152, 164, 179, Hypson.....126, 152, 187, 198,  
 .....187, 200, 201, 228, 234 .....200, 201, 252, 253  
 Gorenje .....042, 131 Iberia .....152  
 GPM .....188, 282  
 Graetz .....084  
 Granada ....011, 019, 077, 080, ICE....029, 125, 126, 136, 152,  
 ..126, 132, 141, 151, 152, 157, .....184, 187, 188, 200, 282  
 ..164, 166, 172, 187, 200, 201, ICeS .....125, 184, 188  
 .....204, 211, 221, 252, 280 Imperial ....042, 131, 152, 166,  
 Grandin.....198, 201, 282 .....194, 200, 206, 217  
 Gronic .....126 Indesit.....010  
 Grundig ....052, 066, 067, 081, Indiana.....152, 200, 201  
 .....082, 131, 152, 161, Inno Hit....054, 126, 127, 132,  
 .....162, 166, 182, 234 .....136, 152, 164, 166, 187,  
**H** .....188, 194, 200, 201, 282  
 Innovation..014, 026, 029, 040  
 Halifax .....125, 126, 184, 187 Interactive.....131  
 Hampton....125, 126, 184, 187 Interbuy.....136, 194  
 Hanseatic..007, 011, 084, 126, Interfunk....084, 131, 141, 152,  
 .....130, 131, 136, 152, .....197, 200, 201, 231  
 .....187, 198, 199, 200, International.....125  
 .....201, 202, 206, 270 Intervision.....126, 131, 152, 170,  
 Hantarex .....132, 136, 152 .....187, 188, 194, 198,  
 Hantor .....152 .....212, 253, 270  
 Harwood.....136, 152 Irradio.....029, 127, 136, 152,  
 Hauppauge .....117 .....166, 188, 194, 200, 201, 282

Codelist

- Isukai ..... 152, 188, 198, 282 Lifetec ..... 014, 026, 029, 040,  
 ITC ..... 126, 187 ..... 136, 152, 188, 247, 270  
 ITS ..... 029, 125, 152, 184, Lloyds ..... 136  
       ..... 188, 198, 200, 282 Loewe ..... 015, 051, 056, 057,  
 ITT ..... 026, 080, 084, 179, ..... 130, 131, 132, 152,  
       ..... 206, 221 ..... 168, 231  
 ITV ..... 014, 152, 194, 201 Loewe Opta ..... 200, 201  
 Logik ..... 013, 140  
 Luma ..... 084, 136, 152, 196,  
**J** ..... 201, 213  
 JEC ..... 146 Lumatron ..... 084, 126, 152, 187,  
 JVC ..... 011, 029, 039, 137, 151, ..... 196, 200, 201  
       ..... 158, 159, 180, 181, ..... 200  
       ..... 188, 200, 238, 246 Lux May ..... 200  
       ..... 206, 211  
**K**  
 Kaisui 125, 126, 136, 152, 184,  
       ..... 187, 188, 198, 253, 282 Kamp ..... 125, 184  
 Kapsch ..... 196 Karcher ..... 131, 152, 170, 198,  
       ..... 201, 243 Kawasho ..... 125  
 Kendo ..... 012, 131, 152, 170, Magnadyne 132, 170, 194, 201  
       ..... 194, 213, 243 Magnafon ..... 125, 132, 166, 170,  
 KIC ..... 126 Kendo ..... 184  
 Kingsley ..... 125, 184 Marantz ..... 152, 200, 201  
 Kneissel ..... 130, 131, 152, 196, ..... 213, 254 Mark ..... 125, 126, 136, 152,  
 Kolster ..... 152, 200 ..... 184, 187, 200, 201  
 Konka ..... 124, 188, 282 Masuda ..... 126  
 Korpel ..... 152, 200, 201 Matsui ..... 011, 012, 013, 027,  
 Korting ..... 131, 202 ..... 029, 052, 087, 104,  
 Kosmos ..... 152 ..... 105, 126, 132, 136,  
 KTV ..... 126 ..... 140, 146, 151, 152,  
 Kuro ..... 255 ..... 157, 164, 178, 182,  
 Kyoto ..... 125, 126 ..... 187, 199, 200, 201,  
       ..... 204, 206, 207, 209,  
**L** ..... 234, 236, 253  
 Lasat ..... 131 McMichael ..... 155  
 Lenco ..... 136 Mediator ..... 141, 152, 200, 201,  
 Lenoir ..... 136 ..... 234  
 Lesa ..... 194 Medion ..... 014, 026, 029, 040,  
 Leyco ..... 152, 164, 199, 200, ..... 106, 152, 247  
       ..... 201, 236 Melectronic ..... 125, 126  
 LG ..... 008, 014, 043, 054, 068, Melvox ..... 252  
       ..... 071, 122, 123, 125, 126, Memorex ..... 136  
       ..... 127, 131, 135, 136, 145, Memphis ..... 136, 164, 205  
       ..... 152, 184, 187, 194, 200, Mercury ..... 136, 152  
       ..... 201, 212 Metz ..... 081, 182, 197, 250  
 Liesenk ..... 201 Micromaxx ..... 014, 026, 029, 040  
 Liesenkotter ..... 152 Microstar ..... 014, 026, 029, 040  
 Life ..... 014, 026, 029, 040 Minerva ..... 081, 132, 162, 166,  
       ..... 182

- Minoka.....152, 200 Orion.....012, 013, 014, 027,  
 Mitsubishi..011, 013, 025, 057, .....040, 087, 091, 096,  
 .....073, 081, 090, 102, .....132, 136, 140, 144,  
 .....151, 152, 160, 172, .....152, 170, 178, 199,  
 .....200, 207, 231, 291 .....200, 201, 202, 209  
 Mivar .....054, 125, 126, 127, Orline .....152, 188  
 .....129, 130, 131, 132, Ormond .....014  
 .....134, 166, 184, 241 Orsowe.....132  
 Motion .....166 Osaki.....126, 152, 164, 187,  
 MTC .....125, 131, 206 .....188, 282  
 Multi System .....201 Osio .....127  
 Multistandard .....170 Oso .....188, 282  
 Multitech..011, 125, 126, 131, Osume .....151, 164, 175, 188  
 .....136, 152, 170, 184, Otto Versand ..011, 084, 126,  
 .....187, 194, 201, 206 .....132, 138, 151, 152, 182,  
 Murphy .....080, 125, 164, 184 .....187, 194, 199, 200, 201,  
 .....202, 206, 231, 234, 255,  
**N** .....261  
 NAD .....084  
 National .....183 **P**  
 NEC.....011, 109, 126, 151, Pael.....125, 184  
 .....202, 248, 288 Palladium...008, 042, 126, 131,  
 Neckermann.....042, 126, 131, .....138, 152, 187, 194,  
 .....138, 152, 187, 194, 200, .....206, 213, 217, 234  
 .....201, 206, 213, 217, 234 Palsonic.....126  
 NEI ....029, 152, 200, 201, 205 Panama.....125, 126, 136, 152,  
 Nesco .....179, 194 .....184, 187, 194  
 Network.....205 Panasonic..020, 028, 076, 084,  
 Neufunk.....136, 152, 234 ...110, 132, 152, 183, 195, 245  
 New Tech..136, 152, 187, 200, Panavision .....152, 213  
 .....234 Pathe Cinema ...125, 130, 131,  
 Newtech.....126 .....184, 202, 206, 252, 254  
 New World.....188, 282 Pathe Marconi.....021, 203  
 Nicamagic.....125, 184 Pausa .....126  
 Nikkai.....125, 126, 136, 146, Perdio .....125, 152, 164, 202  
 .....151, 152, 164, 184, 187, Perfekt.....152  
 .....188, 200, 201, 205, 282 Philco.131, 152, 166, 194, 217  
 Nobliko ....125, 162, 166, 170, Philharmonic.....126, 187  
 .....184 Philips.....000, 001, 002, 030,  
 Nokia.026, 080, 084, 206, 221 .....047, 065, 075, 084, 089,  
 Nordic.....126 .....097, 120, 121, 141, 142,  
 Nordmende....010, 018, 021, .....150, 152, 155, 200, 201,  
 .....077, 182, 200 .....234, 292  
 Nordvision.....201 Phoenix ....125, 131, 152, 164,  
 Novatronic.....152, 171 .....184, 200, 201, 202  
**O**  
 Oceanic .....084, 199, 252 Phonola ..125, 141, 152, 184,  
 Okano.....042, 131, 152, 164 .....200, 201  
 Onwa .....031, 188 Pioneer....018, 086, 131, 152,  
 Opera.....152 .....200, 201  
 Orbit.....152, 200 Pionier.....131  
 Playsonic .....126, 187  
 Poppy .....136

Codelist

- Prandoni-Prince.....084, 132, Salora.....022, 054, 084, 127,  
.....166, 194 .....132, 206, 211, 255
- Precision .....126, 187 Sambers.....132, 166, 170
- Prima .....136 Samsung ....013, 042, 049, 054,  
Prinz.....022, 164, 206 ..059, 060, 062, 103, 116, 125,
- Profex .....084, 136 .....126, 127, 131, 136, 152,  
Profilo.....014 .....164, 165, 184, 187, 200,
- Profi-Tronic.....152, 170, 200 .....201, 234, 237, 249, 269
- Proline .....027, 141, 152, 164, Sandra.....125, 126, 184, 187  
.....200, 244 Sansui.....152, 200
- Prosonic ....014, 125, 126, 131, Sanyo .....011, 013, 019, 045,  
.....152, 183, 184, 201, 236 .....077, 125, 126, 130, 131,
- Protech .....126, 200, 201 .....136, 140, 149, 151, 157,
- Provision ....014, 152, 201, 228 .....164, 175, 184, 187, 280
- Pye .....029, 047, 065, 141, SBR .....141, 152, 201, 234  
.....152, 200, 201, 234 SCHAUB LORENTZ .....084
- Pymi .....136 Schaub Lorenz.....206  
Schneider..029, 069, 079, 092,
- Q**
- Quelle.....013, 014, 081, 084, .....126, 128, 141, 152, 187,  
.....126, 127, 138, 140, 151, .....188, 194, 196, 200, 201,  
.....152, 162, 171, 175, 182, SEG.....011, 125, 126, 136,  
.....187, 194, 200, 201, 206, .....151, 152, 172, 184,  
.....231 .....187, 194, 201, 247
- Questa.....011, 151 SEI ....132, 138, 152, 170, 199,  
.....206
- R**
- Radialva .....152, 188 Seleco.....011, 196, 213
- Radiola.....126, 141, 152, 200, Sencora.....136  
.....201, 234 Sentra.....136, 146, 188
- Radiomarelli .....132, 152, 194 Serino.....125, 243, 253
- RadioShack .....152 Sharp.....005, 011, 111, 112,
- Radiotone.007, 131, 136, 152, .....132, 151, 159, 175,  
.....200, 217, 236 .....199, 259, 261, 290
- Rank .....011, 162 Shorai.....179, 199
- Recor.....152 Siarem.....132, 152, 170, 175,  
Rediffusion.....084 .....182
- Revox.....131, 152, 200, 201 Siemens .....081
- Rex.....194, 196, 213 Sierra .....141, 152, 200, 234
- RFT .....007, 130, 131, 164 Siesta.....131
- Rhapsody.....125 Silva .....125, 184
- R-Line.....152, 200, 201 Silver.....011, 151, 179
- Roadstar....136, 188, 217, 282 Singer .....170, 194, 252
- Rowa.....125, 126 Sinudyne ...012, 132, 138, 152,  
Royal Lux .....131 .....170, 178, 199, 201, 206  
Skantic.....211
- S**
- Saba ..009, 018, 021, 048, 077, Solavox.....146  
...084, 098, 132, 204, 244, 289 Sonitron ....126, 131, 187, 280
- Sagem .....243, 253 Sonoko .....126, 136, 152, 187,  
Saisho.....012, 013, 126, 132, .....198, 200, 201  
.....136, 140, 178, 187, 207 Sonolor.....138, 252, 280

- Sontec.....131, 152, 199, 200, Telesonic .....152  
.....201 Telestar .....152  
Sony .....003, 004, 011, 013, Teletech....136, 152, 194, 201,  
..016, 050, 061, 074, 077, 078, .....205  
...107, 138, 140, 151, 170, 190 Teleton ....126, 151, 187, 196,  
Sound & Vision..170, 188, 282 .....197, 206  
Soundwave .....152, 200, 201, Televideon .....125, 184, 202  
.....202, 217 Televiso .....252  
Standard....126, 136, 152, 187, Temco .....199  
.....188, 200, 202, 282 Tensai.....126, 136, 152, 171,  
Star Lite .....136, 152 .....187, 188, 194, 199,  
Starlight .....201 .....200, 202, 212, 282  
Stenway.....188, 198 Tenson .....202  
Stern .....196 Tesmet .....200  
Strato .....136, 152 Tevion .....014, 026, 029, 040  
Stylandia .....126 Texet.....125, 126, 136, 187  
Sunkai027, 188, 199, 209, 253 Thomson...009, 018, 021, 023,  
Sunstar.....136, 152 .....024, 032, 034, 058, 077,  
Sunwood .....136, 152 .....099, 100, 109, 152, 154,  
Superla .....125, 126, 132, 184 .....186, 200, 203, 204, 219,  
SuperTech.125, 136, 152, 184, .....220, 244, 289  
.....234 Thorn.....017, 039, 077, 084,  
Supra .....136 .....152, 180, 181, 201,  
Susumu.....204, 282 .....204, 228, 231, 254  
Sutron .....136 Tokai.....126, 152, 164, 187,  
Sydney .....125, 126, 184, 187 .....200, 205  
Sysline .....201 Tokyo.....125, 146, 184  
Sytong.....125, 184 Tomashi.....198  
T Toshiba .....006, 011, 038, 041,  
.....066, 126, 143, 146, 151,  
.....153, 161, 162, 170, 192,  
.....256, 257, 260, 276  
Tashiko.....011, 125, 126, 151, Towada.....126, 170, 206  
.....155, 184, 187, 248, 288 Trakton .....126  
Tatung .....126, 132, 140, 152, Trans Continens .....152, 187  
.....164, 187, 200, 201 Transcontinens .....126  
TCM .....014, 026, 029, 040 Transtec .....125  
Teac.....126, 152, 231, 253 Trident .....126, 132, 187  
Tec.....080, 126, 136, 187, 194, Tristar .....188  
.....204, 205, 220 Triumph .....041, 132, 152,  
.....204, 205, 220 .....178, 192, 234  
Technema.....202 U  
TEDELEX .....126  
Teleavia.....018, 203 Uher .....131, 152, 166, 196,  
Telecor.....126, 152, 187, 188, .....200, 202, 217  
.....196 Ultravox ...080, 125, 152, 170,  
Telefunken017, 018, 023, 024, .....184, 194  
.....036, 037, 077, 099, 100, Unic Line .....152, 221  
.....114, 119, 152, 200, 204, United.....201  
.....220, 235, 244  
Telegazi .....152, 188, 196  
Telemeister .....152, 202

Universum.....042, 058, 126, 127, **Z**  
.....131, 138, 140, 151, 152, Zanussi .....126, 187  
.....162, 166, 171, 175, 178,  
.....182, 187, 194, 199, 200,  
.....201, 205, 206, 213, 217,  
.....221, 231  
Univox.....152, 205, 254

Codelist

**V**

Vestel .....014, 042, 126, 152,  
.....187, 200, 201  
Vexa.....136, 152, 201  
Victor.....011, 200  
VIDEOLOGIC.....125  
Videologique....125, 126, 184,  
.....187, 188, 282  
VideoSystem.....152, 200  
Videotechnic ....125, 126, 184,  
.....187, 202  
Videonon .....211  
Viewsonic .....299, 239  
Visiola .....125, 184  
Vision .....126, 152, 200, 202  
Vistar .....080  
Vortec .....152, 200, 201  
Voxson.....152, 166, 200, 217

**W**

Waltham.....080, 126, 152,  
.....187, 211, 217  
Watson.....152, 188, 200, 201,  
.....202, 236, 270  
Watt Radio .....125, 170, 184,  
.....206  
Wega .....011, 151, 152  
Wegavox .....136  
Weltblick...126, 152, 200, 201,  
.....202  
White Westinghouse.....125,  
.....152, 184, 201, 202, 205  
Windstar .....198

**X**

Xrypton.....152

**Y**

Yamishi.....126, 152, 187,  
.....188, 198, 253  
Yokan.....152  
Yoko..125, 126, 131, 136, 152,  
.....187, 188, 200, 201, 282  
Yorx.....188, 282

 **Helpline**

Country	Phone number	Tariff
Australia	1 800 812 261	pstn
Österreich	0810000206	€ 0.07
België / Belgique	078250851	€ 0.06
âeská republika	800 142100	free
Danmark	3525 8758	pstn
Suomi	09 2294 8258	pstn
France	0821 611658	€ 0.09
Deutschland	0900 1101212	€ 0.10
Ελλάδα	0 0800 3122 1219	free
Magyarország	0680018544	pstn
Ireland	01 601 1158	pstn
Italia	840320041	€ 0.08
Lëtzebuerg	40 6661 5645	pstn
Nederland	0900 0400 063	€ 0.10
Norge	2270 8258	pstn
Polska	0223491505	pstn
Portugal	2 1359 1441	pstn
Slovensko	0800004551	free
España	902 889 343	€ 0.10
Sverige	08 750 5196	pstn
Schweiz / Suisse / Svizzera	044 212 0045	pstn
United Kingdom	0207 949 0069	pstn
United States of America / Canada	1 800 233 8413	free