

# Quick Start Guide



Step A **Install**

Step B **Setup**

Step C **Enjoy**

## What's in the Box?

 
You should find these items upon opening the box.




Stand



Remote control with  
1 x CR2025 battery



Power adapter

 

User manual




Quick start guide

## Step A **Install**

 
### Mounting the stand onto the set

1

Locate the bottom of the main unit and find the slot, then slide the stand in the slot until it stops, as indicated in the figure.

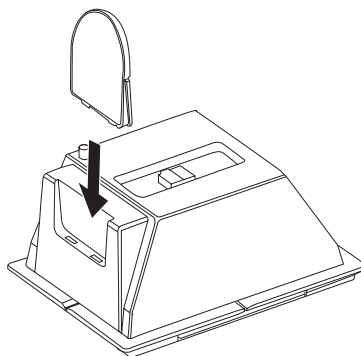

### Rear connections

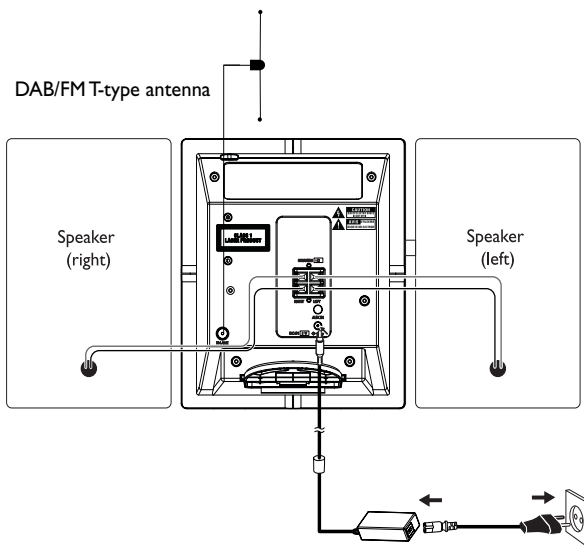 

1

Connect the cable of the left speaker to **LEFT** (red and black) and the cable of the right speaker to **RIGHT** (red and black).

2

Connect the power adapter to the wall socket.

#### **Tip**

– To receive optimal radio reception, put the main unit and the antennas as far away as possible from the power adaptor.

## Step B Setup

### Setting the clock

#### IMPORTANT!

– To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY-ON**  on the set for 3 seconds or more to switch to normal mode first before proceeding with the procedures below.

1

Press **CLOCK** on the remote control to view the time.

→ The display shows the set time.

→ **00:00** flashes by default if you have not set the clock.

2

Press **CLOCK** once again.

→ The hour digits start flashing.

3

Hold down or press **ALBUM/PRESET +/-** on the set repeatedly to set the hour.

4

Press **CLOCK** to confirm.

→ The minute digits start flashing.

5

 
Hold down or press **ALBUM/PRESET +/-** on the set repeatedly to set the minute.

6

Press **CLOCK** to confirm.

#### IMPORTANT!

– Remove the protective plastic tab before using the remote control

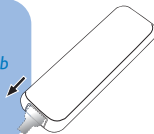

## Step C Enjoy


### Playing discs

With this system, you can play all pre-recorded audio CDs (CDDA), all finalized audio CD-Rs and CD-RWs, MP3/WMA-CDs (CD-Rs/CD-RWs with MP3/WMA files)

1

Press **SOURCE** once or more to select CD (or **DISC** on the remote control).

2

Press **OPEN/CLOSE**  to open the CD compartment.

3

Insert a disc with the printed side facing up. Then close the CD door.

4

Press **OK/▶ ||** to start playback.

5

To stop playback, press **STOP** .

#### Notes for remote control:


– First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).  
– Then select the desired function (▶|| for example).

## Tuning to radio stations

- 1 Press **SOURCE** (or **DAB/FM** on the remote control) once or more to select tuner.
- 2 Press **SCAN/PROGRAM** (or **PROG** on the remote control) for more than two seconds to program all available stations in order of waveband.
- 3 Press **ALBUM/PRESET +/-** until the desired preset station is displayed.

## Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** (or **USB** on the remote control) once or more to select USB.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

*iPod playback via the USB port cannot be guaranteed.*

## Tuning to DAB stations

- 1 Press **SOURCE** on the system to select DAB (or press **DAB/FM** on the remote control) to start automatic search for available DAB stations.
- 2 Press **SCAN** to search for all band III frequencies.
- 3 At the completion of full scan, press **ALBUM/PRESET +/-** (or **◀ / ▶** on the remote control) to select your desired DAB stations backward/forward.
- 4 Press **ENTER/ ▶ ||** to confirm and tune to your selected station.

*See the User Manuals for detailed instructions on DAB operations.*

