




EN Quick Start Guide

RU Краткое руководство

PHILIPS

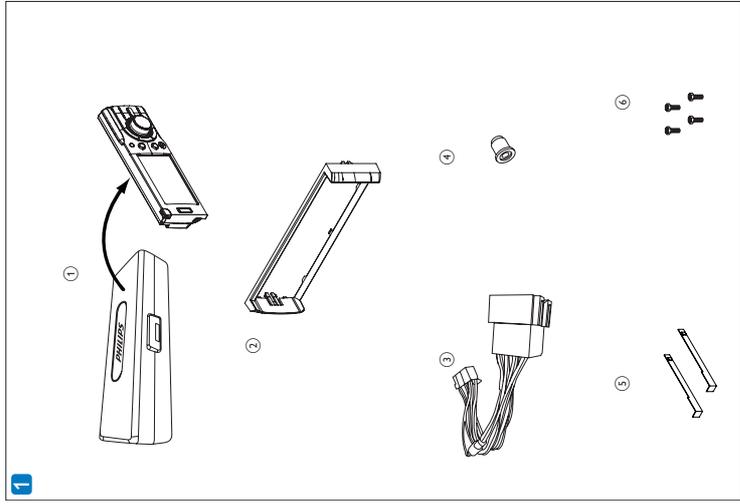

English

Overview of parts 1

These are the supplied parts needed to connect and install this unit.

- 1 Carry case with front panel stored inside
- 2 Trim plate
- 3 Standard connector
- 4 Rubber cushion
- 5 Removal keys x 2 pcs
- 6 Screw x 4 pcs


Connect wires: ISO connectors 2a

- 1 Pull out the ISO connectors from the car dashboard and connect them to the bigger end of the supplied standard connector.
- 2 Connect the other end of supplied standard connector to the unit.
- 3 Do the other connections, if applicable.

Connect wires: without ISO connectors 2b

- 1 Cut off the bigger end of the supplied standard connector.
- 2 Check the car's wiring carefully, then connect them to the standard connector.

Connector	Connect to
1 Black wire	A metal surface of the car First connect the black ground (earth) lead, then connect the yellow and red power supply leads.
3 Yellow wire	The +12V car battery which is live at all times.

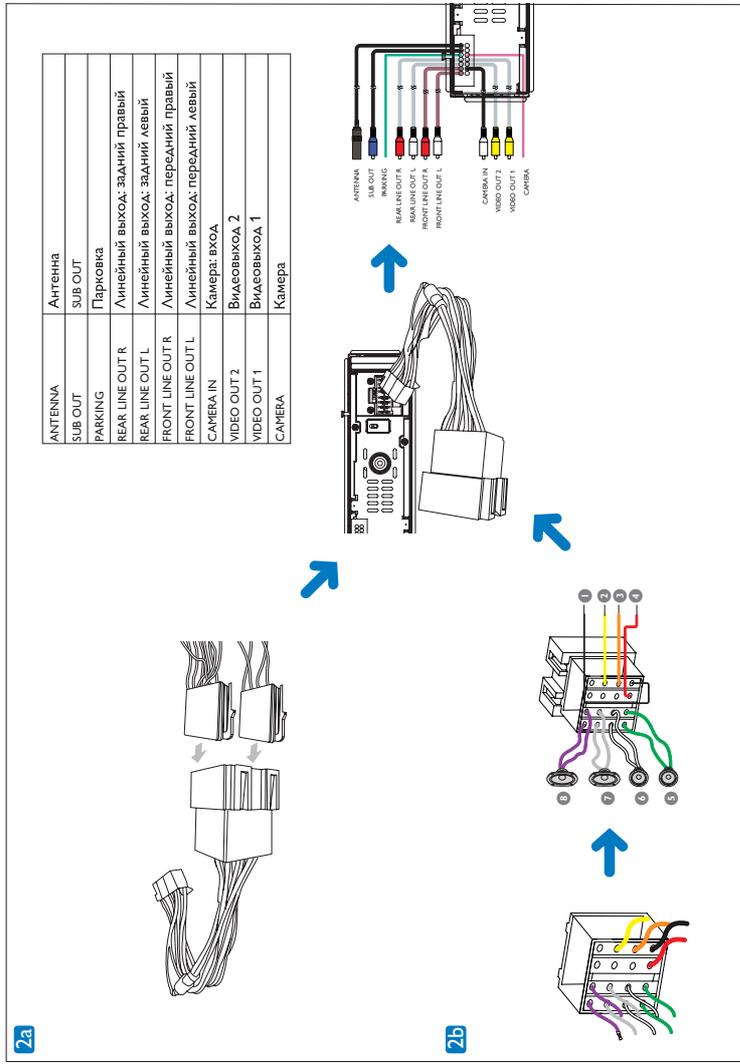

2a

2b

Mount in the dashboard 5

- 1 If the car does not have an on-board ohve or terminal of the car battery.
 - If you disconnect the car battery in navigation computer the computer may lost its memory.
 - If the car battery is not disconnected, to avoid short-circuit, ensure that bare wires do not touch each other.
- 2 Ensure that car dashboard opening is within these measurements:
- 3 Remove the two transport screws on the top of the unit.
- 4 Remove the mounting sleeve with the removal keys.
- 5 Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.
- 6 Place the rubber cushion over the end of the bolt.
- 7 Slide the unit into the dashboard until a click sound is heard.
- 8 Reconnect the negative terminal of the car battery.

Turn on

- 1 Press the **OK** knob to turn on the unit.
 - ↳ The unit plays the last listened program: DAB tuner, USB or SD/MMC Card (if there is USB device or SD/MMC card connected).
 - To turn off the unit, press the **OK** knob for more than 2 seconds.
 - When the unit is idle for over 5 minutes, it goes to standby mode and displays screen saver.

Set clock

- 1 Press **MENU**.
- 2 Select the navigation buttons to select **[SET-TINGS]**, then press **SEL** on the remote control.
- 3 Select **[SYSTEM]**, then press **▶▶**.
- 4 Select **[TIME MODE]**, then press **▶▶**.
- 5 The time mode options are displayed:
 - ↳ **[12 HOUR MODE]**
 - ↳ **[24 HOUR MODE]**

- 5 Select a mode, then press **SEL**.
- 6 Press **◀◀** to return to previous menu and select **[TIME ADJUST]**, then press **▶▶**.
- 7 Press **▶** or **▼** to enter clock, then press **SEL**.

Tune to a radio station

- 1 Press **SOURCE** to select Tuner.
- 2 Press **▶** or **▼** to select band.
- 3 Press **▶▶** or **▶▶▶** to tune to a radio station manually.
 - To search for radio station automatically, press **▶▶▶▶** or **▶▶▶▶▶** for 3 seconds.

Detach the front panel 6

The front panel can be detached and taken with you to deter theft.

- 1 Press **▶** to release the panel.
- 2 Open the panel, then push the right side panel toward the left side to disengage it from the chassis.
- 3 Take off the panel and store it in the supplied carry case to protect it from dirt or damage.

Play with RDS

The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. If you tune to an RDS station, an RDS icon and the station name are displayed.

Search for an RDS station by PTY information

- Before tuning to RDS stations, you can select program type (PTY) and let the unit search only for programs of the selected category.
- 1 Press **▶** or **▼** to select **[PTY] [FM2]** or **[FM3]**.
 - 2 Press and hold **SEARCH**.
 - 3 Search menu is displayed.
 - 4 Rotate **◀** to select **[PTY] [Menu]**, then press **◻**.
 - 5 List of available program type is displayed.
 - 6 Rotate **◀** to select a type, then press **◻**.
 - 7 The unit starts searching.
 - 8 Rotate **◀** to select a channel from the list of search result, then press **◻**.

Play discs

- 1 Press **▶** to open the front panel.
- 2 Insert the disc into the disc slot with label side facing up.
 - ↳ Discs from the point where it was last stopped.
- 3 To remove the disc, press the **▶** button.
 - ↳ When the disc is ejected, the unit switches to TUNER mode automatically.
- 4 Close the front panel.
 - ↳ After a few seconds, the screen turns on.
 - ↳ For video discs, if a menu appears, press **▶** or **▼** to select an item, then press **◻** to start play.
 - ↳ For discs that contain MP3s, WMAAs, or JPEGs, press **▶** or **▼** to select a folder/track/picture, then press **◻** to start play.

Insert USB device 7

- 1 Slide down the USB socket cover.
- 2 Insert the USB device into the USB socket.
 - ↳ The unit starts playing from the USB device automatically.

Insert SD/MMC card 8

- 1 Press **▶** to open the front panel.
- 2 Insert the SD or MMC card into the card slot.
 - ↳ The unit starts playing from the SD/MMC card automatically.



