



Philips
Universal remote control

Icon

SRU4105



Sticker icon model

Direct access to channels

Most popular remote. Allows you to add stickers for your favourite icons to the remote, next to a button. When you want to go to a favourite channel, just press the button next to your favourite icon sticker. You don't even have to know the channel.

Great convenience

- Ready for use with Philips equipment
- 10 channels programmed, recognised by the channel Icon
- Stick an icon to the remote for your favourite channel

Quick and easy setup

- Automatically searches for your equipment brand

PHILIPS
sense and simplicity

Specifications

Packaging dimensions

- UPC: 6 09585 15691 3
- Number of products included: 1
- Packaging type: Blister
- Packaging dimensions (W x H x D):
11 x 27.5 x 3.7 cm
- Net weight: 0.125 kg
- Gross weight: 0.18 kg
- Tare weight: 0.055 kg

Outer Carton

- GTIN: 2 06 09585 15691 7
- Number of consumer packages: 6

- Outer carton (L x W x H): 30 x 24.5 x 14 cm
- Net weight: 0.75 kg
- Gross weight: 1.6 kg
- Tare weight: 0.85 kg

Inner Carton

- GTIN: 1 06 09585 15691 0
- Number of consumer packages: 3
- Inner carton (L x W x H): 27.5 x 11 x 3.7 cm
- Net weight: 0.375 kg
- Gross weight: 0.408 kg
- Tare weight: 0.033 kg

Highlights

Auto brand search

Getting your new remote control working is simply a case of having your remote automatically search for the most suitable code for your equipment.

Pre-programmed for Philips

If you have Philips equipment, you can use your universal remote control without programming it because all keys are pre-set for Philips.

10 pre-set channels

Forgot the channel number? By the time you entered 3 digits to change the channel, was the TV too fast and only picked up the first two numbers? Forget the channel numbers. Programme the channels by channel icon, so to change channels all you have to do is recognise the icon for each channel. Some icon remotes offer 10 pre-programmed channels, others 20 and the higher end LCD models, over 200.

Sticker channel recognition

Forgot the channel number? Was the TV too fast and only picked up the first two numbers, by the time you entered 3 digits to change the channel? Forget the channel numbers. Program the channels by channel icon, so that all you have to do to change channels is to recognise the icon for each channel. Some icon remotes offer 10 pre-programmed channels, others 20. These models use stickers to apply to the remote to recognise the channel.



Issue date 2010-10-04

Version: 1.1.6

12 NC: 8670 000 40821
UPC: 6 09585 15691 3

© 2010 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com