



- 1** Uključite uređaj (npr. televizor).
Provjerite odgovara li televizor na sve naredbe putem tipki.
Ako televizor ne odgovara, nastavite do koraka 2




- 2** Pritisnite tipku  dok ne zatreperi dva puta i zatim nastavi svijetliti.



- 3** • Šifru za svoju marku potražite na popisu marki u ovim Kratkim uputama za korištenje.
• Zabilježite 4-znamenkastu šifru za svoju marku.
• Unesite šifru pomoću numeričkih tipki.



- 4** **Pritisnite i zadržite** tipku  i odmah je otpustite kada se uređaj (npr. televizor) isključi (stanje pripravnosti).
To može potrajati 30 sekundi.



- 5** Uključite svoj uređaj (npr. televizor) i provjerite rade li tipke potrebne za upravljanje njime.

Ako televizor odgovori na sve naredbe putem tipki, SRP 3004 spreman je za korištenje.


Ako tipka ne radi (ispravno), držite je pritisnutom i odmah je otpustite kada uređaj odgovori. Ponovite postupak za svaku tipku koja ne radi.

Napomena:

Ako televizor ne reagira po potrebi, ponavljate korak **4** dok ne dobijete dobre rezultate.

(Pritisnite i zadržite tipku . Otpustite tipku čim se televizor isključi).



- 6** Dvapat pritisnite tipku  **kako biste** napustili način rada za postavljanje i spremili postavke.





Marka4-znamenkast kod

Marka4-znamenkast kod	Marka4-znamenkast kod
Akai.....0074	Magnum1709
Basic Line.....0325	Medion1787
Blue Sky0395	Mivar1857
BT Vision.....3742	Numericable3949
Carrefour0492	Pace.....2134
CyberHome.....0672	Panasonic.....2153
Daewoo0692	Philips2195
Digiturk.....0783	Premiere3666
Echostar0866	Proline2274
Emerson.....0917	Saivod2439
Firstline1008	Samsung2448
Foxtel1029	Sanyo2462
France Telecom1033	Sharp.....2550
Haier1175	Sky2610
Hisense1249	Skymaster2621
Hitachi1251	Sony2679
Humax.....1298	TCL.....2856
JVC.....1464	TechniSat.....2873
Kabel Deutschland1468	Telefonica.....2913
Kathrein1486	TNT4184
LG1628	Toshiba3021
Loewe.....1660	Vestel3148



Šifre za marke koje nisu na popisu potražite na popisu šifri koji se nalazi na poledini korisničkog priručnika.

Važno!

- Ako pogriješite, krenite ispočetka. Ako naiđete na probleme ili imate pitanja, pogledajte korisnički priručnik. Služi kao pomoć prilikom postavljanja i korištenja daljinskog upravljača.
- Prije korištenja uređaja najprije odaberite uređaj tako da pritisnete odgovarajuću tipku za odabir uređaja: , ,  ili .

© 2010 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.