


#### Quick start guide






- Use only the power supply listed in the user manual.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if internal, rechargeable battery is replaced by an incorrect type.
- Dispose of used, internal batteries according to the instructions. (Refer to the full user manual online)
- This is a handsfree product with high speaker volume. Make sure the product is not too close to your ear.

### 

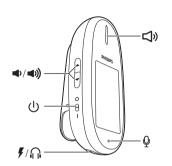




## 

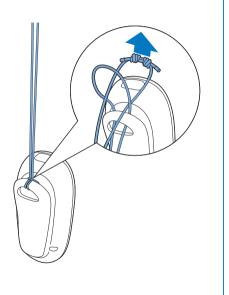


# 3 💈

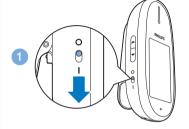



Set country, language, date and time.

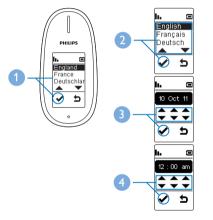

## 5 •))

#### Register your phone

1 Put the base of your original cordless phone in registration mode to connect to the handsfree phone (as described in your original phone's user manual). 2 Typically locate the •) on the base, and press and hold it for approximately 10 seconds to enter registration mode. 3 If the PIN code of your original phone base is not recognized automatically, enter it on your handsfree phone's screen.







 


Wear / place your clip phone >15cm <1.5m

## 7 (+

Make a call





# 8 (\*

Answer a call















Main menu



Phonebook



Silence an incoming call



Options



Make / accept a call

Signal strength

battery charge

Remaining



II.

 $\blacksquare$ 



Select / confirm



Back / cancel









Mute the microphone



End a call



Backspace

How to connect the • Go to  $\spadesuit > \psi >$  handsfree phone to my other phones? [Services] > [Register] and

I cancelled registration during initial setup, how to register my phone? [Services] >
[Register] and then
follow the steps described

in 5.

Registration fails continuously.

- Base memory is full.
  Delete un-used handsets
  (see bases user manual)
  and try again.
- Wrong pass code. Check code in bases user manual.

Caller ID does not display

- Service may not be activated. Check with your provider.
- The caller may have blocked caller ID.
- Base may not support caller ID.





#### **C € 0979**

Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. All rights reserved. © 2012 Koninklijke Philips Electronics N.V.



**OSG MT3120** 05 12 EN V1.2 WK12081