


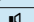
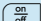



### Call from the phonebook


1. Press  in idle mode.
2. Scroll  to a phonebook entry.
3. Press  or  key.


The call is initiated.


### Listen to messages recorded on the answering machine


Press  on the base station to turn on the answering machine (the message counter is turned on).

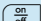

Press  again to turn off the answering machine (the message counter is turned off).


Press  on the base station to play phone messages (the first recorded message will be played first).

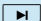Press  to skip the current message and play the next message.

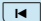Press  once to replay current message.

Press  twice to go back to the previous message.

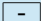Press   to adjust speaker volume during message playback.

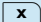
Press  to delete the current message.

Refer to your new phone's User Manual for details about the answering machine function.

## Troubleshooting

For more information, please refer to the User Manual that came with your phone.

### Problem

- There's no dialling tone!
- Caller cannot hear me clearly!
- **SEARCHING...** is displayed on handset and  icon is blinking!
- Caller number is not displayed!

### Solution

- Check the connections
- Charge the batteries
- Use the line cable provided
- Move closer to the base station
- Move the base station at least one metre away from any electrical appliances
- Move closer to the base station
- Reset your unit and restart the handset registration
- Check your subscription with your network operator

## Welcome to Philips!

Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome)

## Need help?

### User Manual

Refer to the User Manual that came with your new phone.

### Online help

[www.philips.com/support](http://www.philips.com/support)

© 2008 Koninklijke Philips Electronics N.V.

All rights reserved.

Reproduction in whole or in part is prohibited without the written consent of the copyright owner.

Document number: 3111 285 48901 (GB)



Printed in China

Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome)

ID555



# Quick start guide


- 1 Connect
- 2 Install
- 3 Enjoy

# PHILIPS

# What's in the box



Handset

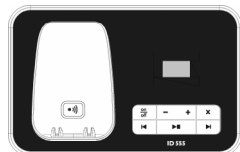


Base station




Battery door



1 Li-ion rechargeable battery

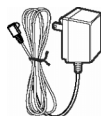

Power supply

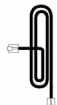

Line cord\*



User manual



Guarantee



Quick Start Guide

\*You may find in the box the line adaptor delivered separately from the line cable. **In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.**



In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

**WARNING** Always use the cables and batteries that came with your phone.

## 1 Connect

Connect the base station

1. Place the base station in a central location near the telephone line socket and electricity socket.

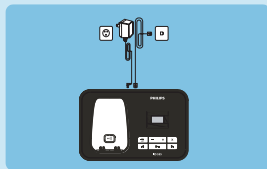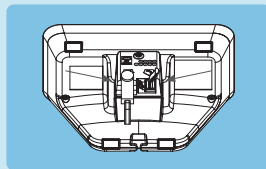


2. Connect the line cord and the power cable to their corresponding connectors at the back of the base station.
3. Connect the other end of the line cord and power cable to their respective sockets.


## 2 Install

Insert rechargeable batteries and charge

### A Insert batteries

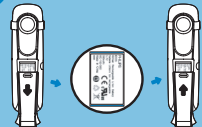

### B Charge handset for 24 hours

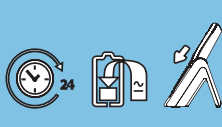

### Configure your phone (if necessary)

After installing the batteries and charging your phone for a few minutes, your phone displays a Welcome message in various languages:

1. Press **SELECT**.
2. Scroll to your country and the associated language.
3. Press **SELECT** to confirm your selection.

Your phone is now ready for use.

## 3 Enjoy

### Make a call

Dial the number (maximum 24 digits) and press or key.

OR

Press or key to take the line and dial the number (maximum 24 digits).

### Answer a call

When the phone rings, press or key.

### End a call

To end a conversation, press key.

### Adjust the earpiece or speaker's volume

During a call, press to select from **VOLUME 1**, **VOLUME 2** or **VOLUME 3**.

### Set the ring melody

1. Press in idle mode, scroll to **PERSONAL SET** and press **SELECT**, scroll to **HANDSET TONES** and press **SELECT**, scroll to **RING TONES** and press **SELECT**.
2. Scroll to your desired melody.
3. Press **SELECT** to set the ring melody.  
A validation tone is emitted and the screen returns to previous menu.

### Store a contact in the phonebook

1. Press key in idle mode, scroll to **PHONEBOOK** and press **SELECT**, press **SELECT** to enter **NEW ENTRY**.
2. **ENTER NAME** is displayed on the screen.
3. Enter the name of the contact (maximum 14 characters) and press **OK**.
4. Enter the phone number (maximum 24 digits) and press **OK**.  
A validation tone is emitted.

### Access the phonebook

1. Press in idle mode and scroll to browse the phonebook.
2. To view the details, press **SELECT**.