

Register your product and get support at
www.philips.com/welcome

HMP3000



EN	User manual	7
KO	사용 설명서	9
MS-MY	Manual pengguna	11
ZH-TW	使用手冊	13

PHILIPS



EN	Please refer to the safety information before using the product.
ZH-TW	在使用產品之前請參閱安全資訊。
MS-MY	Sila rujuk maklumat keselamatan sebelum menggunakan produk ini.
KO	제품을 사용하기 전에 안전 정보를 숙지하십시오.

Trademark notice



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX®, DivX Certified®, DivX Plus™ HD and associated logos are registered trademarks of DivX, Inc. and are used under license.

DivX Certified® to play DivX® and DivX Plus™ HD (H.264/MKV) video up to 1080p HD including premium content



Real RMVB logo is a trademark or a registered trademark of RealNetworks, Inc.




Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0+ Digital Out is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.


Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.





  1

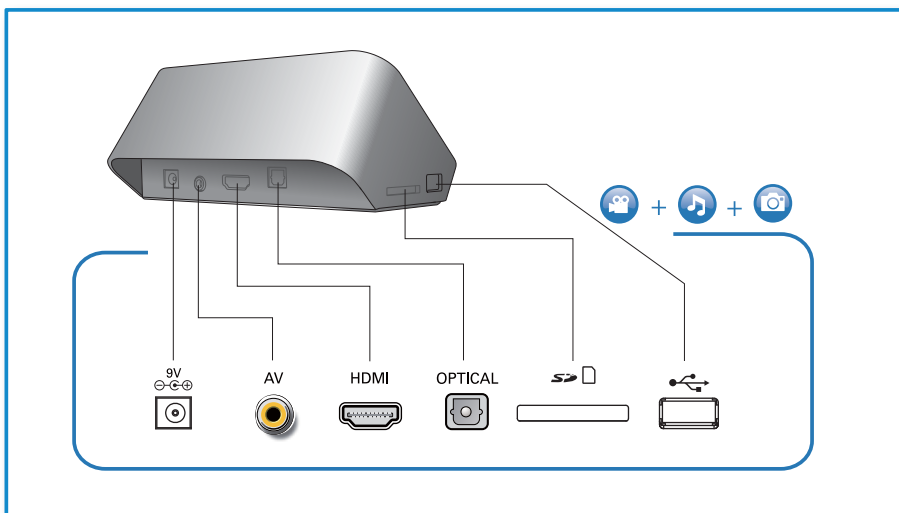

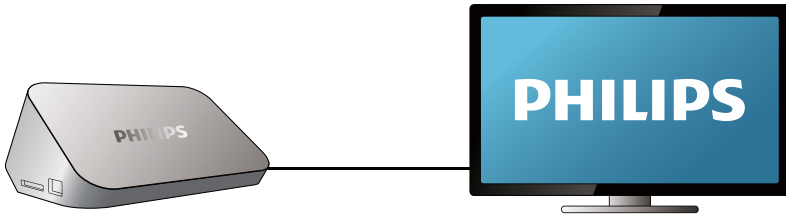


HDMI




TV OUT + AUDIO OUT



 3

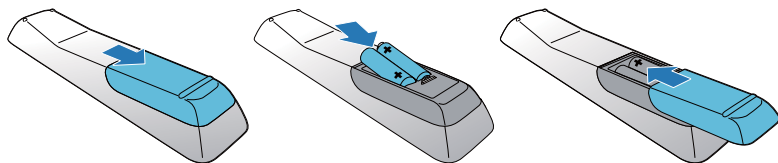

4

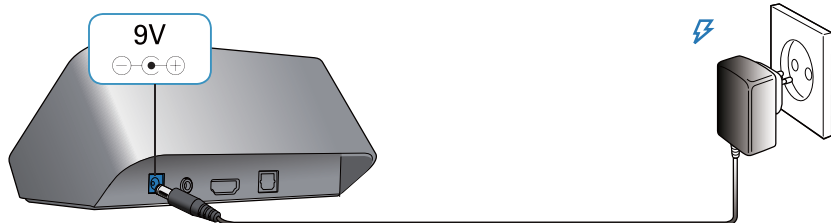 



5





6



  1

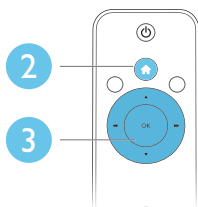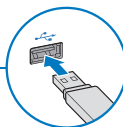


1

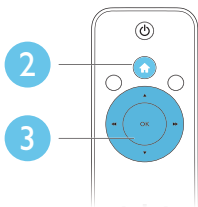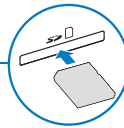  

1 Control and play

 Use your remote control to control the play.

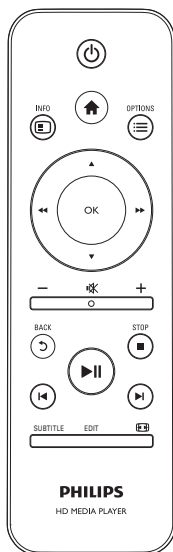

Function	Buttons / Actions
Stop the play.	■
Pause or resume the play.	▶
Skip to the previous/next media file.	◀▶
Return to the home page.	⬆
Zoom in or out.	Press  repeatedly. • To pan through an enlarged photo, press ▲ / ▼ / ◀◀ / ▶▶.
Search backward/forward fast.	Press ◀◀ / ▶▶ repeatedly to select a speed.
Access subtitle settings.	SUBTITLE
Rotate a photo.	Press ▲ / ▼.
Navigate menus.	▲ / ▼ / ◀◀ / ▶▶
Confirm a selection or entry.	OK
Access option menus during play or in the file list.	≡
Access the file editing menu in the file folder list.	EDIT

2 Troubleshooting

If you contact Philips, you will be asked for the model and serial number of this player. The model number and serial number are at the bottom of this player. Write the numbers here:

Model No. _____

Serial No. _____

No picture.

- Refer to the TV user manual for how to select the correct video input channel

No sound output from the TV.

- Make sure that the audio cables are connected to the audio input sockets that are grouped with the selected video input sockets.

The contents of the USB storage device cannot be read.

- The format of this USB storage device is not supported.
- The supported memory size is 1TB maximum.
- Make sure that this player supports these files. (Refer to “Specifications” > “Playable media”)
- DRM-protected video files that are stored on a USB/SD storage device cannot be played through an analog video connection (for example, composite). You need to use an HDMI connection to play these files.

DivX subtitles are not displayed correctly.

- Make sure that the subtitle filename is the same as the video filename.
- Make sure that the DivX video file and the subtitle file are saved under the same directory.

For more information, please refer to the user manual which is available in the CD rom.

3 Specification



Note

- Specification and design are subject to change without notice.

File

- Video: MPEG 1/2/4(MPEG 4 Part 2), H.264, VC-1, H.263, VP6(640 × 480), DivX Plus HD, DivX 3/4/5/6, Xvid, RMVB 8/9/10, RM, WMV (V9), AVI, TS, M2TS, TP, TRP, ISO, VOB, DAT, MP4, MPEG, MPG, MOV (MPEG 4, H.264), ASF, FLV(640 × 480), MKV, M4V.
- Audio: Dolby digital, AAC, RA, OGG, MKA, MP3, WAV, APE, FLAC, DTS, LPCM, PCM, WMA (V9), IMP/MS ADPCM, WMA Pro
- Picture: JPEG, JPG, M-JPEG, PNG, TIF, TIFF, GIF (unanimated GIF), BMP, HD JPEG

USB storage device

- Compatibility: Hi-Speed USB (2.0)

Subtitle support

- .srt, .sub, .smi, .ssa, .ass, .txt, .psb

SD card

- Compatibility: SDHC 2.0 (up to 32 GB)

Video

- Signal system: PAL /NTSC
- Composite video output: 1 Vpp ~ 75 ohm
- HDMI output: 480i, 480p, 576i, 576p, 720p, 1080i, 1080p

Audio

- Analog stereo output
- Signal to noise ratio (1 kHz): > 90 dB (A-weighted)
- Dynamic Range (1 kHz): > 80 dB (A-weighted)
- Frequency response: +/-0.2 dB
- Digital output: Optical

Main Unit

- Dimensions (L × W × H): 136 × 86 × 52 mm
- Net Weight: 0.41 Kg

Power

- Input: DC 9V 1.1A
- Power consumption: < 10 W
- Power consumption in standby mode: < 1 W

Power Adapter

 
- Power supply rating: AC 100V-240V 50Hz / 60Hz
- Output: DC 9V 1.1A
- Brand: Philips
- Model No: SSW-1918EU-1

Accessories

- Main unit
- Remote control
- AV cable
- Power adapter
- Disc
- User manual

1 플레이어 제어

플레이어를 제어하려면 리모콘을 사용합니다.

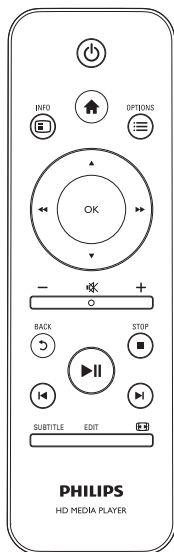

기능	버튼/동작
재생을 중지합니다.	■
재생을 일시 중지 또는 다시 시작합니다.	▶
이전/다음 미디어 파일로 건너뜁니다.	◀▶
홈 페이지로 돌아갑니다.	⬆
확대 또는 축소합니다.	Ⓜ을 여러 번 누릅니다. • 확대된 이미지를 패닝하려면 ▲/▼/◀◀/▶▶ 을 누르십시오.
뒤로 감기/빨리 감기로 검색합니다.	◀◀/▶▶을 여러 번 눌러 재생 속도를 선택합니다.
자막 설정을 엽니다.	SUBTITLE
사전을 회전합니다.	▲/▼을 누릅니다.
메뉴를 탐색합니다.	▲/▼/◀◀/▶▶
선택 내용 또는 입력을 확인합니다.	OK
재생 중 또는 파일 목록에서 옵션 메뉴를 엽니다.	≡
파일 폴더 목록에서 파일 편집 메뉴를 엽니다.	EDIT

2 문제 해결

필립스에 문의할 때는 이 플레이어의 모델 및 일련 번호를 제공해야 합니다. 모델 번호와 일련 번호는 플레이어 아래쪽에 있습니다. 여기에 번호를 적어 두십시오.

모델 번호 _____

일련 번호 _____

화면이 보이지 않습니다.

- TV 사용 설명서의 올바른 비디오 입력 채널을 선택하는 방법을 참조하십시오.

TV에서 사운드가 출력되지 않습니다.

- 오디오 케이블이 선택된 비디오 입력 소켓과 같은 그룹의 오디오 입력 소켓에 연결되어 있는지 확인하십시오.

USB 저장 장치의 콘텐츠를 읽을 수 없습니다.

- 플레이어가 이 USB 저장 장치의 형식을 지원하지 않습니다.
- 지원되는 최대 메모리 크기는 1TB입니다.
- 플레이어가 이 파일을 지원하는지 확인하십시오. (“사양” > “재생 매체” 참조)
- USB/SD 저장 장치에 저장된 DRM 보호 비디오 파일은 아날로그 비디오 연결(예: 컴포지트)을 통해 재생할 수 없습니다. 이러한 파일을 재생하려면 HDMI 연결을 사용해야 합니다.

DivX 자막이 올바르게 표시되지 않습니다.

- 자막 파일 이름이 비디오 파일 이름과 동일하지 확인하여 주십시오.
- DivX 비디오 파일과 자막 파일이 동일한 디렉터리에 저장되어 있는지 확인하여 주십시오.

자세한 내용은 CD-ROM을 통해 제공된 사용 설명서를 참조하십시오.

3 사양

참고

- 사양과 디자인은 예고 없이 변경될 수 있습니다.

파일

- 비디오: MPEG 1/2/4(MPEG 4 Part 2), H.264, VC-1, H.263, VP6(640 × 480), DivX Plus HD, DivX 3/4/5/6, Xvid, RMVB 8/9/10, RM, WMV (V9), AVI, TS, M2TS, TP, TRP, ISO, VOB, DAT, MP4, MPEG, MPG, MOV (MPEG 4, H.264), ASF, FLV(640 × 480), MKV, M4V
- 오디오: Dolby digital, AAC, RA, OGG, MKA, MP3, WAV, APE, FLAC, DTS, LPCM, PCM, WMA (V9), IMP/MS ADPCM, WMA Pro
- 사진: JPEG, JPG, M-JPEG, PNG, TIF, TIFF, GIF, BMP, HD JPEG

USB 저장 장치

- 호환성: 고속 USB(2.0)

자막 지원

- .srt, .sub, .smi, .ssa, .ass, .txt, .psb

SD 카드

- 호환성: SDHC 2.0(최대 32GB)

비디오

- 신호 시스템: PAL / NTSC
- 컴포짓 비디오 출력: 1Vpp ~ 75ohm
- HDMI 출력: 480i, 480p, 576i, 576p, 720p, 1080i, 1080p

오디오

- 아날로그 스테레오 출력
- 신호 대 잡음비(1kHz): > 90dB(A-가중)
- 동적 범위(1kHz): > 80dB (A-가중)
- 주파수 응답: +/-0.2dB
- 디지털 출력: 광출력

본체

- 규격 (L × W × H): 136 × 86 × 52mm
- 순중량: 0.41Kg

소비전력

- 입력: DC 9V 1.1A
- 전력 소비량: < 10W
- 대기 모드에서 전력 소비량: < 1W

전원 어댑터

 
- 정격 공급 전원: AC, 100V-240V, 50Hz/60Hz
- 출력: DC 9V 1.1A
- 상표: 필립스
- 모델 번호: SSW-1918EU-1

액세서리

- 본체
- 리모콘
- AV 케이블
- 전원 어댑터
- 디스크
- 사용 설명서

1 Kawal dan main

Gunakan alat kawalan jauh anda untuk mengawal mainan.

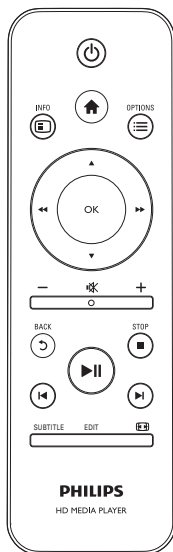

Fungsi	Butang / Tindakan
Hentikan mainan.	■
Hentikan sebentar atau teruskan mainan.	▶
Langkau ke fail media sebelum/seterusnya.	◀▶
Kembali ke laman utama.	⌂
Zum masuk atau keluar.	Tekan berulang-ulang. • Untuk menyorot melalui imej yang telah dibesarkan, tekan ▲ / ▼ / ◀◀ / ▶▶.
Cari laju ke belakang/ke hadapan.	Tekan ◀◀ / ▶▶ berulang kali untuk memilih kelajuan.
Akses tetapan sari kata.	SUBTITLE
Putar foto.	Tekan ▲ / ▼.
Navigasi menu.	▲ / ▼ / ◀◀ / ▶▶
Sahkan pemilihan atau entri.	OK
Akses menu pilihan semasa mainan atau dalam senarai fail.	≡
Akses menu mengedit fail dalam senarai folder fail.	EDIT

2 Menyelesaikan masalah

Jika anda menghubungkan Phillips, anda akan diminta untuk memberikan nombor model dan nombor siri pemain ini. Nombor model dan nombor siri boleh didapati di bahagian bawah pemain ini. Tulis nombor tersebut di sini:

No. Model _____

No. Siri _____

Tiada gambar.

- Rujuk manual pengguna TV mengenai cara memilih saluran input video yang betul.

Tiada output suara daripada TV.

- Pastikan bahawa kabel audio bersambung dengan soket input audio yang dikelompokkan bersama soket input video yang dipilih.

Kandungan peranti penyimpanan USB tidak dapat dibaca.

- Format peranti penyimpanan USB ini tidak disokong.
- Saiz memori yang disokong ialah maksimum 1TB.
- Pastikan bahawa pemain ini menyokong fail-fail ini. (Rujuk kepada “Spesifikasi” > “Media boleh main”)
- Fail video dilindungi DRM yang disimpan pada peranti penyimpanan USB/SD tidak dapat dimainkan melalui sambungan video analog (seperti komposit). Anda hendaklah menggunakan sambungan HDMI untuk memainkan fail jenis ini.

Sari kata DivX tidak dipaparkan dengan betul.

- Pastikan nama fail sari kata sama dengan nama fail video.
- Pastikan bahawa fail video DivX dan fail sari kata disimpan dalam direktori yang sama.

Untuk maklumat lanjut, sila rujuk manual pengguna yang tersedia dalam CD ROM.

3 Spesifikasi



Catatan

- Spesifikasi dan reka bentuk tertakluk kepada perubahan tanpa notis.

Fail

- Video: MPEG 1/2/4 (MPEG 4 Part 2), H.264, VC-1, H.263, VP6 (640 x 480), DivX Plus HD, DivX 3/4/5/6, Xvid, RMVB 8/9/10, RM, WMV (V9), AVI, TS, M2TS, TP, TRP, ISO, VOB, DAT, MP4, MPEG, MPG, MOV (MPEG 4, H.264), ASF, FLV (640 x 480), MKV, M4V
- Audio: Dolby digital, AAC, RA, OGG, MKA, MP3, WAV, APE, FLAC, DTS, LPCM, PCM, WMA (V9), IMP/MS ADPCM, WMA Pro
- Gambar: JPEG, JPG, M-JPEG, PNG, TIF, TIFF, GIF, BMP, HD JPEG

peranti penyimpanan USB

- Kecerahan: USB Kelajuan tinggi (2.0)

Sari kata disokong

- .srt, .sub, .smi, .ssa, .ass, .txt, .psb

kad SD

- Kecerahan: SDHC 2.0 (sehingga 32 GB)

Video

- Sistem isyarat: PAL /NTSC
- Output video komposit: 1 Vpp ~ 75 ohm
- Output HDMI: 480i, 480p, 576i, 576p, 720p, 1080i, 1080p

Audio

- Output stereo Analog
- Nisbah isyarat ke hingar (1 kHz): > 90 dB (diberatkan A)
- Julat Dinamik (1kHz): > 80 dB (A-diberatkan)
- Respons frekuensi: +/-0.2 dB
- Output digital: Optik

Unit Utama

- Dimensi (P x L x T): 136 x 86 x 52 mm
- Berat Bersih: 0.41 Kg

Kuasa

- Input: DC 9V 1.1A
- Penggunaan kuasa: < 10 W
- Penggunaan kuasa dalam mod siap sedia: < 1 W

Penyesuai Kuasa

 
- Pengedaran bekalan kuasa: AC 100V-240V 50Hz / 60Hz
- Output: DC 9V 1.1A
- Jenama: Philips
- No. Model: SSW-1918EU-1

Aksesori

- Unit utama
- Kawalan jauh
- Kabel AV
- Penyesuai kuasa
- Cakera
- Manual pengguna

1 控制和播放

使用遙控器控制播放。

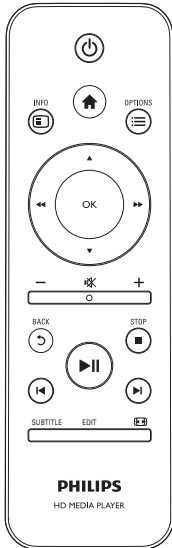

功能	按鈕 / 動作
停止播放。	■
暫停或繼續播放。	▶
跳至上一個/下一個媒體檔案。	◀ ▶
返回首頁。	🏠
放大或縮小。	重複按 。 • 若要平移檢視放大的相片，按 ▲ / ▼ / ◀◀ / ▶▶。
倒轉/快轉搜尋。	重複按 ◀◀ / ▶▶ 選擇速度。
存取字幕設定。	SUBTITLE
旋轉相片。	請按 ▲ / ▼。
瀏覽選單。	▲ / ▼ / ◀◀ / ▶▶
確認選項或項目。	OK
在播放中或在檔案清單中存取選項選單。	≡
在檔案資料夾清單中存取檔案編輯選單。	EDIT

2 疑難排解

若您與 Philips 聯絡，則將需要提供播放機的機型與序號。機型與序號位於播放機底部。將號碼填寫與此：

型號 _____

序號 _____

沒有畫面。

- 請參閱電視使用手冊，瞭解如何選擇正確的視訊輸入頻道

電視沒有聲音輸出。

- 確認音訊纜線已連接至與選取的視訊輸入插孔同一組的音訊輸入插孔。

無法讀取 USB 儲存裝置的內容。

- 這個 USB 儲存裝置的格式不受支援。
- 支援的記憶體大小最大為 1TB。
- 確認播放機支援這些檔案。(請參閱「規格」>「可播放的媒體」)
- 儲存在 USB/SD 儲存裝置上受版權保護的視訊檔案無法透過類比視訊連線 (例如複合視訊) 播放。您必須使用 HDMI 連線播放這些檔案。

DivX 字幕未正確顯示。

- 確認字幕檔案名稱和視訊檔案名稱相同。
- 確認 DivX 視訊檔案和字幕檔案儲存在相同的目錄下。

如需詳細資訊，請參閱 CD ROM 上的使用者手冊。

3 規格



備註

- 規格與設計可能隨時變更，恕不另行通知。

檔案

- 視訊：MPEG 1/2/4(MPEG 4 Part 2), H.264, VC-1, H.263, VP6(640 × 480), DivX Plus HD, DivX 3/4/5/6, Xvid, RMVB 8/9/10, RM, WMV (V9), AVI, TS, M2TS, TP, TRP, ISO, VOB, DAT, MP4, MPEG, MPG, MOV (MPEG 4, H.264), ASF, FLV(640 × 480), MKV, M4V
- 音訊：杜比數位, AAC, RA, OGG, MKA, MP3, WAV, APE, FLAC, DTS, LPCM, PCM, WMA (V9), IMP/MS ADPCM, WMA Pro
- 相片：JPEG, JPG, M-JPEG, PNG, TIF, TIFF, GIF, BMP, HD JPEG

USB 儲存裝置

- 相容性：高速 USB (2.0)

字幕支援

- .srt, .sub, .smi, .ssa, .ass, .txt, .psb

SD 卡

- 相容性：SDHC 2.0 (高達 32 GB)

視訊

- 訊號系統：PAL / NTSC
- 複合視訊輸出：1 Vpp ~ 75 ohm
- HDMI 輸出：480i、480p、576i、576p、720p、1080i、1080p

音訊

- 類比立體聲輸出
- 訊噪比 (1 kHz)：> 90 dB (A-weighted)
- 動態範圍 (1 kHz)：> 80 dB (A-weighted)
- 頻率響應：+/-0.2 dB
- 數位輸出：光學

主裝置

- 尺寸 (長 × 寬 × 高)：136 × 86 × 52 公釐
- 淨重：0.41 公斤

電源

- 輸入：DC 9V 1.1A
- 耗電量：< 10 W
- 待機模式耗電量：< 1 W

電源變壓器

- 電源供應器功率：AC 100V-240V 50Hz / 60Hz
- 輸出：DC 9V 1.1A
- 品牌：飛利浦
- 型號：SSW-1918EU-1

配件

- 主裝置
- 遙控器
- AV 纜線
- 電源變壓器
- 光碟
- 使用者手冊

