

Register your product
and get support at
www.philips.com/welcome

SRP5107WM/17



EN User Manual

PHILIPS

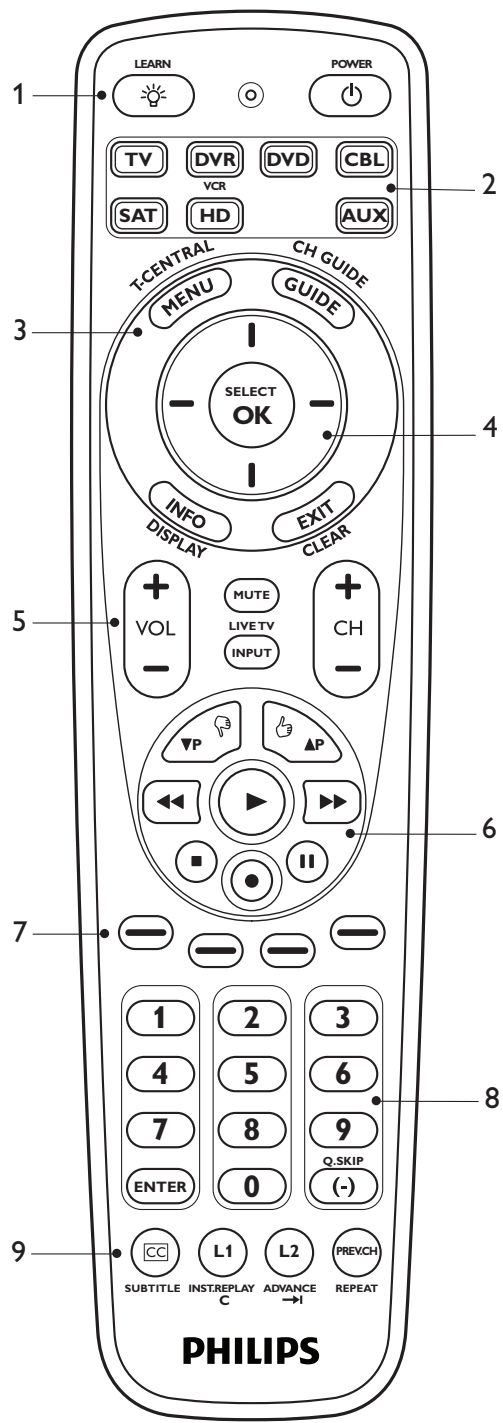


Table of contents

1	Your SRP5107WM.....	3-4
2	Getting started.....	4-9
2.1	Inserting the batteries.....	4
2.2	Testing the universal remote control.....	4-5
2.3	Setting up the universal remote control.....	5-9
3	Using the universal remote control.....	9-15
3.1	Buttons and functions.....	9-12
3.2	Controlling combo devices.....	12-13
3.3	Learning button functions.....	13-14
3.4	Resetting a button to its original function.....	14
3.5	Resetting the original functions of the remote control (Factory Reset).....	15
4	Service and support.....	15-18
4.1	Frequently asked questions.....	15-17
4.2	Need help?.....	17
	FCC Compliance.....	18
	Notice for Canada.....	18
	Helpline.....	19
	Brand list.....	20-27

1 Your SRP5107WM

Congratulations on your purchase of the Philips SRP5107WM universal remote control. After setting up the remote control you can operate up to 7 different devices with it.

Simple Setup

The universal remote control comes with the innovative Simple Setup technology. After setup, the SRP5107WM can operate TV, DVD player/recorder (including Blu-ray player), VCR, DVR, HD, auxiliary equipment and all common Cable, Satellite, DTV and other set top boxes, such as DirecTV, Comcast, AT&T, Verizon, Time Warner, Scientific Atlanta, TiVo and many more.

Simply follow the instructions in chapter 2.3 to set up the remote control for your devices.

We focused on making this remote control consumer friendly. We have highlighted the DVR (TiVo/Replay) buttons in blue for easy referencing on the keypad.


The remote control is equipped with the most common functions for operating your devices. However, if you miss certain functions, this remote control can 'learn' these functions from the original remote control.

To fully benefit from the support that Philips offers, register your product at:
www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AA type batteries, noting the + and - configuration in the battery compartment.

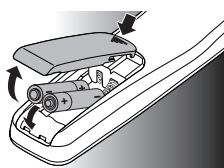


 

Note

When replacing the batteries, all user settings will be retained in the remote control memory for an unlimited period of time.

2.2 Testing the universal remote control

It is advised to test whether your device(s) already respond(s) to the SRP5107WM before setting it up (see chapter 2.3). The example below instructs you how to do this for your TV. You can repeat the same steps for other devices (DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment) which you want to operate using the SRP5107WM.

Example: testing the universal remote control on your TV:

- 1 **Switch ON** your TV manually or use the original remote control for this. Tune to channel 1.
- 2 Press the  device selection button to select TV.
 - The red Setup light  blinks. If the Setup light  did not blink, check whether the batteries are properly inserted (see chapter 2.1).



- 3 Check whether the buttons that you need for operating your TV are working. For an overview of the buttons and their functions see chapter 3.1.



- If the TV responds as it should to all of the button commands, the SRP5107WM is ready for use.
If the device does not respond at all or not to all of the button commands, follow the instructions in chapter 2.3.

2.3 Setting up the universal remote control

The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment) which you want to operate, using the universal remote control.



The remote control can be set up to operate any 7 of the following devices:

Device name	Description
TV	Traditional TV, LCD/Plasma TV, flat panel TV and projection TV, TV part of TV/VCR, TV/VCR/DVD and TV/DVD combos
DVR	Digital/Personal Video Recorder (DVR/PVR), TiVo, DVR part of DVR/SAT, DVR/Cable and DVR/DVD combos
DVD	DVD player/recorder (DVDR/DVD-RW), DVD/Hard Disk Drive combination (DVDR-HDD), Blu-Ray player; High Definition DVD player (HD-DVD), DVD part of TV/DVD, TV/VCR/DVD, DVR/DVD and VCR/DVD combos
CBL/SAT	Cable box, satellite receiver; Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV), Digital Television (DTV), TiVo, SAT/Digital TV (DTV)/WebTV, DTV/Advanced Television Systems (ATSC) - Digital To Analog Converter; CBL part of DVR/Cable combos and SAT part of DVR/SAT combos
VCR	Video cassette player/recorder; VCR part of TV/VCR, TV/VCR/DVD and VCR/DVD combos


AUX	Auxiliary equipment: CD, Audio System, Laser Disc, Digital Picture Frame, Media Center PC, Home Automation, Home Theater in a Box (HTIB)
HD	Any of the above listed devices

Example: setting up the universal remote control to operate your TV:

 1 Switch ON the TV manually or use the original remote control for this. Tune to channel 1.

2 Press and hold the  device selection button for 5 seconds until the red Setup light  blinks.


- The remote control is now in setup mode.

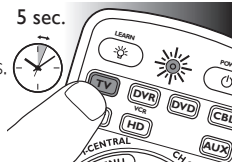


3 Look up the 4-digit code for your brand in the brand list at the back of this user manual. A 4-digit code is shown for each brand.




Use the digit buttons to enter the code for your brand (e.g. Philips, **2 1 9 5**).

- If the red Setup light  turns off, an invalid code was entered. In this case, try again.



4 Aim the remote control at the TV. Press and hold the  button. Release it immediately as soon as the TV switches off.

- This step normally takes between 5 and 60 seconds.

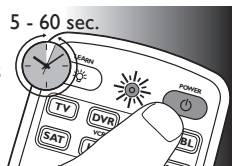


In extreme circumstances this step can take up to 15 minutes.

5 Switch ON the TV.


Try out the buttons that you need for operating it. Try, for example, if the - CH + and digit buttons function properly.

- If a button does not work as expected, **press and hold** that button. Release it immediately as soon as it works. For more information, see chapter 2.3.3.




6 Press the  device selection button **twice** to finish setup.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

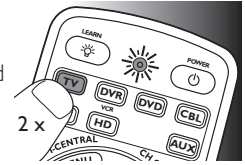







! Important

If you made a mistake:

- Press the device selection button **twice** to exit setup. The red Setup light  turns off.
- Restart from the beginning.

- If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.
- Alternatively you can set up the universal remote control with the learn feature as described in chapter 3.3.


 
2.3.1 Setting up the remote control for other devices
(DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment)

- Make sure the device is switched on and operational. E.g. insert a disc in the DVD player/recorder or a video cassette in the VCR.
- Then follow steps 2 to 6 of 'Setting up the universal remote control to operate your TV'. Make sure to use the correct device selection button: , , ,  or  or .

2.3.2 Setting up the remote control for combo devices

In most cases you will have to set up the remote control for each part of the combo device.

Only in some cases a single code-set will operate all parts of the combo.

For example: for a TV/DVD combo you will first have to set up the remote control for TV (with the  button) and then for DVD (with the  button or any other device selection button) in order to operate both parts of the combo.

For this refer to chapter 2.3.

2.3.3 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected. In this case you can have the remote control search for alternatives.

Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

 
After initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.

- 2 Select the device that you wish to operate (e.g. DVD).


Press the **DVD** device selection button to select DVD.

- 3 Keep buttons **1** and **4** pressed **simultaneously for 5 seconds**.

- The red Setup light  lights up. The remote control is now in setup mode.


- 4 **Press and hold** the button that does not function and **immediately** release it when the device responds.

- If the button still does not function as expected, try pressing it again for a longer period of time.

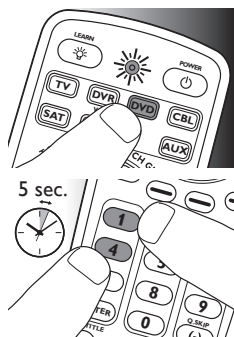

- 5 Press the **DVD** device selection button **twice** to save your settings and exit setup mode.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

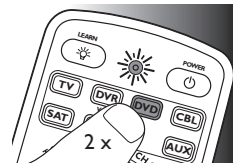

3 Using the universal remote control

3.1 Buttons and functions

The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.

Notes


- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP5107WM (e.g. Info/Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP5107WM.








- 1   


LEARNused to setup learning functions.

BACKLIGHT ().....turns the backlighting on/off.


SETUP light.....lights up when a remote control command is being sent, when you select a device and when the remote control is in setup or learn mode.

POWER ().....switches the selected device on/off.


- 2    device selection buttons. Select the device to be operated.
  

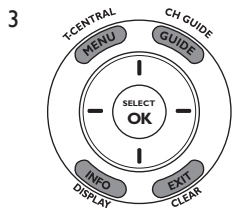


- 3 MENUmenu on/off.
- GUIDEelectronic program guide.
- INFOon-screen channel information.
- EXITexits/clears on-screen menu displays.

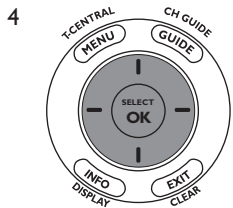

 - 4 SELECTselects menu items for the device you are controlling.
- OKconfirms your selection.
- (I) UP/DOWN, (-) LEFT/RIGHTcursor up, down, left, right in a menu.




- 5 + VOL -increases/decreases the volume level of the device, normally TV.
- MUTEturns the sound of the device (normally TV) off/on while the picture remains.
- INPUTselects available source inputs (Antenna, Cable, etc.).
- + CH -next / previous channel.

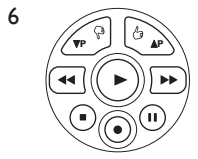


- 6 ▼P ▲Pprevious (▼P) / next (▲P) page/track in various modes.
- ◀rewind.
- ▶play.
- ▶▶fast forward.
-stop.

-record.
- ⏸pause.
- 7 [] [] [] []context sensitive buttons, ordered following the requirements for cable boxes. A - Yellow, B - Blue, C - Red, D - Green.

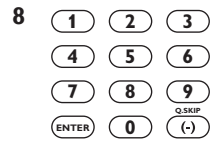

- 8 Digit buttonsfor direct channel / track selection.
- ENTERused after direct channel selection. Some devices require ENTER to be pressed after channel selection.
- (-)selects between one and two-figure channel numbers.

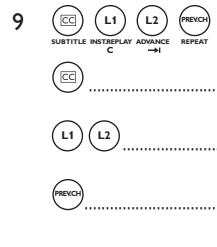

- 9 EGGTV Closed Caption (if your TV has this feature).
- L1 L2store learned button commands.
- PREVCHreturns to the previously selected channel.

Note

For some TV brands/types, the button will only turn off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.

3.1.1 Dedicated DVR functions - labeled in blue (*TiVo/Replay)

When you select DVR mode by pressing the button, all blue DVR function buttons will become active.

- 3 T.CENTRALTiVo button for TiVo Central.
- CH GUIDETiVo Live Guide - the TiVo Program Guide.
- DISPLAYbrings up the Channel Banner.
- CLEARexits/clears on-screen menu displays.
- 5goes to Live TV broadcast.

- 6 thumbs Up/Down. Set your Thumbs ratings.
- P and P select previous () / next () page in Replay TV guides and menus.
- 8 skips 30 seconds of a recorded or delayed show.
- 9 turns the subtitles on/off.
- replays the last 7 seconds (Replay) or 8 seconds (TiVo) of a program.
- catches you up to the live broadcast.
- repeats current chapter/track.

* TiVo and Replay are registered trade marks of their respective owners.

3.2 Controlling combo devices

Some combo devices (e.g. TV/DVR, TV/DVD, DVD/DVR, etc.) have separate buttons on the original remote control to select the part of the combo device to be controlled.

For example, if your combo device is a DVD/DVR then its original remote control might have separate DVD and DVR buttons for selection of the combo part you wish to operate. The equivalent button functions can be found on your Philips remote control by using the device selection buttons.

Example for a DVD/DVR combo:

- 1 Set up the remote control for each part of the combo as described in chapters 2.3 and 2.3.2. In this example for both DVD and DVR.
- 2 Press the device selection button **twice** to select the DVD part of the combo.



Press the device selection button **twice** to select the DVR part of the combo.



Notes

- This method can be applied similarly to all combo devices (TV/DVR, TV/VCR, TV/DVD, etc.) and is available for all device modes.
- Note that this feature is not supported by all codes.


3.3 Learning button functions

If you miss certain functions from your original remote control on the SRP5107WM, the SRP5107WM can learn these functions. You can store a function under any of the available buttons, except under the button. Any function already stored under a button will be deleted. The SRP5107WM is equipped with two dedicated buttons for learning additional functions: and .

- 1 Make sure that you have the original remote control at hand.
- 2 Select the desired device (e.g. DVD). Press the device selection button to select DVD.



- 3 Place both remote controls on a flat surface (like a table) and aim them head-to-head with about 5 - 10 cm in between.

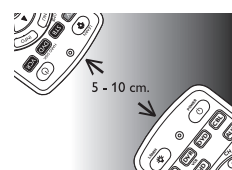

- 4 Keep the button and the button you wish to learn on the SRP5107WM (e.g. the button) **pressed simultaneously for 5 seconds**, until the red Setup light lights up.
 - The remote control is now in learn mode.
- 5 Press **and hold** the button that you wish to learn on the original remote control until the red Setup light blinks **twice** and then goes out **to confirm that learning was successful**.
 - The remote control has now learned the new function.






- It may occur that learning a button function fails the first time. The red Setup light ☉ will then give **4 short blinks** and go out. In this case, please try again.
- If you keep having trouble learning button functions, check the batteries in both SRP5107WM and original remote control and replace if necessary.
- It may also be that the remote control learn memory is full (a total of about 60 buttons can be learned). In this case you can reset one or more buttons to their original functions in order to create memory space. For this, see chapter 3.4.

3.4 Resetting a button to its original function

If an improved button (see chapter 2.3.3) still does not function as expected, you can always reset the button to its original function.



When resetting a button to its original function, any learned function stored under the button will be deleted.

- 1 In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light ☉ lights up.
 - The remote control is now in setup mode.
- 2 Press digit buttons **9**, **9** and **6**, in that order.
 - After each button press the red Setup light ☉ blinks once.
- 3 Press the button that you wish to reset **twice**. E.g. the **▶▶** button.
 - After each button press the red Setup light ☉ blinks once.
 - The red Setup light ☉ will blink one more time to confirm that the button was successfully reset to its original function.
 - The button can now also learn a new function, if desired.

3.5 Resetting the original functions of the remote control (Factory Reset)

In some cases it may be useful to reset the original functions of the remote control.

E.g. if the remote control memory is full while you wish to set it up for a specific device or learn an extra function to it. The remote control will then be reset to the default factory settings and all user settings will be deleted.

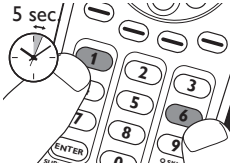- 1 In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light ☉ lights up.
 - The remote control is now in setup mode.
- 2 Press digit buttons **9**, **8** and **1**, in that order.
 - After each button press the red Setup light ☉ blinks once.
 - The red Setup light ☉ will blink one more time to confirm that the original functions of the remote control were successfully reset. Any extra functions have been deleted.

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common brands of TV, DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment.

- You will find a complete brand list on page 20-27 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.3.3) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.3.3.

How do I set up the remote control for combo devices (TV/VCR, TV/DVD, DVD/VCR, etc)?

Some combo devices require you to set up two different device selection buttons to control both parts of the combo device. For example, if you have a TV/DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV/DVD combo.

Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.

The device I want to operate does not respond at all/does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.3.3.
- Try learning button functions from the original remote control. See chapter 3.3.

Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory during battery replacement.



Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP5107WM, you can always contact us.

When calling our helpline, make sure to have the SRP5107WM at hand when you call, so that our operators can help you determine whether the SRP5107WM is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP5107WM/17.

Date of purchase:

...../...../.....

(day/month/year)

For **online support** go to:

www.philips.com/welcome

- Click 'Support' and follow the on-screen instructions.

FCC Compliance

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Helpline

Country	Phone number
United States of America/Canada	1-919-573-7854

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

User changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice for Canada

This class B digital apparatus complies with Canadian ICES-003.

A	AT&T	3453	Capehart	0484	Crown	0658
ABC	A-TREND	0011	CAPETRONIC.....	0485	CTX.....	0665
Abex	Audio Authority.....	0245	Carnivale.....	0491	Curtis.....	0666
ABS	AUDIO DYNAMICS.....	0248	Carver.....	0494	CURTIS INTERNATIONAL0666
ACCELE	AUDIO TECHNICA.....	0253	CASIO	0499	Curtis Mathes	0667
ACCESS HD.....	Audiovox.....	0268	CAVS	0503	CXC.....	0670
Acer.....	Aventura.....	0287	CCE.....	0504	CyberHome.....	0672
ACESONIC.....	Axion	0299	Celebrity	0509	CYBERNEX	0673
ADCOM	B		Celera.....	0510	CyberPower.....	0674
ADELPHIA	B & K.....	0304	Centrios.....	0517	Cybervision.....	4388
Admiral.....	Bang & Olufsen.....	0314	Centurion.....	0520	Cytron.....	0680
ADTH.....	BEAUMARK.....	0340	CENTURY.....	0521		
Advent	Belcor	0348	Cetronic.....	4380	D	
Adventura.....	BELL	4376	Changhong.....	0530	Daewoo	0692
Afreey.....	Bell & Howell.....	0350	CHANNEL MASTER.....	0531	Daytron	0710
Aiko	BELL EXPRESSVU.....	0352	CHAPPARAL.....	0533	DBX	0712
Aiwa.....	BELL SOUTH.....	0353	CHARTER.....	4239	Dell.....	0725
Akai.....	BenQ.....	0359	CHEYENNE	4381	DELPHI.....	0726
Alaron.....	BGH	3507	Cineral.....	0559	Denon	0731
Albatron.....	BLAUPUNKT	0390	CINEVISION.....	0562	DENZEL	0734
Alienware.....	Blue Sky.....	0395	CITECH.....	4382	DESAY	0737
ALLEGRO.....	BLUESKY	0395	Citizen	0567	Diamond Vision.....	0748
ALPHA DIGITAL.....	BLU-RAY	4377	Clairtone.....	0573	Digimate.....	3807
Amark.....	Bodysonic.....	4378	Clarion.....	0575	Digistar.....	0767
America Action.....	Bose.....	0407	Classic.....	0580	DIGITAL DECOR.....	4389
AMERICAN HIGH.....	BOSS.....	4197	CLEARMAX.....	0584	Digital Lifestyles.....	3567
AMERICAST	BOSTON ACOUSTIC	0411	Clp.....	4383	DIGITAL LIVING.....	4390
AMES.....	Bradford.....	0414	Clp Classic	4384	DIGITAL MUSIC EXPRESS4391
AMPLICA.....	Brillian	0422	Coby.....	0597	DIGITALSTREAM.....	3809
Ampro.....	BRITANIA	0425	COGECO	4385	Digitrex.....	0782
AMTC.....	Brockwood.....	0430	ColorVoice.....	0602	DIGIWAV	0784
Amtron.....	Broksonic.....	0432	Colortyme	0601	Digix	3520
AMW.....	Brokwood	0430	COLT	0603	Dimensia.....	3569
ANABA.....	Buffalo.....	0442	COMCAST.....	3456	DIRECTOR.....	0793
Anam	Bush.....	0445	Commercial Solutions.....	0615	DirecTV.....	0794
Anam National.....	Byd:sign.....	0448	COMTRONICS.....	0623	DISH NETWORK.....	3966
ANTRONIX.....	C		CONCEPT	0624	DISHPRO.....	0800
AOC.....	CABLETENNA.....	0456	Concerto.....	0625	Disney	0803
Aomni.....	CABLEVIEW	0458	Concierge.....	4386	DRAKE.....	0825
Apex	CABLEVISION.....	4238	Conia	0628	DREAMBOX.....	4392
Apex Digital.....	CADENCE.....	4379	Contec	0635	DRIVE.....	4393
Apple.....	CALIFORNIA		CONTEL.....	0636	Dual	0838
APPLE IPOD	AUDIO LABS	0467	COOLSAT.....	0643	Dukane	4394
Archer.....	CALIX.....	0468	Cornea.....	4387	Dumont.....	0840
ARTEC.....	Candle.....	0480	COSHIP	0646	Durabrand.....	0842
ASHA.....	CANON	0481	COX	4200	DVD 2000.....	0844
Aspect.....			Craig.....	0650	Dwin.....	0848
ASPIRE.....			CRITERION.....	0654		
Astar.....			Crosley.....	0655		

DX ANTENNA.....	0849	GENERAL INSTRUMENT	
Dynasty.....	4395	(GI).....	1093
DYNATECH.....	0854	GENEXXA.....	1097
Dynex.....	3476	GFM.....	3820
E		Gibraltar.....	1114
EASTERN.....	0859	GLOBECAST.....	4402
ECHOSPHERE.....	4396	Go Video.....	1126
ECHOSTAR.....	0866	GoldStar.....	1140
EIGERVISION.....	4397	GO-VIDEO.....	1126
Electroband.....	0888	GPX.....	1150
Electrograph.....	0889	Gradiente.....	1151
Electrohome.....	0890	GREENHILL.....	1157
ELECTROPHONIC.....	0893	GRIDLINK.....	3824
Elektra.....	0896	Grundig.....	1162
Element.....	3477	Grundy.....	1163
Elite Video.....	4398	Grunpy.....	1165
Elta.....	0910	Guestvision.....	4403
Emerson.....	0917	H	
Emprex.....	0922	HAAZ.....	1172
EMTEC.....	4363	Haier.....	1175
Envision.....	0933	Hallmark.....	1180
Epson.....	0937	HAMLIN.....	1182
ESA.....	0943	Hanns.G.....	3478
ESCIENT.....	0946	Hannspree.....	1189
EVERQUEST.....	0971	Harley Davidson.....	1197
EXPRESSVU.....	0977	HARMAN KARDON.....	1198
F		Harman/Kardon.....	1198
FARENHEIT.....	0986	Harvard.....	1202
Fischer.....	1009	HARWOOD.....	1204
Fisher.....	1009	Hauppauge.....	1206
Fluid.....	4399	Havermy.....	1208
FORTEC STAR.....	1026	HD-DVD.....	4404
FUJl.....	1047	HEADQUARTER.....	1214
Fujitsu.....	1052	Helios.....	1219
Funai.....	1056	Hello Kitty.....	1221
Future Tec.....	1064	Hewlett Packard.....	1229
Futuretech.....	1064	Hikona.....	1237
G		HI-Q.....	1231
G Vision.....	4400	Hisense.....	1249
GARRARD.....	1075	Hitachi.....	1251
Gateway.....	1076	Hiteker.....	1255
GC ELECTRONICS.....	1080	Howard Computers.....	1281
GE.....	1081	HP.....	1283
GE HOMEMINDER.....	4401	HUGHES.....	4205
GEMINI.....	1089	HUGHES NETWORK.....	1296
		Humax.....	1298
		Hush.....	1304
		Hyundai.....	1315

I		L	
iBUYPOWER.....	1322	Lasonic.....	1600
I-Inc.....	3462	Legend.....	1609
ILLICO.....	4206	Lenoxx.....	1618
iLo.....	1341	LG.....	1628
Ima.....	1342	Linksys.....	1640
Infinity.....	1352	LINN.....	1641
Infocus.....	1353	Liquid Video.....	1644
Initial.....	1356	LIQUIDVIDEO.....	1644
INKEL.....	1357	LITEON.....	1645
Insignia.....	1368	LLOYD.....	3539
INSTANT REPLAY.....	3580	Lloyd's.....	1648
Integra.....	1370	Lodgenet.....	1658
Inteq.....	1373	Loewe.....	1660
iPOD.....	4405	Logik.....	1661
J		Luce.....	1672
Janeil.....	1414	LUTRON.....	1679
JASCO.....	1415	Lux Man.....	1682
JBL.....	1420	LUXMAN.....	1682
JC Penney.....	4208	LXI.....	1686
JCB.....	1421	M	
JCL.....	4209	MACOM.....	1693
Jensen.....	1429	MAG.....	1701
JERROLD.....	1431	Magnasonic.....	1704
JVC.....	1464	Magnavox.....	1706
jWin.....	1465	Magnin.....	1708
K		Majestic.....	1713
Kawasaki.....	1488	Marantz.....	1724
Kawasho.....	1489	MARTA.....	1735
Kaypani.....	1490	Matsushita.....	1751
KDS.....	1494	Maxent.....	1757
KEC.....	1496	MCE.....	1766
Kenwood.....	1507	MCS.....	1770
KINGBOX.....	4406	Media Center PC.....	1777
KISS.....	1524	Medion.....	1787
KLH.....	1529	Megapower.....	1791
Kloss.....	1532	Megatron.....	1795
Kloss Novabeam.....	4210	MEI.....	1796
KODA.....	1539	Memorex.....	1800
KODAK.....	1540	MERIDIAN.....	1805
Kogi.....	4407	MGA.....	1811
Konka.....	1548	MGN TECHNOLOGY.....	1812
KOSS.....	1558	MICROGEM.....	4024
KRELL.....	1569	Microsoft.....	1826
KTV.....	1572	MICROVISION.....	4409
Kurazai.....	4408	MICROYAL.....	4410
KXD.....	1581	Midland.....	1831
		Mind.....	1837

MINOLTA.....	1841
Mintek.....	1845
Minutz.....	1847
Misakai.....	4411
MISSION.....	1852
Mitsubishi.....	1855
Monivision.....	1872
Montgomery Ward.....	4212
Moteva.....	4412
Motorola.....	1878
MOVIE TIME.....	1880
MTC.....	1889
Multi Vision.....	1909
Multitech.....	1907
MUSTEK.....	1916
Myron & Davis.....	4413

N

NAD.....	1926
NAKAMICHI.....	1932
NEC.....	1950
NELSON.....	4414
NEO.....	3947
NEOSAT.....	4415
NESA.....	1959
NET.....	1961
Net TV.....	1967
Netgear.....	1964
Nexus Electronics.....	3948
NexxTech.....	1990
Nikei.....	1999
Nikko.....	2000
Niko.....	2002
Niveus Media.....	2012
NOBLEX.....	2013
Norcent.....	2020
NORSTAT.....	2025
Northgate.....	2027
Norwood Micro.....	2029
NOVAPLEX.....	2034
NOWTV.....	2039
NSC.....	2042
NSM.....	2043
NTC.....	2045
NuVision.....	2053
Nyko.....	3759

O

OAK.....	2059
Olevia.....	2067
On Command.....	2077
Onking.....	2084
ONKYO.....	2085
Onwa.....	2087
Oppo.....	2092
Optimus.....	2095
Optoma.....	2097
Optonica.....	2099
Orion.....	2111
ORITRON.....	2112
Otic.....	2125

P

PACE.....	2134
Pacific.....	2135
Panasonic.....	2153
PANDIGITAL.....	3868
PANSAT.....	2158
PARAGON.....	2161
PARK.....	3951
Penney.....	2182
PENTAX.....	2183
Petters.....	2189
Philco.....	2192
Philips.....	2195
Philips-Magnavox.....	3715
PHOTOSHARE.....	4416
Pilot.....	2207
PINNACLE.....	2210
Pioneer.....	2212
Piva.....	4417
Planar.....	2217
Polaroid.....	2230
POLK AUDIO.....	2232
Portland.....	2238
POWER ACOUSTIK.....	4418
Precision.....	2244
Price Club.....	2252
Prima.....	2253
PRIMESTAR.....	2257
Princeton.....	2258
Princeton Graphics.....	2258
Prism.....	2261
PROLINE.....	2274
PROSAT.....	2278

Proscan.....	2279
Prosonic.....	2282
PROTEC.....	2283
Proton.....	2288
Protron.....	2289
Proview.....	2290
Pulsar.....	2296
PYLE.....	2303

Q

QUARTER.....	2318
QUARTZ.....	2319
Quasar.....	2320

R

Radio Shack.....	3547
RADIX.....	2335
RANDEX.....	2343
RCA.....	2351
RCN.....	4419
Realisitic.....	2354
Realistic.....	2354
REGAL.....	2370
REGENCY.....	2371
REGENT.....	2372
REMBRANDT.....	2375
REOC.....	2379
REPLAYTV.....	2380
RevolutionHD.....	3503
Rhapsody.....	2387
Ricavision.....	2388
RICOH.....	2390
RIO.....	2393
RJ TECHNOLOGY.....	2395
ROGERS.....	4215
Roku.....	2407
ROSEN.....	2413
Rotel.....	2414
ROYAL.....	2419
Runco.....	2423

S

SABA.....	2429
SAE.....	2433
Sampo.....	2446
SAMSONIC.....	2447
Samsung.....	2448
Samsux.....	2449

Samtron.....	2450
SANKY.....	2456
SANSONIC.....	3881
Sansui.....	2458
Santeca.....	4420
Sanyo.....	2462
Sceptre.....	2498
SCIENTIFIC ATLANTA.....	2503
Scimitsu.....	2505
Scotch.....	2506
Scott.....	2508
Sears.....	2514
SEG.....	2522
Selectron.....	4421
Semp.....	2530
SENSORY SCIENCE.....	2533
Sharp.....	2550
SHAW.....	4327
Sheng Chia.....	2554
Sherwood.....	2557
Sherwood Newcastle.....	3766
SHINCO.....	2560
SHINSONIC.....	2562
SHINTOM.....	2563
Shogun.....	2568
SHURE.....	2571
SIERRA I II III.....	3549
SIGNAL.....	2581
Signature.....	2582
Simpson.....	2598
SINGER.....	2599
SIRIUS.....	2602
SKARDIN.....	2607
SKY NETWORK.....	4422
SKYFI.....	4423
Skyworth.....	2631
SL MARX.....	2633
SMARTPARTS.....	4424
Sole.....	2655
Sonic.....	2666
SONIC BLUE.....	2667
Sony.....	2679
Soundesign.....	2684
SOUNDSTORM.....	4425
Sova.....	2690
Soyo.....	2693
Spectra.....	2697
Spectra Vision.....	2699
Spectroniq.....	2701

SPRUCER.....	2702	TELSAT.....	4428
Squareview.....	2703	Tera.....	2957
SSS.....	2708	TERAPIN.....	2958
Stack 9.....	2710	Tevion.....	2962
STANDARD.....	2713	TEXSCAN.....	2965
Star Lite.....	2728	Theta Digital.....	2970
Star Sight.....	2734	Thomas.....	2971
STAR TRAK.....	2720	THOMSON.....	2972
STARCHOICE.....	2716	TIME WARNER.....	3518
STARCOM.....	2722	TIVAX.....	3956
STARGATE.....	2723	TiVo.....	2991
Starlite.....	2728	TMK.....	2994
STS.....	2749	TNCi.....	2996
Studio Experience.....	2750	TOCOM.....	3000
SunBrite.....	2759	Toshiba.....	3021
Sungale.....	2761	Totevision.....	3024
SUNKEY.....	4426	Touch.....	3025
SUPER GUIDE.....	2780	TREDEX.....	3045
Superscan.....	2786	TruTech.....	3467
Supersonic.....	2787	TV86.....	3076
Supra.....	2792	TVA.....	4225
Supremacy.....	2794	TVS.....	3081
Supre-Macy.....	2794		
Supreme.....	2795	U	
SV2000.....	2799	ULTIMATE TV.....	3091
SVA.....	2800	Ultra.....	3093
Sylvania.....	2809	UNIDEN.....	3101
Symphonic.....	2810	UNIKA.....	3102
Syntax.....	2814	UNITECH.....	3105
Systemax.....	2817	UNITED.....	3106
		UNITED CABLE.....	3108
T		Universal.....	3113
Tagar Systems.....	2831	US Logic.....	3124
Tandy.....	2843		
TAO.....	4427	V	
Tascam.....	2848	Vector Research.....	3137
TASHIKO.....	2850	Venturer.....	3143
Tatung.....	2852	VEOS.....	3144
TCL.....	2856	VERIZON.....	3146
Teac.....	2860	Victor.....	3155
Technics.....	2869	VIDEO CIPHER II.....	3156
Technika.....	2870	VIDEO CONCEPTS.....	3157
Technol Ace.....	2875	VIDEO TECH.....	4429
Techview.....	2883	Videocon.....	3163
Techwood.....	2884	VIDEOSONIC.....	3171
Teknika.....	2895	VIDEOTRON.....	3175
Telefunken.....	2914	VIDEOWAY.....	3176
Telerent.....	2927	Vidikron.....	3178
TELEVIEW.....	2939		

Vidtech.....	3179
VIEWSAT.....	3185
Viewsonic.....	3186
VIEWSTAR.....	3187
Viking.....	3188
Viore.....	3192
VISIONETICS.....	3199
VISIONTEC.....	4052
VISTA.....	4430
Vizio.....	3211
Voodoo.....	3215
V-TECH.....	3728

W

Wards.....	3231
Waycon.....	3237
WEB TV.....	4431
Western Digital.....	4620
Westing House.....	3249
Westinghouse.....	3249
Wharfedale.....	3255
White Westinghouse.....	3258
WINEGARD.....	3268
WONDER.....	4432
Wyse.....	3288

X

X10 HOME AUTOMATION.....	4433
X-BOX.....	3295
XENIUS.....	3297
XM RADIO.....	3311
XR-1000.....	3316

Y

Yamaha.....	3326
YAMAKAWA.....	3327

Z

Zenith.....	3356
ZENTECH.....	4031
ZINWELL.....	3365
ZT Group.....	3370



© 2010 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5302 1

October 2010

www.philips.com

RTP/4010