


# Quick start guide

## 1 Charge your battery

This portable DVD player is designed with a built-in lithium battery to supply power to the player when you are on travel.

- 1 Press **OFF** to switch off your DVD player (charging of the DVD player only possible in the power-off mode).

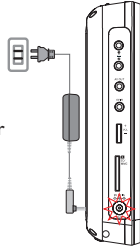

- 2 Connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) to start charging.

→ The **CHG** indicator turns red.  
→ When the battery is fully charged, the indicator turns off.

- 3 Disconnect the power adaptor cord (or the car adaptor) when the CHG indicator turns off.

## 2 Prepare your remote control

Remove the protective plastic tab (first time users only).

→ Your remote control is now ready for use



 
## 3 Enjoy (iPod)

### Connecting and using your iPod player


- 1 Press **iPod** to switch to iPod mode.  
→ "Please connect the iPod" is displayed.



- 2 Push the **iPod EJECT** key to eject the dock for iPod.




- 3 Pull the dock out.

 


- 4 Switch on your iPod player and set:

- 1) "TV Out" to "On";
- 2) "TV Signal" to "PAL";
- 3) "TV Screen" to "Widescreen Off".
- 4) "Fit to Screen" to "Off"
- 5) "Captions" to "On"

(See your iPod user's manual for details.)

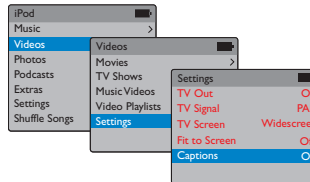

- 5 Put your iPod player in the dock.

 

→ "Connecting to iPod" is displayed. The certification will take about three seconds.  
→ After certification is complete, the display on the DVD and iPod players is as follows:



- 6 Play files in your iPod player. See the user manual for details.

### To remove the iPod player


Remove the iPod player as shown.



### Notes:

- iPod classic, nano and touch are supported.
- To recharge your iPod player, you must connect your DVD player to AC mains (or the car cigarette lighter outlet) and ensure: Your DVD player is in the power-off mode; OR, the DVD player is in the power-on mode and the current source is "iPod".

### 3 Enjoy (Disc operation)

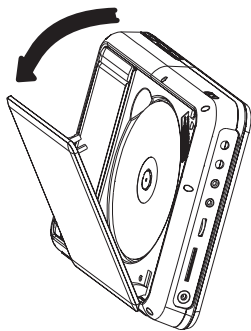

- 1 Press **ON** to switch on the DVD player.  
→ The **POWER** indicator turns on.
- 2 Push **OPEN** to open the disc door.
- 3 Remove the protective card (if any) and load a disc with the label side facing up.
- 4 Close the disc door. Playback will start automatically. If not, press **▶|◀**.
- 5 To stop playback, press **■** on the remote control.


#### Note:

— Once the battery is fully discharged, immediately recharge it (regardless of whether you plan to use the battery or not) in order to maximize the battery life. When the power is low, the battery icon will be shown on the upper-right corner of the TFT for warning.

### 3 Enjoy (Other options)

#### Connecting headphones (not included)

- To enjoy your portable DVD player without disturbing others, you can connect one or more headphones to the **1** or (and) **2** jack on the set.

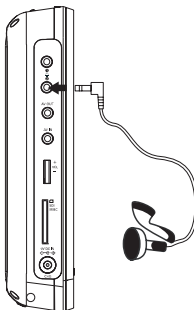

#### Connecting an SD/MMC card

- 1 Insert an SD/MMC card into the **SD/MMC CARD** slot with the metal contact facing down.
- 2 On the DVD player panel, press the source key repeatedly (or **SD/MMC CARD** on the remote) to select the SD/MMC source.
- 3 Play video or audio files stored in the card by selecting the desired file with **▲ ▼** and **OK**.



#### Connecting additional equipment (TV for example)

- 1 Connect the AV OUT socket on the set to the video and audio sockets on a TV as shown directly.
- 2 Switch on the TV and set to the correct video-in channel.  
→ You can consult the owner's manual of your TV. (If your TV does not have Audio and Video inputs, you will need to purchase a RF modulator. Please consult your dealer.)

#### Note:

— When connecting a device to the AV IN socket on the DVD player, you need to press the source key repeatedly on the front panel (or AV on the remote) to select AV IN (AUX).

