Register your product and get support at www.philips.com/welcome

XL590 XL595



# User manual



## Contents

1	Important safety instructions	3
2	Your phone	4
	What is in the box	4
	Overview of the phone	5
	Overview of the base station	6
	Display icons	7
3	Get started	8
	Connect the base station and charger	8
	Install the handset	9
	Configure your phone (country	
	dependent)	9
	Change the remote access PIN code	10
	Charge the handset	10
	Check the battery level	10
	What is standby mode?	10
	Check the signal strength	11
4	Calls	12
	Make a call	12
	End a call	13
	Answer a call	13
	Adjust the earpiece/speaker volume	13
	Mute the microphone	14

	Make a second call	14
	Answer a second call	14
	Switch between two calls	14
	Make a conference call with external	
	callers	14
5	Intercom and conference calls	15
	Make a call to another handset	15
	Transfer a call	15
	Make a conference call	15
6	Text and numbers	17
	Enter text and numbers	17
	Switch between uppercase and	

Turn the speaker on or off

lowercase

Phonebook	18
View the phonebook	18
Search a record	18
Call from the phonebook	18
Access the phonebook during a call	18
Add a record	19
Edit a record	19
Delete a record	19
Delete all records	19
Direct keys	20
Call log	21
Call list type	21
View the call records	21
Save a call record to the phonebook	21
Return a call	21
Delete a call record	22
Delete all call records	22

English

Redial list	23
View the redial records	23
Redial a call	23
Save a redial record to the phone	book 23
Delete a redial record	23
Delete all redial records	23

## 10 Phone settings

Sound settings	24
ECO mode	24
Name the handset	25
Set the backlight of the LCD screen	25
Set the date and time	25
Set the display language	25

11	Alarm clock	26
	Set the alarm	26
	Turn off the alarm	26

12	Services	27
	Call list type	27
	Auto conference	27
	Network type	27
	Auto prefix	27
	Select the recall duration	28
	Dial mode	28
	Register the handsets	28
	Unregister the handsets	29
	Restore default settings	29
13	Network services	30
	Call forward	30
	Call return	30
	Call back service	30
	Hide your identity	31
14	Telephone answering machine	32
	Turn the answering machine on or off	32
	Set the answering machine language	32
	Announcements	32
	Incoming messages (ICM)	33
	Remote access	35
	Behavior of the LED display on the	
	base station	36
15	Technical data	37
16	Notice	38
10	Declaration of conformity	38
	Use GAP standard compliance	38
	Compliance with EMF	38
	Disposal of your old product and	50
	batteries	38
17	Frequently asked questions	40
18	Appendix	41
	Text and number input tables	41
19	Index	43
2	EN	
_		

# 1 Important safety instructions

#### Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.

## Warning

 The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

#### To avoid damage or malfunction

#### Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- · Dispose of used batteries according to the instructions.
- Always use the cables provided with the product.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not allow the product to come into contact with liquids.

- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.

#### About operating and storage temperatures

- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.

# 2 Your phone

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/ welcome.

## What is in the box



Base station (XL590)



Base station (XL595)



Handset\*\*



Charger\*\*



Power adapter\*\*



Line cord\*



Guarantee



User manual



Quick start guide




• \* In some countries, you have to connect the line adapter to the line cord, then plug the line cord into the telephone socket.



• \*\* In multi-handset packs, there are additional handsets, chargers and power adapters.



## Overview of the phone

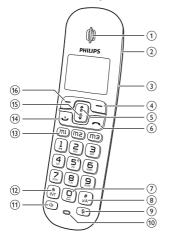

- 1 Earpiece
- 2 Loudspeaker
- 3 Battery door
- 4 🖃
  - Delete text or digits.
  - Cancel operation.

## 5

- Scroll up on the menu.
- Increase the earpiece/speaker volume.
- Access the phonebook.

## 6 -

- End the call.
- Exit the menu/operation.

## (7) g

- Press to enter a space during text editing.
- Press and hold to lock the keypad.

#### 8 # a/A

- Press and hold to enter a pause.
- Press and hold to switch to uppercase and lowercase during editing.

## 9 6

Mute/unmute the microphone.

(10) Microphone

## (1) ⊲»

- Turn the speaker phone on/off.
- Make and receive calls through the speaker.

## 12 **\***

Press and hold to make an intercom call (for multi handset version only).

## (13) M1/M2/M3

Save the call records for quick dial.

- <u>14</u> "
  - Make and receive calls.
  - Recall key


## 15 🚦

- Scroll down on the menu.
- Decrease the earpiece/speaker volume.
- Access the call log.
- (16) 🖃
  - Access the main menu.
  - Confirm selection.
  - Enter the options menu.
  - Select the function displayed on the handset screen directly above the key.

## Overview of the base station


XL595

#### XL590

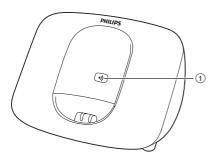

#### (1 •))

- Find handsets.
- Enter registration mode.

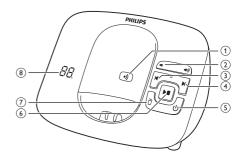

#### (1 •))

- Find handsets.
- Enter the registration mode.

#### ② ●/●》

Decrease/increase the speaker volume.

#### 3 ₩

Skip backward during playback.

## **4 N**

Skip forward during playback.

## (5) U

Turn the answering machine on or off.

## 6

- Play messages.
- Stop messages playback.

#### 7 0

Delete the current playback message.

#### 8 Message counter

Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

lcon	Descriptions
	When the handset is off the base station/ charger, the bars indicate the battery level (from full to low). When the handset is on the base station/ charger, the bars keep scrolling until charging is complete.
a 	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
h h '	It displays the link status between the handset and base station. The more bars are shown, the better the signal strength is.
(+	It remains steadily on when browsing incoming calls in the call log.
(*	It indicates an outgoing call in the redial list.
Cx	It flashes when there is a new missed call or when browsing new missed calls. It remains steadily on when the missed calls in the call log are read.
¢	It flashes when receiving an incoming call. It remains steadily on when you are in a call.
•	The speaker is on.
9	The alarm clock is activated.
x	The ringer is off.
	Answering machine: it flashes when there is a new message. It displays when the telephone answering machine is turned on.
	It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message.

- The silent mode is activated.
- The **ECO** mode is activated.

# 3 Get started

#### Caution

• Make sure that you have read the safety instructions in the 'Important safety instruction' section before you connect and install your handset.

# Connect the base station and charger


## Varning

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or underside of the phone.
- Use only the supplied power adapter to charge the batteries.


#### - Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, make sure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by DSL interference. For further information on DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.

- 1 Connect each end of the power adapter to:
  - the DC input jack at the back of the base station;
  - the power socket on the wall.
- 2 Connect each end of the line cord to:
  - the telephone socket at the back of the base station;
  - the telephone socket on the wall.

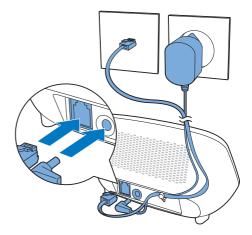


- **3** Connect each end of the power adapter to (for multi handset versions only):
  - the DC input jack at the back of the extra handset charger.
  - the power socket on the wall.

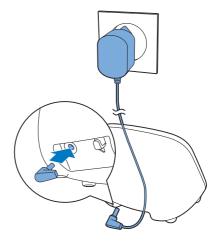

## Install the handset

The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

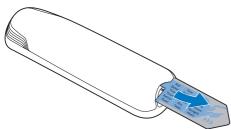

#### Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- · Risk of decreased battery life! Never mix different brands or types of batteries.

#### Note

- · Charge the batteries for 8 hours before first use.
- · If the handset becomes warm when the batteries are charging, it is normal.



- · Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

## Configure your phone (country dependent)

- When using your phone for the first time, you see a welcome message.
- Press [OK].

## Set the country/language

Select your country/language, then press [OK] to confirm.

→ The country/language setting is saved.

#### Note

 The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time.

To re-set the language, see the following steps.

- 1 Select [Menu] > [Phone setup] > [Language], then press [OK] to confirm.
- Select a language, then press **[OK]** to confirm.
  - → The setting is saved.

## Set the date and time

## Tip

- To set the date and time later, press [Back] to skip this setting.
- Select [Menu] > [Phone setup] > [Date & 1 time], then press [OK] to confirm.
- Press the numeric buttons to enter the date, then press [OK] to confirm.
  - → The time setting menu is displayed on the handset
- 3 Press the numeric buttons to enter the time

#### Note

- If the time is in 12-hour format, press 🗊 / 🗟 to select [AM] or [PM].
- Press [OK] to confirm.

## Change the remote access PIN code



- · The default answering machine remote access PIN code is 0000 and it is important to change it to ensure the security.
- 1 Select [Menu] > [Answ. Machine] > [Remote access] > [Change PIN], then press [OK] to confirm.
- 2 Enter the old PIN, then press [OK] to confirm.
- 3 Enter the new PIN code, then press [OK] to confirm.
- 4 Enter the new PIN code again, then press [Save] to confirm.
  - → The setting is saved.


## Charge the handset

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

- ➡ The handset starts charging.
- Note
- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.

You can activate or deactivate the docking tone (see 'Set the docking tone' on page 24). Your phone is now ready to use.

## Check the battery level

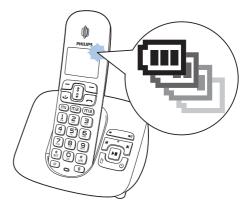

The battery icon displays the current battery level.

	When the handset is off the base		
	station/charger, the bars indicate		
	the battery level (full, medium and		
	low).		
	When the handset is on the base		
	station/charger, the bars flash until		
	charging is complete.		
a	The empty battery icon flashes.		
	The battery is low and needs		
	recharging.		

If you are on the phone, you hear warning tones when the batteries are almost empty. The handset turns off when the batteries are completely empty.

## What is standby mode?

Your phone is in standby mode when it is idle. The standby screen displays the handset name, handset number, date and time.

## Check the signal strength

lu –	The number of bars indicates the
h	link status between the handset
1	and base station.The more
-	bars are shown, the better the
	connection is.

- Make sure the handset is linked to the base station before you make or receive calls and carry out the functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset closer to the base station.

# 4 Calls

## - Note

• When the power fails, the phone cannot access emergency services.

## Ӿ Тір

 Check the signal strength before you make a call or when you are in a call (see 'Check the signal strength' on page 11).

## Make a call

You can make a call in these ways:

- Quick call
- Quick call through the direct keys
- Dial before you call
- Redial the most recent number
- Call from the redial list.
- Call from the phonebook list
- Call from the call log

## Quick call

- 1 Press 🗳 or ⊄»,
- 2 Dial the phone number.
  - $\hookrightarrow$  The number is dialed out.
  - → The duration of your current call is displayed.

## Call through the direct key

To make a quick call from the record pre-saved in the direct key, press ♣ or ▷, then press M1, M2 or M3.

 $\hookrightarrow$  The number is dialed out.

## 🔆 Тір

• For information of how to set the direct keys, see the next section.

#### Set the direct keys

- Enter the number, the press and hold M1, M2 or M3.
- 2 Enter the name, then press [OK] to confirm.
- 3 Edit the number if necessary, then press [Save] to confirm.
- 4 Select a ring tone, then press **[OK]** to confirm.
  - $\mapsto$  The direct key is set.

#### - Note

 If there is already a record saved in the direct key, you need to confirm whether you want to replace the old record with the new one.

## Dial before you call

- 1 Dial the phone number
  - To erase a digit, press [Clear].
  - To enter a pause, press and hold #.
- Press <sup>L</sup> or ⊲» to dial out the call.

## Call from the redial list

You can make a call from the redial list (see 'Redial a call' on page 23).

#### Redial the most recent number

- 1 Press [Redial].
  - → The redial list is displayed and the most recent number is highlighted.
- 2 Press 🛎 .
  - → The most recent number is then dialed out.

## Call from the phonebook

You can make a call from the phonebook list (see 'Call from the phonebook' on page 18).

## Call from the call log

You can return a call from the received or missed call log (see 'Return a call' on page 21).

```
- Note
```

• The call timer displays the talk time of your current call.

#### Note

 If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

## End a call

You can end a call in these ways:

- Press 🚗 ; or
- Place the handset to the base station or charging cradle.

## Answer a call

When there is an incoming call, the phone rings and the LCD backlight flashes. Press  $\clubsuit$  or  $\triangleleft$  to answer the call.

## **Warning**

• When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.

## - Note

• The caller ID service is available if you have registered to the caller ID service with your service provider.

## 🔆 Тір

 When there is a missed call, a notification message appears.

## Turn off the ringer for an incoming call

When the phone rings, press [Silent].

# Adjust the earpiece/speaker volume

Press  $\mathbf{a}$  /  $\mathbf{b}$  to adjust the volume during a call.

➡ The earpiece/speaker volume is adjusted and the phone is back to the call screen. English

## Mute the microphone

- 1 Press ♀ during a call.
  - → The handset displays [Mute on].
  - → The caller cannot hear you, but you can still hear his voice.
- 2 Press  $\mathfrak{P}$  again to unmute the microphone.
  - → You can now communicate with the caller.

## Turn the speaker on or off

Press 와.

## Make a second call



- This service is network dependent.
- Press <sup>s</sup> during a call.
   → The first call is put on hold.
- 2 Dial the second number.
  - → The number displayed on the screen is dialed out.

## Answer a second call



• This service is network dependent.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press 🗳 and 🚅 to answer the call.
  - → The first call is put on hold, and you are now connected to the second call.
- 2 Press and 1 to end the current call and answer the first call.

## Switch between two calls

You can switch your calls in these ways:

- Press L and 2; or
- Press [Option] and select [Switch calls], then press [OK] again to confirm.
  - → The current call is put on hold, and you are now connected to the other call.

# Make a conference call with external callers

## - Note

• This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, you can make a conference call in these ways:

- Press ♣, then 🕽 ; or
- Press **[Option]**, select **[Conference]** and then press **[OK]** again to confirm.
  - → The two calls are combined and a conference call is established.

# English

# 5 Intercom and conference calls

An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between you, another handset user and the outside callers.

# Make a call to another handset



 If the base station only has 2 registered handsets, press and hold <sup>\*</sup><sub>NY</sub> to make a call to another handset.

- 1 Press and hold \*
  - → The handsets available for intercom are displayed.
- 2 Select a handset number; then press [OK] to confirm.
  - → The selected handset rings.
- Press <sup>e</sup> on the selected handset.
   → The intercom is established.
- 4 Press [Cancel] or to cancel or end the intercom call.

#### Note

• If the selected handset is busy, **[Busy]** is displayed on the handset screen.

## While you are on the phone

You can go from one handset to another during a call:

- 1 Press and hold \*
  - $\mapsto$  The current caller is put on hold.
- 2 Select a handset number; then press [OK] to confirm.
  - → Wait for the other side to answer your call.

#### Switch between calls

Press **[Extern]** to switch between the internal and external call.

## Transfer a call

- Press and hold 🔭 during a call.
  - → The handsets available for intercom are displayed.
- 2 Select a handset number, then press [OK] to confirm.
- **3** Press when the other side answers your call.
  - → The call is now transferred to the selected handset.

## Make a conference call

A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

#### During an external call

- Press and hold <sup>\*</sup>
   to initiate an internal call.
  - → The handsets available for intercom are displayed.
  - $\mapsto$  The external caller is put on hold.
- 2 Select or enter a handset number, then press [OK] to confirm.
  - → The selected handset rings.
- Press <sup>e</sup> on the selected handset.
   → The intercom is established.
- 4 Press [Conf].
  - You are now in a 3-way conference call with an external call and a selected handset.
- 5 Press  $\frown$  to end the conference call.

#### - Note

 Press <sup>®</sup> to join an ongoing conference with another handset if [Services] > [Conference] is set to [Auto].

#### During the conference call

- Press [Int.] to put the external call on hold and go back to the internal call.
  - $\mapsto$  The external call is put on hold.
- Press **[Conf]** to establish the conference call again.



• If a handset hangs up during the conference call, the other handset remains connected to the external call.

# 6 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

## Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press [Clear] to delete the character.
- **3** Press **Q** to add a space.

## 🔆 Тір

 For further information on the text and number input, see the chapter 'Appendix'.

# Switch between uppercase and lowercase

By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press and hold  $\frac{#}{aA}$  to switch between the uppercase and lowercase letters.

# 7 Phonebook

This phone has a phonebook that stores up to 200 records. You can access the phonebook from the handset. Each record can have a name up to 14 characters long and a number up to 24 digits long.

There are 2 direct access memories (keys  $\underline{l}$  and  $\underline{a}_{c}$ ). Depending on your country, keys  $\underline{l}$  and  $\underline{a}_{c}$  are preset to the voice mail number and information service number of your service provider respectively. When you press and hold on the key in standby mode, the saved phone number is dialed automatically.

## View the phonebook

#### - Note

- You can view the phonebook on one handset only each time.
- 1 Press a or select [Menu] > [Phonebook] > [View] > [OK] to access the phonebook list.
- 2 Press â / ₽ to scroll through the phonebook entries.

## Search a record

You can search the phonebook records in these ways:

- Scroll the contact list.
- Enter the first character of the contact.

#### Scroll the contact list

- 1 Press a or select [Menu] > [Phonebook] > [View] > [OK] to access the phonebook list.
- 2 Press â / ₺ to scroll through the phonebook list.

#### Enter the first character of a contact

- Press a or select [Menu] > [Phonebook] > [View] > [OK] to access the phonebook list.
- 2 Press the alphanumerical key that matches the character.
  - → The first record that starts with this character is displayed.

## Call from the phonebook

- Press a or select [Menu] > [Phonebook] > [View] > [OK] to access the phonebook list.
- 2 Select a contact in the phonebook list.
- 3 Press to make the call.

# Access the phonebook during a call

- 1 Press [Option] and select [Phonebook].
- 2 Press [OK] to confirm.
- 3 Select a contact, then press [OK] to confirm.
  - → The number is displayed.

# English

## Add a record

## - Note

- If your phonebook memory is full, the handset displays a notification message, Delete some records to add new ones.
- 1 Select [Menu] > [Phonebook] > [Add new], then press [OK] to confirm.
- 2 Enter the name, then press [OK] to confirm.
- 3 Enter the number, then press [Save] to confirm
  - └→ Your new record is saved.

## 🔆 Тір

Press and hold <sup>#</sup><sub>a/A</sub> to insert a pause.

#### - Note

• The phonebook overwrites the old number with the new number.

## 🔆 Тір

• Press [Clear] to delete the character. Press 😨 / 🖶 to move the cursor left and right.

## Edit a record

- 1 Select [Menu] > [Phonebook] > [Edit], then press [OK] to confirm.
- 2 Edit the name, then press [OK] to confirm.
- 3 Edit the number, then press [Save] to confirm.
  - ➡ The record is saved.

## Delete a record

- 1 Select [Menu] > [Phonebook] > [Delete].
- 2 Select a contact, then press [OK] to confirm.
  - → The handset displays a confirmation request.
- 3 Press [OK] to confirm.

## Delete all records

- Select [Menu] > [Phonebook] > [Delete all], then press [OK] to confirm.
  - → The handset displays a confirmation request.
- 2 Press [OK] to confirm.
  - → All records are deleted.

## **Direct keys**

The phone features 3 direct keys to store the emergency phone numbers or numbers you call frequently.

## Set the direct keys

- 1 Enter the number, then press and hold M1, M2 or M3.
- 2 Enter the name, then press [OK] to confirm.
- 3 Edit the number if necessary, then press [Save] to confirm.
- 4 Select a ring tone, then press [OK] to confirm.
  - $\hookrightarrow$  The direct key is set.

#### - Note

• If there is already a record saved in the direct key, you need to confirm whether you want to replace the old record with the new one.

# English

# 8 Call log

The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider.

Your phone can store up to 100 call records. The call log icon on the handset flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.

#### - Note

• Make sure the number in the call list is valid before you can call back directly from the call list.

The icons shown on the screen tell you whether they are missed/received calls.

lcons	Description	
(+	It remains steadily on when browsing	
	incoming calls in the call log.	
Cx.	It flashes when there is a new missed	
	call or when browsing new missed calls.	
	It remains steadily on when the missed	
	calls in the call log are read.	

## Call list type

You can view all incoming calls or missed calls from this menu.

## Select the call list type

- 1 Select [Menu] > [Services] > [Call list type], then press [OK] to confirm.
- 2 Select an option, then press [OK] to confirm.
  - → The setting is saved.

## View the call records

- 1 Press 🛃
  - $\hookrightarrow$  The incoming call log is displayed.
- 2 Select a record, then press [Option] > [View] to view the available information.

# Save a call record to the phonebook

- 1 Press 🛃
  - $\rightarrow$  The incoming call log is displayed.
- 2 Select a record, then press [Option].
- 3 Select [Save number], then press [OK] to confirm.
- 4 Enter and edit the name, then press [OK] to confirm.
- 5 Enter and edit the number, then press [Save] to confirm.
  - → The record is saved.

## Return a call

- 1 Press 🛃
- Select a record on the list.
- 3 Press 🕹 to make the call.

## Delete a call record

- Press ♥.
   → The incoming call log is displayed.
- 2 Select a record, then press [Option] to confirm.
- 3 Select [Delete], then press [OK] to confirm
  - → The handset displays a confirmation requests.
- 4 Press [OK] to confirm.
  - $\hookrightarrow$  The record is deleted.

## Delete all call records

- 1 Press 🛃
  - $\mapsto$  The incoming call log is displayed.
- 2 Press [Option].
- **3** Select [Delete all], then press [OK] to confirm.
  - → The handset displays a confirmation request.
- 4 Press [OK] to confirm.
  - → All records are deleted.

# 9 Redial list

The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 40 redial records.

## View the redial records

Press [Redial].
 → The dialed calls list is displayed.

## Redial a call

- 1 Press [Redial].
- 2 Select the record you want to call. Press ...
   → The number is dialed out.

# Save a redial record to the phonebook

- 1 Press [Redial] to enter the list of dialed calls.
- 2 Select a record, then press [Option] to confirm.
- 3 Select [Save number], then press [OK] to confirm.
- 4 Enter and edit the name, then press [OK] to confirm.
- 5 Enter and edit the number, then press [Save] to confirm.
  - $\mapsto$  The record is saved.

## Delete a redial record

- **1** Press **[Redial]** to enter the list of dialed calls.
- 2 Select a record, then press [Option] to confirm.
- 3 Select [Delete], then press [OK] to confirm.
  - → The handset displays a confirmation request.
- 4 Press [OK] to confirm.
  - → The record is deleted.

## Delete all redial records

- 1 Press [Redial] to enter the list of dialed calls.
- 2 Select [Option] > [Delete all], then press [OK] to confirm.
  - → The handset displays a confirmation request.
- Press [OK] to confirm.
   → All records are deleted.

# 10 Phone settings

You can customize the settings to make it your own phone.

## Sound settings

#### Set the handset's ringtone volume

You can select among 5 ringtone volume levels, [Progressive] or [Off].

- Select [Menu] > [Phone setup] > [Sounds] > [Ring volume], then press [OK] to confirm.
- 2 Select a volume level, then press [OK] to confirm.
  - → The setting is saved.

## Set the handset's ringtone

You can select from 10 ringtones.

- Select [Menu] > [Phone setup] > [Sounds] > [Ring tones], then press [OK] to confirm.
- 2 Select a ringtone, then press [OK] to confirm.
  - → The setting is saved.

## Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Select [Menu] > [Phone setup] > [Sounds] > [Key tone], then press [OK] to confirm.
- 2 Select [On]/[Off], then press [OK] to confirm.
  - → The setting is saved.

## Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger.

- Select [Menu] > [Phone setup] > [Sounds]
   [Docking tone], then press [OK] to confirm.
- 2 Select [On]/[Off], then press [OK] to confirm.
  - $\hookrightarrow$  The setting is saved.

## Set the hearing aid compatibility

You can use the phone with a hearing aid device.

- Select [Menu] > [Phone setup] > [Sounds] >[Hearing aid], then press [OK] to confirm.
- 2 Select [On]/[Off], then press [OK] to confirm.
  - → The setting is saved.

## ECO mode

The **ECO** mode reduces the transmission power of the handset and base station when you are on a call or when the phone is in standby mode.

- Select [Menu] > [Phone setup] > [Eco mode], then press [OK] to confirm.
- 2 Select [On]/[Off], and press [OK] to confirm.
  - → The setting is saved.
  - $\mapsto$   $\blacksquare$  is displayed in standby mode.

## - Note

• When the ECO mode is set to [On], the connection range between the handset and the base station can be reduced.

## Name the handset

The name of the handset can be up to 14 characters. It is displayed on the handset screen in standby mode.

- 1 Select [Menu] > [Phone setup] > [Phone name], then press [OK] to confirm.
- 2 Enter or edit the name. To erase a character, select [Clear].
- 3 Press [OK] to confirm.
  - → The setting is saved.

# Set the backlight of the LCD screen

You can set the backlight of the LCD screen and keypad flashing on or off when the phone rings.

- 1 Select [Menu] > [Phone setup] > [Visual alert], then press [OK] to confirm.
- 2 Select [Flashing on]/[Flashing off], then press [OK] to confirm.
  - → The setting is saved.

## Set the date and time

For information, see 'Set the date and time' in the Get started section.

## Set the display language

#### - Note

- This feature only applies to models with multiplelanguage support.
- Languages available vary from country to country.
- 1 Select [Menu] > [Phone setup] >
  [Language], then press [OK] to confirm.
- 2 Select a language, then press **[OK]** to confirm.
  - → The setting is saved.

# 11 Alarm clock

Your phone has a built-in alarm clock. Check the information below to set your alarm clock.

## Set the alarm

- 1 Select [Menu] > [Alarm], then press [OK] to confirm.
- 2 Select [On once] or [On daily], then press [OK] to confirm.
- **3** Enter an alarm time, then press **[OK]** to confirm.
  - → The alarm is set and ⊡ is displayed on the screen.



• Press 🕫 / 🖶 to switch between [AM] / [PM].

## Turn off the alarm

#### When the alarm rings

Press any key to turn off the alarm.

#### Before the alarm rings

Select [Menu] > [Alarm] > [Off], then press [OK] to confirm.

 $\hookrightarrow$  The setting is saved.

# English

# 12 Services

The phone supports a number of features that help you handle and manage the calls.

## Call list type

You can view all incoming calls or missed calls from this menu.

#### Select the call list type

- 1 Select [Menu] > [Services] > [Call list type], then press [OK] to confirm.
- 2 Select an option, then press [OK] to confirm.
  - → The setting is saved.

## Auto conference

To join an external call with another handset, press  $\overset{\mathbf{R}}{\bullet}$  .

#### Activate/Deactivate auto conference

- 1 Select [Menu] > [Services] > [Conference], then press [OK] to confirm.
- 2 Select [Auto]/[Off], then press [OK] to confirm.
  - → The setting is saved.

## Network type

## - Note

- This feature only applies to models with network type support.
- 1 Select [Menu] > [Services] > [Network type], then press [OK].
- 2 Select a network type, then press [OK].
   → The setting is saved.

## Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out.



 The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

## Set auto prefix

- 1 Select [Menu] > [Services] > [Auto prefix], then press [OK] to confirm.
- 2 Enter the detect number, then press [OK] to confirm.
- 3 Enter the prefix number; then press [OK] to confirm.
  - → The setting is saved.

te

• To enter a pause, press and hold #.

#### Note

• If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.

#### - Note

• The feature is unavailable if the dialed number starts with \* and #.

## Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: [Short], [Medium] and [Long]. The number of available options varies with different countries. For details, consult your service provider:

- Select [Menu] > [Services] > [Recall time], then press [OK] to confirm.
- 2 Select an option, then press [OK] to confirm.
  - → The setting is saved.

## Dial mode



• This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

## Set the dial mode

- 1 Select [Menu] > [Services] > [Dial mode], then press [OK] to confirm.
- 2 Select a dial mode, then press [OK] to confirm.
  - → The setting is saved.

## - Note

 If your phone is in pulse dial mode, press MT during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

## Register the handsets

You can register additional handsets to the base station. The base station can register up to 4 handsets.

#### Auto registration

Place the unregistered handset on the base station.

- → The handset detects the base station and registers automatically.
- ➡ Registration is complete in less than two minutes. The base station automatically assigns a handset number to the handset.

# English

## Manual registration

If auto registration fails, register your handset manually to the base station.

- 1 Select [Menu] > [Services] > [Register], then press [OK] to confirm.
- 2 Press and hold •)) on the base station for 5 seconds.

#### Note

• For models with an answering machine, you hear a confirmation beep.

- 3 Press [OK] to confirm.
- 4 Enter the system PIN. Press [Clear] to make corrections.
- 5 Press [OK] to confirm the PIN.
  - → Registration is completed in less than 2 minutes. The base automatically assigns a handset number to the handset.

#### - Note

 If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.

## - Note

The preset PIN is 0000. No change can be made on it.

## Unregister the handsets

- If two handsets share the same base station, you can unregister a handset with another handset.
- 2 Select [Menu] > [Services] > [Unregistered], then press [OK] to confirm.
- 3 Enter the system PIN. Press [Clear] to make corrections.
- 4 Select the handset name to be unregistered.
- 5 Press [OK] to confirm.
  - → The handset is unregistered.

## 🔆 Тір

• The handset number displays beside the handset name in standby mode.

## Restore default settings

You can reset your phone settings to the original factory settings.

- Select [Menu] > [Services] > [Reset], then press [OK] to confirm.
  - → The handset displays a confirmation request.
- 2 Press [OK] to confirm.
  - ➡ All settings are reset.

## 13 Network services

The network services are network and country dependent. Contact your service provider for more information.

#### - Note

 For the network services to work properly, Make sure that the activation and/or deactivation codes are correctly entered.

## Call forward

You can divert your calls to another phone number. You can select among 3 options:

- [Call forward]: divert all incoming calls to another number.
- [Call fwd busy]: divert calls when the line is busy.
- [Call fwd unans]: divert calls when no one answers.

## Activate/Deactivate call forward

- 1 Select [Menu] > [Netw.services] > [Call forward]/[Call fwd busy]/[Call fwd unans]
- 2 Select [Activate]/[Deactivate], then press [OK] to confirm.
- 3 Enter the telephone number, then press [OK] to confirm.
  - → The setting is saved .

## Edit the activation/deactivation code

You can edit the prefix and suffix to the call forward codes.

- 1 Select [Menu] > [Netw.services] > [Call forward]/[Call fwd busy]/[Call fwd unans], then press [OK] to confirm.
- 2 Select[Change code] , then press [OK].
- 3 Then you can either
  - Select [Activate] > [Prefix]/[Suffix], then press [OK] to confirm; or
  - Select [Deactivate], then press [OK] to confirm.
- 4 Enter or edit the code, then press [OK] to confirm.
  - → The setting is saved.

## Call return

You can check the most recent unanswered call.

#### Call the return service centre

Select [Menu] > [Netw.services] > [Call return] > [Call], then press [OK] to confirm. → Your call is made to the service centre.

# Edit the call return service centre number

- Select [Menu] > [Netw.services] > [Call return] > [Settings], then press [OK] to confirm.
- 2 Enter or edit the number, then press [OK] to confirm.
  - → The setting is saved.

## Call back service

The call back service notifies you when a party you have tried to call becomes available. You can select to cancel this service from the menu after you have activated it from the service provider.

#### Cancel the call back service

Select [Menu] > [Netw.services] > [Cancel call bk] > [Call], then press [OK] to confirm.

→ A call is made to the service centre to cancel the call back option.

# Edit the cancel call back service number

- 1 Select [Menu] > [Netw.services] > [Cancel call bk] > [Settings], then press [OK] to confirm.
- 2 Enter or edit the number, then press [OK] to confirm.
  - → The setting is saved.

## Hide your identity

You can hide your identity from the caller.

#### Activate ID withheld

- Select [Menu] > [Netw.services] > [Withhold
- ID] > [Activate], then press [OK] to confirm.
  - → When you make a call to your contact, your ID is withheld.

## Edit the ID withheld code

- 1 Select [Menu] > [Netw.services] >
  [Withhold ID] > [Settings], then press
  [OK] to confirm.
- 2 Enter or edit the number, then press [OK] to confirm.
  - → The setting is saved.

## 14 Telephone answering machine

#### Note

Available only for XL595.

Your phone includes a telephone answering machine that records unanswered calls when it is on. By default, the answering machine is set to the **[Record also]** mode. You can also access the answering machine remotely and change the settings through the answering machine menu on the handset.

The LED indicator on the base station lights up when the answer machine is on.

# Turn the answering machine on or off

You can turn the answering machine on or off through the base station or the handset.

#### Through the handset

- Select [Menu] > [Answ. Machine] > [Voice answer], then press [OK] to confirm.
- 2 Select [Answer only]/[Record also]/[Off], then press [OK] to confirm. → The setting is saved.

#### Through the base

Press  $\bigcup$  to turn the answering machine on or off in standby mode.



 When the answering machine is switched on, it answers incoming calls after a certain number of rings based on the ring delay setting.

# Set the answering machine language

Note

 This feature only applies to models with multiplelanguage support.

The answering machine language is the language for the announcements.

- Select [Menu] > [Answ. Machine] > [Voice language], then press [OK] to confirm.
- 2 Select a language, then press [OK] to confirm.
  - → The setting is saved.

## Announcements

The announcement is the message your caller hears when the answering machine picks up the call. The answering machine has 2 default announcements: the **[Record also]** mode and **[Answer only]** mode.

#### Record an announcement

The maximum length of the announcement you can record is 3 minutes. The newly recorded announcement automatically replaces the old one.

- 1 Select [Menu] > [Answ. Machine] > [Announcement], then press [OK] to confirm.
- 2 Select [Record also] or [Answer only], then press [OK] to confirm.
- 3 Select [Record], then press [OK] to confirm.
- 4 Recording starts after the beep.
- 5 Press [OK] to stop recording or the recording stops after 3 minutes.
  - → You can listen to the newly recorded announcement on the handset.

#### Note

To restore the default announcement, delete your current announcement.

#### Note

Make sure that you speak close to the microphone when you record an announcement.

#### Listen to the announcement

- Select [Menu] > [Answ. Machine] > [Announcement], then press [OK] to confirm.
- Select [Record also] or [Answer only], then press [OK] to confirm.
- 3 Select [Play], then press [OK] to confirm. → You can listen to the current
  - announcement.

#### Note

· You can no longer listen to the announcement when you pick up an incoming call.

#### Restore the default announcement

- 1 Select [Menu] > [Answ. Machine] > [Announcement], then press [OK] to confirm.
- 2 Select [Record also] or [Answer only], then press [OK] to confirm.
- 3 Select [Set default], th en press [OK] to confirm.
  - → The handset displays a confirmation request.
- Press [OK] to confirm.
  - → The default announcement is restored.

#### Note

The default announcement cannot be deleted.

## Incoming messages (ICM)

Each message can be up to 3 minutes long. When you receive new messages, the new message indicator flashes on the answering machine and the handset displays a notification message.

#### Note

If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly.



#### Note

· If the memory is full, the answering machine switches to [Answer only] automatically. Delete old messages to receive new ones.

#### Listen to the incoming messages

You can listen to the incoming messages in the sequence they are recorded.

#### From the base

- To start/Stop listening, press ▶■.
- To adjust the volume, press 🔹 / 📣.
- To play the previous message/replay the current message, press **K**.
- To play the next message, press ▶.
- To delete the current message, press ₫.

#### - Note

• No deleted messages can be recovered.

#### From the handset

Select [Menu] > [Answ. Machine] > [Play], then press [OK] to confirm.

- New messages start playing. Old messages start playing if there is no new message.
- Press [Back] to stop listening.
- Press [Option] to enter the options menu.
- Press â / 🕏 to increase/decrease the volume.

#### Delete an incoming message

#### From the base

Press 🛱 when you listen to the message.

→ The current message is deleted.

#### From the handset

- 1 When you listen to the message, press [Option] to enter the options menu.
- 2 Select [Delete], then press [OK] to confirm.
  - $\mapsto$  The current message is deleted.

#### Delete all old incoming messages

#### From the base

Press and hold 🛱 in standby mode.

→ All old messages are permanently deleted.

#### From the handset

- Select [Menu] > [Answ. Machine] > [Delete all], then press [OK] to confirm.
  - → The handset displays a confirmation request.
- 2 Press [OK] to confirm.
  - → All old messages are permanently deleted.



You can only delete the read messages. No deleted messages can be recovered.

## Set the ring delay

You can set the number of times the phone rings before the call goes to the answering machine.

- Select [Menu] > [Answ. Machine] > [Ring delay], then press [OK] to confirm.
- 2 Select a new setting, then press [OK] to confirm.
  - → The setting is saved.

#### - Note

• Make sure that the answering machine is switched on before this feature can be applied.

## 🔆 Tip

 When you access the answering machine remotely, you are recommended to set the ring delay to[Toll saver] mode. This is a cost effective way to manage your messages. When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings.

### Remote access

You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code.

### - Note

• The remote access PIN code is the same as your system PIN. The preset PIN is 0000.

### Change the PIN code

- Select [Menu] > [Answ. Machine] > [Remote access] > [Change PIN], then press [OK] to confirm.
- 2 Enter the old PIN, then press **[OK]** to confirm.
- 3 Enter the new PIN code, then press [OK] to confirm.
- 4 Enter the new PIN code again, then press [Save] to confirm.
  - → The setting is saved.

### Activate/deactivate the remote access

You can allow or block remote access to the answering machine.

- Select [Menu] > [Answ. Machine] > [Remote access], then press [OK] to confirm.
- 2 Select [Activate]/[Deactivate], then press [OK] to confirm.
  - $\mapsto$  The setting is saved.

## Access the answering machine remotely

- **1** Make a call to your home number with a touch tone phone.
- 2 Enter # when you hear the announcement.
- 3 Enter your PIN code.
  - You now have access to your answering machine, and you can listen to the new messages.

### - Note

- You have 2 chances to enter the correct PIN code, before your phone hangs up.
- 4 Press a key to carry out a function. See the 'Remote access commands' in the following table for a list of available functions.

### Note

• When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds.

#### Remote access commands

Key	Function
1	Repeat the current or listen to the
	previous message.
2	Listen to messages.
3	Skip to the next message.
6	Delete the current message.
7	Switch the answering machine on. (not available when you listen to the messages).
8	Stop listening to the message.
9	Switch the answering machine off. (not available when you listen to the messages).

## Behavior of the LED display on the base station

The table below shows you the current status with different LED display behavior on the base station.

I FD	Answering	Message status
display	machine status	
No display	Off	
	On	No message
I'I'I'	On	It is steady on when there are 3 new messages.
	On	It flashes when the memory is full.
Ĩ	On	It keeps scrolling when the answering machine is recording the incoming message or announcement.
Ľ,	On	Press ● / ●) to display the volume level.
RA	On	It flashes when you access the answering machine menu from the handset, the answering machine remotely, or listen to messages from the handset.

## 15 Technical data

### Display

Amber LCD backlight

### General telephone features

- Dual mode caller name & number identification
- Conference call and voicemails
- Intercom
- Maximum talk time: 20 hours

#### Phonebook list, Redial list, Call log and Memory keys

- Phonebook list with 200 entries
- Redial list with 40 entries
- Call log with 100 entries
- Memory keys with 3 entries

### Battery

- HFR: 2 × AAA Ni-MH 1.2V 650mAh rechargeable batteries
- SANIK: 2 × AAA Ni-MH 1.2V 650mAh rechargeable batteries

### Adapter

Base and charger

- Philips, S003PB0600050, input: 100-240Vac, 50-60Hz 0.2A, output 6V 500mA
- Philips, SSVV-1920-UK-2, input: 100-240Vac, 50-60Hz 0.2A, output: 6V 500mA

### Power consumption

 Power consumption at standby mode: around 0.60W (XL590); 0.65W (XL595)

### Weight and dimensions (XL590)

- Handset: 160 grams
- 182.91 × 53.62 × 34.84 mm (H × W × D)
- Base: 138 grams
- 89.2 × 140.13 × 87.86 mm (H × W × D)
- Charger: 84 grams
- 89.92 × 94.96 × 89.39 mm (H × W × D)

### Weight and dimensions (XL595)

- Handset: 160 grams
- 182.91 x 53.62 x 34.84 mm (H x W x D)
- Base: 166 grams
- 89.2 × 140.13 × 87.86 mm (H × W × D)
- Charger: 84 grams
- 89.92 × 94.96 × 89.39 mm (H × W × D)

## 16 Notice

## Declaration of conformity

Hereby Philips Consumer Lifestyle, declares that the XL590/XL595 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c. philips.com.

This product has been designed, tested and manufactured according the European R&TTE directive 1999/5/EC.

## Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions. then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station. put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions

## Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

# Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

## 17 Frequently asked questions

#### No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays [Unregister], put the handset on the base until the signal bar appears..

## 🔆 Тір

• For further information, see chapter 'Service', section 'Register the handsets'.

## If I fail to register the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.

#### No dialing tone

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

### No docking tone

- The handset is not placed properly on the base station/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

## I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

### The handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones from your dealer.

#### No display

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

### Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

### The handset does not ring.

Make sure the handset ringtone is turned on. **The caller ID does not display.** 

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

### - Note

 If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

# 18 Appendix

## Text and number input tables

Key Upper case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish/ Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian/Lithuanian/Estonian/ Lativian/Bulgarian)

0 Space.0,/:;"'!;?;\*+-%\^~| 1 1@\_#=<>()&€£\$¥[]{}¤§... 2 ABC2ÀÂÆÁÃÄÅĄĀÇČ 3 DEF3ÈÉÊËĖĘĒΔΦ 4 GHI4ĞÍÏĮĪÌΓ 5 JKL5Λ 6 MNO6ÑÓÔÕÖ

- 7 PQRS7ŞŠΠΘΣ
- 8 Τυνεὺύΰῦψ
- <u>9</u> W X Y Z 9 Ø Ω Ξ Ψ Ž
- Key Lower case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish)

 $\begin{array}{ccc} 0 & \text{Space . 0 , / :; "'!} ? i * + - \% \land & \sim | \\ 1 & 1 @ _ # = < > () & \in £ $ ¥ [] { } ¤ § \end{array}$ 

- 2 abc2àâæáãäåąāçč 3 def3èéêëėęēΔΦ
- 4 ghi4ğíìïįĪıΓ
- 5 jkl5∧
- 6 mno6ñóôõöò
- 7 pqrs7βşšΠΘΣ
- 8 tuv8ùúüūųμ 9 wxyz9øΩΞΨž
- 9 WXYZ9ØΩΞΨΖ

Key	Upper case characters (for Greek)
0	Space . 0 , / : ; " ' ! ; ? ; * + - % \^ ~
1	1@_#=<>()&€£\$¥[]{}¤§
2	А В Г 2 А В С Æ Å Ç
3	Δ E Z 3 D E F É
4	H 🛛 I 4 G H I
5	K A M 5 J K L
6	N E O 6 M N O Ñ Ö
7	ΠΡΣ7ΡQRSβ
8	ΤΥΦ8Τυνϋ
9	ΧΨΩ9WXYZØ
Key	Lower case characters (for Greek)

Key	Lower case characters (for Greek)
0	Space . 0 , / : ; " ' ! ; ? ; * + - % \ ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¤ §
2	α β γ 2 a b c à æ ä å
3	δεζ3defèé
4	ηθι4ghiì
5	κλμ5jkΙΛ
6	νξο6mnoñöò
7	πρσς7pqrsß
8	τυφ8tuvùü
9	χψω9wxyzø

Кеу	Upper case characters (for Serbian)
0	Space . 0 , / : ; " ' ! ; ? ; * + - % \^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¤ §
2	АВСЂĆČ2АБВГ
3	D E F J Ð 3 Д E Ж 3 Δ Ф
4	GНIЉ4ИЙКЛГ
5	ЈКЬЊ5МНОПЛ
6	ΜΝΟЋ6ΡСΤУ
7	ΡQRSҖŠ7ΦҲЦЧПѲΣß
8	Т U V 8 Ш Щ Ъ Ы
9	W XY Z Ž9ЬЭЮЯΩΞΨ

Lower case characters (for Serbian)
Space . 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~
1@_#=<>()&€£\$¥[]{}¤§
а b c Ђ Ć Č 2 А Б В Г
d e f J Ð 3 Д Е Ж З
ghiЉ4ИЙКЛ
јкІЊ5МНОП
т n o Ћ 6 Р С Т У
ρqrSҖŠ7ΦҲЦЧΠΘΣß
t u v ij 8 Ш Щ Ъ Ы
w×yΖŽ9ЬЭЮЯΩΞΨ

## 19 Index

## Α

additional handsets	28
alarm	26
announcement	32
answer a call	13
answering machine	32
auto conference	27
auto prefix	27

### В

base station	
installation	8
overview	6
battery	9, 10, 37

## С

call log	21
caller ID	13, 21
calling	12
charging	10
conference	14, 15, 27
contacts	18

### D

date setting	9
default setting	29
delete messages	34
dial mode	28
display icons	7
disposal	38

## Ε

ECO mode	24
----------	----

### F

find handsets/paging

# G GA

6

G GAP	38
H handset name	25
hearing aid compatibility	24
1	
incoming messages	33
intercom calls	15
internal calls	15
L	
language setting	
answering machine	32
handset	25
listen to messages	34
Μ	
missed calls	21
mute	14
N	
network type	27
0	
on/off	32
P	
phone	
overview	5
set up	9
phone settings	24
phonebook	18, 21, 23
PIN	

PIN answering machine 10, 35 handset 10 37 power adapter

English

## R

recall time	28
redial	23
register/unregister	28, 29
remote access to answering machine	35
ring delay	34
ringtone	24

## S

safety	3
save a number	21
setup	8
signal strength	11
sounds	
docking	24
keytone	24
standby mode	10

## Т

text entry	17, 41
time setting	9
transfer call	15
troubleshooting/FAQ	40
two calls/call on hold	14

### V

volume adjustment

13





Specifications are subject to change without notice © 2012 Koninklijke Philips Electronics N.V. All rights reserved.

UM\_XL590-595\_05\_EN\_V1.1 WK11495 ×