

User manual

Manual del usuario



PHILIPS

México



Es necesario que lea cuidadosamente su instructivo de manejo.

| | | |
|--|---|--|
| | PRECAUCIÓN - ADVERTENCIA | |
| | No abrir, riesgo de choque eléctrico | |
| | ATENCIÓN | |
| | Verifique que el voltaje de alimentación sea el requerido para su aparato | |
| Para evitar el riesgo de choque eléctrico, no quite la tapa. En caso de requerir servicio, dirijase al personal calificado. | | |

 
 
 
Descripción: **Minisistema de Audio**
Modelo : **MCM196/ 55**
Alimentación: **110–127 / 220–240V~; 50/60 Hz**
Consumo: **30 W**
Importador: **Philips Mexicana, S.A. de C.V.**
Domicilio: **Av. La Palma No.6**
Col. San Fernando La Herradura
Huixquilucan
Localidad y Tel: **Edo. de México C.P. 52784**
Tel.52 69 90 00
Exportador: **Philips Electronics HK, Ltd.**
País de Origen: **China**
N° de Serie: _____

**LEA CUIDADOSAMENTE ESTE INSTRUCTIVO
ANTES DE USAR SU APARATO.**

AVISO IMPORTANTE

Philips Mexicana, S.A. de C.V. no se hace responsable por daños o desperfectos causados por:

- Maltrato, descuido o mal uso, presencia de insectos o roedores (cucarachas, ratones etc.).*
- Cuando el aparato no haya sido operado de acuerdo con el instructivo del uso, fuera de los valores nominales y tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación eléctrica y las características que deben reunir las instalaciones auxiliares.*
- Por fenómenos naturales tales como: temblores, inundaciones, incendios, descargas eléctricas, rayos etc. o delitos causados por terceros (choques asaltos, riñas, etc.).*

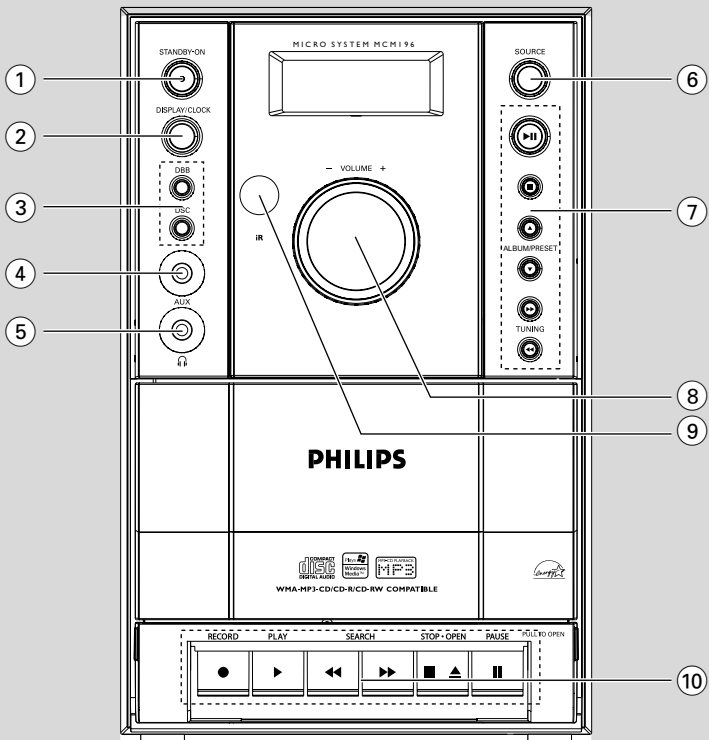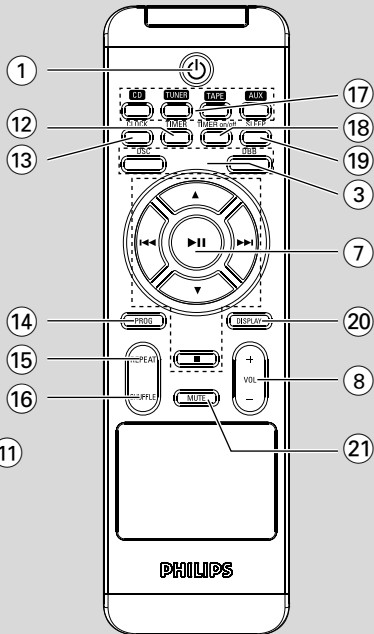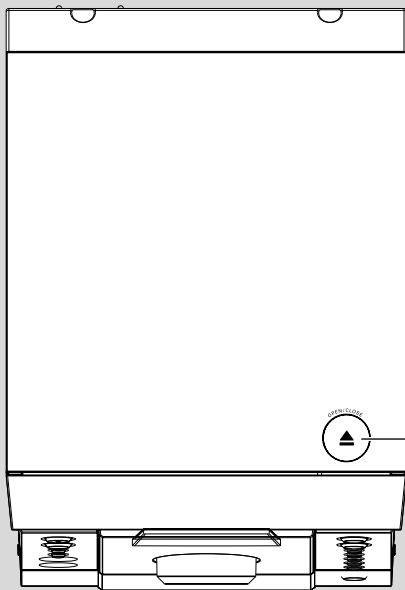

General Information

IMPORTANT!

PLEASE NOTE THAT THE VOLTAGE SELECTOR LOCATED AT THE REAR OF THIS SYSTEM IS PRESET AT 220V FROM THE FACTORY. FOR COUNTRIES THAT OPERATE AT 110V-127V, PLEASE ADJUST TO 110V-127V BEFORE YOU SWITCH ON THE SYSTEM.

Supplied accessories

- 2 speaker boxes
- remote control
- MW loop antenna

Environmental Information

 
All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Safety Information

- Before operating the system, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your system is identical with the voltage of your local power supply. If not, please consult your dealer.
- Place the system on a flat, hard and stable surface.
- The apparatus shall not be exposed to dripping or splashing.
- Install the unit near the AC outlet and where the AC power plug can be easily reached.
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system. Allow at least 10 cm (4 inches) clearance from the rear and the top of the unit and 5 cm (2 inches) from each side.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Do not expose the system, batteries or discs to excessive moisture, rain, sand or heat sources caused by heating equipment or direct sunlight.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens of the disc unit inside the system. Should this occur, the CD player would not operate normally. Leave the power on for about one hour with no disc in the system until normal playback is possible.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- **When the system is switched to Standby mode, it is still consuming some power. To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.**

Preparations

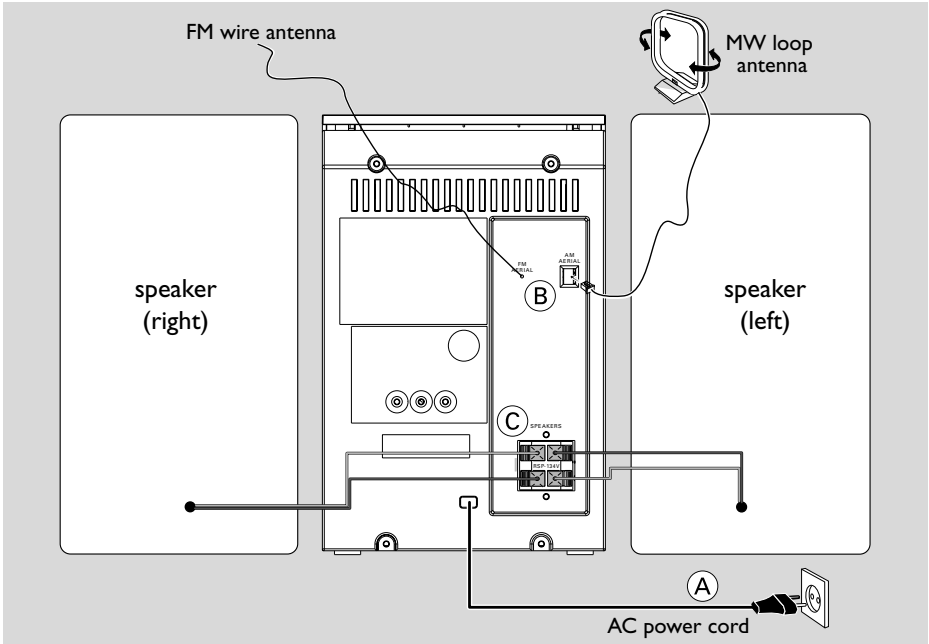

Rear connections

The type plate is located at the rear of the system.

A Power

- Before connecting the AC power cord to the wall outlet, ensure that all other connections have been made.
- If your system is equipped with a Voltage Selector, set the VOLTAGE SELECTOR to the local power line voltage.

WARNING!

 
- **For optimal performance, use only the original power cable.**
- **Never make or change any connections with the power switched on.**

B Antenna Connection

MW Antenna

Connect the supplied MW loop antenna to the "MW aerial" terminal. Adjust the position of the antenna for optimal reception.

- Position the antenna as far as possible from a TV, VCR or other radiation source.

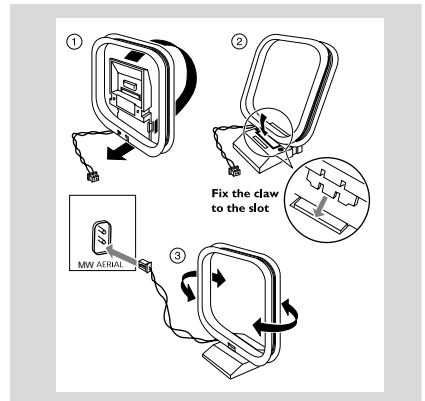

Preparations

FM Antenna

 
It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.

- Adjust the FM antenna for optimal FM stereo reception.

C Speakers Connection

Front Speakers

Connect the speaker wires to the SPEAKERS terminals, right speaker to "RIGHT" and left speaker to "LEFT", coloured (marked) wire to "+" and black (unmarked) wire to "-".

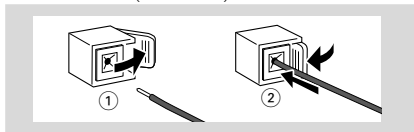


- Fully insert the stripped portion of the speaker wire into the terminal as shown.

Notes:

- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of + / - speaker terminals.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.


Before using the remote control

 - 1 Pull out the plastic protective sheet.
- 2 Select the source you wish to control by pressing one of the source select keys on the remote control (for example CD, TUNER).
- 3 Then select the desired function (for example ►, ◀, ▶).

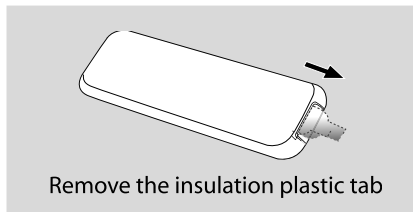

Replacing battery (lithium CR2025) into the remote control

 
- 1 Push to open the battery tray.
- 2 Replace a new battery according to the indicated polarity.
- 3 Push the battery tray back to close it.

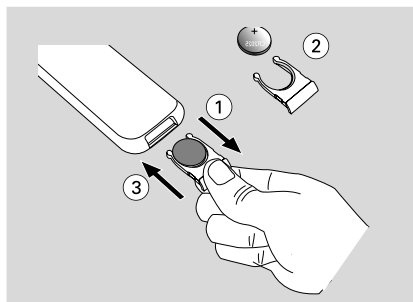

CAUTION!

- Remove battery if they are exhausted or will not be used for a long time.
- Battery contains chemical substances, so they should be disposed of properly.

Controls on the system and remote control


- ① **STANDBY ON (⏻)**
 – switches the system to standby/on.
- ② **DISPLAY/CLOCK**
 for CD displays the current track number and total remaining time (or current album and track numbers for MP3 disc) during playback.
 for clock sets the clock function
- ③ **INTERACTIVE SOUND controls:**
DBB (Dynamic Bass Boost) enhances the bass.
DSC (Digital Sound Control) selects sound characteristics: JAZZ/POP/CLASSIC/ROCK.
- ④ **AUX jack**
 – connects an external source (3.5 mm socket)
- ⑤ 
 – connects headphones
- ⑥ **SOURCE**
 – selects the respective sound source for CD/TUNER/TAPE/AUX.
 – switches on the system.
- ⑦ **Mode Selection**
▶| starts or interrupts CD playback.
■ stops CD playback or erases a CD programme.
ALBUM/PRESET ▼ ▲
 for radio selects a preset radio station.
 for MP3 disc selects an album.
TUNING ◀◀ ▶▶
 for Tuner tunes to radio stations.
 for CD skips to the beginning of the current/previous/subsequent track.
 fast searches back and forward within a track/CD.
 for clock/timer adjusts the hours and minutes for the clock/timer function
- ⑧ **VOLUME (VOL -/+)**
 – adjusts the volume level.
- ⑨ **iR SENSOR**
 – infrared sensor for remote control.

- ⑩ **Tape Deck Operation**
RECORD ● ... starts recording.
PLAY ▶ starts playback.
SEARCH ◀◀ / ▶▶ fast rewinds/winds the tape.
STOP-OPEN ■ ▲
 stops the tape; opens the tape compartment.
PAUSE II interrupts recording or playback.
- ⑪ **OPEN-CLOSE ▲**
 – opens/closes the CD door.

Controls available on the remote control only

- ⑫ **TIMER**
 – sets the timer function.
- ⑬ **CLOCK**
 – sets the clock function.
- ⑭ **PROG**
 for CD programmes tracks and reviews the programme.
 for Tuner programmes tuner stations manually or automatically.
- ⑮ **REPEAT**
 – repeats a track/disc/all programmed tracks.
- ⑯ **SHUFFLE**
 – plays CD/MP3 tracks in random order.
- ⑰ **CD/TUNER/TAPE/AUX**
 – selects the respective sound source.
- ⑱ **Timer on/off**
 – activates/deactivates the timer function.
- ⑲ **SLEEP**
 – activates/deactivates or selects the sleeper time.
- ⑳ **DISPLAY**
 for CD displays the current track number and total remaining time (or current album and track numbers for MP3 disc) during playback.
- ㉑ **MUTE**
 – interrupts and resumes sound reproduction
- Notes for remote control:**
 – **First select the source you wish to control by pressing one of the source select keys on the remote control (for example CD, TUNER).**
 – **Then select the desired function (for example ▶, ◀, ▶|).**

 Basic Functions

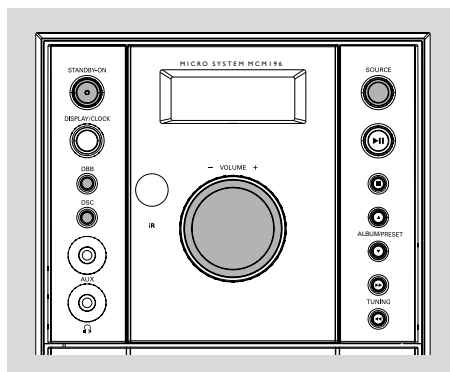

IMPORTANT:

Before you operate the system, complete the preparation procedures.

Plug and Play (for tuner installation)

Plug and Play allows you to store all available radio stations automatically.

First time setup/power up

- 1 When you turn on the main supply, "AUTO INSTALL - PRESS PLAY" is displayed.
- 2 Press ►|| on the system to start installation.
→ "PLUG AND PLAY" "INSTALL" is displayed, followed by "TUNER" and "AUTO".
→ PROG starts flashing.
→ The system will automatically store the radio stations with sufficient signal strength, starting from FM and followed by MW band.
→ When all the available radio stations are stored or the memory for 40 presets are used, the last preset radio station will be played.

To reinstall Plug and Play

- 1 In standby mode, press and hold ►|| on the system until "AUTO INSTALL - PRESS PLAY" is displayed.
- 2 Press ►|| again to start installation.
→ All previously stored radio stations will be replaced.

To exit without storing the Plug and Play

 
- Press ■ on the system.
→ If you do not complete the Plug and Play installation, the function will be restarted when you next turn on the main supply again.

Notes:




- If no stereo frequency is detected during Plug and Play, "CHECK ANTENNA" will be displayed.
- During Plug and Play, if no button is pressed within 15 seconds, the system will exit Plug and Play mode.

Basic Functions

Switching the system on

- Press **STANDBY ON** or **SOURCE** (or  on the remote control).
→ The system will switch to the last selected source.
- Press **CD**, **TUNER** or **TAPE** on the remote control.
→ The system will switch to the selected source.


To switch the system to standby mode

 
- Press **STANDBY ON** on the system (or  on the remote control).
- If in **TAPE** mode or recording mode, press **STOP-OPEN**   first.
→ The volume level (up to a maximum volume level of 20), interactive sound settings, last selected source and tuner presets will be retained in the player's memory.

Power-saving automatic standby


The power-saving feature automatically switches to standby 15 minutes after a tape or CD playback has ended and no control is operated.

Adjusting volume and sound

- 1 Turn the **VOLUME** control anti-clockwise to decrease or clockwise to increase volume on the system (or press **VOL - / +** on the remote control).
→ Display shows the volume level  and a number from 0-32.
 - 2 Press **DSC** repeatedly to select the desired sound effect: **JAZZ / POP / CLASSIC / ROCK**.
 - 3 Press **DBB** to switch bass enhancement on or off.
→ Display shows: **DBB** if the DBB is activated.
 - 4 Press **MUTE** on the remote control to interrupt sound reproduction instantly.
→ Playback will continue without sound.
- To activate sound reproduction you can:
 - press **MUTE** again;
 - adjust the volume controls;
 - change source.

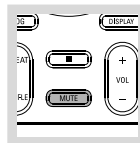


CD/MP3 Operation

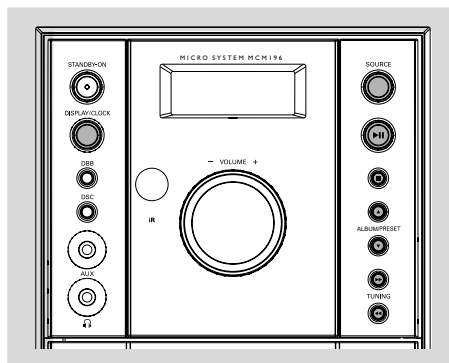 

IMPORTANT:

 The lens of the CD player should never be touched.

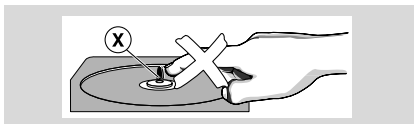


Loading a disc

This CD player plays Audio Discs including CD-Recordables, CD-Rewritables and MP3 CD.

- CD-ROM, CD-I, CDV, VCD, DVD or computer CDs, however, are not possible.

- 1 Select **CD** source.

 - 2 Press **OPEN/CLOSE** on the top of the system to open the CD compartment.
→ **OPEN** is displayed when you open the CD compartment.

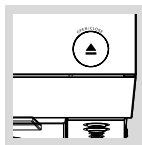

- 3 Insert a disc with the printed side facing up and press down on **OPEN/CLOSE** to close the CD door.
→ **READING** is displayed as the CD player scans the contents of a disc, and then the total number of tracks and playing time (or the total number of albums and tracks for MP3 disc) are shown.

Basic playback controls

To play a disc

- Press **▶||** to start playback.
→ The current track number and elapsed playing time of the track are displayed during disc playback.

To select a different track

- Press **TUNING** **◀◀ ▶▶** (on the remote control **◀◀ ▶▶**) once or repeatedly until the desired track number appears in the display.

To find a passage within a track

- 1 Press and hold down on **TUNING** **◀◀ ▶▶** (on the remote control **◀◀ ▶▶**).
→ The disc is played at high speed and low volume.
- 2 When you recognise the passage you want, release **TUNING** **◀◀ ▶▶** (on the remote control **◀◀ ▶▶**).
→ Normal playback continues.

To interrupt playback

- Press **▶||** during playback.
→ The display freezes and the elapsed playing time flashes when playback is interrupted.
→ To resume, press **▶||** again.

To stop playback

- Press **■**.

Notes: CD play will also stop when;
– the CD door is opened.
– the disc has reached the end.
– you select another source: **TAPE** or **TUNER**.
– you select standby.
– you press the tape deck **PLAY** **▶** key.

Playing an MP3 disc

- 1 Load an MP3 disc.
→ The disc reading time may exceed 10 seconds due to the large number of songs compiled into one disc.
→ "YY XXX" is displayed. YY is the total album number and XXX is the total track number.
- 2 Press **ALBUM/PRESET** **▼ ▲** (or **▼ ▲** on the remote control) to select a desired album.

CD/MP3 Operation

- 3 Press **TUNING** **I◀◀ ▶▶I** (on the remote control **I◀◀ ▶▶I**) to select a desired track.
→ The album number will change accordingly as you reach the first track of an album by pressing **I◀◀** or the last track of an album by pressing **▶▶I**.
- 4 Press **▶II** to start playback.
- During playback, press **DISPLAY/CLOCK** to show the album and track numbers.

Supported MP3 disc formats:

- ISO9660, Joliet, UDF 1.5
- Maximum title number: 999 (depending on filename length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates: 32~256 (kbps), variable bitrates

Different play modes: SHUFFLE and REPEAT

You can select and change the various play modes before or during playback. The play modes can also be combined with PROGRAMME.

- SHUFtracks of the entire disc are played in random order
- REPEATrepeats the entire disc/programme
- REPplays the current track continuously
- REP ALBrepeats all tracks in the current (for MP3 only) album

- 1 To select your play mode, press the **SHUFFLE** or **REPEAT** button before or during playback until the display shows the desired function.
- 2 Press **▶II** to start playback if in the STOP position.
→ If you have selected SHUFFLE, playback starts automatically.
- 3 To return to normal playback, press the respective **SHUFFLE** or **REPEAT** button until the various SHUFFLE/ REPEAT modes are no longer displayed.
- You can also press **■** to cancel your play mode.

Note:

–The **SHUFFLE** and **REPEAT** functions cannot be used simultaneously.

Programming track numbers

Programme in the STOP position to select and store your disc tracks in the desired sequence. If you like, store any track more than once. Up to 40 tracks can be stored in the memory.

- 1 In the stop position, use the **TUNING** **I◀◀ ▶▶I** (on the remote control **I◀◀ ▶▶I**) to select your desired track number.
- For MP3, you may press **ALBUM/PRESET** **▼▲** to select a desired album, then press **I◀◀ ▶▶I** to select your desired track.
- 2 Press **PROG** to store.
→ Display: **PROG** flashes, and **PR** **□ I** is displayed briefly, then the selected track number (and the selected album number for MP3).
- 3 Repeat **steps 1-2** to select and store all desired tracks.
→ **FULL** is displayed if you attempt to programme more than 40 tracks.
- 4 To start playback of your disc programme, press **▶II**

 
Reviewing the programme

- Stop playback and press **PROG** repeatedly.
- To exit review mode, press **■**.

Erasing the programme

You can erase the programme by:

- pressing **■** once in the STOP mode;
- pressing **■** twice during playback;
- opening the CD compartment;
→ **PROG** disappears from the display.

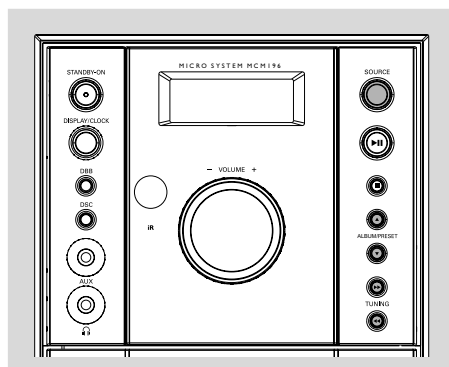

Tuning to radio stations

- 1 Select **TUNER** source.
- 2 Press **SOURCE** on the set repeatedly or press **TUNER** on the remote repeatedly until the desired waveband (FM or MW) is displayed.
- 3 Press down on **TUNING** **◀◀ ▶▶** and release button.
→ The radio automatically tunes to a station with sufficient reception. Display indication during automatic tuning: *SEARCH*.
- 4 Repeat step 3 if necessary until you find the desired station.
- To tune to a weak station, press **TUNING** **◀◀ ▶▶** briefly and repeatedly until you have found optimal reception.

Programming radio stations

You can store up to a total of 40 radio stations in the memory.

Automatic programming

Automatic programming will start with a chosen preset number. From this preset number upwards, former programmed radio stations will be overridden. The system will only programme stations which are not in the memory already.

- 1 Press **ALBUM/PRESET** **▼ ▲** to select the preset number where programming should start.

Note:

– If no preset number is selected, default is preset (1) and all your presets will be overridden.

- 2 Press **PROG** for more than 2 seconds to activate programming.
→ *RUTO* is displayed and available stations are programmed in order of waveband reception strength. The first preset automatically stored will then be played.

 
Manual programming

- 1 Tune to your desired station (see Tuning to radio stations).
- 2 Press **PROG** to activate programming.
→ **PROG** flashes in the display.
- 3 Press **ALBUM/PRESET** **▼ ▲** to allocate a number from 1 to 20 to this station.
- 4 Press **PROG** again to confirm the setting.
→ **PROG** disappears, the preset number and the frequency of the preset station are shown.
- 5 Repeat the above four steps to store other stations.
- You can override a preset station by storing another frequency in its place.

Tuning to preset radio stations

- Press **ALBUM/PRESET** **▼ ▲** until the desired preset station is displayed.

Tape Operation / Recording

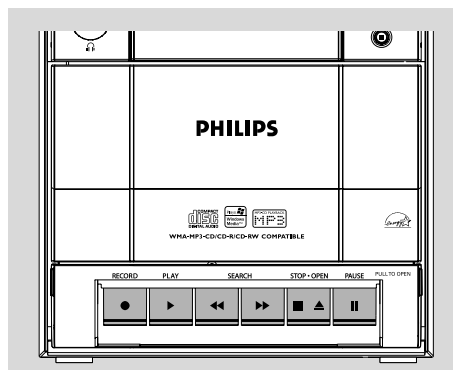

Altering the VOLUME, DBB or DSC controls will not affect the recording in progress.

- The recording sound quality might differ depending on the quality of your recording source and the recording tape.
- At the very beginning and end of the tape, no recording will take place during the 7 seconds when the leader tape passes the recorder heads.
- To protect a tape from accidental erasure, have the tape in front of you and break out the left tab. Recording on this side is no longer possible. If, however, you wish to record over this side again, cover the tabs with a piece of adhesive tape.

Tape playback

- 1 Select **TAPE** source.
→ Display: shows throughout tape operation.
- 2 Open the tape key flap marked "**PULL TO OPEN**" on the front panel.
- 3 Press **STOP-OPEN** to open the tape door.
- 4 Insert a recorded tape and close the tape door.
 - Load the tape with the open side downward and the full spool to the left.
- 5 Press **PLAY** to start playback.
 - The key is automatically released at the end of a tape, except if **PAUSE** has been activated.
- 6 To pause, press **PAUSE** . Press again to resume.
- 7 By pressing or on the system fast winding of tape is possible in both directions.
- 8 To stop the tape, press **STOP-OPEN** .

Note:

– The source cannot be changed while playing or recording a tape.

General information on recording

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- For recording, use only NORMAL (IEC type I) tapes on which the tabs have not yet been broken. This deck is not suited for recording on METAL (IEC IV) type tapes.
- The best recording level is set automatically.

Synchro start CD recording

- 1 Select **CD** source.
- 2 Insert a disc and if desired, programme track numbers.
- 3 Press **STOP-OPEN** to open the tape door.
- 4 Insert a suitable tape into the deck and close the tape door.
- 5 Press **RECORD** to start recording.
→ Playing of the CD programme starts automatically from the beginning of the CD after 7 seconds. It is not necessary to start the CD player separately.

To select and record a particular passage within a CD track:

- Press and hold down on . Release the control when you recognize the passage you want.
- To pause CD playback, press .
- Recording starts from this exact point in the track when you press **RECORD** .
- 6 To pause, press **PAUSE** . Press again to resume.
- 7 To stop recording, press **STOP-OPEN** .

Recording from the radio

- 1 Tune to the desired radio station (see Tuning to radio stations).
- 2 Press **STOP•OPEN** ■ ▲ to open the tape door.
- 3 Insert a suitable tape into the deck and close the tape door.
- 4 Press **RECORD** ● to start recording.
- 5 To interrupt playback press **PAUSE** II. To resume, press this key again.
- 6 To stop recording, press **STOP•OPEN** ■ ▲.

Listening to an external source

You can listen to the sound of the connected external device through your system's speakers.

- 1 Select **AUX** source.
- 2 Use the line-in cable to connect MCM 196's AUX-IN jack (3.5 mm) to an AUDIO OUT or headphone jack on an external equipment (such as CD player, or VCR).

 
Maintenance

Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

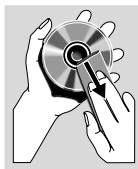


Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

Cleaning the Heads and the Tape Paths

 
- To ensure good recording and playback quality, clean the heads (A), the capstan(s) (B), and pressure roller(s) (C) after every 50 hours of tape operation.
- Use a cotton swab slightly moistened with cleaning fluid or alcohol.
- You can also clean the heads by playing a cleaning tape once.

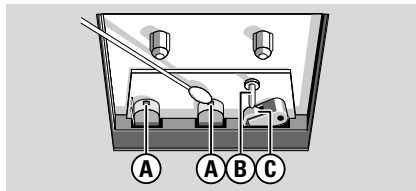

Demagnetising the heads

- Use a demagnetising tape available at your dealer.

 Clock/Timer

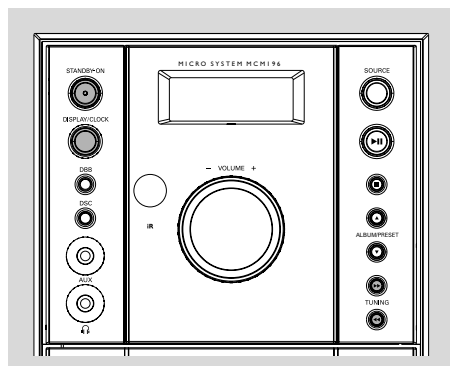

Setting the clock

- 1 In standby, press and hold **DISPLAY/CLOCK** (**CLOCK** on the remote control) for 2 seconds.
→ The clock digits for the hours flash.
- 2 Press **TUNING** |◀▶| to set the hours.
- 3 Press **DISPLAY/CLOCK** again.
→ The clock digits for the minutes flash.
- 4 Press **TUNING** |◀▶| to set the minutes.
- 5 Press **DISPLAY/CLOCK** to confirm the time.

Note:


– The backlight for clock display is off in standby.

Setting the timer

- The system can be used as an alarm clock, whereby the CD or TUNER is switched on at a set time. The clock time needs to be set first before the timer can be used.
- 1 In standby or active mode, press **TIMER** on the remote control.
 - 2 Press **TUNING** |◀▶| to select sound source.
 - 3 Press **TIMER** to confirm your desired mode.
→ The clock digits for the hours flash.
 - 4 Press **TUNING** |◀▶| to set the hours.
 - 5 Press **TIMER** again.
→ The clock digits for the minutes flash.


- 6 Press **TUNING** |◀▶| to set the minutes.
- 7 Press **TIMER** to confirm the time.
→ The timer is now set and activated.


Activating and deactivating TIMER

- In standby or during playback, press **Timer on/off** once.
→ Display shows  if activated, and disappears if deactivated.

Activating and deactivating SLEEP

 The sleep timer enables the system to switch off by itself after a set period of time.

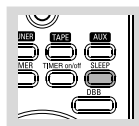

- Press **SLEEP** on the remote control once or more.
→ Display shows **zZ** and one of the sleep time options in sequence: 60, 45, 30, 15, 0, 60... if you have selected a time.
- To deactivate, press **SLEEP** on the remote control once or more until "0" is shown, or press **STANDBY ON** on the system (or  on the remote control).
→ **zZ** disappears from the display.

Specifications

AMPLIFIER

Output power 2 x 4W RMS
Signal-to-noise ratio ≥ 60 dBA (IEC)
Frequency response 125 – 16000 Hz
Impedance loudspeakers 4 Ω

CD PLAYER

Frequency range 125 – 16000 Hz
Signal-to-noise ratio 65 dBA

TUNER

FM wave range 87.5 – 108 MHz
MW wave range 531 – 1602 kHz
Sensitivity at 75 Ω
– FM 26 dB sensitivity 20 μ V
– MW 26 dB sensitivity 5 mV/m
Total harmonic distortion $\leq 5\%$

TAPE DECK

Frequency response
Normal tape (type I) 125 – 8000 Hz (8 dB)
Signal-to-noise ratio
Normal tape (type I) 40 dBA
Wow and flutter $\leq 0.4\%$ JIS

SPEAKERS

Bass reflex system
Dimensions (w x h x d) . 146 x 228 x 160 (mm)

GENERAL INFORMATION

AC Power 110 – 127V / 220 – 240V
..... 50/60 Hz, switchable
Dimensions (w x h x d) ... 146 x 228 x 216(mm)
Weight (with/without speakers)
..... approx. 4.4 / 2.0 kg
Power consumption
Active 30 W
Standby < 5 W

Specifications and external appearance are subject to change without notice.

Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

| Problem | Solution |
|-------------------------|--|
| "NO DISC" is displayed. | <ul style="list-style-type: none">✓ Insert a disc.✓ Check if the disc is inserted upside down.✓ Wait until the moisture condensation at the lens has cleared.✓ Replace or clean the disc, see "Maintenance".✓ Use a finalized CD-RW or a correct MP3-CD format disc. |

Radio reception is poor.

- ✓ If the signal is too weak, adjust the antenna or connect an external antenna for better reception.
- ✓ Increase the distance between the Mini HiFi System and your TV or VCR.

Recording or playback cannot be made.

- ✓ Clean deck parts, see "Maintenance".
- ✓ Use only NORMAL (IEC I) tape.
- ✓ Apply a piece of adhesive tape over the missing tab space.

The tape deck door cannot open.

- ✓ Remove and reconnect the AC power plug and switch on the system again.

The system does not react when buttons are pressed.

- ✓ Remove and reconnect the AC power plug and switch on the system again.

Sound cannot be heard or is of poor quality.

- ✓ Adjust the volume.
- ✓ Disconnect the headphones.
- ✓ Check that the speakers are connected correctly.
- ✓ Check if the stripped speaker wire is clamped.
- ✓ Make sure the MP3-CD was recorded within 32-256 kbps bit rate with sampling frequencies at 48 kHz, 44.1 kHz or 32 kHz.

The left and right sound outputs are reversed.

- ✓ Check the speaker connections and location.

The remote control does not function properly.

- ✓ Select the source (CD or TUNER, for example) before pressing the function button (▶, ◀, ▶).
- ✓ Reduce the distance between the remote control and the system.
- ✓ Insert the batteries with their polarities (+/- signs) aligned as indicated.
- ✓ Replace the batteries.
- ✓ Point the remote control directly towards the IR sensor.

The time is not working.

- ✓ Set the clock correctly.
- ✓ Press and hold Timer on/off to switch on the timer.
- ✓ If recording or tape dubbing is in progress, stop recording.

The Clock/Timer setting is erased.

- ✓ Power has been interrupted or the power cord has been disconnected. Reset the clock/timer.

POLIZA DE GARANTIA

ESTA POLIZA ES GRATUITA

Este aparato ha sido cuidadosamente diseñado y se ha fabricado con los mejores materiales bajo un estricto control de calidad, garantizando su buen funcionamiento por los periodos establecidos según el aparato (ver lista en la parte inferior) **a partir de la entrega del aparato al consumidor.**

Esta póliza incluye la reparación o reposición gratuita de cualquier parte o componente que eventualmente fallase y la mano de obra necesaria para su reparación, así como los gastos de transportación razonablemente erogados dentro de nuestros centros de servicio, misma que se hará efectiva en cualquiera de nuestros centros de servicio autorizados en el país.

Si su aparato llegase a requerir de nuestro servicio de garantía, acuda al centro de servicio más cercano a su domicilio, de tener alguna duda por favor llame a nuestro **CENTRO DE INFORMACIÓN AL CLIENTE LADA** sin costo en toda la republica al **01 800 504 62 00** en donde con gusto le indicaremos el centro de servicio autorizado más cercano a su domicilio.

PHILIPS MEXICANA S.A. de C.V. a través de sus centros de servicio autorizados **reparará y devolverá a usted su aparato en un plazo no mayor a 20 días hábiles,** contados a partir de la fecha de ingreso, impresa en la orden de servicio de cualquiera de nuestros centros de servicio autorizados.

La garantía de esta póliza cubre cualquier desperfecto o daño eventualmente ocasionado por los trabajos de reparación y/o traslado del aparato en el interior de nuestros centros de servicio autorizados.

Esta póliza sólo tendrá validez, si está debidamente requisitada, sellada por la casa vendedora, en caso de extravío de esta póliza, podrá hacer efectiva su garantía con la presentación de su factura de compra.

ESTA POLIZA NO SE HARA EFECTIVA EN LOS SIGUIENTES CASOS:

- Cuando el aparato sea utilizado en condiciones distintas a las normales.
- Cuando el aparato no haya sido operado de acuerdo con el instructivo de uso que se le acompaña.
- Cuando la causa de la falla o mal funcionamiento sea consecuencia de una reparación inadecuada o alteración producida por personas no autorizadas por PHILIPS MEXICANA S.A. de C.V.

PERIODOS DE GARANTIA

36 MESES.- Monitores para computadora.

12 MESES.- Televisores con y sin reproductor de video digital DVD, videocassetteras, reproductores de discos de video digital DVD, reproductores de disco de video digital con pantalla incluida, grabadores reproductores de disco de video digital DVD, grabadores reproductores de disco compacto, video proyectores (excepto la lámpara) , cámaras de video, radiograbadoras con y sin reproductor de disco compacto, reproductores de cassette portátil, reproductores de disco compacto portátil, reproductores de audio digital MP3 (Internet), decodificadores de señal (IRD), televisores para hotel, sistemas de observación, televisores de proyección, teléfonos celulares, pagers, minisistemas de audio, minisistemas de audio con reproductor de disco de video digital integrado, microsistemas de audio, sistemas de cine en casa, equipos modulares, sintonificadores, facsímils, LNB, antenas de recepción de satélite, DVD ROM, CDR ROM y CDRW ROM para computadora.

6 MESES.- radio relojes, radios A.M./F.M., auto estéreos, teléfonos inalámbricos, cámaras digitales.

3 MESES.- Accesorios, controles remotos, bocinas, cintas para fax y para cámaras de videoconferencia, audífonos.

MC-719-ARCO

PHILIPS

Philips Mexicana, S.A. de C.V.

Producto Importado por:
Philips Mexicana, S.A. de C.V.

Av. La Palma No.6
Col. San Fernando La Herradura
Huixquilucan, Edo. de México, C.P. 52784
Tel. 52 69 93 00

Centro de Información al Cliente
Información General

LADA SIN COSTO PARA TODA LA REPUBLICA
01 800 504 62 00
CORREO ELECTRONICO
philips@merkafon.com

MODELO _____ No. DE SERIE _____

La presente garantía contará a partir de: DIA _____ MES _____ AÑO _____

En caso que en su producto presente alguna falla, acuda al centro de servicio más cercano a su domicilio (según listado de talleres anexo) y en caso de tener alguna duda o pregunta por favor llame a nuestro

Centro de información al Cliente, en donde con gusto le atenderemos en todo lo relativo a:

- * Servicio de sus aparatos Philips
- * Información de productos y Talleres Autorizados Philips
- * Asesoría en el manejo e instalación de su producto Philips
- * Información en donde puede adquirir productos y accesorios Philips

Para hacer efectiva la garantía de su producto, es necesario presentar esta póliza debidamente requisitada o de lo contrario, presentar su factura de compra.

CENTROS DE SERVICIO AUTORIZADOS PHILIPS EN LAS PRINCIPALES CIUDADES

NOTA: Los Centros que tengan (S) solo proporcionan Servicio y los que tengan (SR) venden refacciones, accesorios y proporcionan Servicio

| CIUDAD | LADA | TELEFONO | CORREO ELECTRONICO | | CIUDAD | LADA | TELEFONO | CORREO ELECTRONICO | |
|--------------------------|------|----------------------------|--|----|-----------------------------|------|--|---|---|
| ACAPULCO, GRO | 744 | 483-32-96 | serproa@yahoo.com.mx | S | MEXICO, D. F. ZONA NORTE | 55 | 55-67-19-82 55-67-22-56 | chyr_electronica@yahoo.com.mx | S |
| AGUASCALIENTES, AGS | 449 | 915-51-91 | jimsaale@hotmail.com | S | MEXICO, D. F. ZONA ORIENTE | 55 | 57-69-89-37 | cnoguedam@terra.com.mx | S |
| CAMPECHE, CAMP. | 981 | 816 25 75 | creza@hotmail.com | S | MEXICO, D. F. ZONA PONIENTE | 55 | 58 12 44 12 | raulmtrm@avante.net | S |
| CANCUN, Q.ROO. | 998 | 984 18 74 | gammacanun@webtelmex.net.mx | S | MONTERREY, N.L. | 818 | 375-16-17 406-54-03 | mcesa@prodigy.net.mx | S |
| CD. JUAREZ, CHIH. | 656 | 618-21-28 603-46-20 | tlaseservicio@prodigy.net.mx | S | MORELIA, MICH | 443 | 312-03-17 | multiservicio_profesionales_de_zamorara@msn.com | S |
| CD. OBREGON, SON | 644 | 412-41-51 416-20-93 | mena747@prodigy.net.mx | S | NEZAHUALCOYOTL, EDO. MEX | 55 | 57-33-34-98 | vicentegutierrez@prodigy.net.mx | S |
| CD. VICTORIA, TAMPS | 834 | 315-68-03 312-51-93 | eeil_smiller@yahoo.com.mx | S | OAXACA, OAX | 951 | 516-47-37 | elfrancistor@prodigy.net.mx | S |
| COLIMA, COL | 312 | 314-03-01 | tv_antenas@hotmail.com | S | ORIZABA, VER | 272 | 724 38 53 | barreda_electronics@hotmail.com | S |
| CUERNAVACA, MOR | 777 | 313-00-49 313-90-92 | centroserviciohertz@hotmail.com | S | PACHUCA, HGO | 771 | 714-15-81 | zaratealc@hotmail.com | S |
| CULIACAN, SIN | 667 | 716-15-10 | stereovox@dn.megared.net.mx | S | POZA RICA, VER | 782 | 824 47 82 | sonydigital@prodigy.net.mx | S |
| CHIHUAHUA, CHIH | 614 | 421-59-30 421-63-61 | comercialsomesica@hotmail.com | S | PUEBLA, PUE | 222 | 248-77-64 231-63-77 | rascon12@prodigy.net.mx | S |
| CHILPANCIINGO, GRO. | 747 | 471 72 73 | ingelec_gro@hotmail.com | S | QUERETARO, QRO | 442 | 216-10-09 | | S |
| DURANGO, DGO | 618 | 825-00-05 | evsurdgo@yahoo.com | S | SALTILLO, COAH | 844 | 415 35 80 | elctronicadigital_07@hotmail.com | S |
| GUADALAJARA, JAL. | 33 | 36-15-72-62 36-16-03-27 | www.Leeocom.com.mx | S | SAN LUIS POTOSI, S.L.P. | 444 | 815-34-07 | centro_serviciosp@prodigy.net.mx | S |
| HERMOSILLO, SON | 662 | 210-54-85 210-05-86 | manuelk@prodigy.net.mx | S | SATELITE, EDO. MEX | 55 | 56 62 59 73 | missus_satelite@hotmail.com | S |
| IRAPUATO, GTO | 462 | 626-51-10 | tv_gase@hotmail.com | S | TAMPICO, TAMPS | 833 | 214 13 60 | electromovie@prodigy.net.mx | S |
| LA PAZ, B.C.S | 612 | 122-95-99 | cenalf@prodigy.net.mx | S | TEPIC, NAY | 311 | 212-66-93 | spe_tn@hotmail.com | S |
| LEON, GTO | 477 | 770-26-99 | tecospespecializados@hotmail.com | S | TIJUANA, B.C.N | 664 | 621-22-15 | www.wgi1@telnor.net | S |
| MATAMOROS, TAMPS | 868 | 813-50-13 | digitalelectronica@comunicable.net | S | TOLUCA, EDO. MEX | 722 | 214-83-09 | | S |
| MAZATLAN, SIN | 669 | 982-42-21 | e_santel@hotmail.com | S | TOLUCA, EDO. MEX | 722 | 213 62 94 | | S |
| MERIDA, YUC | 999 | 928-59-05 | evia2@prodigy.net.mx | S | TORREON, COAH | 871 | 732-49-49 | jomar02@prodigy.net.mx | S |
| MEXICALI, B.C.N | 686 | 561-98-08 561-98-18 | bajaelectronics@acd.com | S | TUXTLA GUTIERREZ, CHIS | 961 | 618-19-08 | kcvideo@prodigy.net.mx | S |
| MEXICO D.F. ZONA ARAGON | 55 | 57 94 06 34 | philipservicio@hotmail.com | S | URUAPAN, MICH | 452 | 524-08-38 524-31-78 932-78-23 932-44-44 | rosaliaq@mich1.telmex.net.mx | S |
| MEXICO D.F. ZONA CENTRO | 55 | 55 21 60 07 | unitelmex@yahoo.com.mx | SR | VERACRUZ, VER | 229 | 314-31-36 314-61-67 | antza@ver.megared.net.mx | S |
| MEXICO, D. F. ZONA SUR | 55 | 55-36-71-03 55-36-25-75 | centrodeservicioelectronicos@hotmail.com | S | VILLAHERMOSA, TAB | 993 | | villitec@intrassur.net.mx | S |
| MEXICO, D. F. ZONA NORTE | 55 | 53 68 30 21 | tissaser@prodigy.net.mx | S | ZACATECAS, ZAC. | 492 | 922 31 63 | sertecmur@prodigy.net.mx | S |

Para mayor referencia de Talleres de Servicio Autorizados en otras ciudades comunicarse al 01 800 504 62 00 (lada sin costo)

Hearing Safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

 
Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Meet Philips at the Internet
<http://www.philips.com/usasupport>

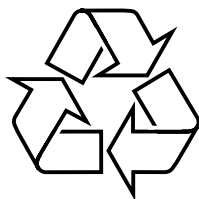

MCM196

