




AZ1830



PHILIPS

1 Choosing Power Supply

 
- Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
- OR-
- Open the **battery door** and insert 6 x C batteries (not included).

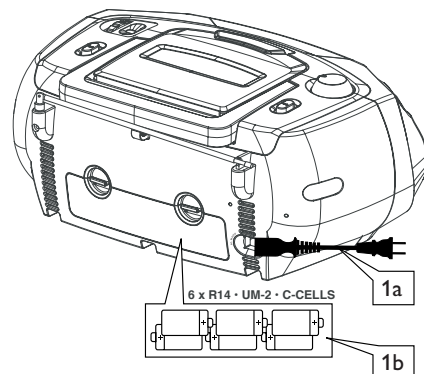

R-14, UM-2 or C-cells
(not included)

2 Listening to the Radio

 - Push the **source selector** to **TUNER**.
- Adjust **BAND** to **MW** or **FM**.
- Turn **TUNING** to tune to a station.

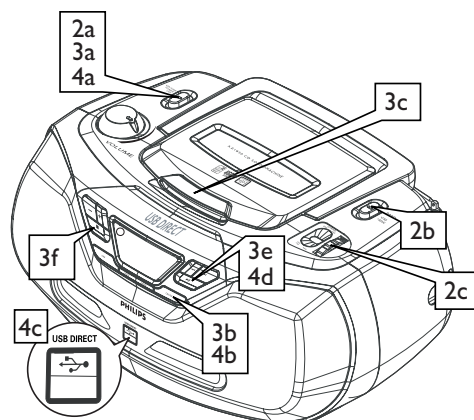

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RV, and MP3-CD.

- Adjust the **source selector** to **CD/USB**.
- Press **CD/USB** to enter CD mode if USB DIRECT is displayed.
- Open the disc door.
- Insert a disc with the printed side facing up and close the door.
- Press **▶||** to start playback.
- To stop disc playback, press **■**.

4 Playing a USB device

- Push the **source selector** to **CD/USB**.
- Press **CD/USB** to enter USB mode if USB DIRECT is NOT displayed.
- Plug a compatible USB mass storage device to AZ1830's USB port marked
- Press **▶||** on your AZ1830 to start play.



Source selector

Slide to select function: CD/MP3 (or USB mode), or radio

VOLUME

Turn to adjust volume level

LIFT TO OPEN

Lift to open the disc door

ALBUM+/-

For **MP3-CD/USB** play:
Press to select albums

■
Press to stop disc/USB playback, or erase a disc program

DBB

Turns the bass enhancement on/off

PROG

Use to program disc tracks and review a disc program.

USB Port

Connects an external USB mass storage device

TUNING

Turn to tune to a station

BAND

Slide to select waveband

Telescopic antenna

Improves FM reception

◀▶
Briefly press to skip to the beginning of the current/previous/ later disc track;
During disc playback, press and hold to find a particular passage backward/forward.

▶||
Press to start or pause disc/USB playback

Display

 
Shows disc/USB functions

CD/USB

Press to enter disc or USB mode

MODE

Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)



Removing the insulation plastic tab