

CEM210




ENG Quick Start Guide

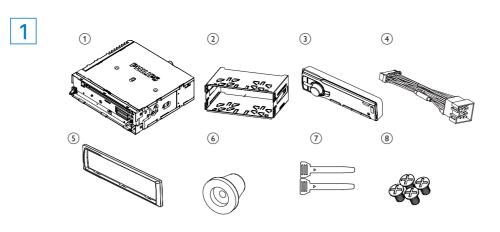

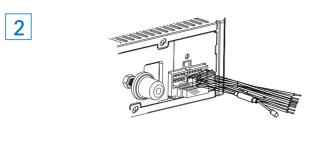

4

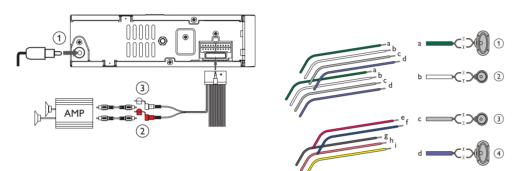

PHILIPS

PHILIPS

CLASS 1 LASER PRODUCT

Overview of parts 1

These are the supplied parts needed to connect

and install this unit: 1 In-car audio system

Sleeve

3

- ③ Front panel
- (4) ISO connector
- 5 Trim plate
- 6 Rubber cushion
- Disassembly tools 8 Screws (4 pieces)

Connect wires

Caution

• Ensure that all loose leads are insulated with electrical tape.

For cars with ISO connectors 2 3

- 1 Pull out the ISO connectors from car dashboard and connect them to the bigge end of the supplied standard connector.
- 2 Connect the other end of the supplied standard connector to the unit.
- 3 Connect the antenna and amplifier as illustrated, if applicable. You can connect the car audio to the amplifier through RCA-TO-RCA cables (not supplied).

	Connector	Connect to
1	ANTENNA	Antenna
2	REAR LINE OUT R	Rear right speaker
3	REAR LINE OUT L	Rear left speaker

For cars without ISO connectors 3 4

Caution

• Be sure to connect the black ground (earth) lead first.

- 1 Connect the antenna and amplifier as illustrated, if applicable.
- 2 Cut off the bigger end of the supplied standard connector.
- 3 Check the car's wiring carefully and connect them to the supplied standard connector.
- 4 Connect the supplied standard connector to the unit.

Green/black strip Left speaker (Rear) White/black strip Left speaker (Front) Gray/black strip Right speaker (Front)

4 Purple/black strip Right speaker (Rear)

е	RED	Ignition key +12V DC when ON/ACC
f	BLUE	Motor/electric antenna relay control lead/Amplifier relay control lead
g	BLACK	Ground
h	Orange	Illumination switch
i	YELLOW	To the +12V car battery which is
		energized at all times

Note

yellow ones.

- Check wire connection before you mount the unit into a car.
- If preset radio stations are lost when the ignition key is turned **OFF** and then back **ON**, reconnect the red leads crosswise to the


© 2009 Koninklijke Philips Electronics N.V. All rights reserved. CEM210_51_UM_V1.1

- 3 Remove the mounting sleeve with the supplied disassembly tools.
- these measurements:
- 5 Install the sleeve into the dashboard and

- 7 Slide the unit into the dashboard until you hear a click sound.

- 2 Remove the two screws on the top of the unit.

- 4 Ensure that car dashboard opening is within
- bend the tabs outward to fix the sleeve.
- 6 Place the supplied rubber cushion over the end of the mounting bolt.
- 8 Reconnect the negative terminal of the car
- battery.

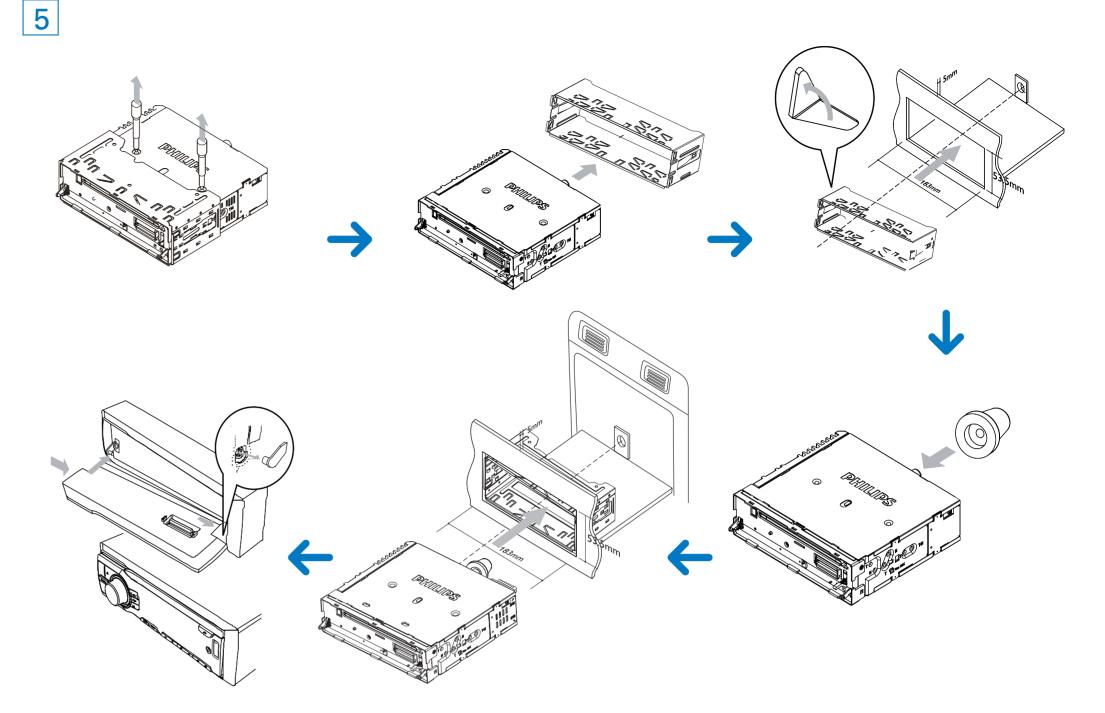

Attach the front panel 5

- 1 Attach the trim plate.
- 2 Insert the right side of the panel in the chassis until it is correctly engaged.
- **3** Press the left side of the panel and point the left hole at the left pillar.
- 4 Release the panel to engage the left side.

Mount in the dashboard 5

- 1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
 - If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
 - If the car battery is not disconnected, to avoid short-circuit, ensure that bare wires do not touch each other.

Turn on

- 1 Press ① to turn on the unit. • To turn off the unit, press ① for 3 seconds.

Set clock

- Press **MENU/DISP** for 3 seconds.
- 2 Press \blacktriangle or \checkmark repeatedly to until the currently time is displayed.
- 3 Turn ① clockwise to set hour.
- 4 Press ① to confirm.
- 5 Turn ① anti-clockwise to set minute.
- 6 Press ① to confirm.

View clock

Press MENU/DISP repeatedly until the clock is displayed.

Listen to radio

- Press **SOURCE** repeatedly to select Tuner.
- 2 Press ▲ or ▼ to select band: [FM1], [FM2],
- [FM3], [AM1], or [AM2]. 3 Press I or ► to tune to a radio station
- manually. • To search for a radio station automatically, press ◀◀ or ▶▶ for 3 seconds.

Play audio files

- 1 Press 📥 on the front panel to release the panel.
- 2 Insert a CD with the printed side facing up. 3 Close the panel.
- \rightarrow Play starts automatically. • To pause CD play, press 1 ▶ ■ .
- To resume CD play, press 1 ▶ II again.

Insert the USB device

- 1 Open the cover marked ⊷ on the front panel.
- 2 Insert the USB device into the USB socket.

device automatically.

→ The unit starts playing from the USB