

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

AJ3500



 
 
---

EN User manual

---


**PHILIPS**

1

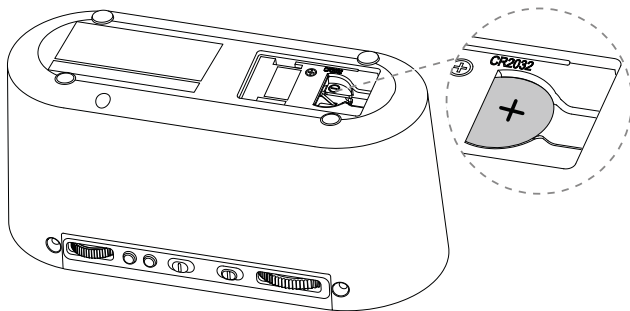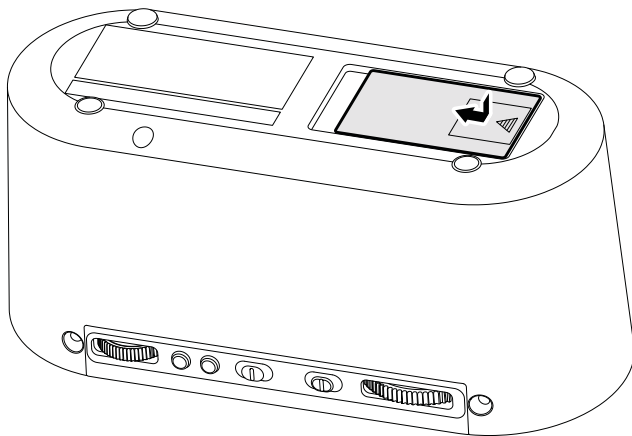


2

 (For illustration only)

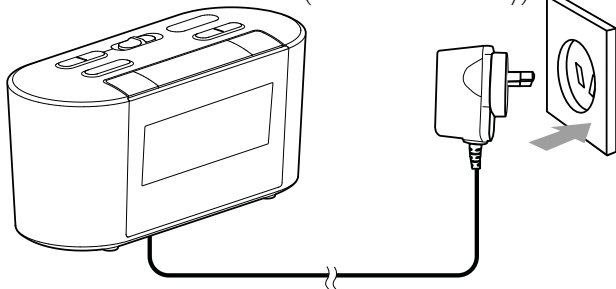


3

 
1

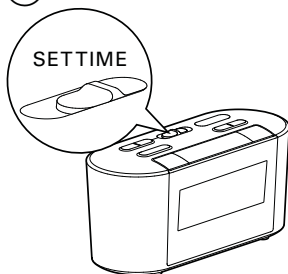


2

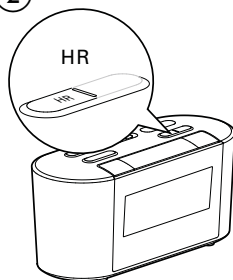 

3

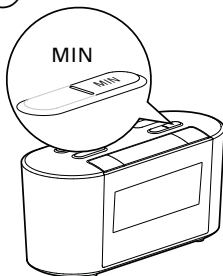 


4

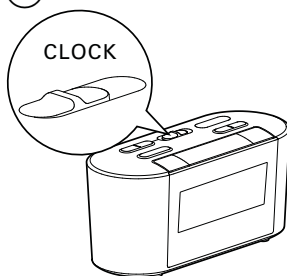 

4

 
1

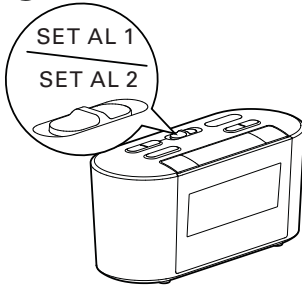


2





 3

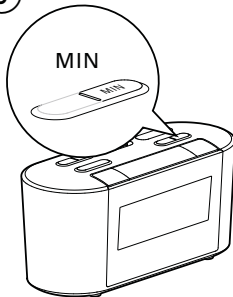

4

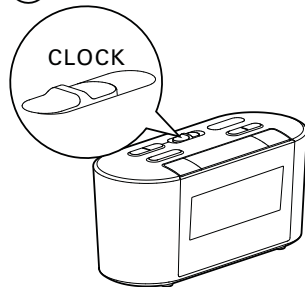 

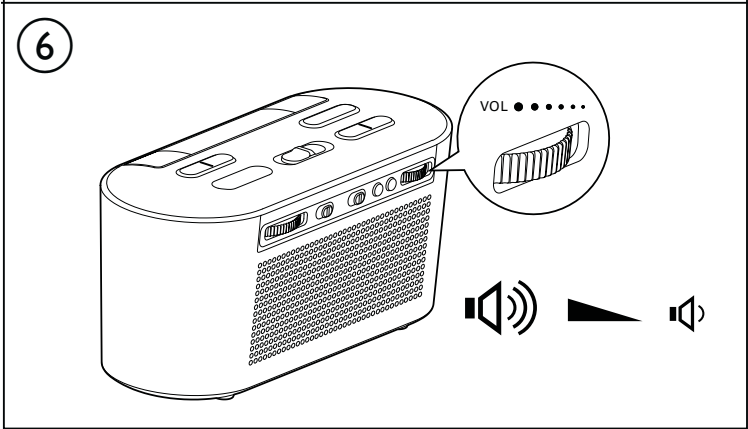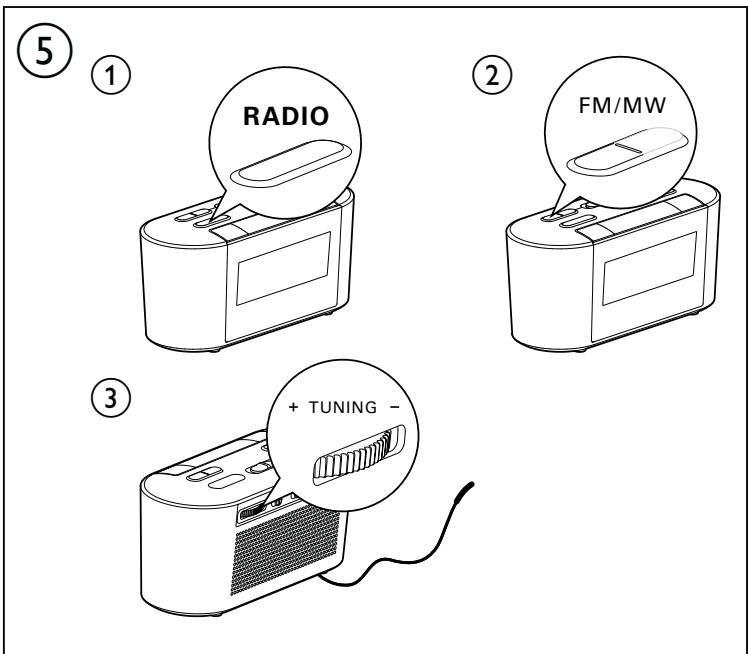  

# 1 Important

---

## Safety

- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this clock radio near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the clock radio.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this clock radio during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the clock radio has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the clock radio, the clock radio has been exposed to rain or moisture, does not operate normally, or has been dropped.
- This clock radio shall not be exposed to dripping or splashing.

- Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

## 2 Your clock radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

---

### Introduction

With this unit, you can:

- listen to FM/MW radio;
  - know the time;
  - set two alarms; and
  - wake up by buzzer alarm or FM/MW radio.
- 

### What's in the box

Check and identify the contents of your package:

- Main unit (with a battery)
- User manual

 
If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the clock radio. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

## Overview of the main unit

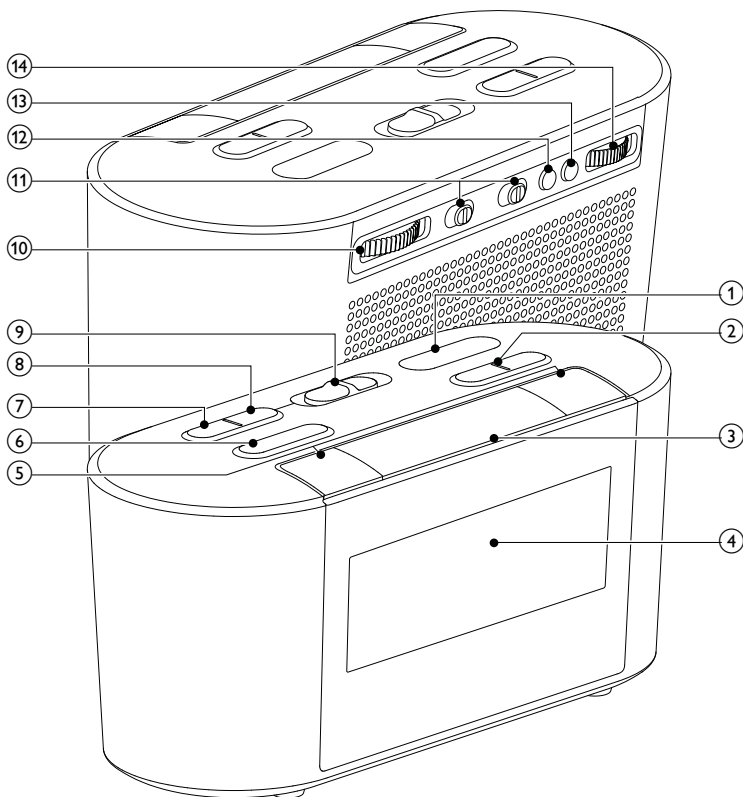

- ① FM/MW frequency indicator
- Show FM/MW frequency.



- ② **HR/MIN**
  - Adjust hour/minute.
- ③ **BRIGHTNESS/SNOOZE**
  - Snooze alarm.
  - Adjust display brightness.
- ④ **Display panel**
  - Show current status.
- ⑤ **AL1/AL2**
  - Turn on/off alarm.
  - View alarm settings.
- ⑥ **RADIO**
  - Turn on/off radio.
- ⑦ **FM/MW**
  - Select FM/MW tuner.
- ⑧ **SLEEP**
  - Set sleep timer.
- ⑨ **CLOCK/SET AL1/SET AL2/SET TIME**
  - Set time/alarm.
  - View time.
- ⑩ **+ TUNING -**
  - Tune to radio stations.
- ⑪ **AL1/AL2 RADIO·BUZZ**
  - Select alarm source for Alarm 1/Alarm 2.
- ⑫ **TIME ZONE**
  - Select time zone.
- ⑬ **12/24H·DST**
  - Select 12/24 hour format.
  - Select daylight saving time (DST) option.
- ⑭ **VOL**
  - Adjust volume.

# 3 Get started

Always follow the instructions in this chapter in sequence.

---

## Install battery ①



### Warning

- Risk of explosion! Keep batteries away from heat, sunshine, or fire. Never discard batteries in fire.
- The battery contains chemical substances, so it should be disposed of properly.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Keep children away from the battery.



### Note

- You can only use AC power as power supply.
- When power is disconnected, the display backlight is off.
- The pre-installed lithium CR2032 battery can back up clock settings.

When  is displayed, replace the battery as indicated.

---

## Connect power



### Caution

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio.
- Risk of electric shock! When you unplug the AC adapter, always pull the plug from the socket. Never pull the cord.

Connect the power adapter to the wall socket. ②

---

## Plug and set

The clock radio has “plug and set” feature. When power is connected, the clock is set automatically.

---

## Select time zone

Check if the time of the clock radio is consistent with the local time. If not, adjust the time zone settings according to your location.

- 1 In standby mode, press **TIME ZONE**.  
↳ The current time zone number blinks on the display panel.
- 2 Press **TIME ZONE** repeatedly to select time zone.

For Australia:

---

Australian Western Standard Time (AWST)	+8
Australian Central Standard Time (ACST)	+9.5
Australian Eastern Standard Time (AEST)	+10 (default)
New Zealand Standard Time (NZST)	+12

---

For United Kingdom and Ireland:

---

Western European Time (WET)

+0 (default)

---

---

## Set clock ③

In standby mode, you can set clock manually.



Tip

- In clock setting mode, press and hold **HR/MIN** for one second, and the hour/minute digits increase or decrease continuously.

---

## Select DST (daylight saving time) mode

For countries with daylight saving time (DST), the clock radio offers you DST option to adjust summer time.

In standby mode, press and hold **12/24H · DST** for two seconds.

↳ The clock advances by one hour and **[DST]** is displayed.



Tip

- To exit DST mode, repeat the above operation.
- To select 12/24 hour format, press **12/24H · DST** repeatedly.

---

## 4 Set alarm timer

---

### Set alarm time ④

In standby mode, you can set two alarms to ring at different time.



#### Note

- In alarm setting mode, press and hold **HR/MIN** for one second, and the hour/minute digits increase or decrease continuously.

---

## Select alarm sound

To select the last heard channel or buzzer as alarm sound, switch **AL1/AL2 RADIO BUZZ** to left or right.





#### Tip

- The gentle wake-up function is designed for all alarm sources.

---

## Activate/deactivate alarm timer

- 1 Press **AL1/AL2** to view alarm settings.
- 2 Press **AL1/AL2** again to activate or deactivate the alarm timer.
  - ↳  or  appears if alarm timer is on and disappears if it is off.
  - To stop alarm, press the corresponding **AL1/AL2**.
  - The alarm repeats ringing for the next day.



#### Note

- When alarm sounds, you cannot adjust volume by rotating **VOL**.

---

## Snooze alarm

When alarm sounds, press **SNOOZE**.

↳ The alarm snoozes and repeats ringing five minutes later.

To adjust alarm interval (in minutes), press **SNOOZE** repeatedly.

5 → 10 → 15 → 20 → 25 → 30



## 5 Listen to radio

---

### Tune to radio stations (5)



Tip

- Position the antenna as far as possible from TV, VCR, or other radiation source.
- For better reception, fully extend and adjust the position of the antenna.

---

### Adjust volume (6)



# 7 Product information



## Note

- Product information is subject to change without prior notice.

---

## Specifications

---

### Amplifier

---

Rated Output Power	0.6W RMS
--------------------	----------

---

### Tuner

---

Tuning Range	FM: 87.5 - 108 MHz MW: 520-1620 KHz
--------------	--

---

Sensitivity - Mono, 26dB S/N Ratio	FM: <22 dBu MW: <92 dBuV/M
---------------------------------------	-------------------------------

---

Search Selectivity	FM: <28 dBu MW:<98 dBuV/M
--------------------	------------------------------

---

Total Harmonic Distortion	FM: <3% MW:<5%
---------------------------	-------------------

---

Signal to Noise Ratio	FM: >45 dB MW:>40 dB
-----------------------	-------------------------

---



---

## General information

---

AC power 220-240 V ~, 50/60Hz

---

Operation Power Consumption < 3W

---

Standby Power Consumption < 2W

---

### Dimensions

- Main Unit (W x H x D) 179.5 x 87 x 76 mm

---

### Weight

- With Packing 0.65 kg

- Main Unit 0.49 kg

---

## 8 Troubleshooting



### Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.philips.com/support](http://www.philips.com/support)). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

### No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.

### **No sound**

- Adjust the volume.

### **No response from the unit**

- Disconnect and reconnect the AC power plug, then turn on the unit again.

### **Poor radio reception**

- Increase the distance between the unit and your TV or VCR.
- Fully extend the FM antenna.

### **Alarm does not work**

- Set the clock/alarm correctly.

### **Clock/alarm setting erased**

- Power has been interrupted or the power plug has been disconnected.
- Reset the clock/alarm.

## 9 Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

### Note

- The type plate is located on the bottom of the apparatus.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

## **Environmental information**

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

2012 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

