

Register your product and get support at

[www.philips.com/welcome](http://www.philips.com/welcome)

S10H



# Quick start guide

**PHILIPS**


# Important safety instructions




- Use only the power supply listed in the user instructions.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Hereby, WOOX Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

# 1 Get started


## Connect the charger

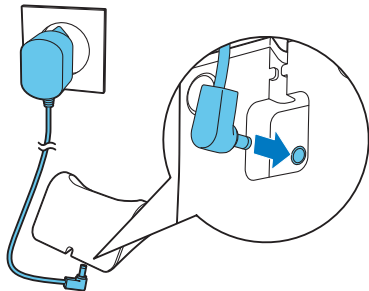

## Configure your phone

- 1 Press  until you see the Philips wordmark.
- 2 Set country and language.
- 3 Set date and time.

## Charge your phone

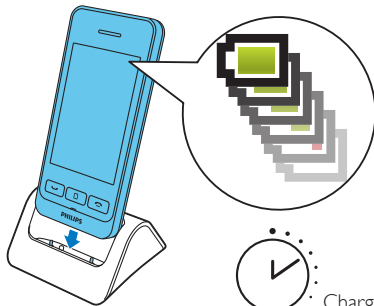

Charge 6 hours



> 84%



68% - 84%



52% - 68%



36% - 52%



20% - 36%




< 20%

Flashing: low battery

Scrolling: charging in progress

## 2

 
# Home screens



Dial pad



 Center home screen



Main menu screen

## Swipe

Access the dial pad by swiping the screen to the right and the main menu screen by swiping the screen to the left.

## Press and hold

Press and hold an icon on the main menu screen to drag it to the favorite applications area, or to a new area of the main menu screen.



## Tap

- Open the selected menu item.
- View notifications on the center home screen.

# Register additional handsets

## 3

You can register up to 4 additional handsets to the base station.

- 1 Select  > **[Registration]** > **[Register]**.
- 2 Press and hold  on the base station for 5 seconds.
- 3 Enter the system PIN/passcode. Tap **[Back]** to make corrections. Tap **[OK]** to confirm the PIN/passcode.
  - ↳ Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.




### Note

- If the PIN/passcode is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.
- The preset PIN/passcode is 0000. No change can be made on it.




## User manual

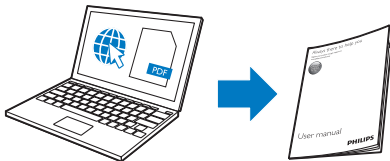

[www.philips.com/support](http://www.philips.com/support)

For more information, refer to the S10/S10A user manual online.

## Online

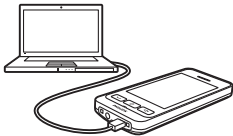

Register at [www.philips.com/support](http://www.philips.com/support) to get the free Philips Phone Manager software for your computer and the latest phone software for your phone.



# CE 0168

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.  
2014 © WOOX Innovations Limited.

All rights reserved.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.



UMS\_S10H  
12\_EN\_V2.0  
WK13521