

Register your product and get support at
www.philips.com/welcome

SE171



EN User manual

PHILIPS

EC DECLARATION OF CONFORMITY

(DECLARATION DE CONFORMITE CE)

We / Nous, PHILIPS CONSUMER LIFESTYLE B.V.

(Name / Nom de l'entreprise)

TUSSENDIEPEN 4, 9206 AD DRACHTEN, THE NETHERLANDS

(address / adresse)

Declare under our responsibility that the electrical product(s):

(Déclarons sous notre responsabilité que le(s) produit(s) électrique(s):)

PHILIPS

(brand name, nom de la marque)

SE171

(Type version or model, référence ou modèle)

DECT Phone

(Telecommunication Terminal Equipment)

(product description, description du produit)

To which this declaration relates is in conformity with the following harmonized standards:

(Auquel cette déclaration se rapporte, est conforme aux normes harmonisées suivantes)

(title, number and date of issue of the standard / titre, numéro et date de parution de la norme)

EN 301 406 V2.1.1:2009

EN 301 489-1 V1.8.1:2008; EN 301 489-6 V1.3.1:2008

EN 60950-1:2006/A11:2009

EN 50360:2001; EN 50385:2002;

EN 62311:2008; EN 62018:2003

Following the provisions of :

(Conformément aux exigences essentielles et autres dispositions pertinentes de:)

1999/5/EC (R&TTE Directive) (Directive R&TTE 1999/5/CE)

2009/125/EC (ErP Directive)

- EC/1275/2008

- EC/278/2009

And are produced under a quality scheme at least in conformity with ISO 9001 or CENELEC

Permanent Documents

(Et sont fabriqués conformément à une qualité au moins conforme à la norme ISO 9001 ou aux Documents Permanents CENELEC)

The Notified Body BAPT / 0168 performed Notified Body Opinion
(L'Organisme Notifié) (Name and number / nom et numéro) (a effectué) (description of intervention /
description de l'intervention)

And issued the certificate, NA
(et a délivré le certificat) (certificate number / numéro du certificat)

Remarks:

(Remarques:)

Drachten, The Netherlands, 16.07.2010

(place, date / lieu, date)

A.Speelman, Compliance Manager

(signature, name and function / signature, nom et fonction)

Contents

1 Important safety instructions	5
Declaration of conformity	5
Use GAP standard compliance	6
Compliance with EMF	6
Disposal of your old product and batteries	6
2 Your SE171	8
What is in the box	8
Overview of the phone	9
Overview of the base station	10
Display icons	10
3 Get started	11
Connect the base station	11
Wall mount the base station	12
Install the handset	13
Check the battery level	13
Set the date and time	14
Set the date and time format	14
Display the date and time	14
What is standby mode?	14
Check the signal strength	14
Switch your handset On/Off	14
4 Calls	15
Make a call	15
End a call	16
Answer a call	16
Adjust the earpiece/speaker volume	16
Mute the microphone	16
Turn the speaker on or off	16
Make a second call	16
Answer a second call	17
Toggle between two calls	17
Make a conference call with the external callers	17
5 Intercom and conference calls	18
Make a call to another handset	18
Transfer a call	18
Make a conference call	18

6 Text and numbers	20
Enter text and numbers	20
7 Phonebook	21
View the phonebook	21
Search a record	21
Call from the phonebook	21
Access the phonebook during a call	21
Add a record	21
Edit a record	22
Delete a record	22
Delete all records	22
Direct access memory	22
8 Call log	23
View the call records	23
Save a call record to the phonebook	23
Delete a call record	23
Delete all call records	23
Return a call	23
9 Redial list	24
View the redial records	24
Redial a call	24
Save a redial record to the phonebook	24
Delete a redial record	24
Delete all redial records	24
10 Self-defined settings	25
Personalize the phone display	25
Personalize the sounds	25
11 Call features	26
Auto conference	26
Auto hang up	26
Dial mode	26
Select the recall duration	26
Manage the area code	27
Network type	27
First ring	27
ECO mode	27

12 Extra features	28
Auto clock	28
Alarm clock	28
Keypad lock	29
Locate the handset	29
13 Advanced settings	30
Enhance the audio quality	30
Register the handsets	30
Unregister the handsets	30
Restore default settings	31
14 Default settings	32
15 Technical data	33
16 Frequently asked questions	34

1 Important safety instructions

Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

To avoid damage or malfunction



Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- Do not allow the charger to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Always use the cables provided with the product.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.

- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Active mobile phones in the vicinity may cause interference.
- Metallic objects may be retained if placed near or on the handset receiver.

About operating and storage temperatures

- Operate in a place where temperature is always between 0°C to +35°C (32°F to 95°F).
- Store in a place where temperature is always between -20°C and +45°C (-4° F to 113° F).
- Battery life may be shortened in low temperature conditions.

Declaration of conformity

Hereby Philips Consumer Lifestyle, P&A, declares that the SE171 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.

This product has been designed, tested and manufactured according to the European R&TTE directive 1999/5/EC. Following this directive, this product can be brought into service in the following countries:

CE 0168		R&TTE Directive 1999/5/EC			
AT	✓	BE	✓	BG	✓
CZ	✓	DE	✓	EE	✓
FR	✓	IE	✓	GR	✓
IS	✓	LT	✓	IT	✓
LI	✓	LU	✓	MT	✓
NL	✓	NO	✓	PL	✓
RO	✓	SK	✓	PT	✓
SE	✓	CH	✓	SI	✓
				ES	✓
				UK	✓

Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.


Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

2 Your SE171

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.


What is in the box

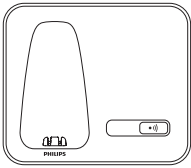


Base station




Handset**

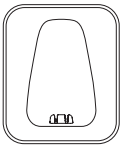

Charger**

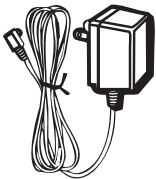

Power adapter**

 

Line cord*



Guarantee



User manual



Quick start guide



Note


- *In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.









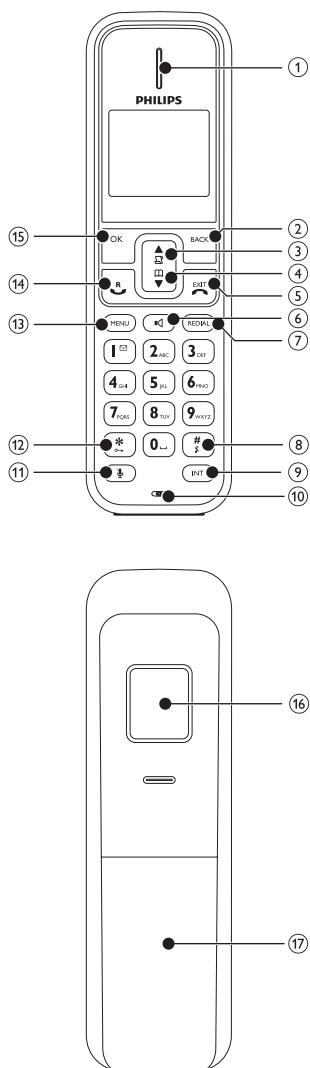

Note


- **In multi-handset packs, there are additional handsets and chargers and power adapters.

Overview of the phone



- | | | |
|---|--|---|
| ① | Earpiece | |
| ② | BACK | <ul style="list-style-type: none"> • Delete text or digits. • Cancel operation. |
| ③ |  | <ul style="list-style-type: none"> • Scroll up on the menu. • Increase the earpiece/ speaker volume. • Enter the call log. |
| ④ |  | <ul style="list-style-type: none"> • Scroll down on the menu. • Decrease the earpiece/ speaker volume. • Enter the phonebook. |
| ⑤ | EXIT
 | <ul style="list-style-type: none"> • End the call. • Exit the menu/operation. • Press and hold to turn the handset on/off. |
| ⑥ |  | <ul style="list-style-type: none"> • Turn the speaker on/off. |
| ⑦ | REDIAL | <ul style="list-style-type: none"> • Enter redial list. |
| ⑧ | #
 | <ul style="list-style-type: none"> • Press and hold to enter a pause to make a predial call (see "Make a call" in the Calls section). • Press and hold to turn the ringer on/off. |
| ⑨ | INT | <ul style="list-style-type: none"> • Make the intercom call. • Press and hold to make a conference call. |
| ⑩ | Microphone | |
| ⑪ |  | <ul style="list-style-type: none"> • Mute/unmute the microphone. |
| ⑫ |  | <ul style="list-style-type: none"> • Press and hold to lock/ unlock keypad. |
| ⑬ | MENU | <ul style="list-style-type: none"> • Access the main menu. |
| ⑭ |  | <ul style="list-style-type: none"> • Make and receive calls. • Send the flash signal. |
| ⑮ | OK | <ul style="list-style-type: none"> • Confirm selection. • Enter the options menu. |
| ⑯ | Loudspeaker | |
| ⑰ | Battery door | |

Overview of the base station

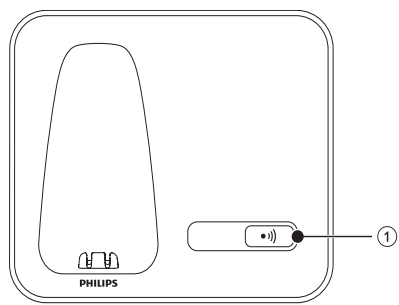

Key	Name	Descriptions
①	●)))	<ul style="list-style-type: none">Find handsets.Enter registration mode.

Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
	When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low). When the handset is on the base station/charger, the bars keep scrolling until charging completes.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
	It displays the link status between the handset and base station. The more bars are shown, the better the signal strength is.
	The call is in progress.
	The alarm is activated.
	The speaker is on.
	The ringer is off.
	Call log
	Phonebook
	There is an unheard voice message.
	Scroll up/down/right for more options
	The ECO mode is activated.

3 Get started



Caution

- Ensure you have read the safety instructions in the "Important" section before you connect and install your handset.

Connect the base station



Warning


- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone.
- Use only the supplied power adapter to charge the batteries.



Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket.. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.

- 1 Connect each end of the power adapter to:
 - the DC input jack at the bottom of the base station;
 - the power socket on the wall.
- 2 Connect each end of the power adapter to (for multi handset packs):
 - the DC input jack at the bottom of the extra handset charger.
 - the power socket on the wall.
- 3 Connect each end of the line cord to:
 - the telephone socket at the bottom of the base station;
 - the telephone socket on the wall.

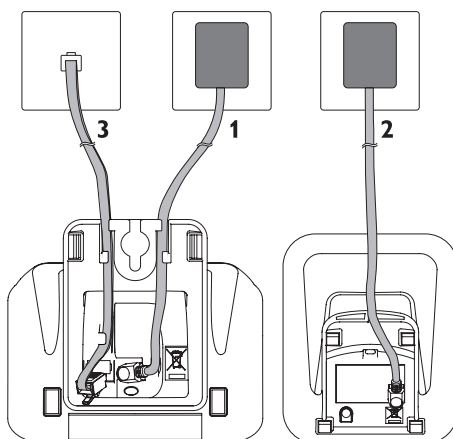


Wall mount the base station




Warning

- You must follow the instructions below to wall mount the base station.


- 1 Remove the bracket from the base station.
- 2 Turn the bracket around.

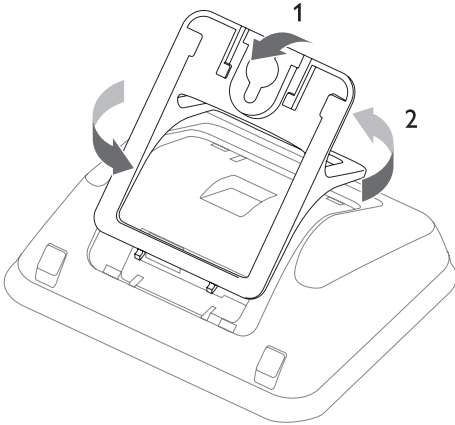


- 3 Re-insert the bracket into the back of the base station.

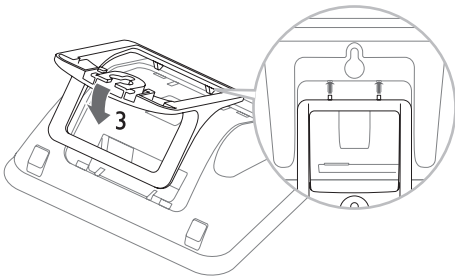

- 4 Insert screws (not included) into the wall.

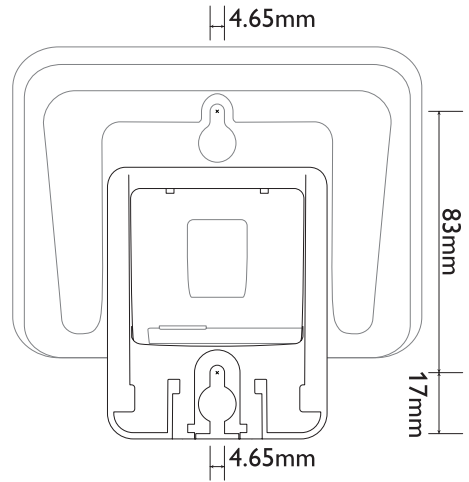

- 5 Align the mounting holes on the back of the base station with the screws on the wall.

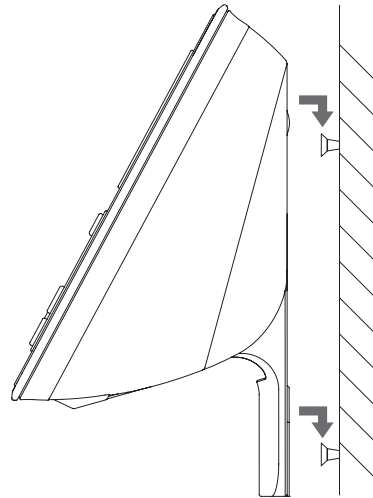

Install the handset

! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.


≡ Note

- Charge the batteries for 8 hours before first use.

! Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

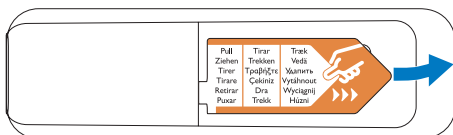


- 2 Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

↳ The handset starts charging.

≡ Note

- If the handset becomes warm when the batteries are being charged, it is normal.

Check the battery level

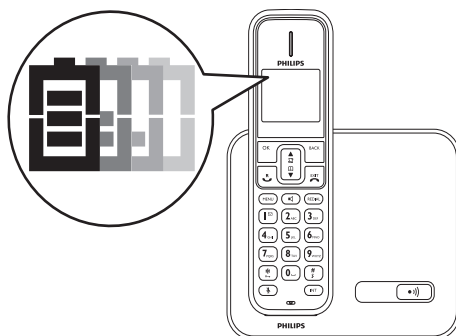

The battery icon displays the current battery level.



When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).



When the handset is on the base station/charger, the bars keep scrolling until charging completes.



The empty battery icon flashes. The battery is low and needs recharging.

The handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning.

Set the date and time

- 1 Press **MENU**.
- 2 Select **[CLOCK-ALARM] > [DATE/TIME]**, then press **OK** to confirm.
- 3 Press the numeric buttons to enter the date, then press **OK** to confirm.
↳ On the handset, the time set menu is displayed.
- 4 Press the numeric buttons to enter the time.
 - If the time is in 12-hour format, press  /  to select **[AM]** or **[PM]**.
- 5 Press **OK** to confirm.

Set the date and time format

- 1 Press **MENU**.
- 2 Select **[CLOCK-ALARM] > [SET FORMAT]**, then press **OK** to confirm.
- 3 Select **[DATE FORMAT]** or **[TIME FORMAT]**.
- 4 Select the setting. Select **[DD/MM]** or **[MM/DD]** as the date display and **[12 HOURS]** or **[24 HOURS]** as the time display. Then press **OK** to confirm.
↳ The setting is saved.

Display the date and time

- 1 Press and hold **OK** in standby mode.
- 2 Press and hold **OK** again to display the handset name.

What is standby mode?

Your phone is in standby mode when it is idle. The standby screen displays the handset name and number/date and time, signal icon, and battery icon.

Check the signal strength



It displays the link status between the handset and base station. The more bars are shown, the better the signal strength is.


- Ensure the handset is linked to the base station before you make or receive calls and carry out the phone functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

Switch your handset On/Off

- Press and hold  to switch off the handset. The handset's screen turns off.



Note

- When the handset is switched off, no call can be received.
- Press and hold  to switch on the handset. It takes a few seconds for the handset to power up.

4 Calls

Note

- When the power fails, the phone cannot access emergency services.

Tip


- Check the signal strength before you make a call or when you are in a call. For more information, see "Check the signal strength" in the Get started section.

Make a call


You can make a call in these ways:

- Quick call
- Dial before you call
- Redial the most recent number
- Call from the redial list.
- Call from the phonebook list
- Call from the call log



Quick call

- 1 Press .
- 2 Dial the phone number.
 - ↳ The number is dialed out.
 - ↳ The duration of your current call is displayed.

Dial before you call

- 1 Dial the phone number
 - To erase a digit, press **BACK**.
 - To enter a pause, press and hold **#**.
- 2 Press  to dial out the call.

Redial the most recent number

- 1 Press .
- 2 Press **REDIAL**.
- 3 Press .
 - ↳ The most recent number is then dialed out.

Call from the redial list

You can make a call from the redial list.

Tip

- For more information, see "Redial a call" in the Redial list section.

Call from the phonebook

You can make a call from the phonebook list.

Tip

- For more information, see "Call from the phonebook" in the Phonebook section.

Call from the call log

You can return a call from the received or missed call log.

Tip

- For more information, see "Return a call" in the Call log section.

Note


- The call timer displays the talk time of your current call.

Note



- If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

End a call

You can end a call in these ways:

- Press  or
- Place the handset to the base station or charging cradle if [AUTO HANG-UP] is set to [ON].

Answer a call

When the phone rings, press  or  to answer the call.



Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.



Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.





Tip



- When there is a missed call, the handset displays a notification message.

Turn off the ringer for all incoming calls



There are two ways to turn off the ringer:

- 1 Press and hold  in standby mode.
↳  displays on the screen.
- 2 When the phone rings, press **BACK**.

Adjust the earpiece/speaker volume

Press  or  to adjust the volume during a call. The earpiece/speaker volume is adjusted and the phone is back to the call screen.

Mute the microphone

- 1 Press  during a call.
↳ The handset displays **[MUTE ON]**.
↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press  again to unmute the microphone.
↳ You can now communicate with the caller.

Turn the speaker on or off


Press .

Make a second call



Note

- This service is network dependent.

- 1 Press  during a call.
↳ The first call is put on hold.
- 2 Dial the second number.
↳ The number displayed on the screen is dialed out.


Answer a second call



Note

- This is a country dependent setting.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press **R** and **2_{ABC}** to answer the call.
↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press **R** and **I**  to end the current call and answer the first call.

Toggle between two calls


- 1 Press **R** and **2_{ABC}**.
↳ The current call is put on hold, and you are now connected to the other call.

Make a conference call with the external callers



Note

- This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, press **R** , then **3_{DEF}**.
↳ The two calls are combined and a conference call is established.



5 Intercom and conference calls

An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation among you, another handset user and the outside callers.

Make a call to another handset

Note

- If the base station only has 2 registered handsets, press **INT** to make a call to another handset.

- 1 Press **INT**.
↳ The handsets available for intercom are displayed.
- 2 Select a handset number, then press **OK** to confirm.
↳ The selected handset rings.
- 3 Press  on the selected handset.
↳ The intercom is established.
- 4 Press  to cancel or end the intercom call.

Note

- If the selected handset is occupied in a call, you hear a busy tone.

While you are on the phone


You can go from one handset to another during a call:

- 1 Press **INT**.
- 2 The current caller is put on hold.
- 3 Select a handset number, then press **OK** to confirm.
↳ Wait for the other side to answer your call.

Toggle between calls

Press **INT** to switch between the outside call and the intercom call.



Transfer a call

- 1 Press **INT** during a call.
- 2 Select a handset number, then press **OK** to confirm.
- 3 Press  when the other side answers your call.
↳ The call is now transferred to the selected handset.

Make a conference call

A 3-way conference call is a call between you, another handset user and the outside callers. It requires two handsets to share the same base station.

During an external call

- 1 Press **INT** to initiate an internal call.
↳ The handsets available for intercom are displayed.
↳ The external caller is put on hold.
- 2 Select a handset number, then press **OK** to confirm.
↳ The selected handset rings.
- 3 Press  on the selected handset.
↳ The intercom is established.
- 4 Press and hold **INT** on your handset.
↳ You are now on a 3-way conference call with the external call and the selected handset.
- 5 Press  to end the conference call.

During the conference call

- 1 Press **INT** to put the external call on hold and go back to the internal call.
↳ The external call is put on hold.
- 2 Press **INT** to toggle between the external and internal call.
- 3 Press and hold **INT** to establish the conference call again.





Note


 
- If a handset hangs up during the conference call, the other handset remains connected to the external call.

6 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **BACK** to delete the character. Press / to move the cursor left and right.

Key	Characters
0	0
1	space - 1
2	A B C 2
3	D E F 3
4	G H I 4
5	J K L 5
6	M N O 6
7	P Q R S 7
8	T U V 8
9	W X Y Z 9
	* ? / \ ()
	# ' , - . &

key	Characters (for Norwegian/ Danish)
0	0 Ø
1	space - 1
2	A Æ B C 2
3	D E F 3
4	G H I 4
5	J K L 5
6	M N O 6
7	P Q R S 7
8	T U V 8
9	W X Y Z 9

Key	Characters (for Greek)
0	0
1	space - 1
2	A B Γ 2
3	Δ E Z 3
4	H Θ 4
5	K Λ M 5
6	N Ξ O 6
7	Π P Σ 7
8	T Υ Φ 8
9	X Ψ Ω 9

Key	Characters (for Polish)
0	0
1	space - 1
2	A B C 2
3	D E F 3
4	G H I 4
5	J K L ł 5
6	M N O 6
7	P Q R S 7
8	T U V 8
9	W X Y Z 9

7 Phonebook

This phone has a phonebook that stores up to 50 records. You can access the phonebook from the handset. Each record can have a name up to 12 characters long and a number up to 24 digits long.

View the phonebook



Note

- You can view the phonebook on one handset only each time.

- 1 Press or press **MENU** > **[PHONEBOOK]** > **[LIST]** to access the phonebook list.
- 2 Select a contact and view the available information.

Search a record

You can search the phonebook records in these ways:

- Scroll the contacts list.
- Enter the first character of the contact.

Scroll the contact list

- 1 Press or press **MENU** > **[PHONEBOOK]** > **[LIST]** to access the phonebook list.
- 2 press and to scroll through the phonebook list.

Enter the first character of a contact

- 1 Press or press **MENU** > **[PHONEBOOK]** > **[LIST]** to access the phonebook list.

- 2 Press the alphanumeric key that corresponds to the character.
↳ The first record that starts with this character is displayed.

Call from the phonebook

- 1 Press or press **MENU** > **[PHONEBOOK]** > **[LIST]** to access the phonebook list.
- 2 Select a contact in the phonebook list.
- 3 Press to make the call.

Access the phonebook during a call

- 1 Press **OK**, select **[PHONEBOOK]** then press **OK** again to confirm.
- 2 Select the contact, then press **OK** to confirm.
↳ The number can be viewed.

Add a record



Note

- If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones.

- 1 Press **MENU**
- 2 Select **[PHONEBOOK]** > **[NEW ENTRY]**, then press **OK** to confirm.
- 3 Enter the name, then press **OK** to confirm.
- 4 Enter the number, then press **OK** to confirm.
↳ Your new record is saved.



Tip

- Press and hold to insert a pause.



Note

- The phonebook only saves new number entry.



Tip

- For more information on how to edit the numbers and name, see the section on Text and numbers.

Edit a record

- 1 Press **MENU**.
- 2 Select **[PHONEBOOK] > [EDIT ENTRY]**, then press **OK** to confirm.
- 3 Select the contact, then press **OK** to confirm.
- 4 Edit the name, then press **OK** to confirm.
- 5 Edit the number, then press **OK** to confirm.
 - ↳ The record is saved.

Delete a record

- 1 Press **MENU**.
- 2 Select **[PHONEBOOK] > [DELETE]**, then press **OK** to confirm.
- 3 Select a contact, then press **OK** to confirm.
 - ↳ The handset displays a confirmation request.
- 4 Press **OK** to confirm.
 - ↳ The record is deleted.

Delete all records

- 1 Press **MENU**.
- 2 Select **[PHONEBOOK] > [DELETE ALL]**, press **OK** to confirm.
 - ↳ The handset displays a confirmation request.
- 3 Press **OK** to confirm.
 - ↳ All records (except the 2 direct access memory records) are deleted.

Direct access memory

You have 2 direct access memories (Keys 1 and 2). To dial the saved phone number automatically, press and hold on the keys in standby mode.

Depending on your country, Keys 1 and 2 are preset to **[1_VOICEMAIL]** (voice mail number) and **[2_INFO SVC]** (information service number) of your network operator respectively.

Edit the direct access memory

- 1 Press **MENU > [PHONEBOOK] > [EDIT ENTRY]**, then press **OK** to confirm.
 - ↳ The 2 direct access memory records are displayed at the top of the contact list.
- 2 Select a direct memory access record.
- 3 Edit the name (except **1_** and **2_**), then press **OK** to confirm.
- 4 Edit the number, then press **OK** to confirm.
 - ↳ Your new record is saved.

8 Call log

The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider.

Your phone can store up to 10 call records. The call log icon on the handset flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.



Note

- Ensure the number in the call list is valid before you can call back directly from the call list.

View the call records

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **OK** and select **[VIEW]** for more available information.

Save a call record to the phonebook

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **OK** to confirm.
- 3 Select **[SAVE NUMBER]**, then press **OK** to confirm.
- 4 Enter and edit the name, then press **OK** to confirm.
- 5 Enter and edit the number, then press **OK** to confirm.
↳ The record is saved.

Delete a call record

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **OK** to confirm.
- 3 Select **[DELETE]**, then press **OK** to confirm.
↳ The handset displays a confirmation requests.
- 4 Press **OK** to confirm.
↳ The record is deleted.

Delete all call records

- 1 Press .
↳ The incoming call log is displayed.
- 2 Press **OK** to enter the options menu.
- 3 Select **[DELETE ALL]**, then press **OK** to confirm.
↳ The handset displays a confirmation requests.
- 4 Press **OK** to confirm.
↳ All records are deleted.

Return a call

- 1 Press .
- 2 Select a record on the list.
- 3 Press to make the call.


9 Redial list

The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 5 redial records.

View the redial records

Press **REDIAL**.

Redial a call

- 1 Press **REDIAL**.
- 2 Select the record you want to call. Press 
↳ The number is dialed out.

Save a redial record to the phonebook

- 1 Press **REDIAL** to enter the list of dialed calls.
- 2 Select a record, then Press **OK** to confirm.
- 3 Select [**SAVE NUMBER**], then press **OK** to confirm.
- 4 Enter and edit the name, then press **OK** to confirm.
- 5 Enter and edit the number; then press **OK** to confirm.
↳ The record is saved.

Delete a redial record

- 1 Press **REDIAL** to enter the list of dialed calls.
- 2 Select a record, then press **OK** to confirm.
- 3 Select [**DELETE**], then press **OK** to confirm.
↳ The handset displays a confirmation request.
- 4 Press **OK** to confirm.
↳ The record is deleted.

Delete all redial records

- 1 Press **REDIAL** to enter the list of dialed calls.
- 2 Press **OK** to enter the options menu.
- 3 Select [**DELETE ALL**], then press **OK** to confirm.
- 4 The handset displays a confirmation request.
- 5 Press **OK** to confirm.
↳ All records are deleted.

10 Self-defined settings

Customize the settings to make it your own phone.

Personalize the phone display

Name the handset

The name of the handset can be up to 10 characters. It is displayed on the handset screen in standby mode.

- 1 Press **MENU**.
- 2 Select **[PERSONAL SET] > [HANDSET NAME]**, then press **OK** to confirm.
- 3 Enter or edit the name. To erase a character, press **BACK**.
- 4 Press **OK** to confirm.
↳ The setting is saved.

Set the display language



Note

- This feature only applies to models with multiple-language support.
- Languages available for selection vary with different countries.

- 1 Press **MENU**.
- 2 Select **[PERSONAL SET] > [LANGUAGE]**, then press **OK** to confirm.
- 3 Select a language, then press **OK** to confirm.
↳ The setting is saved.

Personalize the sounds

Set the handset's ringtone

You can select from 10 ringtones.

- 1 Press **MENU**.

- 2 Select **[PERSONAL SET] > [HANDSET TONE] > [RING TONES]**, then press **OK** to confirm.
- 3 Select a ringtone, then press **OK** to confirm.
↳ The setting is saved.

Set the handset's ringtone volume

You can select among 5 ringtone volume levels or **[OFF]**.

- 1 Press **MENU**.
- 2 Select **[PERSONAL SET] > [HANDSET TONE] > [RING VOLUME]**, then press **OK** to confirm.
- 3 Select a volume level, then press **OK** to confirm.
↳ The setting is saved.



Tip

- To turn off the ringtone, press and hold **#** in standby mode. Then **📞** displays on the screen.

Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Press **MENU**.
- 2 Select **[PERSONAL SET] > [HANDSET TONE] > [KEY BEEP]**, then press **OK** to confirm.
- 3 Select **[ON]/[OFF]**, then press **OK** to confirm.
↳ The setting is saved.

Set the docking tone


Docking tone is the sound made when you place the handset on the base station/charger.

- 1 Press **MENU**.
- 2 Select **[PERSONAL SET] > [HANDSET TONE] > [DOCKING TONE]**, then press **OK** to confirm.
- 3 Select **[ON]/[OFF]**, then press **OK** to confirm.
↳ The setting is saved.

11 Call features

The phone supports a number of call-related features that help you handle and manage the calls.

Auto conference

To join an external call with another handset, press .

Activate/Deactivate auto conference

- 1 Press **MENU**.
- 2 Select **[ADVANCED SET] > [CONFERENCE]**, then press **OK** to confirm.
- 3 Select **[ON]/[OFF]**, then press **OK** to confirm.
↳ The setting is saved.

Auto hang up

To end a call, simply place the handset on the base station or charging cradle.

Activate/Deactivate auto hang up

- 1 Press **MENU**.
- 2 Select **[PERSONAL SET] > [AUTO HANG-UP]**, then press **OK** to confirm.
- 3 Select **[ON]/[OFF]**, then press **OK** to confirm.
↳ The setting is saved.

Note

- The speaker is on automatically when: 1. the auto hang up is off; 2. you place the handset to the base station or charging cradle when talking on the phone.

Dial mode

Note

 
- This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

Set the dial mode

- 1 Press **MENU**.
- 2 Select **[ADVANCED SET] > [DIAL MODE]**, then press **OK** to confirm.
- 3 Select a dial mode, then press **OK** to confirm.
↳ The setting is saved.

Note

- If your phone is in pulse dial mode, press  during a call for temporary tone mode. * displays. Digits entered for this call are then sent out as tone signals.

Select the recall duration

Ensure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[SHORT]**, **[MEDIUM]** and **[LONG]**. The number of available options varies with different countries. For details, consult your service provider.

- 1 Press **MENU**.
- 2 Select **[ADVANCED SET] > [RECALL TIME]**, then press **OK** to confirm.
- 3 Select an option, then press **OK** to confirm.
↳ The setting is saved.

Manage the area code

Note

- This feature only applies to models with area code support.

You can define an area code (up to 5 digits). This area code is automatically removed from an incoming call if it matches with the code you define. Then the phone number is saved in the call log without an area code.

Activate/Deactivate auto removal of area code

- 1 Press **MENU**.
- 2 Select **[ADVANCED SET] > [AREA CODE]**, then press **OK** to confirm.
- 3 Enter the area code, then press **OK** to confirm.
↳ The setting is saved.

Network type

Note

- This feature only applies to models with network type support.

- 1 Press **MENU**.
- 2 Select **[ADVANCED SET] > [NETWORK TYPE]**, then press **OK**.
- 3 Select a network type, then press **OK**.
↳ The setting is saved.

First ring

If you have subscribed for caller ID service with your service provider, your phone can suppress the first ring before the caller ID displays on the screen. After the phone is reset, it can detect automatically if the caller ID service is subscribed and start to suppress the first ring. You can change this setting to suit your preference. This feature only applies to models with first ring support.

Turn the first ring on/off

- 1 Press **MENU**.
- 2 Select **[ADVANCED SET] > [FIRST RING]**, then press **OK** to confirm.
- 3 Select **[ON]/[OFF]**, press **OK** to confirm.
↳ The setting is saved.

Note

- To reset the first ring status, go to the reset menu.

ECO mode

The **ECO** mode reduces the transmission power of the handset and base station.

- 1 Press **MENU**.
- 2 Select **[ADVANCED SET] > [ECO]**, then press **OK** to confirm.
- 3 Select **[ON]/[OFF]**, then press **OK** to confirm.
↳ The setting is saved.
↳ **ECO** is displayed.

Note

- When **ECO** is activated, the connection range between the handset and the base station can be reduced.

12 Extra features

Your phone offers you extra features which keep you organized and informed while on the move.

Auto clock

Note

- This service is network dependent.

It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. For the date to be synchronized, ensure the current year is set.


- 1 Press **MENU**.
- 2 Select **[CLOCK-ALARM] > [AUTO CLOCK]**, then press **OK** to confirm.
- 3 Select **[ON]/[OFF]**. Press **OK**.
↳ The setting is saved. .

Alarm clock



Your phone has a built-in alarm clock. Check the information below to set your alarm clock.

Set the alarm

- 1 Press **MENU**.
- 2 Select **[CLOCK-ALARM] > [ALARM]**, then press **OK** to confirm.
- 3 Select **[ON ONCE]** or **[ON DAILY]**, then press **OK** to confirm.

- 4 Enter an alarm time.
- 5 Press **OK** to confirm.
↳ The alarm is set and  is displayed on the screen.

Tip

- Press  /  to switch between **[AM]/[PM]** .

Turn off the alarm

When the alarm rings

- 1 Press any key to turn off the alarm or place the handset to the base station or charging cradle.

Before the alarm rings

- 1 Press **MENU**.
- 2 Select **[CLOCK-ALARM] > [ALARM]**, then press **OK** to confirm.
- 3 Select **[OFF]**, then press **OK** to confirm.
↳ The setting is saved.

Set the alarm melody

- 1 Press **MENU**.
- 2 Select **[CLOCK-ALARM] > [ALARM TONE]**, then press **OK** to confirm.
- 3 Select a new melody, then press **OK** to confirm.
↳ The setting is saved.


Note

- The alarm volume is set to the same level as the ringer volume. If the ringer is off, the alarm volume is set to level 1.

Keypad lock

You can lock the keypad to prevent accidental button presses.

Lock the keypad


- 1 Press and hold  in standby mode.
↳ The keypad is locked.



 
 
Note

- When the keypad is locked, no call can be made. You can still answer the incoming calls. The keypad is unlocked during the call but is locked automatically after you finish the call.

Unlock the keypad

- 1 Press and hold .
↳ The keypad is unlocked.

Locate the handset

- 1 Press  on the base station.
↳ All handsets connected to this base station ring.
- 2 Press  on the base station again to stop ringing.
↳ All handsets stop ringing; or
- 3 Press any key on one handset to stop ringing.

13 Advanced settings

Enhance the audio quality

XHD (Extreme High Definition) sound mode is an exclusive feature which transmits high fidelity signals to the handset. It makes the phone conversations sound like real-life conversations. When you are in standby mode,

- 1 Press **MENU**.
- 2 Select **[ADVANCED SET] > [XHD SOUND]**, then press **OK** to confirm.
- 3 Select **[ON]/[OFF]**, then press **OK** to confirm.
↳ The setting is saved.

When you are in a call,

- 1 Press **OK** to enter the options menu.
- 2 Change the XHD setting.
- 3 Press **OK** to confirm.
↳ The setting is saved.

Register the handsets

You can register additional handsets to the base station. The base station can register up to 4 handsets.

Auto registration

- 1 Place the unregistered handset on the base station.
↳ The handset detects the base station and start to register automatically.
↳ Registration is completed in less than 2 minutes. The base station automatically assigns a handset number to the handset.

Manual registration

If auto registration fails, register your handset manually to the base station.

- 1 Press **MENU** on the handset.
- 2 Select **[ADVANCED SET] > [REGISTER]**, then press **OK** to confirm.
- 3 Press and hold **•••** on the base station for 5 seconds.
- 4 Enter the system PIN. Press **BACK** to make corrections.
- 5 Press **OK** to confirm the PIN.
↳ Registration is completed in less than 2 minutes. The base automatically assigns a handset number to the handset.



Note

- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.



Note

- The preset PIN is 0000. No change can be made on it.

Unregister the handsets

- 1 If two handsets share the same base station, you can unregister a handset with another handset.
- 2 Press **MENU**.
- 3 Select **[ADVANCED SET] > [UNREGISTER]**, then press **OK** to confirm.
- 4 Enter the system PIN. (The preset PIN is 0000). Press **BACK** to remove the number.
- 5 Select the handset number to be unregistered.
- 6 Press **OK** to confirm.
↳ The handset is unregistered.



Tip

- The handset number displays beside the handset name in standby mode.

Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Press **MENU**.
- 2 Select **[ADVANCED SET] > [RESET]**, then press **OK** to confirm.
 - ↳ The handset displays a confirmation request.
- 3 Press **OK** to confirm.
 - ↳ All settings are reset.
 - ↳ The welcome screen displays.



Tip

- For more information about the default settings, see the section on Default settings.

14 Default settings

Language*	Country dependent
Handset name	PHILIPS
Date	01/01/10
Date format*	DD/MM
Time	00:00am
Time format*	24-hour
Alarm	Off
Phonebook list	Unchanged
Recall time*	Country dependent
First ring*	Country dependent
Dial mode*	Tone
Area code*	Empty
Carrier code*	Empty
Handset ring melody	Melody 1
Alarm tone	Melody 1
Receiver volume	Volume 3
Handset ring volume	Level 3
Handset key beep	On
XHD sound	Off
Incoming call log	Empty
Redial list	[NO NUMBER]
PIN code	0000



Note

- *Country dependent features

15 Technical data

Display

- Amber LCD backlight

General telephone features

- Caller name & number identification
- Conference call and voicemails
- Intercom
- Maximum talk time: 12 hours

Phonebook list, Redial list and Call log

- Phonebook list with 50 entries
- Redial list with 5 entries
- Call log with 10 entries

Battery

- GP Batteries: PH50AAAHC size AAA NiMH 1.2V 500mAh
- BYD Company Limited: H-AAA500A-Z size AAA NiMH 1.2V 500mAh

Adapter

Base and charger:

- Salom Electric (Xiamen) Co., Ltd. : SSW-1920: Input: 100-240V 50/60Hz 200mA; Output: DC6V 500mA
- Salcomp (Shenzhen) Co., Ltd.: VT0300: Input: 100-240V 50/60Hz 150mA Output: DC6V 500mA

Power consumption

- Power consumption in standby mode: 0.6W

Weight and dimensions

- Handset: 139 grams
- 163.4 × 47.2 × 29.1 mm (H × W × D)
- Base: 145.2 grams
- 130.4 × 111.2 × 87.7 mm (H × W × D)
- Charger: 51.2 grams
- 96.2 × 80.2 × 74.2 mm (H × W × D)

Temperature range

- Operation: 0°C to +35°C (32°F to 95°F)
- Storage: -20°C to +45°C (-4°F to 113°F)

Relative humidity

- Operation: Up to 95% at 40°C
- Storage: Up to 95% at 40°C

16 Frequently asked questions

No signal bar displays on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays [UNREGISTERED], register the handset.



Tip

- For more information, see "Register the handsets" on the Advanced settings section.

If I fail to register the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.

No dialing tone

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

No docking tone

- The handset is not placed properly on the base station/charger.
- The docking tone setting is off.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

The handset on the charger does not charge.

- Ensure the batteries are inserted correctly.
- Ensure the handset is placed properly on the charger. The battery icon animates when charging.
- Batteries are defective. Purchase new ones from your dealer.

No display

- Ensure the batteries are charged.
- Ensure there are power and phone connections.

Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.



The handset does not ring.

Ensure the handset ringtone is turned on.

The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

When I see [WAITING] on the screen, what is happening with the phone?

The phone is recalling the memory of the phonebook and call log. Both information are stored in the base station. Then the handset retrieves the data from the base station after a few seconds. When you press  /  the call log/phonebook information is displayed on the handset.

The handset loses connection with the base or the sound is distorted during a call.

Check if the ECO mode is activated. Turn it off to increase the handset range and enjoy the optimal call conditions.



Note

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

	ANNEX 1
English	Hereby, Philips Consumer Lifestyle, BU P&A, declares that this [type of equipment] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Finnish	Philips Consumer Lifestyle, BU P&A vakuuttaa täten että [type of equipment] tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Dutch	Hierbij verklaart, Philips Consumer Lifestyle, BU P&A dat het toestel [type of equipment] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
French	Par la présente, Philips Consumer Lifestyle, BU P&A, déclare que l'appareil [type of equipment] est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE
Swedish	Härmed intygar, Philips Consumer Lifestyle, BU P&A, att denna (type of equipment] står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Danish	Undertegnede Philips Consumer Lifestyle, BU P&A erklærer herved, at følgende udstyr [type of equipment] overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF
German	Hiermit erklärt Philips Consumer Lifestyle, BU P&A die Übereinstimmung des Gerätes [Type of equipment] mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 1999/5/EG.
Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Philips Consumer Lifestyle, BU P&A ΔΗΛΩΝΕΙ ΟΤΙ [type of equipment] ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK
Italian	Con la presente Philips Consumer Lifestyle, BU P&A dichiara che questo (type of equipment) è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Spanish	Por medio de la presente, Philips Consumer Lifestyle, BU P&A, declara que el (type of equipment) cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE
Portuguese	Philips Consumer Lifestyle, BU P&A declara que este [type of equipment] está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
	Property of Philips Consumer Lifestyle



CE 0168



Be responsible
Respect copyrights

© 2010 Koninklijke Philips Electronics N.V.

All rights reserved.

IFU_SE171_EN_V1.1

WK10372