

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

CEM3000



---

EN User manual

---

RU Руководство пользователя

---

**PHILIPS**

# Contents

<b>1 Important</b>	4
Safety	4
Notice	4
<b>2 Your car audio system</b>	6
Introduction	6
What's in the box	6
Overview of the main unit	7
Overview of the remote control	8
<b>3 Get started</b>	10
Install the car audio	10
Attach the front panel	10
Install remote control battery	10
Turn on	11
Select country/region	11
Set clock	11
<b>4 Listen to radio</b>	11
Tune to a radio station	11
Store radio stations in memory	12
Tune to a preset station	12
<b>5 Play with RDS</b>	12
Turn on RDS	12
Select program type	12
Select alternate frequencies	13
Receive traffic announcement	13
Set RDS clock	13
<b>6 Play audio files</b>	14
Play a disc	14
Play from USB	15
Search for an MP3/WMA track	15
View play information	15
Repeat play	15
Shuffle play	16
Intro play	16
Play from iPod/iPhone	16
Connect external sound source	17

<b>7 Adjust sound</b>	18
Adjust volume	18
Mute	18
Turn DBB and subwoofer on/off	18
Select preset equalizer	18
Turn on/off max sound	18
Other sound settings	18
<b>8 Adjust system settings</b>	19
Select anti-shock setting	19
Turn beep sound on/off	19
Select blackout setting	19
Turn demo mode on/off	19
LCD Color	19
Reset	20
<b>9 Additional information</b>	21
Detach the front panel	21
Replace fuse	21
Remove the unit	21
<b>10 Product information</b>	22
<b>11 Troubleshooting</b>	23
<b>12 Glossary</b>	24

# 1 Important

## Safety

- Read and understand all instructions before you use your apparatus. If damage is caused by failure to follow instructions, the warranty does not apply.
- This apparatus is designed for negative ground (earth) 12 V DC operation only.
- To ensure safe driving, adjust the volume to a safe and comfortable level.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.
- Use only the supplied mounting hardware for a safe and secure installation.
- To avoid short circuit, do not expose the apparatus, remote control or remote control batteries to rain or water.
- Never insert objects into the ventilation slots or other openings on the apparatus.
- Clean the apparatus and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the apparatus.
- Never place any objects other than discs into the apparatus.
- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Risk of damage to the apparatus screen! Never touch, push, rub or strike the screen with any object.

### ! Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- 
- The apparatus shall not be exposed to dripping or splashing.

- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

## Notice



Be responsible  
Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

“Works with iPhone” means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

This apparatus includes this label:



## Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.



This product complies with the radio interference requirements of the European Community.

## Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

2010 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

## 2 Your car audio system

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Introduction

With the in-car audio system, you can enjoy your drive while listening to:

- FM or AM (MW) radio
- Audio from CD or MP3 disc
- Audio from USB devices
- Audio from iPod/iPhone
- Audio from other external devices

The unit supports the following media format:




### What's in the box



Check and identify the contents of your package:





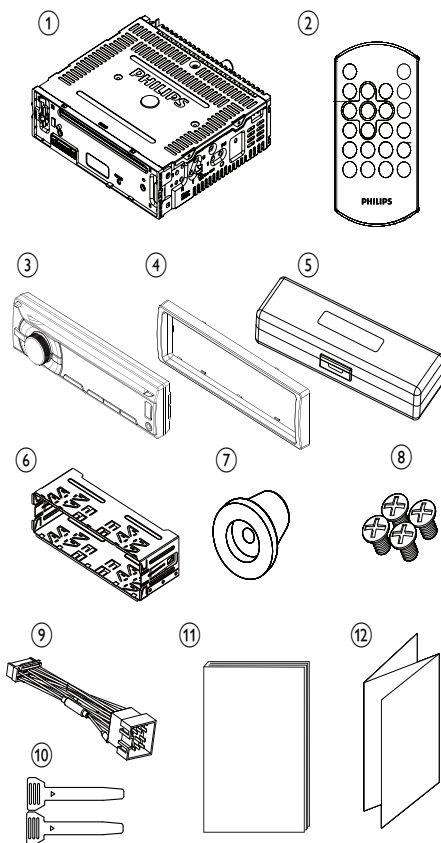


- ① Main unit
- ② Remote control
- ③ Front panel

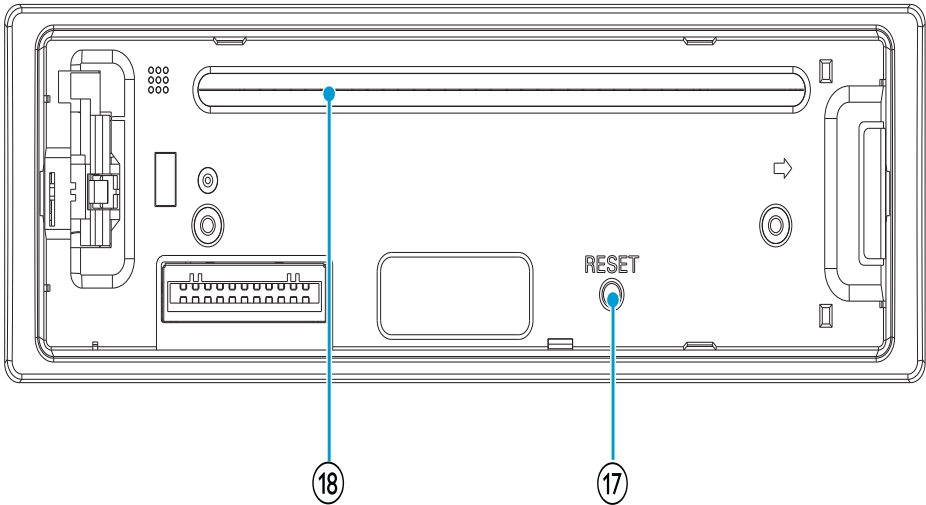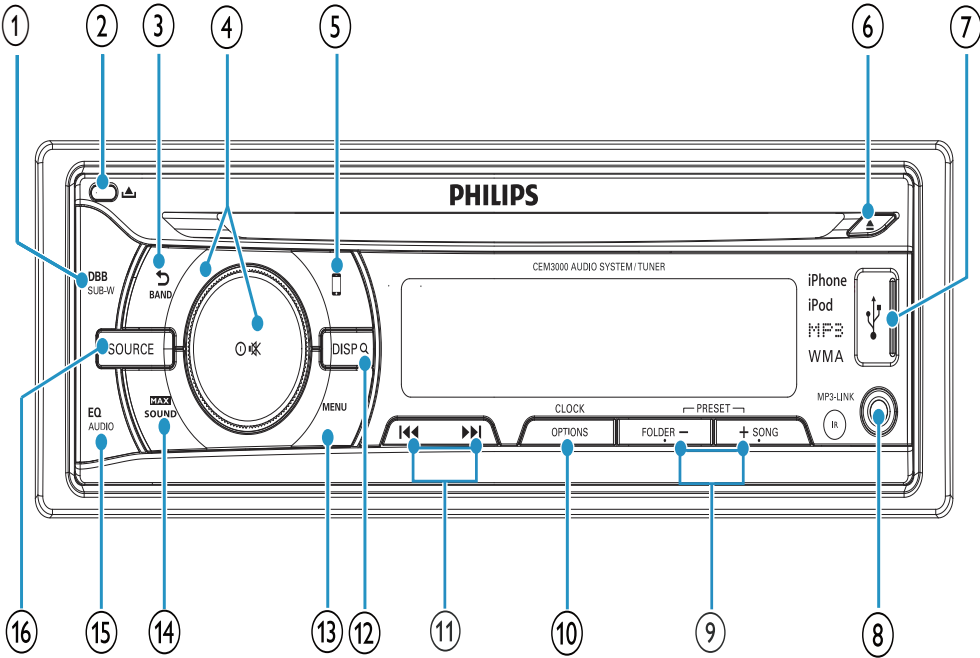- ④ Trim plate
- ⑤ Carrying case for front panel
- ⑥ Sleeve
- ⑦ Rubber cushion
- ⑧ Screws x 4 pcs
- ⑨ Standard ISO connector
- ⑩ Disassembly tools x 2 pcs
- ⑪ User manual
- ⑫ Quick start guide




# Overview of the main unit



- ① **DBB/SUB-W**
  - Turn on or off Dynamic Bass Boost (DBB) sound.
  - Turn on or off subwoofer.
- ② 
  - Unlock the panel.
- ③ **BAND/** 
  - Select tuner band.
  - Return to previous menu.
- ④ 
  - Turn the unit on or off.
  - Confirm selection.
  - Mute or unmute sound.
  - Rotate to adjust settings.
- ⑤ 
  - Enter iPod/iPhone control mode.
- ⑥ 
  - Eject disc.
- ⑦ 
  - Connector for USB and iPod/iPhone.
- ⑧ **MP3 LINK**
  - Connect external audio device.
- ⑨ **+SONG/FOLDER -**
  - Select preset radio station.
  - Search for track/folder.
  - Access manual store.
- ⑩ **OPTIONS/CLOCK**
  - Access option menu.
  - View clock.
- ⑪ 
  - Tune for radio station.
  - Skip/search for track.
  - Fast forward/backward playback.
- ⑫ **DISP/▼**
  - In FM/USB mode, press and hold to select LCD color.
  - In tuner or iPod/iPhone mode, press briefly to display station info or iPod/iPhone info.
  - In iPod/iPhone mode, press and hold to access music search mode.

- ⑬ **MENU**
  - Access system menu.
- ⑭ **MAX SOUND**
  - Select MAX Sound audio setting.
- ⑮ **EQ AUDIO**
  - Select equalizer (EQ) setting.
  - Access audio setting menu.
- ⑯ **SOURCE**
  - Select audio source.
- ⑰ **RESET**
  - Restore default settings.
- ⑱ **Disc slot**

## Overview of the remote control

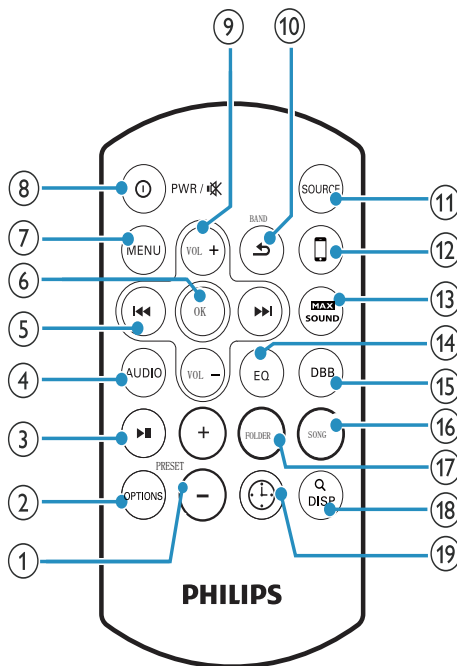

- ① **PRESET +/-**
  - Select preset radio station.
  - Access manual store.

- ② **OPTIONS**
  - Access option menu.
- ③ **▶||**
  - Start play.
  - Pause or resume play.
- ④ **AUDIO**
  - Access audio setting menu.
- ⑤ **⏮⏭**
  - Tune to a radio station
  - Skip track.
  - Fast backward/forward playback
- ⑥ **OK**
  - Confirm selection.
- ⑦ **MENU**
  - Access system menu.
- ⑧ **⏻/PWR/⏻**
  - Turn the unit on or off.
  - Mute or restore volume.
- ⑨ **VOLUME +/-**
  - Adjust volume.
- ⑩ **BAND/↶**
  - Select tuner band.
  - Return to previous/top menu.
- ⑪ **SOURCE**
  - Select audio source.
- ⑫ **📱**
  - Enter iPod/iPhone control mode.
- ⑬ **MAX SOUND**
  - Select MAX Sound audio setting.
- ⑭ **EQ**
  - Select equalizer (EQ) setting.
- ⑮ **DBB**
  - Turn on or off Dynamic Bass Boost (DBB) sound.
- ⑯ **SONG**
  - Search for track.
- ⑰ **FOLDER**
  - Search for folder.
- ⑱ **DISP/▼**
  - In FM/USB mode, press and hold to select LCD color.
  - In tuner or iPod/iPhone mode, press briefly to display station info or iPod/iPhone info.
  - In iPod/iPhone mode, press and hold to access music search mode.
- ⑲ **CLOCK**
  - View clock.



## 3 Get started

### ! Caution

- Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your apparatus. The model number and serial number are on the bottom of your apparatus. Write the numbers here:

Model No. \_\_\_\_\_


Serial No. \_\_\_\_\_

## Install the car audio


Please refer to the "Installation guide" in Quick start guide.

## Attach the front panel

- 1 Attach the trim plate.

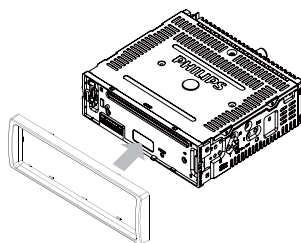

- 2 Insert the right side of the panel in the chassis until it is correctly engaged.
- 3 Press the left side of the panel until the mechanism locks it into place.

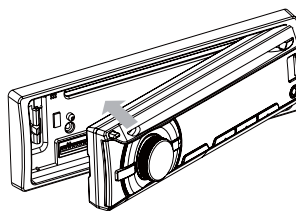

## Install remote control battery

### ! Caution


- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Perchlorate Material - special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

For first-time use:

- 1 Remove the protective tab to activate the remote control battery.

To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert one CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

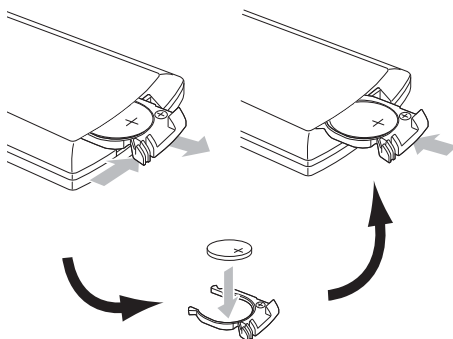

## Turn on

- 1 Press **⏻** to turn on the unit.
  - To turn off the unit, press **⏻** for over 3 seconds.

## Select country/region



### Note

- Select correct country/region for this unit, otherwise the unit can not work properly.

- 1 Press **⏻** to turn on the unit.
  - ↳ **[SELECT OPERATING REGION]** is displayed.
- 2 Rotate **⏻** to select an option:
  - **[USA]** (United States)
  - **[Latin]** (Latin America)
  - **[Europe]** (Western Europe)
  - **[ASIA]** (Asia Pacific)
  - **[Mid-East ]** (Middle East)
  - **[Russia]** (Russia)
- 3 Press **⏻** to confirm.

## Set clock

- 1 Press **MENU**.
- 2 Press **⏻** repeatedly until **[CLK SET]** displays.
- 3 Rotate **⏻** encoder clockwise to set hour.
- 4 Press **⏻** to confirm.
- 5 Rotate **⏻** encoder anti-clockwise to set minute.
- 6 Press **⏻** to confirm.

## View clock

- 1 Press and hold **OPTIONS** repeatedly until the clock is displayed.

# 4 Listen to radio

## Tune to a radio station

- 1 Press **SOURCE** repeatedly to select radio mode.
- 2 Press **BAND/** to select band: **[FM1]**, **[FM2]**, **[FM3]**, **[AW1]** or **[AW2]** .
- 3 Press **⏮** or **⏭** to tune to a radio station manually.
  - ↳ The radio station is broadcast.
  - ↳ To search for a radio station automatically, press **⏮** or **⏭** for over 3 seconds.

## Select tuner region

You can select suitable country/region of the radio.

- 1 Press **SOURCE** to select Radio mode.
- 2 Press **MENU**.
- 3 Press **⏮** repeatedly until **[AREA]** displays.
- 4 Rotate **⏻** to select:
  - **[USA]** (United States)
  - **[LATIN]** (Latin America)
  - **[Europe]** (Western Europe)
  - **[OIRT]** (Russia)

## Select tuner sensitivity

To receive more radio stations or only stations with strong signal, you can adjust the tuner sensitivity.

- 1 Press **OPTIONS** repeatedly to select **[LOCAL SEEK]**.
- 2 Rotate **⏻** to select a setting:
  - **[LOCAL SEEK ON]**: Only stations with strong signal can be broadcast.
  - **[LOCAL SEEK OFF]**: Stations with strong and weak signals can be broadcast.

# Store radio stations in memory

You can store up to 6 stations in each band.

## Store stations automatically

- 1 Press **OPTIONS** repeatedly until **[AUTO-STORE]** displays.
- 2 Press **⏻** to confirm.
  - ↳ The six strongest stations of the selected band are saved in preset channel automatically.

## Store stations manually

- 1 Tune to a station that you want to store.
- 2 Press and hold **+ / PRESET** or **- / RRESET** to enter storing mode.
  - ↳ The preset number on LCD screen blinks..
- 3 Press **+ / PRESET** or **- / RRESET** to select storing location.
- 4 Press **⏻** to confirm.
  - ↳ The station is saved in the selected channel.
  - ↳ The preset number on LCD screen lights up and remains on.


## Tune to a preset station

- 1 Press **BAND / ⏮** to select band.
- 2 Press **+ / PRESET** or **- / RRESET** to select the preset station.

# 5 Play with RDS

The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. If you tune to an RDS station, an RDS icon and information about the presenter, station or program is displayed.

## Turn on RDS

 **Note**

- The default setting for RDS is off.

- 1 Press **MENU**.
- 2 Press **⏮ ⏭** repeatedly until **[RDS]** displays.
- 3 Rotate **⏻** to select **RDS ON**:
  - ↳ The RDS function is turned on.

## Select program type

Before tuning to RDS stations, you can select program type and let the unit search only for programs of the selected category.

- 1 Press **OPTIONS** until **[PTY]** displays.
- 2 Press **⏻** to confirm.
- 3 Rotate **⏻** to select a type, then press **⏻** to confirm.

Item	Program type	Description
1	NEWS	News services
2	AFFAIRS	Politics and current affairs
3	INFO	Special information programs
4	SPORT	Sports
5	EDUCATE	Education and advanced training

6	<b>DRAMA</b>	Radio plays and literature
7	<b>CULTURE</b>	Culture, religion and society
8	<b>SCIENCE</b>	Science
9	<b>VARIED</b>	Entertainment programs
10	<b>POP M</b>	Pop music
11	<b>ROCK M</b>	Rock music
12	<b>EASY M</b>	Light music
13	<b>LIGHT M</b>	Light classical music
14	<b>CLASSICS</b>	Classical music
15	<b>OTHER M</b>	Special music programs
16	<b>WEATHER</b>	Weather
17	<b>FINANCE</b>	Finance
18	<b>CHILDREN</b>	Children's programs
19	<b>SOCIAL</b>	Social Affairs
20	<b>RELIGION</b>	Religion
21	<b>PHONE IN</b>	Phone In
22	<b>TRAVEL</b>	Travel
23	<b>LEISURE</b>	Leisure
24	<b>JAZZ</b>	Jazz Music
25	<b>COUNTRY</b>	Country Music
26	<b>NATION M</b>	National Music
27	<b>OLDIES</b>	Oldies Music
28	<b>FOLK M</b>	Folk Music
29	<b>DOCUMENT</b>	Documentary
30	<b>TEST</b>	Alarm Test
31	<b>ALARM</b>	Alarm

## Select alternate frequencies

If the radio signal is poor, turn on AF (Alternate Frequency) to search for another station with stronger signal.

- 1 Press **OPTIONS**.
- 2 Press **◀▶▶▶** repeatedly until **[AF]** displays.
- 3 Rotate **⊕** to select a setting:
  - **[AF ON]**: Turn on the AF mode.
  - **[AF OFF]**: Turn off the AF mode.

## Set region for AF tuning

You can define AF tuning region:

<b>[REG ON]</b>	Only stations in current region can be tuned to automatically.
<b>[REG OFF]</b>	All stations can be tuned to automatically.

- 1 Press **MENU**.
- 2 Press **◀▶▶▶** repeatedly until **[REG]** displays.
- 3 Rotate **⊕** to select a setting.

## Receive traffic announcement

If you do not want to miss traffic announcement when enjoying music, turn on the TA (Traffic Announcement) function.

- 1 Press **OPTIONS**.
- 2 Press **◀▶▶▶** repeatedly until **[TA]** displays.
- 3 Rotate **⊕** to select a setting:
  - **[TA ON]**: When there is traffic announcement, the unit switches to the tuner mode (regardless of the current mode) and begins to broadcast the traffic conditions. When the traffic announcement is over, it returns to the previous mode.
  - **[TA OFF]**: Traffic announcement does not cut in.

## Set RDS clock

You can use time signal that is broadcast together with the RDS signal to set the clock of the unit automatically.

- 1 Press **MENU**.
- 2 Press **◀▶▶▶** repeatedly until **[CT]** displays.
- 3 Rotate **⊕** to select a setting:

- **[CT ON]:** Turn on the RDS clock. Time shown on the unit synchronizes with that on the RDS station.
- **[CT OFF]:** Turn off the RDS clock.



#### Tip

- The accuracy of the transmitted time depends on the RDS station that transmits the time signal.

## 6 Play audio files



#### Note

- Ensure that the disc or device contains playable files.

### Play a disc



#### Note

- You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio CDs and these discs:

- CD-Recordables (CD-R)
- CD-Re-writables (CD-RW)
- MP3 CDs
- WMA CDs



#### Note

- Ensure that the disc contains playable content.

- 1 Insert a CD with the printed side facing up.
  - ↳ Play starts automatically.
  - To pause CD play, press **⏸**.
  - To resume CD play, press **⏸** again.
  - To skip to the previous/next track, press **⏮** or **⏭**.
  - To search backward/forward rapidly within the current track, press **⏮** or **⏭** for 3 seconds.

#### Remove the CD

To take out the CD, press **⏏** on the front panel.



#### Tip

- If the disc is blocked in the disc compartment, press and hold **⏏** until the disc comes out.


## Play from USB




### Note


- Ensure that the USB device contains playable music.

### Insert the USB device

- 1 Slide the USB socket cover marked  to the left.
- 2 Insert the USB device into the USB socket.  
↳ The unit starts playing from the USB device automatically.

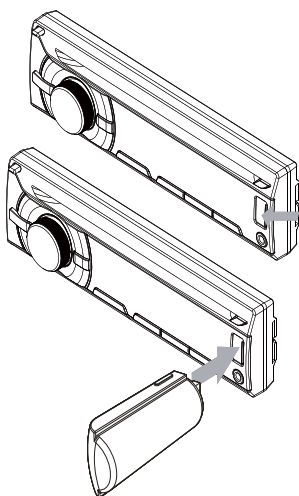



### Remove the USB device





- 1 Press  to turn off the unit.
- 2 Remove the USB device.

## Search for an MP3/WMA track

Search within the current folder

- 1 Press **+SONG**.  
↳ The name of the current track displays.
- 2 Rotate  to select another track in current folder
- 3 Press  to confirm.

### Search in other folder

- 1 Press **FOLDER -**.  
↳ The name of the current folder displays.
- 2 Rotate  to navigate through all folders.
- 3 Press  to access the selected folder.
- 4 Rotate  to select a track in the folder.
- 5 Press  to start play.




### Tip

- To go back to upper level of a folder, press .

## View play information

- 1 During playing, press **DISP** repeatedly to view:
  - Track number and elapsed play time
  - Artist
  - Album
  - Title
  - Folder
  - File

## Repeat play

- 1 During play, press **OPTIONS** repeatedly until **[REPEAT]** displays.
- 2 Rotate  to select a setting.
  - **[REPEAT ALL]**: play all tracks repeatedly.

- **[REPEAT TRK]:** play current track repeatedly.
- **[REPEAT FLD]:** play all tracks in the current folder repeatedly.

---

## Shuffle play

You can play the tracks in random order:

- 1 During play, press **OPTIONS** repeatedly until **[RANDOM]** displays.
- 2 Rotate **⌚** to select a setting:
  - **[RANDOM OFF]:** Turn off random play.
  - **[RANDOM FLD]:** start random play for all tracks in the current folder.
  - **[RANDOM ALL]:** start random play for all tracks.

---

## Intro play

You can play the first 10 seconds of each track.

- 1 During play, press **OPTIONS** repeatedly until **[INTRO]** displays.
- 2 Rotate **⌚** to select a setting:
  - **[INTRO OFF]:** Cancel intro play and start normal play.
  - **[INTRO FLD]:** Start intro play in the current folder.
  - **[INTRO ALL]:** Play the first 10 seconds of each track.

---

## Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this unit.

---

### Compatible iPod/iPhone

Apple iPod and iPhone models with a 30-pin dock connector:


Made for:


- iPod nano (2nd generation)

- iPod nano (3rd generation, 4GB only)
  - iPod nano (3rd generation, 8GB only)
  - iPod nano (4th generation)
  - iPod nano (5th generation)
  - iPod classic (1st generation)
  - iPod classic (2nd generation)
  - iPod touch (1st generation)
  - iPod touch (2nd generation)
  - iPod touch (3rd generation)
  - iPod video (30GB, 80GB only)
- Works with
- iPhone
  - iPhone 3G
  - iPhone 3GS
  - iPhone 4


---

### Connect iPod/iPhone



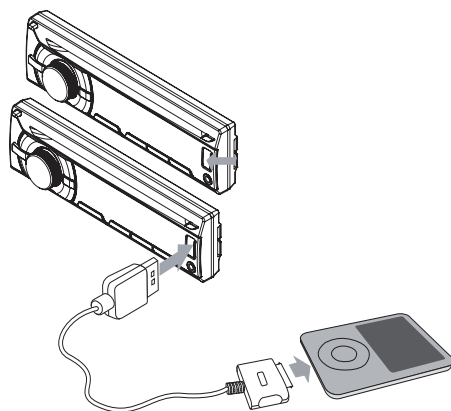


 
- 1 Slide the USB socket cover marked  to the left.
- 2 Insert USB adaptor on one end of iPod/iPhone cable to the USB socket on the main unit.
- 3 Insert the other end of the iPod/iPhone cable to the iPod/iPhone socket.
  - ↳ The unit starts playing from the USB device automatically.








 

 
## Control music playback on iPod/iPhone

- 1 Ensure that the iPod/iPhone is connected correctly.
- 2 Press **SOURCE** to select iPod USB mode.
- 3 Press  repeatedly to toggle between the two control modes:
  - **iPod control mode:** Use the buttons/touch screen on iPod/iPhone to control the music.
  - **Audio control mode:** Use the control buttons on car audio to control the music.

### To control playback under audio control mode:

- To pause/resume play, press .
- To skip to a track, press .
- To search during play, press and hold , then release to resume normal play.
- To navigate the menu, press , rotate  to select, then press  to confirm.

## Search for an MP3/WMA track

- 1 Press **SOURCE** repeatedly to select iPod mode.
- 2 Press **BAND**/ to browse iPod/iPhone menu.
- 3 Rotate  to select the Artist search mode, and press  to confirm.
- 4 Press **DISP**/ to search alphabetically.
- 5 Rotate  to select desired artist, then press  to confirm.
- 6 Rotate  to select desired song in current album.
- 7 Press  to start play.



### Note

- User cannot control the music via iPod/iPhone under audio control mode.

## Connect external sound source

- 1 Connect the external sound source to **MP3 LINK** socket with a 3.5 mm cable.
- 2 Press **SOURCE** repeatedly until **[MP3 LINK]** is displayed.
- 3 Operate the external component (refer to the instructions supplied with the external component).



# 7 Adjust sound

---

## Adjust volume

- 1 Turn  $\odot$  clockwise/anticlockwise to increase/decrease volume.

## Mute

You can turn off the sound of your audio.

- 1 During play, press  $\odot$ .
  - To resume sound, press  $\odot$  again.

## Turn DBB and subwoofer on/off

- 1 Press **DBB**, then the current setting is displayed:
  - ↳ **[DBB ON]**: The Dynamic Bass Boost (DBB) function is on.
  - ↳ **[DBB OFF]**: The DBB function is off.
- 2 Press **DBB** again to change the DBB setting.
- 3 Press and hold **DBB** to access subwoofer settings:
  - ↳ **[SUBWOOFER ON]**: The subwoofer function is on.
  - ↳ **[SUBWOOFER OFF]**: The subwoofer function is off.

## Select preset equalizer

- 1 Press **EQ/Audio**.
  - ↳ Current Equalizer setting is displayed.
- 2 Press **EQ/Audio** again to select a preset EQ setting:
  - **[OPTIMAL]** (optimal)
  - **[FLAT]** (flat)

- **[POP]** (pop)
- **[USER]** (user)
- **[TECHNO]** (techno)
- **[ROCK]** (rock)
- **[CLASSIC]** (classic)
- **[JAZZ]** (jazz)

## Turn on/off max sound

- 1 Press **MAX SOUND**.
  - ↳ The current setting displays
  - ↳ **[MAX ON]**: The maximum sound (max sound) function is on.
  - ↳ **[MAX OFF]**: The maximum sound function is off.

## Other sound settings

You can also adjust the preset **EQ/Audio** settings.

- 1 Press **EQ/Audio** for 3 seconds.
- 2 Press **◀▶** repeatedly to select the item to be adjusted:
  - **[BASS LEVEL]** range: -7 to +7
  - **[BASS CFQ]** (bass center frequency) range: 60, 80, 100, 200.
  - **[MIDDLE LEVEL]** range: -7 to +7
  - **[MIDDLE CFQ]** (middle center frequency) range: 0.5k, 1.0k, 1.5k, 2.5k.
  - **[TREBLE LEVEL]** range: -7 to +7
  - **[TREBLE CFQ]** (treble center frequency) range: 10.0k, 12.5k, 15.0k, 17.5k.
  - **[BALANCE]** range: 12L to 12R. (L= left speaker, R = right speaker)
  - **[FADER]** range: 12R to 12F. (R = rear speaker, F = front speaker)
  - **[SUBWOOFER]** range: 0 to 12.
  - **[RESUME]**: Resume the preset EQ value to factory default value.
- 3 Rotate  $\odot$  to select a value.

## 8 Adjust system settings

### Select anti-shock setting

You can select anti-shock setting according to the stability of your car and the condition of the road.

- 1 Press **MENU**.
- 2 Press **◀▶▶▶** repeatedly until **[ESP]** displays.
- 3 Turn **⊕** to select a setting:
  - **[ESP 10S]**: when the road is smooth and there are few bumps.
  - **[ESP 40S]**: when the road is bumpy and unstable.

### Turn beep sound on/off

Each time you press a button, the unit beeps. You can turn on or off this beep sound.

- 1 Press **MENU**.
- 2 Press **◀▶▶▶** repeatedly until **[BEEP]** displays.
- 3 Rotate **⊕** to select a setting:
  - **[BEEP ON]**: Turn on the beep sound.
  - **[BEEP OFF]**: Turn off the beep sound.

### Select blackout setting

You can set the screen to turn off automatically after the unit is idle for 10 or 20 seconds.

- 1 Press **MENU**.
- 2 Press **◀▶▶▶** repeatedly until **[BLKOUT]** displays.
- 3 Rotate **⊕** to select a setting:

- **[BKO 10 S]** : Turn off the screen automatically 10 seconds after last operation.
- **[BKO 20 S]** : Turn off the screen automatically 20 seconds after last operation.
- **[BKO OFF]** : Never turn off the screen.

### Turn demo mode on/off

- 1 Press **MENU**.
- 2 Press **◀▶▶▶** repeatedly until **[DEMO]** displays.
- 3 Rotate **⊕** to select a setting:
  - **[DEMO ON]** : Turn on the demo mode. When the unit is idle for more than 10 seconds, all functions are displayed.
  - **[DEMO OFF]** : Turn off the demo mode.

### LCD Color

You can change LCD background color:

- 1 Press **MENU**.
- 2 Press **◀▶▶▶** repeatedly until **[LCD COLOR]** displays.
- 3 Rotate **⊕** to select a setting:
  - **[DEFAULT]** (default setting)
  - **[COLOR SCAN]** (color scan)
  - **[WHITE]** (white)
  - **[GREEN 1]** (green 1)
  - **[GREEN 2]** (green 2)
  - **[GREEN 3]** (green 3)
  - **[AMBER]** (amber)
  - **[PINK 1]** (pink 1)
  - **[PINK 2]** (pink 2)
  - **[PURPLE 1]** (purple 1)
  - **[PURPLE 2]** (purple 2)
  - **[BLUE 1]** (blue 1)
  - **[BLUE 2]** (blue 2)
  - **[USER COLOR]** (user color)

---

## Turn demo mode on/off


- 1 Press **MENU**.
- 2 Press **◀▶** repeatedly until **[LCD COLOR]** displays.
- 3 Press **⊙**.
- 4 Rotate **⊙** to select **[USER COLOR]**.
- 5 Press **⊙** to confirm.
- 6 Rotate **⊙** to adjust color of the LCD.  
R(red)/G(green)/B(blue)
- 7 Press **↵** to exit user color setting mode.

---

## Reset

You can reset the unit to its default setting.


- 1 Detach the front panel.
- 2 Press the reset button by using a ball-point pen or a similar tool.
  - ↳ Preset adjustments such as preset channels and sound adjustments are erased.

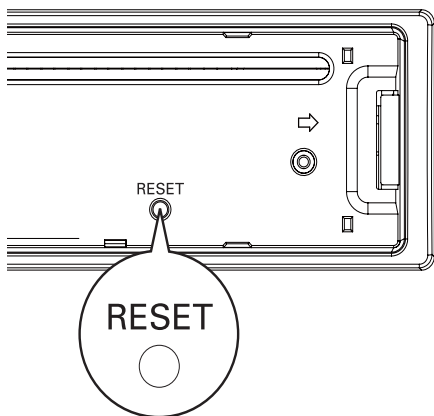


## 9 Additional information

### Detach the front panel

You can detach the front panel to deter theft.

- 1 Press  to release the panel.
- 2 Push the left side of the panel rightward.

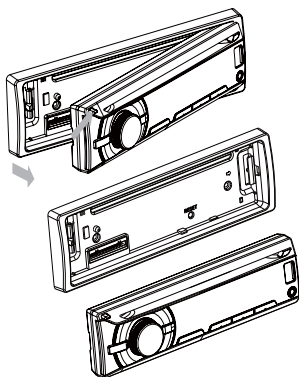


- 3 Pull the panel towards you to disengage it from the chassis.
- 4 Store the panel in the supplied carry case to protect it from dirt or damage.

### Replace fuse

If the fuse is damaged,

- 1 Check the electric connection.
- 2 Buy a fuse that matches the voltage of the damaged fuse.
- 3 Replace the fuse.

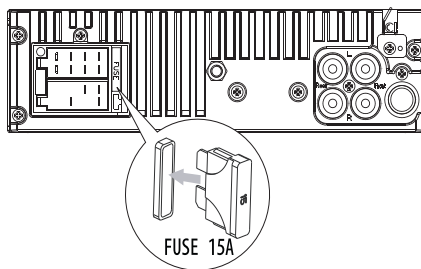


#### Note

- If the new fuse gets damaged again, there may be an internal malfunction. Consult your Philips dealer.

### Remove the unit

You can remove the unit from the dashboard.

- 1 Detach the front panel.
- 2 Pull out the unit by using the disassembly tools.

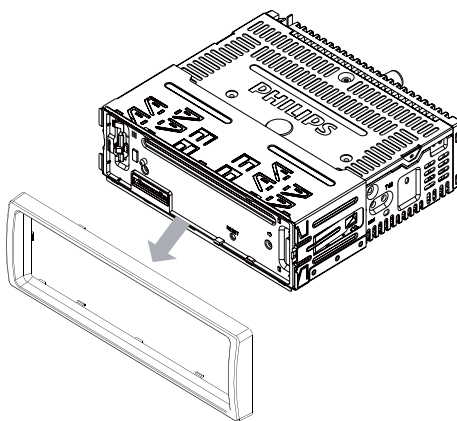

# 10 Product information



## Note

- Product information is subject to change without prior notice.

Power supply	12 V DC (11 V - 16 V), negative ground
Fuse	15 A
Suitable speaker impedance	4 - 8 $\Omega$
Maximum power output	50 W $\times$ 4 channels
Continuous power output	24 W $\times$ 4 RMS (4 $\Omega$ 10% T.H.D.)
Pre-Amp output voltage	2.5 V
Aux-in level	$\geq$ 500 mV
Dimensions (W $\times$ H $\times$ D)	188 $\times$ 58 $\times$ 201 mm
Weight	1.47 kg

## Radio

Frequency range - FM	65.0 - 74.0 MHz 87.5 - 108.0 MHz (100kHz per step in auto search and 50kHz per step in manual search)
Frequency range - AM(MW)	522 - 1620 KHz (9 kHz) 530 - 1710 kHz (10 kHz)
Usable sensitivity - FM	8 $\mu$ V
Usable sensitivity - AM(MW) (S/N = 20 dB)	30 $\mu$ V

## Compatible USB devices:

- USB flash memory: USB 1.1 host with interface reading all speed support (1.1, 2.0)
- USB flash players: USB 1.1 host with interface reading all speed support (1.1, 2.0)

## Supported formats:

- USB or memory file format: FAT16, FAT32
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA V4, V7, V8, V9 (L1, L2)
- ISO9660, Joliet
- Maximum title number: 512 (depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 2 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates: 2~256 (kbps), variable bit rates
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: CD maximum 99, USB maximum 199
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length 64 bytes)

## Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

# 11 Troubleshooting



## Caution

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.philips.com/support](http://www.philips.com/support)). When you contact Philips, ensure that your apparatus is nearby and the model number and serial number are available.

## No power or no sound.

- Car engine is not on. Turn the car engine on.
- Cable is not correctly connected. Check connections.
- Fuse is burnt. Replace fuse.
- Volume is too low. Adjust volume.
- If the above solutions cannot help, press the RESET button.
- Ensure that the track played is of a compatible format.

## Noise in broadcasts.

- Signals are too weak. Select other stations with stronger signals.
- Check the connection of the car antenna.
- Change broadcast from Stereo to mono.

## Cannot play disc

- Ensure that the disc label is inserted with the printed side facing up.
- Wipe the disc with fibre cleaning cloth from the centre to the edge in a straight line.
- This disc may be defective. Play another disc.
- Ensure that the CD is a finalised CD/CD-R/CD-RW.
- Ensure that the CD is not encoded with copyright protection technologies.

## The CD skips tracks

- Ensure that the CD is not damaged or dirty.
- Ensure that random mode is deactivated.

## Disc cannot be ejected

- Press and hold ▲.

## Preset stations lost.

- Battery cable is not correctly connected. Connect the battery cable to the terminal that is always live.

## Display show ERR-12

- USB data error. Check the USB device.

# 12 Glossary

---

## M

### **MP3**

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

---

## W

### **WMA (Windows Media Audio)**

An audio format owned by Microsoft, is a part of Microsoft Windows Media technology. Includes Microsoft Digital Rights Management tools, Windows Media Video encoding technology, and Windows Media Audio encoding technology.

