
Quick Start Guide





What's in the Box?

You should find these items upon opening the box.

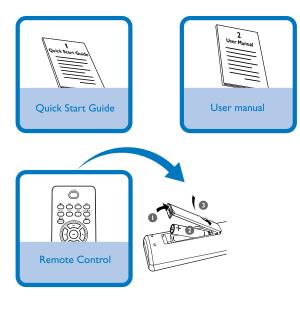




Connection


1 Connect the speaker wires to the **SPEAKERS** terminals.

2 Connect the power cord of the system to the AC power outlet.

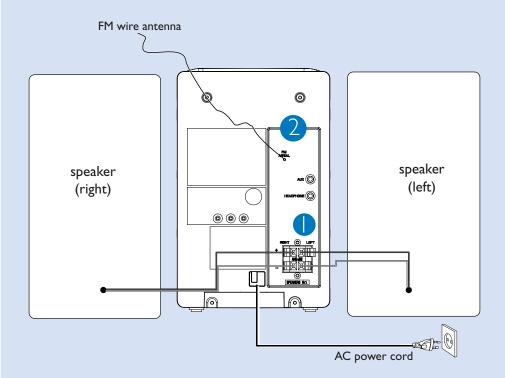

Tip:


It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.

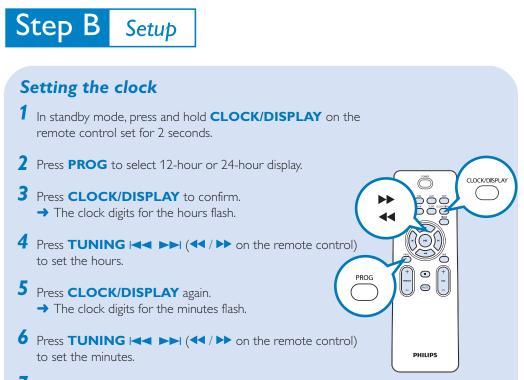

7 Press CLOCK/DISPLAY to confirm the time.



- 1 Select CD source.
- ${f 2}$ Lift the CD door on the top of the system to open the CD compartment.
- 3 Insert a disc with the printed side facing up and press down on **PULL TO OPEN** to close the CD door.
- 4 Press ► to start playback.
- 5 Press **t** to stop playback.

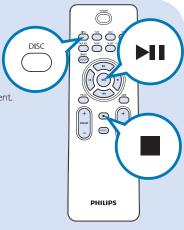

Programming and tuning to radio stations

1 Select TUNER source.

Step B Setup

2 Press **PROG** on the remote control for more than two seconds to program all available stations in order of waveband.

3 Press PRESET +/- until the desired preset station is displayed

Tip:

Detailed playback features and additional functions are described in the accompanied owner's manual. Notes for the remote control: – First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or AUX, for example).

- Then select the desired function (\triangleright II, $| \blacktriangleleft, \triangleright|$ for example).



© 2010 Koninklijke Philips Electronics N.V. All rights reserved.

http://www.philips.com

