

Always there to help you

Register your product and get support at
www.philips.com/support

Question?
Contact
Philips

XL390

XL395



User manual

PHILIPS

Contents

| | | | | | |
|---|--|----|---|--|----|
| 1 | Important safety instructions | 3 | 5 | Intercom and conference calls | 18 |
| 2 | Your phone | 5 | | Make a call to another handset | 18 |
| | What is in the box | 5 | | Transfer a call | 18 |
| | Overview of the phone | 6 | | Make a conference call | 18 |
| | Overview of the base station | 7 | 6 | Text and numbers | 20 |
| | Display icons | 8 | | Enter text and numbers | 20 |
| 3 | Get started | 9 | | Switch between uppercase and lowercase | 20 |
| | Connect the base station and charger | 9 | 7 | Phonebook | 21 |
| | Install the handset | 10 | | View the phonebook | 21 |
| | Configure your phone (country dependent) | 11 | | Search a record | 21 |
| | Change the remote access PIN code | 12 | | Call from the phonebook | 21 |
| | Charge the handset | 12 | | Access the phonebook during a call | 22 |
| | Check the battery level | 13 | | Add a record | 22 |
| | What is standby mode? | 13 | | Edit a record | 22 |
| | Check the signal strength | 13 | | Delete a record | 22 |
| 4 | Calls | 14 | | Delete all records | 23 |
| | Make a call | 14 | | Direct keys | 23 |
| | End a call | 15 | 8 | Call log | 24 |
| | Answer a call | 15 | | Call list type | 24 |
| | Adjust the earpiece/speaker volume | 16 | | View the call records | 25 |
| | Mute the microphone | 16 | | Save a call record to the phonebook | 25 |
| | Turn the speaker on or off | 16 | | Return a call | 25 |
| | Make a second call | 16 | | Delete a call record | 25 |
| | Answer a second call | 16 | | Delete all call records | 25 |
| | Switch between two calls | 17 | 9 | Redial list | 26 |
| | Make a conference call with external callers | 17 | | View the redial records | 26 |
| | | | | Redial a call | 26 |

| | | | |
|---------------------------------------|-----------|--|-----------|
| Save a redial record to the phonebook | 26 | | |
| Delete a redial record | 26 | | |
| Delete all redial records | 26 | | |
| 10 Phone settings | 27 | 14 Telephone answering machine | 37 |
| Sound settings | 27 | Turn the answering machine on or off | 37 |
| ECO mode | 28 | Set the answering machine language | 38 |
| Name the handset | 28 | Announcements | 38 |
| Set the backlight of the LCD screen | 29 | Incoming messages (ICM) | 40 |
| Set the date and time | 29 | Remote access | 42 |
| Set the display language | 29 | | |
| 11 Alarm clock | 30 | 15 Technical data | 44 |
| Set the alarm | 30 | 16 Notice | 45 |
| Turn off the alarm | 30 | Use GAP standard compliance | 45 |
| | | Compliance with EMF | 45 |
| | | Disposal of your old product and batteries | 45 |
| 12 Services | 31 | 17 Frequently asked questions | 47 |
| Call list type | 31 | 18 Appendix | 49 |
| Auto conference | 31 | 19 Index | 51 |
| Network type | 31 | | |
| Auto prefix | 31 | | |
| Select the recall duration | 32 | | |
| Dial mode | 32 | | |
| Register the handsets | 33 | | |
| Unregister the handsets | 34 | | |
| Restore default settings | 34 | | |
| 13 Network services | 35 | | |
| Call forward | 35 | | |
| Call return | 35 | | |
| Call back service | 36 | | |
| Hide your identity | 36 | | |

1 Important safety instructions

Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

To avoid damage or malfunction



Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Always use the cables provided with the product.

- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not allow the product to come into contact with liquids.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.

About operating and storage temperatures

- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.

2 Your phone

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What is in the box



Base station (XL390)



Base station (XL395)



Handset**



Charger**



Power adapter**



Line cord*



Guarantee



User manual



Quick start guide




Note

* In some countries, you have to connect the line adapter to the line cord, then plug the line cord into the telephone socket.

** In multi-handset packs, there are additional handsets, chargers and power adapters.

Overview of the phone

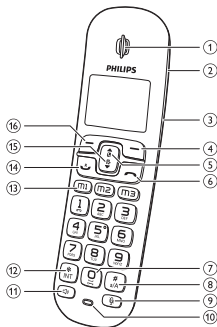

① Earpiece

② Loudspeaker

③ Battery door

④

- Delete text or digits.
- Cancel operation.

⑤

- Scroll up on the menu.
- Increase the earpiece/speaker volume.
- Access the phonebook.

⑥

- End the call.
- Exit the menu/operation.

⑦

- Press to enter a space during text editing.
- Press and hold to lock/unlock the keypad in standby mode.

⑧

- Press and hold to enter a pause.
- Press and hold to switch to uppercase and lowercase during editing.

⑨

Mute/unmute the microphone.

⑩ Microphone

⑪

- Turn the speaker phone on/off.
- Make and receive calls through the speaker.

⑫

Press and hold to make an intercom call (for multi handset version only).

⑬ M1/M2/M3

Save the call records for quick dial.

⑭

- Make and receive calls.
- Recall key

15



- Scroll down on the menu.
- Decrease the earpiece/speaker volume.
- Access the call log.


16



- Access the main menu.
- Confirm selection.
- Enter the options menu.
- Select the function displayed on the handset screen directly above the key.

Overview of the base station

XL390

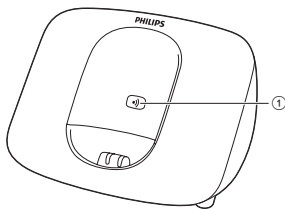


1



- Find handsets.
- Enter registration mode.

XL395

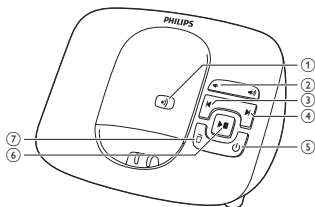

1



- Find handsets.
- Enter the registration mode.

2



- Decrease/increase the speaker volume.

3



- Skip backward during playback.

4



- Skip forward during playback.

5



- Turn the answering machine on or off.

6



- Play messages.
- Stop messages playback.
















7



- Delete the current playback message.

Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

| Icon | Descriptions |
|---|--|
|  | When the handset is off the base station/charger, the bars indicate the battery level (from full to low). |
|  | When the handset is on the base station/charger, the bars keep scrolling until charging is complete. |
|  | The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging. |
|  | It displays the link status between the handset and base station. The more bars are shown, the better the signal strength is. |
|  | It remains steadily on when browsing incoming calls in the call log. |
|  | It indicates an outgoing call in the redial list. |
|  | It flashes when there is a new missed call or when browsing new missed calls. It remains steadily on when the missed calls in the call log are read. |
|  | It flashes when receiving an incoming call. It remains steadily on when you are in a call. |
|  | The speaker is on. |
|  | The alarm clock is activated. |
|  | The ringer is off. |
|  | Answering machine: it flashes when there is a new message. It displays when the telephone answering machine is turned on. |
|  | It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message. |
|  | The silent mode is activated. |
|  | The ECO mode is activated. |

3 Get started



Caution

- Make sure that you have read the safety instructions in the 'Important safety instruction' section before you connect and install your handset.

Connect the base station and charger



Warning


- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or underside of the phone.
- Use only the supplied power adapter to charge the batteries.



Note


- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, make sure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by DSL interference. For further information on DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.

- 1 Connect each end of the power adapter to:
 - the DC input jack at the back of the base station;
 - the power socket on the wall.
- 2 Connect each end of the line cord to:
 - the telephone socket at the back of the base station;
 - the telephone socket on the wall.

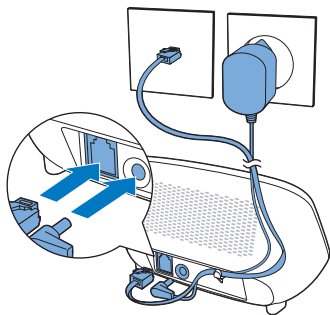


3 Connect each end of the power adapter to (for multi handset versions only):

- the DC input jack at the back of the extra handset charger;
- the power socket on the wall.

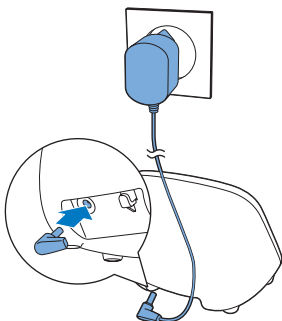

Install the handset

The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

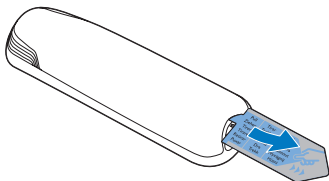

Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.



Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are charging, it is normal.



Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

Configure your phone (country dependent)

- 1 When using your phone for the first time, you see a welcome message.
- 2 Press **[OK]**.

Set the country/language

Select your country/language, then press **[OK]** to confirm.

- ↳ The country/language setting is saved.

Note

- The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time.

To re-set the language, see the following steps.

- 1 Select **[Menu]** > **[Phone setup]** > **[Language]**, then press **[OK]** to confirm.
- 2 Select a language, then press **[OK]** to confirm.
 - ↳ The setting is saved.



Set the date and time

Tip

- To set the date and time later, press **[Back]** to skip this setting.

- 1 Select **[Menu]** > **[Phone setup]** > **[Date & time]**, then press **[OK]** to confirm.
- 2 Press the numeric buttons to enter the date, then press **[OK]** to confirm.
 - ↳ The time setting menu is displayed on the handset.
- 3 Press the numeric buttons to enter the time.

Note

- If the time is in 12-hour format, press  /  to select **[AM]** or **[PM]**.

- 4 Press **[OK]** to confirm.

Change the remote access PIN code



Note

- The default answering machine remote access PIN code is 0000 and it is important to change it to ensure the security.

- 1 Select **[Menu]** > **[Answ. Machine]** > **[Remote access]** > **[Change PIN]**, then press **[OK]** to confirm.
- 2 Enter the old PIN, then press **[OK]** to confirm.
- 3 Enter the new PIN code, then press **[OK]** to confirm.
- 4 Enter the new PIN code again, then press **[Save]** to confirm.
↳ The setting is saved.

Charge the handset

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

↳ The handset starts charging.




Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.

You can activate or deactivate the docking tone (see 'Set the docking tone' on page 28) .

Your phone is now ready to use.

Check the battery level

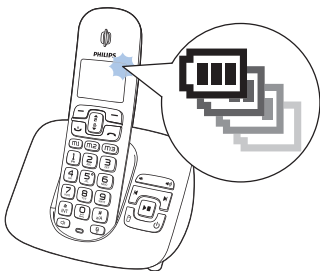

The battery icon displays the current battery level.

- ☐ When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).
When the handset is on the base station/charger, the bars flash until charging is complete.
- ☐ The empty battery icon flashes. The battery is low and needs recharging.

The handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning.

What is standby mode?

Your phone is in standby mode when it is idle. The standby screen displays the handset name, handset number, date and time.

Check the signal strength

- The number of bars indicates the link status between the handset and base station. The more bars are shown, the better the connection is.
- Make sure the handset is linked to the base station before you make or receive calls and carry out the functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset closer to the base station.

4 Calls



Note

- When the power fails, the phone cannot access emergency services. When the power fails, the phone cannot access emergency services.



Tip

- Check the signal strength before you make a call or when you are in a call (see 'Check the signal strength' on page 11).

Make a call

You can make a call in these ways:

- Quick call
- Quick call through the direct keys
- Dial before you call
- Redial the most recent number
- Call from the redial list.
- Call from the phonebook list
- Call from the call log

Quick call

- 1 Press or .
- 2 Dial the phone number.
 - ↳ The number is dialed out.
 - ↳ The duration of your current call is displayed.

Call through the direct key

To make a quick call from the record pre-saved in the direct key, press or , then press **M1**, **M2** or **M3**.

↳ The number is dialed out.



Tip

- For information of how to set the direct keys, see the next section.

Set the direct keys

- 1 Enter the number; then press and hold **M1**, **M2** or **M3**.
- 2 Enter the name, then press **[OK]** to confirm.
- 3 Edit the number if necessary; then press **[Save]** to confirm.
 - ↳ The direct key is set.



Note

- If there is already a record saved in the direct key, you need to confirm whether you want to replace the old record with the new one.

Dial before you call

- 1 Dial the phone number
 - To erase a digit, press **[Clear]**.
 - To enter a pause, press and hold **#** a/A.
- 2 Press or to dial out the call.

Call from the redial list

You can make a call from the redial list (see 'Redial a call' on page 26).

Redial the most recent number

- 1 Press **[Redial]**.
 - ↳ The redial list is displayed and the most recent number is highlighted.
- 2 Press **[Call]**.
 - ↳ The most recent number is then dialed out.

Call from the phonebook

You can make a call from the phonebook list (see 'Call from the phonebook' on page 21).

Call from the call log

You can return a call from the received or missed call log (see 'Return a call' on page 25).



Note

- The call timer displays the talk time of your current call.



Note

- If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

End a call

You can end a call in these ways:

- Press **[End Call]**; or
- Place the handset to the base station or charging cradle.

Answer a call

When there is an incoming call, the phone rings and the LCD backlight flashes. Press **[Call]** or **[Mute]** to answer the call.



Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.



Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.





Tip

- When there is a missed call, a notification message appears.

Turn off the ringer for an incoming call



When the phone rings, press **[Silent]**.

Adjust the earpiece/speaker volume

Press  /  to adjust the volume during a call.

- ↳ The earpiece/speaker volume is adjusted and the phone is back to the call screen.

Mute the microphone

- 1 Press  during a call.
 - ↳ The handset displays **[Mute on]**.
 - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press  again to unmute the microphone.
 - ↳ You can now communicate with the caller.


Turn the speaker on or off

Press .

Make a second call

Note

- This service is network dependent.





- 1 Press  during a call.
 - ↳ The first call is put on hold.
- 2 Dial the second number.
 - ↳ The number displayed on the screen is dialed out.

Answer a second call

Note



- This service is network dependent.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press  and  to answer the call.
 - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press  and  to end the current call and answer the first call.

Switch between two calls

You can switch your calls in these ways:

- Press  and ; or
- Press **[Option]** and select **[Switch calls]**, then press **[OK]** again to confirm.
 - ↳ The current call is put on hold, and you are now connected to the other call.



Make a conference call with external callers



Note

- This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, you can make a conference call in these ways:

- Press , then ; or
- Press **[Option]**, select **[Conference]** and then press **[OK]** again to confirm.
 - ↳ The two calls are combined and a conference call is established.

5 Intercom and conference calls



An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between you, another handset user and the outside callers.

Make a call to another handset



Note

- If the base station only has 2 registered handsets, press and hold ***_{INT}** to make a call to another handset.

- 1 Press and hold ***_{INT}**.
↳ The handsets available for intercom are displayed.
- 2 Select a handset number; then press **[OK]** to confirm.
↳ The selected handset rings.
- 3 Press  on the selected handset.
↳ The intercom is established.
- 4 Press **[Cancel]** or  to cancel or end the intercom call.



Note

- If the selected handset is busy, **[Busy]** is displayed on the handset screen.

While you are on the phone


You can go from one handset to another during a call:

- 1 Press and hold ***_{INT}**.
↳ The current caller is put on hold.
- 2 Select a handset number; then press **[OK]** to confirm.
↳ Wait for the other side to answer your call.

Switch between calls

Press **[Extern]** to switch between the internal and external call.

Transfer a call

- 1 Press and hold ***_{INT}** during a call.
↳ The handsets available for intercom are displayed.
- 2 Select a handset number; then press **[OK]** to confirm.
- 3 Press  when the other side answers your call.
↳ The call is now transferred to the selected handset.

Make a conference call

A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

During an external call

- 1 Press and hold ***_{INT}** to initiate an internal call.
 - ↳ The handsets available for intercom are displayed.
 - ↳ The external caller is put on hold.
- 2 Select or enter a handset number; then press **[OK]** to confirm.
 - ↳ The selected handset rings.
- 3 Press **[Join]** on the selected handset.
 - ↳ The intercom is established.
- 4 Press **[Conf]**.
 - ↳ You are now in a 3-way conference call with an external call and a selected handset.
- 5 Press **[End]** to end the conference call.



Note

- Press **[Join]** to join an ongoing conference with another handset if **[Services] > [Conference]** is set to **[Auto]**.

During the conference call

- Press **[Int.]** to put the external call on hold and go back to the internal call.
 - ↳ The external call is put on hold.
- Press **[Conf]** to establish the conference call again.



Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.

6 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **[Clear]** to delete the character.
- 3 Press **␣** to add a space.



Tip

- For further information on the text and number input, see the chapter 'Appendix'.

Switch between uppercase and lowercase

By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press and hold **#/A** to switch between the uppercase and lowercase letters.

7 Phonebook

This phone has a phonebook that stores up to 100 records. You can access the phonebook from the handset. Each record can have a name up to 14 characters long and a number up to 24 digits long. There are 2 direct access memories (keys **1** and **2**). Depending on your country, keys **1** and **2** are preset to the voice mail number and information service number of your service provider respectively. When you press and hold on the key in standby mode, the saved phone number is dialed automatically.

View the phonebook



Note

- You can view the phonebook on one handset only each time.

- Press **☰** or select **[Menu] > [Phonebook] > [View] > [OK]** to access the phonebook list.
- Press **☰** / **☷** to scroll through the phonebook entries.

Search a record

You can search the phonebook records in these ways:

- Scroll the contact list.
- Enter the first character of the contact.

Scroll the contact list

- Press **☰** or select **[Menu] > [Phonebook] > [View] > [OK]** to access the phonebook list.
- Press **☰** / **☷** to scroll through the phonebook list.

Enter the first character of a contact

- Press **☰** or select **[Menu] > [Phonebook] > [View] > [OK]** to access the phonebook list.
- Press the alphanumerical key that matches the character:
 - ↳ The first record that starts with this character is displayed.

Call from the phonebook

- Press **☰** or select **[Menu] > [Phonebook] > [View] > [OK]** to access the phonebook list.
- Select a contact in the phonebook list.
- Press **☎** to make the call.

Access the phonebook during a call

- 1 Press **[Option]** and select **[Phonebook]**.
- 2 Press **[OK]** to confirm.
- 3 Select a contact, then press **[OK]** to confirm.
↳ The number is displayed.

Add a record



Note

- If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones.

- 1 Select **[Menu] > [Phonebook] > [Add new]**, then press **[OK]** to confirm.
- 2 Enter the name, then press **[OK]** to confirm.
- 3 Enter the number, then press **[Save]** to confirm
↳ Your new record is saved.



Tip

- Press and hold **#** _{a/A} to insert a pause.



Note

- The phonebook overwrites the old number with the new number.



Tip

- Press **[Clear]** to delete the character. Press **⬅** / **➡** to move the cursor left and right.

Edit a record

- 1 Select **[Menu] > [Phonebook] > [Edit]**, then press **[OK]** to confirm.
- 2 Edit the name, then press **[OK]** to confirm.
- 3 Edit the number, then press **[Save]** to confirm.
↳ The record is saved.

Delete a record

- 1 Select **[Menu] > [Phonebook] > [Delete]**.
- 2 Select a contact, then press **[OK]** to confirm.
↳ The handset displays a confirmation request.
- 3 Press **[OK]** to confirm.

Delete all records

- 1 Select **[Menu]** > **[Phonebook]** > **[Delete all]**, then press **[OK]** to confirm.
↳ The handset displays a confirmation request.
- 2 Press **[OK]** to confirm.
↳ All records are deleted.

Direct keys

The phone features 3 direct keys to store the emergency phone numbers or numbers you call frequently.

Set the direct keys

- 1 Enter the number, then press and hold **M1**, **M2** or **M3**.
- 2 Enter the name, then press **[OK]** to confirm.
- 3 Edit the number if necessary, then press **[Save]** to confirm.
↳ The direct key is set.



Note

- If there is already a record saved in the direct key, you need to confirm whether you want to replace the old record with the new one.

8 Call log

The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider. Your phone can store up to 50 call records. The call log icon on the handset flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.



Note

- Make sure the number in the call list is valid before you can call back directly from the call list.

The icons shown on the screen tell you whether they are missed/received calls.

| Icons | Description |
|-------|---|
| | It remains steadily on when browsing incoming calls in the call log. |
| | It flashes when there is a new missed call or when browsing new missed calls. It remains steadily on when the missed calls in the call log are read. |


Call list type

You can view all incoming calls or missed calls from this menu.


Select the call list type

- 1 Select **[Menu]** > **[Services]** > **[Call list type]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.
↳ The setting is saved.



View the call records

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **[Option]** > **[View]** to view the available information.


Save a call record to the phonebook

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **[Option]**.
- 3 Select **[Save number]**, then press **[OK]** to confirm.
- 4 Enter and edit the name, then press **[OK]** to confirm.
- 5 Enter and edit the number; then press **[Save]** to confirm.
↳ The record is saved.


Return a call

- 1 Press .
- 2 Select a record on the list.
- 3 Press  to make the call.

Delete a call record

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **[Option]** to confirm.
- 3 Select **[Delete]**, then press **[OK]** to confirm.
↳ The handset displays a confirmation requests.
- 4 Press **[OK]** to confirm.
↳ The record is deleted.

Delete all call records

- 1 Press .
↳ The incoming call log is displayed.
- 2 Press **[Option]**.
- 3 Select **[Delete all]**, then press **[OK]** to confirm.
↳ The handset displays a confirmation request.
- 4 Press **[OK]** to confirm.
↳ All records are deleted.

9 Redial list

The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 20 redial records.

View the redial records

- 1 Press **[Redial]**.
↳ The dialed calls list is displayed.

Redial a call

- 1 Press **[Redial]**.
- 2 Select the record you want to call. Press **[R]**.
↳ The number is dialed out.

Save a redial record to the phonebook

- 1 Press **[Redial]** to enter the list of dialed calls.
- 2 Select a record, then press **[Option]** to confirm.
- 3 Select **[Save number]**, then press **[OK]** to confirm.
- 4 Enter and edit the name, then press **[OK]** to confirm.
- 5 Enter and edit the number, then press **[Save]** to confirm.
↳ The record is saved.

Delete a redial record

- 1 Press **[Redial]** to enter the list of dialed calls.
- 2 Select a record, then press **[Option]** to confirm.
- 3 Select **[Delete]**, then press **[OK]** to confirm.
↳ The handset displays a confirmation request.
- 4 Press **[OK]** to confirm.
↳ The record is deleted.

Delete all redial records

- 1 Press **[Redial]** to enter the list of dialed calls.
- 2 Select **[Option] > [Delete all]**, then press **[OK]** to confirm.
↳ The handset displays a confirmation request.
- 3 Press **[OK]** to confirm.
↳ All records are deleted.

10 Phone settings

You can customize the settings to make it your own phone.

Sound settings

Set the handset's ringtone volume

You can select among 5 ringtone volume levels or [Off].

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Ring volume]**, then press **[OK]** to confirm.
- 2 Select a volume level, then press **[OK]** to confirm.
↳ The setting is saved.

Set the handset's ringtone

You can select from 10 ringtones.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Ring tones]**, then press **[OK]** to confirm.
- 2 Select a ringtone, then press **[OK]** to confirm.
↳ The setting is saved.


Silent mode

You can set your phone to silent mode and enable the silent mode for a specified duration. When the silent mode is turned on, your phone does not ring and does not sound the key tone and docking tone.



Note

- When you press **[Mute]** to find your handset, or when you activate the alarm, your phone still sends alert even when the silent mode is activated.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Silent mode]**, then press **[OK]** to confirm.
- 2 Select **[On/off]** > **[On]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.
- 3 Select **[Start & end]**, then press **[OK]** to confirm.
- 4 Set the time, then press **[OK]** to confirm.
↳ The setting is saved.
↳  is displayed.

Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Key tone]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.

Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Docking tone]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.

Set the hearing aid compatibility

You can use the phone with a hearing aid device.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Hearing aid]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.

ECO mode

The **ECO** mode reduces the transmission power of the handset and base station when you are on a call or when the phone is in standby mode.

- 1 Select **[Menu]** > **[Phone setup]** > **[Eco mode]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, and press **[OK]** to confirm.
↳ The setting is saved.
↳ **ECO** is displayed in standby mode.

Note

- When the **ECO** mode is set to **[On]**, the connection range between the handset and the base station can be reduced.

Name the handset

The name of the handset can be up to 14 characters. It is displayed on the handset screen in standby mode.

- 1 Select **[Menu]** > **[Phone setup]** > **[Phone name]**, then press **[OK]** to confirm.
- 2 Enter or edit the name. To erase a character, select **[Clear]**.
- 3 Press **[OK]** to confirm.
↳ The setting is saved.

Set the backlight of the LCD screen

You can set the backlight of the LCD screen and keypad flashing on or off when the phone rings.

- 1 Select **[Menu]** > **[Phone setup]** > **[Visual alert]**, then press **[OK]** to confirm.
- 2 Select **[Flashing on]/[Flashing off]**, then press **[OK]** to confirm.
 ↳ The setting is saved.

Set the date and time

For information, see 'Set the date and time' in the Get started section.

Set the display language



Note


- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.

- 1 Select **[Menu]** > **[Phone setup]** > **[Language]**, then press **[OK]** to confirm.
- 2 Select a language, then press **[OK]** to confirm.
 ↳ The setting is saved.

11 Alarm clock



Your phone has a built-in alarm clock. Check the information below to set your alarm clock.

Set the alarm

- 1 Select **[Menu]** > **[Alarm]**, then press **[OK]** to confirm.
- 2 Select **[On once]** or **[On daily]**, then press **[OK]** to confirm.
- 3 Enter an alarm time, then press **[OK]** to confirm.
 - ↳ The alarm is set and  is displayed on the screen.



Tip

- Press  /  to switch between **[AM]** / **[PM]**.

Turn off the alarm

When the alarm rings

Press any key to turn off the alarm.

Before the alarm rings

- Select **[Menu]** > **[Alarm]** > **[Off]**, then press **[OK]** to confirm.
- ↳ The setting is saved.

12 Services

The phone supports a number of features that help you handle and manage the calls.


Call list type

You can view all incoming calls or missed calls from this menu.

Select the call list type

- 1 Select **[Menu]** > **[Services]** > **[Call list type]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.
↳ The setting is saved.

Auto conference

To join an external call with another handset, press .

Activate/Deactivate auto conference

- 1 Select **[Menu]** > **[Services]** > **[Conference]**, then press **[OK]** to confirm.
- 2 Select **[Auto]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.

Network type



Note

- This feature only applies to models with network type support.

- 1 Select **[Menu]** > **[Services]** > **[Network type]**, then press **[OK]**.
- 2 Select a network type, then press **[OK]**.
↳ The setting is saved.

Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out.



Note

- The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

Set auto prefix

- 1 Select **[Menu]** > **[Services]** > **[Auto prefix]**, then press **[OK]** to confirm.
- 2 Enter the detect number; then press **[OK]** to confirm.
- 3 Enter the prefix number; then press **[OK]** to confirm.
↳ The setting is saved.



Note

- To enter a pause, press and hold **#** a/A.



Note

- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.



Note

- The feature is unavailable if the dialed number starts with * and #.

Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[Short]**, **[Medium]** and **[Long]**. The number of available options varies with different countries. For details, consult your service provider.

- 1 Select **[Menu]** > **[Services]** > **[Recall time]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.
↳ The setting is saved.

Dial mode



Note

- This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

Set the dial mode

- 1 Select **[Menu]** > **[Services]** > **[Dial mode]**, then press **[OK]** to confirm.
- 2 Select a dial mode, then press **[OK]** to confirm.
↳ The setting is saved.

Note

- If your phone is in pulse dial mode, press ***_{INT}** during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

Register the handsets

You can register additional handsets to the base station. The base station can register up to 4 handsets.

- 1 Select **[Menu]** > **[Services]** > **[Register]**, then press **[OK]** to confirm.
- 2 Press and hold **••** on the base station for 5 seconds.

Note

- For models with an answering machine, you hear a confirmation beep.

- 3 Press **[OK]** to confirm.
- 4 Enter the system PIN. Press **[Clear]** to make corrections.
- 5 Press **[OK]** to confirm the PIN.
↳ Registration is completed in less than 2 minutes. The base automatically assigns a handset number to the handset.

Note

- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.

Note

- The preset PIN is 0000. No change can be made on it.

Unregister the handsets

- 1 If two handsets share the same base station, you can unregister a handset with another handset.
- 2 Select **[Menu]** > **[Services]** > **[Unregistered]**, then press **[OK]** to confirm.
- 3 Enter the system PIN. Press **[Clear]** to make corrections.
- 4 Select the handset name to be unregistered.
- 5 Press **[OK]** to confirm.
↳ The handset is unregistered.



Tip

- The handset number displays beside the handset name in standby mode.

Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Select **[Menu]** > **[Services]** > **[Reset]**, then press **[OK]** to confirm.
↳ The handset displays a confirmation request.
- 2 Press **[OK]** to confirm.
↳ All settings are reset.

13 Network services

The network services are network and country dependent. Contact your service provider for more information.



Note

- For the network services to work properly, Make sure that the activation and/or deactivation codes are correctly entered.

Call forward

You can divert your calls to another phone number. You can select among 3 options:

- **[Call forward]**: divert all incoming calls to another number.
- **[Call fwd busy]**: divert calls when the line is busy.
- **[Call fwd unans]**: divert calls when no one answers.

Activate/Deactivate call forward

- 1 Select **[Menu]** > **[Netw.services]** > **[Call forward]/[Call fwd busy]/[Call fwd unans]**
- 2 Select **[Activate]/[Deactivate]**, then press **[OK]** to confirm.
- 3 Enter the telephone number; then press **[OK]** to confirm.
↳ The setting is saved .

Edit the activation/deactivation code

You can edit the prefix and suffix to the call forward codes.

- 1 Select **[Menu]** > **[Netw.services]** > **[Call forward]/[Call fwd busy]/[Call fwd unans]**, then press **[OK]** to confirm.
- 2 Select **[Change code]** , then press **[OK]**.
- 3 Then you can either
 - Select **[Activate]** > **[Prefix]/[Suffix]**, then press **[OK]** to confirm; or
 - Select **[Deactivate]**, then press **[OK]** to confirm.
- 4 Enter or edit the code, then press **[OK]** to confirm.
↳ The setting is saved.

Call return

You can check the most recent unanswered call.

Call the return service centre

- Select **[Menu]** > **[Netw.services]** > **[Call return]** > **[Call]**, then press **[OK]** to confirm.
- ↳ Your call is made to the service centre.

Edit the call return service centre number

- 1 Select **[Menu]** > **[Netw.services]** > **[Call return]** > **[Settings]**, then press **[OK]** to confirm.
- 2 Enter or edit the number; then press **[OK]** to confirm.
↳ The setting is saved.

Call back service

The call back service notifies you when a party you have tried to call becomes available. You can select to cancel this service from the menu after you have activated it from the service provider.

Cancel the call back service

- Select **[Menu]** > **[Netw.services]** > **[Cancel call bk]** > **[Call]**, then press **[OK]** to confirm.
- ↳ A call is made to the service centre to cancel the call back option.

Edit the cancel call back service number

- 1 Select **[Menu]** > **[Netw.services]** > **[Cancel call bk]** > **[Settings]**, then press **[OK]** to confirm.
- 2 Enter or edit the number; then press **[OK]** to confirm.
↳ The setting is saved.

Hide your identity

You can hide your identity from the caller.

Activate ID withheld

- Select **[Menu]** > **[Netw.services]** > **[Withhold ID]** > **[Activate]**, then press **[OK]** to confirm.
- ↳ When you make a call to your contact, your ID is withheld.

Edit the ID withheld code

- 1 Select **[Menu]** > **[Netw.services]** > **[Withhold ID]** > **[Settings]**, then press **[OK]** to confirm.
- 2 Enter or edit the number; then press **[OK]** to confirm.
↳ The setting is saved.

14 Telephone answering machine



Note

- Available only for XL395.

Your phone includes a telephone answering machine that records unanswered calls when it is on. By default, the answering machine is set to the **[Record also]** mode. You can also access the answering machine remotely and change the settings through the answering machine menu on the handset. The LED indicator on the base station lights up when the answer machine is on.

Turn the answering machine on or off

You can turn the answering machine on or off through the base station or the handset.

Through the handset

- 1 Select **[Menu]** > **[Answ. Machine]** > **[Voice answer]**, then press **[OK]** to confirm.
- 2 Select **[Answer only]/[Record also]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.

Through the base

Press **⏻** to turn the answering machine on or off in standby mode.



Note

- When the answering machine is switched on, it answers incoming calls after a certain number of rings based on the ring delay setting.

Set the answering machine language



Note

- This feature only applies to models with multiple-language support.

The answering machine language is the language for the announcements.

- 1 Select **[Menu]** > **[Answ. Machine]** > **[Voice language]**, then press **[OK]** to confirm.
- 2 Select a language, then press **[OK]** to confirm.
↳ The setting is saved.

Announcements

The announcement is the message your caller hears when the answering machine picks up the call. The answering machine has 2 default announcements: the **[Record also]** mode and **[Answer only]** mode.

Record an announcement

The maximum length of the announcement you can record is 3 minutes. The newly recorded announcement automatically replaces the old one.

- 1 Select **[Menu]** > **[Answ. Machine]** > **[Announcement]**, then press **[OK]** to confirm.
- 2 Select **[Record also]** or **[Answer only]**, then press **[OK]** to confirm.
- 3 Select **[Record]**, then press **[OK]** to confirm.
- 4 Recording starts after the beep.
- 5 Press **[OK]** to stop recording or the recording stops after 3 minutes.
↳ You can listen to the newly recorded announcement on the handset.



Note

- To restore the default announcement, delete your current announcement.
- Make sure that you speak close to the microphone when you record an announcement.

Listen to the announcement

- 1 Select **[Menu]** > **[Answ. Machine]** > **[Announcement]**, then press **[OK]** to confirm.
- 2 Select **[Record also]** or **[Answer only]**, then press **[OK]** to confirm.
- 3 Select **[Play]**, then press **[OK]** to confirm.
 - ↳ You can listen to the current announcement.



Note

- You can no longer listen to the announcement when you pick up an incoming call.

Restore the default announcement

- 1 Select **[Menu]** > **[Answ. Machine]** > **[Announcement]**, then press **[OK]** to confirm.
- 2 Select **[Record also]** or **[Answer only]**, then press **[OK]** to confirm.
- 3 Select **[Set default]**, then press **[OK]** to confirm.
 - ↳ The handset displays a confirmation request.
- 4 Press **[OK]** to confirm.
 - ↳ The default announcement is restored.



Note

- The default announcement cannot be deleted.

Incoming messages (ICM)

Each message can be up to 3 minutes long. When you receive new messages, the new message indicator flashes on the answering machine and the handset displays a notification message.

Note

- If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly.

Note

- If the memory is full, the answering machine switches to **[Answer only]** automatically. Delete old messages to receive new ones.

Listen to the incoming messages

You can listen to the incoming messages in the sequence they are recorded.

From the base

- To start/Stop listening, press **▶■**.
- To adjust the volume, press **◀ / ▶**.
- To play the previous message/ replay the current message, press **◀**.
- To play the next message, press **▶**.
- To delete the current message, press **⏏**.

Note

- No deleted messages can be recovered.

From the handset


Select **[Menu] > [Answ. Machine] > [Play]**, then press **[OK]** to confirm.

↳ New messages start playing.
Old messages start playing if there is no new message.

- Press **[Back]** to stop listening.
- Press **[Option]** to enter the options menu.
- Press **⬆ / ⬇** to increase/decrease the volume.

Delete an incoming message

From the base

Press  when you listen to the message.

- ↳ The current message is deleted.

From the handset

- 1 When you listen to the message, press **[Option]** to enter the options menu.
- 2 Select **[Delete]**, then press **[OK]** to confirm.
 - ↳ The current message is deleted.

Delete all old incoming messages

From the base

Press and hold  in standby mode.

- ↳ All old messages are permanently deleted.

From the handset

- 1 Select **[Menu]** > **[Answ. Machine]** > **[Delete all]**, then press **[OK]** to confirm.
 - ↳ The handset displays a confirmation request.
- 2 Press **[OK]** to confirm.
 - ↳ All old messages are permanently deleted.

Set the ring delay

You can set the number of times the phone rings before the call goes to the answering machine.

- 1 Select **[Menu]** > **[Answ. Machine]** > **[Ring delay]**, then press **[OK]** to confirm.
- 2 Select a new setting, then press **[OK]** to confirm.
 - ↳ The setting is saved.



Note

- Make sure that the answering machine is switched on before this feature can be applied.



Tip

- When you access the answering machine remotely, you are recommended to set the ring delay to **[Toll saver]** mode. This is a cost effective way to manage your messages. When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings.



Note

- You can only delete the read messages. No deleted messages can be recovered.

Remote access

You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code.



Note

- The remote access PIN code is the same as your system PIN. The preset PIN is 0000.

Activate/deactivate the remote access

You can allow or block remote access to the answering machine.

- 1 Select **[Menu]** > **[Answ. Machine]** > **[Remote access]**, then press **[OK]** to confirm.
- 2 Select **[Activate]/[Deactivate]**, then press **[OK]** to confirm.
↳ The setting is saved.

Change the PIN code

- 1 Select **[Menu]** > **[Answ. Machine]** > **[Remote access]** > **[Change PIN]**, then press **[OK]** to confirm.
- 2 Enter the old PIN, then press **[OK]** to confirm.
- 3 Enter the new PIN code, then press **[OK]** to confirm.
- 4 Enter the new PIN code again, then press **[Save]** to confirm.
↳ The setting is saved.

Access the answering machine remotely

- 1 Make a call to your home number with a touch tone phone.
- 2 Enter # when you hear the announcement.
- 3 Enter your PIN code.
 - ↳ You now have access to your answering machine, and you can listen to the new messages.



Note

- You have 2 chances to enter the correct PIN code, before your phone hangs up.

- 4 Press a key to carry out a function. See the 'Remote access commands' in the following table for a list of available functions.



Note

- When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds.

Remote access commands

| Key | Function |
|-----|---|
| 1 | Repeat the current or listen to the previous message. |
| 2 | Listen to messages. |
| 3 | Skip to the next message. |
| 6 | Delete the current message. |
| 7 | Switch the answering machine on. (not available when you listen to the messages). |
| 8 | Stop listening to the message. |
| 9 | Switch the answering machine off. (not available when you listen to the messages). |

15 Technical data

Display

- Amber LCD backlight

General telephone features

- Dual mode caller name & number identification
- Conference call and voicemails
- Intercom
- Maximum talk time: 17 hours

Phonebook list, Redial list, Call log and Memory keys

- Phonebook list with 100 entries
- Redial list with 20 entries
- Call log with 50 entries
- Memory keys with 3 entries

Battery

- HFR: 2 x AAA Ni-MH 1.2V
650mAh rechargeable batteries
- SANIK: 2 x AAA Ni-MH 1.2V
650mAh rechargeable batteries

Adapter

Base and charger

- Philips, S003PB0600050, input:
100-240Vac, 50-60Hz 0.2A, output:
6V 500mA
- Philips, SSW-1920-UK-2, input:
100-240Vac, 50-60Hz 0.2A, output:
6V 500mA

Power consumption

- Power consumption at standby mode: around 0.60W (XL390);
0.65W (XL395)

Weight and dimensions (XL390)

- Handset: 159 grams
- 182.91 x 53.62 x 34.84 mm (H x W x D)
- Base: 138 grams
- 89.2 x 140.13 x 87.86 mm (H x W x D)
- Charger: 84 grams
- 89.92 x 94.96 x 89.39 mm (H x W x D)

Weight and dimensions (XL395)

- Handset: 159 grams
- 182.91 x 53.62 x 34.84 mm (H x W x D)
- Base: 161 grams
- 89.2 x 140.13 x 87.86 mm (H x W x D)
- Charger: 84 grams
- 89.92 x 94.96 x 89.39 mm (H x W x D)

16 Notice

Declaration of conformity

Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.

Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then

follow the procedure described in the handset manufacturer's instructions.

Compliance with EMF

This product complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and

batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

17 Frequently asked questions

No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[Unregister]**, register your handset.



Tip

- For further information, see chapter 'Service', section 'Register the handsets'.

If I fail to register the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.

No dialing tone

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

No docking tone

- The handset is not placed properly on the base station/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

The handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones from your dealer.

No display

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

The handset does not ring.

Make sure the handset ringtone is turned on.

The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

The handset loses connection with the base or the sound is distorted during a call.

Check if the **ECO** mode is activated. Turn it off to increase the handset range and enjoy the optimal call conditions.



Note

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

18 Appendix

Text and number input tables

| | |
|-----|---|
| Key | Upper case characters (for English/French/ German/ Italian/ Turkish/Portuguese/Spanish/ Dutch/Danish/Finnish/Norwegian/ Swedish/ Romanian/Polish/Czech/ Hungarian/Slovakian/Slovenian/ Croatian/Lithuanian/Estonian/ Latvian/Bulgarian) |
| 0 | Space . 0 , / : ; " ' ! ? ; ¸ * + - % \ ^ ~ |
| 1 | 1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ... |
| 2 | A B C 2 À Â Ã Ä Å Æ Å Ç Ç |
| 3 | D E F 3 È É Ê Ë Ì Í Î Ï Δ Φ |
| 4 | G H I 4 Ğ Ħ İ Ĵ Ĳ Ĳ Ĳ |
| 5 | J K L 5 Λ |
| 6 | M N O 6 Ñ Ò Ó Ô Õ Ö |
| 7 | P Q R S 7 Š Š Π Θ Σ |
| 8 | T U V 8 Ù Ú Û Ü Ü Ü |
| 9 | W X Y Z 9 Ø Ω Ξ Ψ Ž |

Key Lower case characters (for English/French/ German/ Italian/Turkish/Portuguese/ Spanish/Dutch/Danish/Finnish/ Norwegian/ Swedish)

| | |
|---|--|
| 0 | Space . 0 , / : ; " ' ! ? ; ¸ * + - % \ ^ ~ |
| 1 | 1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ... |
| 2 | a b c 2 à â ã ä å æ å ç ç |
| 3 | d e f 3 è é ê ë ì í î ï Δ Φ |
| 4 | g h i 4 ğ ħ ï ĵ ĳ ĳ ĳ |
| 5 | j k l 5 λ |
| 6 | m n o 6 ñ ò ó ô õ ö ò |
| 7 | p q r s 7 š š π θ σ |
| 8 | t u v 8 ù ú û ü ü ü |
| 9 | w x y z 9 ø ω ξ ψ ž |

Key Upper case characters (for Greek)

| | |
|---|--|
| 0 | Space . 0 , / : ; " ' ! ? ; ¸ * + - % \ ^ ~ |
| 1 | 1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ... |
| 2 | A B Γ 2 A B C Å Å Ç |
| 3 | Δ E Z 3 D E F É |
| 4 | H Θ I 4 G H I |
| 5 | K Λ M 5 J K L |
| 6 | N Ξ O 6 M N O Ñ Ò |
| 7 | Π Ρ Σ 7 P Q R S β |
| 8 | T Υ Φ 8 T U V Ü |
| 9 | X Ψ Ω 9 W X Y Z Ø |

| Key | Lower case characters (for Greek) |
|-----|--|
| 0 | Space . 0 , / ; : " ' ! ; ? ; * + - % \ ^ ~ |
| 1 | 1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ... |
| 2 | α β γ 2 a b c à æ ä å |
| 3 | δ ε ζ 3 d e f è é |
| 4 | η θ ι 4 g h i ì |
| 5 | κ λ μ 5 j k l λ |
| 6 | ν ξ ο 6 m n o ñ ö ò |
| 7 | π ρ σ ς 7 p q r s β |
| 8 | τ υ φ 8 t u v ù ü |
| 9 | χ ψ ω 9 w x y z ø |

| Key | Upper case characters (for Serbian) |
|-----|--|
| 0 | Space . 0 , / ; : " ' ! ; ? ; * + - % \ ^ ~ |
| 1 | 1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ... |
| 2 | A B C Ъ Ѓ Ћ Ć 2 A B B Г |
| 3 | D E F J Đ 3 Δ E Ж 3 Δ Φ |
| 4 | G H I Љ 4 И Й К Л Г |
| 5 | J K L Њ 5 M H O П Λ |
| 6 | M N O Ћ 6 P C T Y |
| 7 | P Q R S Ж Š 7 Ф X Ц Ч П Θ Σ Β |
| 8 | T U V 8 Ш Щ Ъ Ы |
| 9 | W X Y Z Ž 9 Ь Э Ю Я Ω Ξ Ψ |

| Key | Lower case characters (for Serbian) |
|-----|--|
| 0 | Space . 0 , / ; : " ' ! ; ? ; * + - % \ ^ ~ |
| 1 | 1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ... |
| 2 | a b c Ъ Ѓ Ћ Ć 2 A B B Г |
| 3 | d e f J Đ 3 Δ E Ж 3 |
| 4 | g h i Љ 4 И Й К Л |
| 5 | j k l Њ 5 M H O П |
| 6 | m n o Ћ 6 P C T Y |
| 7 | p q r S Ж Š 7 Ф X Ц Ч П Θ Σ Β |
| 8 | t u v i j 8 Ш Щ Ъ Ы |
| 9 | w x y Z Ž 9 Ь Э Ю Я Ω Ξ Ψ |

19 Index

A

| | |
|---------------------|----|
| additional handsets | 33 |
| alarm | 30 |
| announcement | 38 |
| answer a call | 15 |
| answering machine | 37 |
| auto conference | 31 |
| auto prefix | 31 |

B

| | |
|--------------|------------|
| base station | |
| installation | 9 |
| overview | 7 |
| battery | 10, 13, 44 |

C

| | |
|------------|------------|
| call log | 24 |
| caller ID | 15, 24 |
| calling | 14 |
| charging | 12 |
| conference | 17, 18, 31 |

D

| | |
|-----------------|----|
| date setting | 11 |
| default setting | 34 |
| delete messages | 41 |
| dial mode | 32 |
| display icons | 8 |
| disposal | 45 |

E

| | |
|----------|----|
| ECO mode | 28 |
|----------|----|

F

| | |
|----------------------|---|
| find handsets/paging | 7 |
|----------------------|---|

G

| | |
|-----|----|
| GAP | 45 |
|-----|----|

H

| | |
|---------------------------|----|
| handset name | 28 |
| hearing aid compatibility | 28 |

I

| | |
|-------------------|----|
| incoming messages | 40 |
| intercom calls | 18 |
| internal calls | 18 |

L

| | |
|--------------------|----|
| language setting | |
| answering machine | 38 |
| handset | 29 |
| listen to messages | 40 |

M

| | |
|--------------|----|
| missed calls | 24 |
| mute | 16 |

N

| | |
|--------------|----|
| network type | 31 |
|--------------|----|

O

| | |
|--------|----|
| on/off | 37 |
|--------|----|

P

| | |
|-----------------------|------------|
| phone | |
| overview | 6 |
| set up | 10 |
| phone settings | 27 |
| phonebook | 21, 25, 26 |
| PIN | |
| answering machine | 12, 42 |
| handset | 12 |
| power adapter | 44 |

R

| | |
|---|--------|
| recall time | 32 |
| redial | 26 |
| register/unregister | 33, 34 |
| remote access to answering machine | 42 |
| ring delay | 41 |
| ringtone | 27 |

S

| | |
|------------------------|----|
| safety | 3 |
| save a number | 25 |
| signal strength | 13 |
| sounds | |
| docking | 28 |
| keytone | 27 |
| standby mode | 13 |

T

| | |
|-------------------------------|--------|
| text entry | 20, 49 |
| time setting | 11 |
| transfer call | 18 |
| troubleshooting/FAQ | 47 |
| two calls/call on hold | 17 |

V

| | |
|--------------------------|----|
| volume adjustment | 16 |
|--------------------------|----|



2016 © Gibson Innovations Limited. All rights reserved.
This product has been manufactured by, and is sold under
the responsibility of Gibson Innovations Ltd., and Gibson
Innovations Ltd. is the warrantor in relation to this product.
Philips and the Philips Shield Emblem are
registered trademarks of Koninklijke Philips
N.V. and are used under license from
Koninklijke Philips N.V.

UM_XL390-395_90_EN_V5.0
WK1636

CE 0168

