

---

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

DS7550

Quick start guide **English**

Lynvejledning **Dansk**

Schnellstartanleitung **Deutsch**

Guía de configuración rápida **Español**

Guide de démarrage rapide **Français**

Guida di avvio rapido **Italiano**

Snelstartgids **Nederlands**

Snabbstartguide **Svenska**

Stručný návod k rychlému použití **Čeština**

Οδηγός γρήγορης έναρξης **Ελληνικά**

Pikaopas **Suomi**

Rövid üzembe helyezési útmutató **Magyar**

Skrócona instrukcja obsługi **Polski**



Manual de Início Rápido **Português**


Краткое руководство **Русский**


Stručná úvodná príručka **Slovensky**








**PHILIPS**



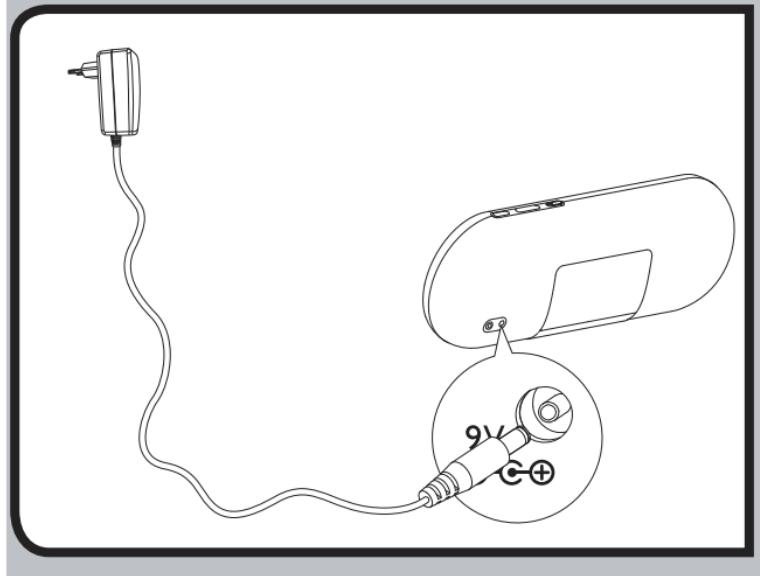
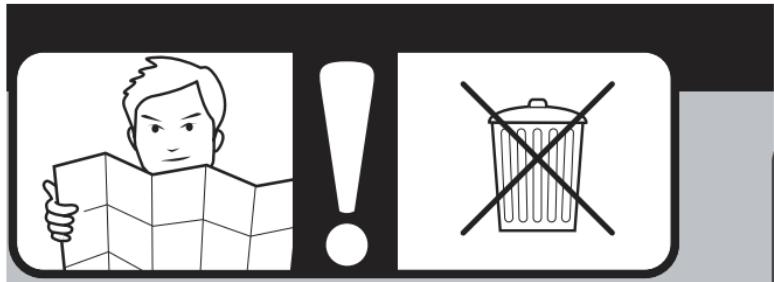


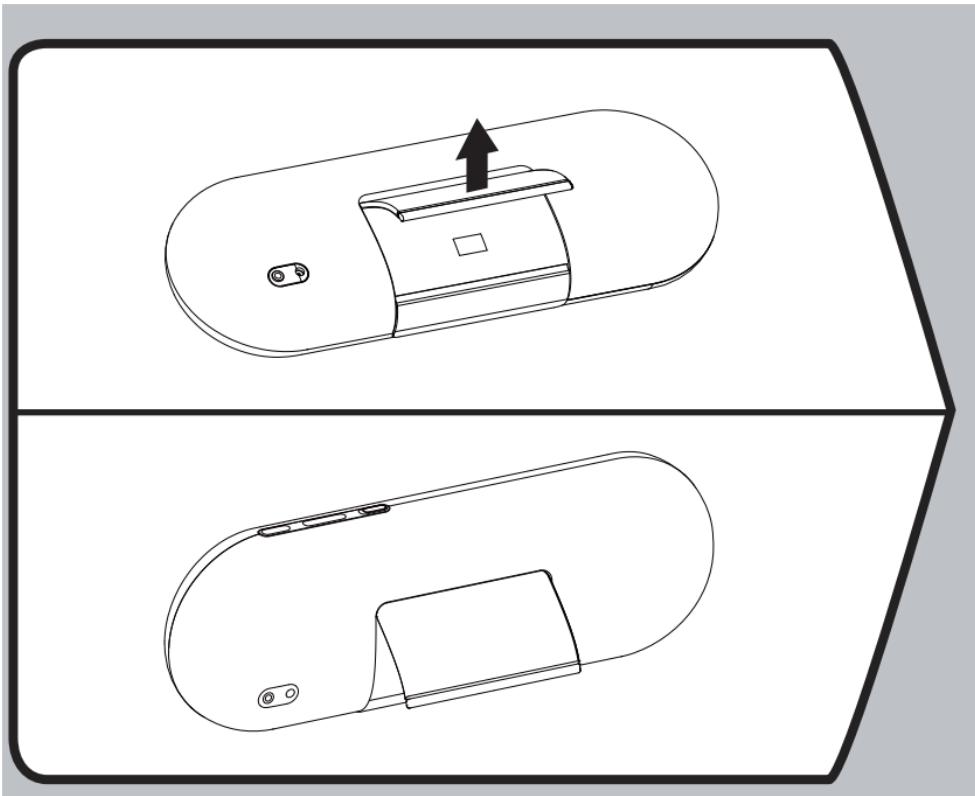


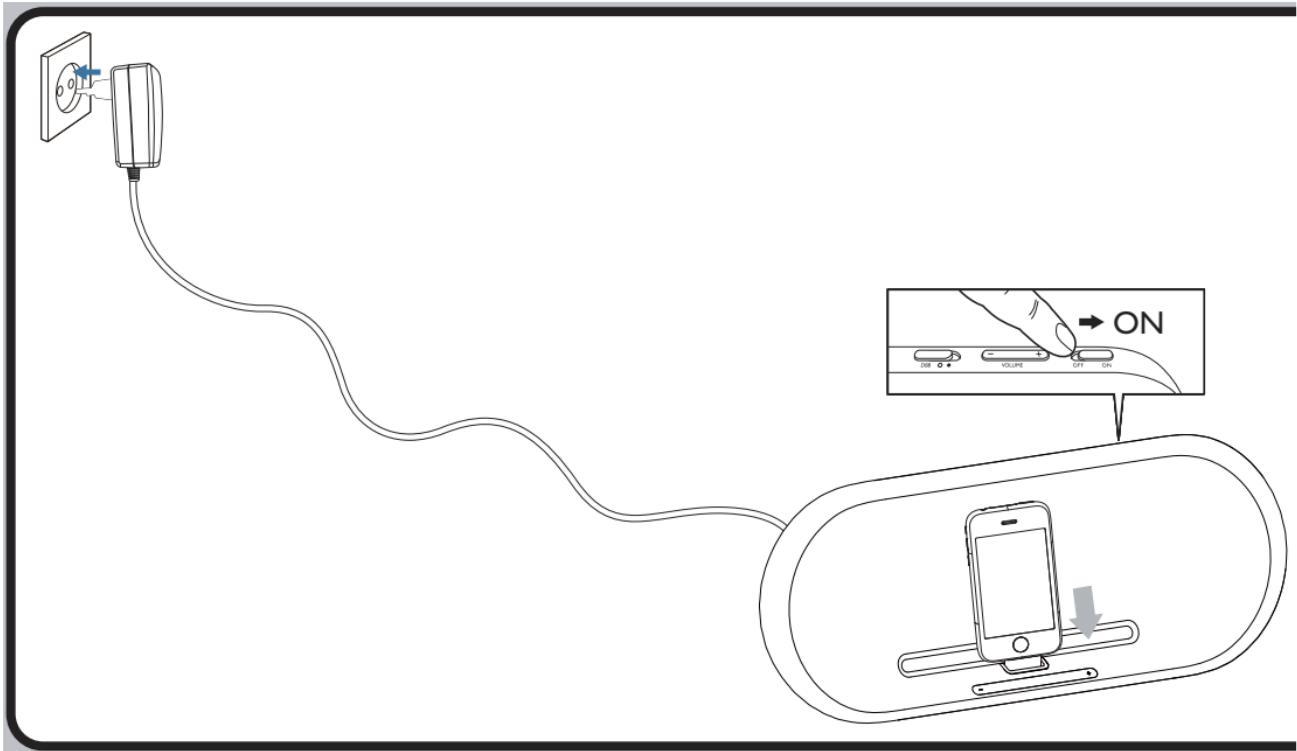

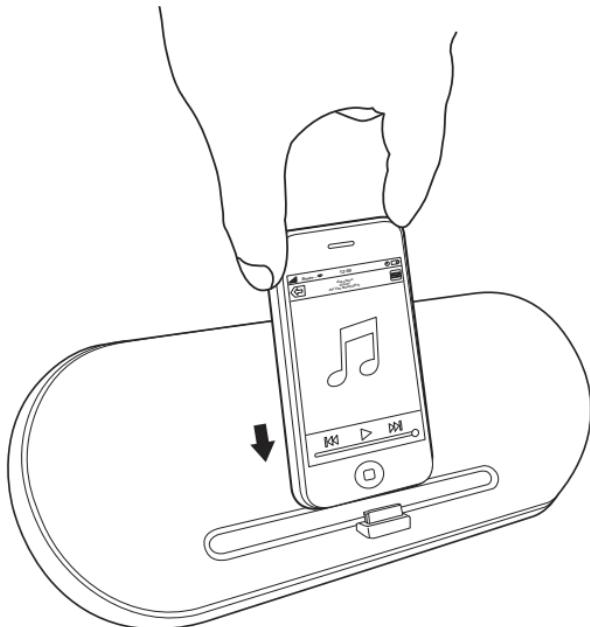


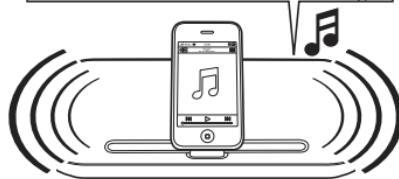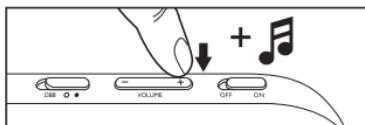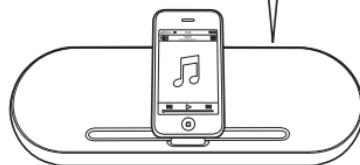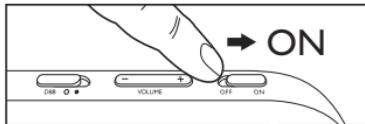

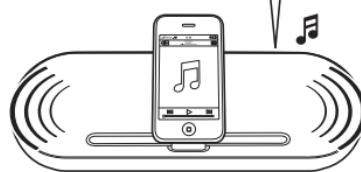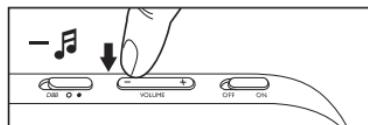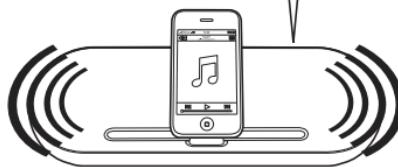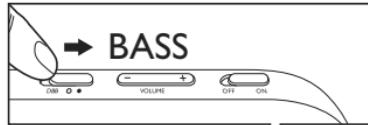


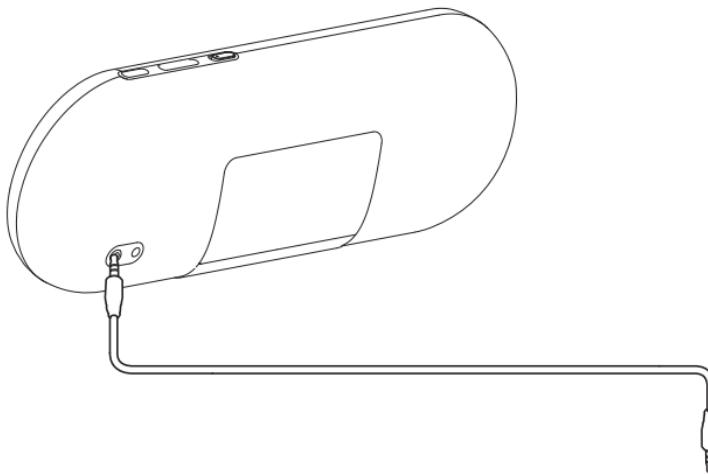

MP3

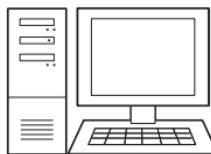

PC

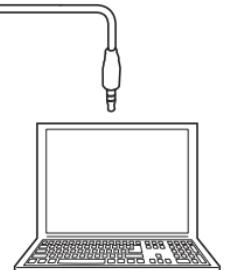

NOTE BOOK

## Important safety instructions

- ① Read these instructions; Keep these instructions.
- ② Heed all warnings; Follow all instructions.
- ③ Do not use this apparatus near water; Clean only with dry cloth.
- ④ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑤ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑥ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑦ Only use attachments/accessories specified by the manufacturer.
- ⑧ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- ⑨ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑩ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑪ Apparatus shall not be exposed to dripping or splashing.
- ⑫ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑬ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).
- ⑭ Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health. Always bring your product to a professional to remove the built-in battery.



The type plate is located under the foot stand of the apparatus.

Identifikationspladen er placeret under apparatets standerfod.

Das Typenschild befindet sich unter dem Standfuß des Geräts.

La placa de identificación se encuentra en la parte inferior del soporte del aparato.

La plaque signalétique est située en dessous du pied de l'appareil.

La targhetta del modello si trova sotto il piedistallo dell'apparecchio.

Het typeplaatje bevindt zich aan de onderzijde van de voet van het apparaat.

Typplattan sitter under apparatens fotstativ.

Štítek s typovými údaji je umístěn pod stojanem přístroje.

Η πινακίδα του τύπου βρίσκεται κάτω από τη βάση της συσκευής.

Arvokilpi on laitteen jalustan alapinnassa.

A tipusazonosító tábla a készülék állványá alatt található.

Tabliczka znamionowa znajduje się na podporze urządzenia.

A placa de identificação está localizada na parte inferior da base do suporte do aparelho.

Табличка с обозначениями расположена под стойкой устройства.

Туровý štok sa nachádza pod stojanom zariadenia.

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Batterier (installéer batteripakke eller batterier) må ikke utsættes for ekstrem varme fra f.eks. sol, ild eller lignende.

Batterien (Akkus bzw. integrierte Akkus) sollten nicht starker Wärme durch Sonnenlicht, Feuer etc. ausgesetzt werden.

No exponga las pilas (batería o pilas instaladas) a temperaturas altas como, por ejemplo, la luz del sol, el fuego o similares.

N'exposez pas les piles ou les batteries intégrées à une source produisant une chaleur excessive, par exemple le soleil, un feu ou similaires.

Le batterie (batteria singola o batterie installate) non devono essere esposte a fonti di calore eccessivo come luce solare, fuoco o simili.

Batterijen (batterijdelen van geplaatste batterijen) mogen niet worden blootgesteld aan hoge temperaturen (die worden veroorzaakt door zonlicht, vuur en dergelijke).

Utsätt inte batterierna (batteripaket eller installerade batterier) för stark hetta som solskens, eld eller liknande.

Baterie (sada akumulátorů nebo nainstalované baterie) by nemely být vystavovány nadměrnému teplu, jako např. slunecnímu svitu, ohni a podobně.

Οι μπαταρίες (πακέτο μπαταρίας ή εγκατεστημένες μπαταρίες) δεν πρέπει να εκτίθενται σε υπερβολική θερμότητα όπως ήλιο, φωτιά και παρόμοια.

Akkuja tai paristoja (asennettu) ei saa altistaa korkeille lämpötiloille, esimerkiksi auringonvalolle tai tulelle.

Az akkumulátorokat és akkumulátorcsomagokat óvjá a magas hőmérséklettől, ezért ne tegye ki például közvetlen napfény hatásának, ne helyezze tüz közelébe stb.

Baterie i akumulatory należy zabezpieczyć przed wysokimi temperaturami (światłem słonecznym, ogniem itp.).

As pilhas (conjunto de pilhas ou pilhas instaladas) não devem ser expostas a calor excessivo, tal como a exposição directa à luz solar, fogo ou situações similares.

Запрещается подвергать элементы питания (аккумуляторный блок или встроенный аккумулятор) воздействию высоких температур, включая прямые солнечные лучи, огонь и т.п.

Batéria (súprava batérií alebo vstanavane batérie) nesmú byť vystavené zdrojom nadmerne vysokej teploty, ako je napríklad slnečné žiarenie, oheň alebo podobné zdroje tepla.

Where the Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

Hvis netstikket MAINS eller et apparatstik bruges til at afbryde enheden, skal disse kunne betjenes nemt.

Wenn der Netzstecker (MAINS) bzw. Gerätestecker als Trennvorrichtung verwendet wird, muss die Trennvorrichtung frei zugänglich bleiben.

Si usa el enchufe de alimentación o un adaptador para desconectar el aparato, éstos deberán estar siempre a mano.

Si la fiche d'alimentation ou un coupleur d'appareil est utilisé comme dispositif de découplage, celui-ci doit rester facilement accessible.

Se si usa la spina di alimentazione o un accoppiatore per scollegare il dispositivo, assicurarsi che la spina e l'accoppiatore siano facilmente accessibili.

Als u het netsnoer of de aansluiting op het apparaat gebruikt om het apparaat uit te schakelen, dient u ervoor te zorgen dat deze goed toegankelijk zijn.

Om MAINS-kontakten eller ett kontaktton används som fräckopplingsenhet ska den vara lätt att komma åt.

Pokud je jako odpojovací zařízení použito SÍŤOVÉ napájení nebo sdružovač, mělo by být odpojovací zařízení připraveno k použití.

Kun laitteen virta katkaistaan irrottamalla pistoke tai laitteen katkaisimesta, laite on helppo ottaa uudelleen käyttöön.


Ha a hálózati csatlakozódugó vagy készülékcsatlakozó használatos megszakítóeszközéntől, akkor minden működőképesnek kell lennie.

Jeśli urządzenie jest podłączone do gniazdka za pomocą przewodu zasilającego lub łącznika, ich wtyki muszą być łatwo dostępne.



Quando a ficha de ALIMENTAÇÃO ou o dispositivo de ligação de um aparelho forem utilizados como dispositivo de desactivação, o dispositivo de desactivação deve estar pronto para ser utilizado de imediato.

Если для отключения устройства используется сетевой шнур или приборный штепсель, доступ к ним должен быть свободным.

Tam, kde ako odpájacie zariadenie slúži sieťová zástrčka alebo prepájacie zariadenie, musí zostať toto odpájacie zariadenie ľahko prístupné pre okamžité použitie.

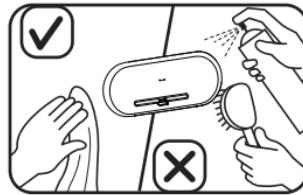

DS7550\_I12\_QSG\_V1.2

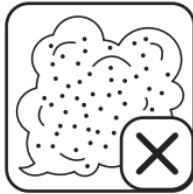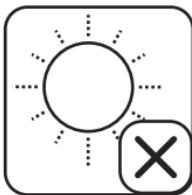

Printed in China