

## View the phonebook

- 1 Press **☰**.
- 2 Select a contact and view the available information.

## Call from the phonebook

- 1 Press **☰** to access the phonebook.
- 2 Select a contact in the phonebook list.
- 3 Press **☎** to make the call.

## Listen to messages recorded on the answering machine (for CD565 only)

- Press **on/off** to turn on/off the answering machine in standby mode.
- Start/Stop playback: Press **▶■**.
- Adjust the volume: Press **+** / **-**.
- Skip backward:  
During message playback, press **◀** to play the message from the beginning.  
During the first second of the current message, press **◀** to play the previous message.
- Skip forward: Press **▶** to skip to the next message.
- Delete the current message: Press **X**.

### Note

- For more information, see the Telephone answering machine section in the user manual.

## ECO mode

The **ECO** mode reduces the transmission power of the handset and base station.

- 1 Press **menu**.
- 2 Select **[ADVANCED SET] > [ECO]**, then press **[SELECT]** to confirm.
- 3 Select the new setting, then press **[OK]** to confirm.
  - ↳ The setting is saved.
  - ↳ **ECO** is displayed instead of **Y** in standby mode

### Note

- When the **ECO** mode is activated, the connection range between the handset and the base station can be reduced.

# Troubleshooting

## No dialing tone

- Check your phone connections.  
The handset is out of range. Move it closer to the base station.

## The signal icon flashes.

- The handset is out of range. Move it closer to the base station.  
If the handset displays **[UNREGISTERED]**, register the handset.

## The caller ID does not display.

- The service is not activated. Check with your service provider.  
The caller's information is withheld or unavailable.  
For more information, see the User Manual.

# Welcome to Philips

Register your product at [www.philips.com/welcome](http://www.philips.com/welcome)

# Need help?

## User Manual

Refer to the User Manual that came with your new phone.

## Online help

[www.philips.com/support](http://www.philips.com/support)

© 2009 Koninklijke Philips Electronics N.V. All rights reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.



CE 0168

Printed in China

CD560-565\_EN\_QSG\_V1.3

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

CD560  
CD565



# Quick Start Guide

 
- 1 Connect
- 2 Install
- 3 Enjoy

# PHILIPS

# What's in the box




Handset



Base station with  
bracket for CD560  
OR



 
CD565



Line cord\*



 Power supply



User manual



Guarantee



Quick Start Guide

## Note



- In some countries, you have to connect the line adaptor to the line cord, then plug the line cord to the line socket.
- In multi-handset packs, there are additional handsets and chargers with power supply units.

## Caution

- Use only the supplied batteries and adaptor

# 1


## Connect Connect the base station

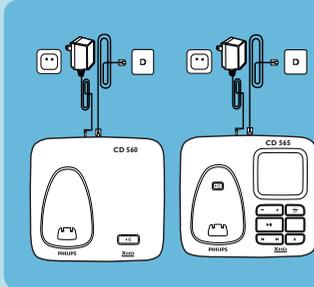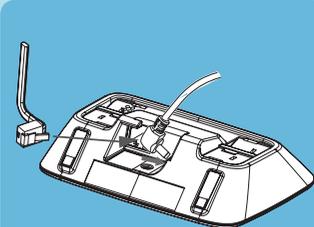

- 1 Connect the output plug of the power socket to the bottom of the base station.
- 2 Connect the power socket to a standard wall outlet.
- 3 Connect the telephone line cord to the phone socket at the bottom of the base station and the wall phone socket.

# 2

## Install Install the handset

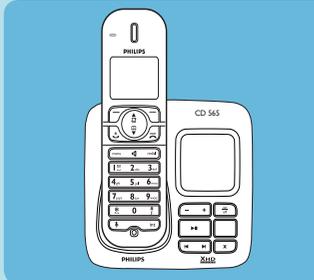

- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 Place the handset on the base station to power up.

## Configure your phone (if necessary)

- 1 When you see the welcome message, select your country, press **[SELECT]** to confirm.  
↳ The country setting is saved.
- 2 Set the date and time.  
↳ The phone is now ready to use.

# 3

## Enjoy

### Make a call

- 1 Press and dial the phone number; or
- 2 Dial the phone number and Press to dial out the call.

### Answer a call

When the phone rings. Press or to answer the call.

### End a call

Press

### Adjust the earpiece volume

Press or to adjust the volume during a call.

### Set the handset's ringtone

- 1 Press menu.
- 2 Select **[PERSONAL SET]** > **[HANDSET TONES]** > **[RING TONES]**, then press **[SELECT]** to confirm.
- 3 Select a ringtone, then press **[SELECT]** to confirm.  
↳ The setting is saved.

### Add a record

- 1 Press menu.
- 2 Select **[PHONEBOOK]** > **[NEW ENTRY]**, then press **[SELECT]** to confirm.
- 3 Enter the name then press **[OK]** to confirm.
- 4 Enter the number, then press **[SAVE]** to confirm.