

PHILIPS

PHILIPS

AZ1830

1 Choosing Power Supply

- Connect the AC power cord to the AC~ Mains inlet and the wall socket.
 OR-
- b Open the **battery door** and insert 6 x C batteries (not included).


) Listening to the Radio

- a Push the source selector to TUNER.
- b Adjust **BAND** to **MW** or **FM**.
- c Turn **TUNING** to tune to a station.


3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, and MP3-CD.

- Adjust the source selector to CD/USB.
- b Press CD/USB to enter CD mode if USB DIRECT is displayed.
- c Open the disc door.
- d Insert a disc with the printed side facing up and close the door.
- e Press ►II to start playback.
- To stop disc playback, press ■.

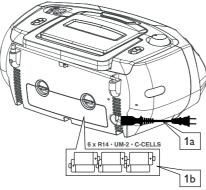

R-14, UM-2 or C-cells (not included)

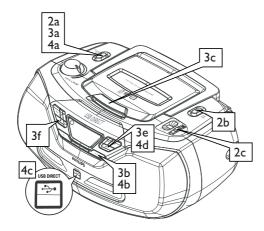

4 Playing a USB device

- a Push the source selector to CD/USB.
- b Press **CD/USB** to enter USB mode if USB DIRECT is NOT displayed.
- c Plug a compatible USB mass storage device to AZ1830's USB port marked ...
- d Press II on your AZ1830 to start playback.

