Always there to help you

Register your product and get support at www.philips.com/welcome



AZ1837



User manual



Contents

1	Important Safety	2
_	Your CD Soundmachine	4
-	Introduction	4
	What's in the box	4
	Overview of the main unit	5
3	Get started	7
	Install batteries	7
	Connect power	7
	Turn on	8
4	Use your CD Soundmachine	9
	Play a CD	9
	Play from USB device	9
	Listen to radio	9
	Control play	9
	Program tracks	10
5	Other features	11
	Listen to an external device	11
6	Product information	12
	Specifications	12
	Supported MP3 disc formats	12
	USB playability information	12
7	Troubleshooting	14
8	Notice	15

1 Important

Safety



This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering.

The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING:To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device. CAUTION:To prevent electric shock, fully insert the plug. (For regions with polarized plugs:To prevent electric shock, match wide blade to wide slot.)

Important Safety Instructions

- Follow all instructions.
- Heed all warnings.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other device (including amplifiers) that produce heat.

- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the device.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the device.
 When a cart is used, use caution when moving the cart/device combination to avoid injury from tip-over.



- Unplug this device during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION —To prevent battery leakage which may result in bodily injury, property damage, or damage to the device:
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Install the battery correctly, + and as marked on the device.
 - The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Remove battery when the device is not used for a long time.
- Device shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the device (e.g. liquid filled objects, lighted candles).

 Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this device.
- Never lubricate any part of this device.
- Never place this device on other electrical equipment.
- Keep this device away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this device.
- Ensure that you always have easy access to the power cord, plug, or adaptor to disconnect this device from the power.

2 Your CD Soundmachine

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With the CD Soundmachine, you can:


- play CDs, MP3/wma discs
- play mp3/wma files on USB devices
- listen to FM/MW radio
- program the play sequence of tracks.

What's in the box

Check and identify the contents of the package:

- Main unit (without batteries)
- 1 x power cord
- 1 x MP3 link cable
- User Manual

Overview of the main unit

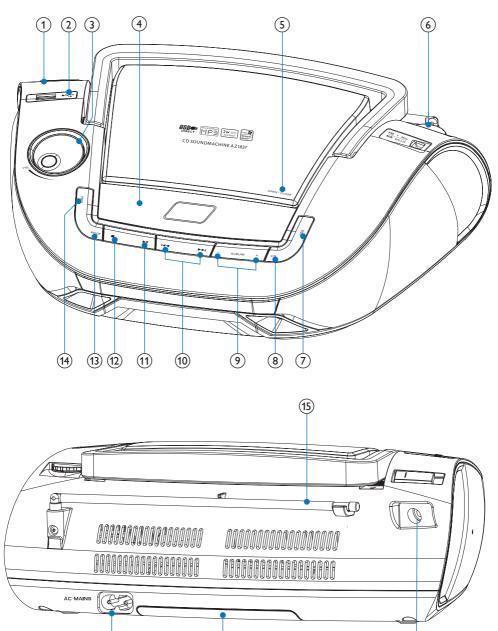

(17)

16)

- 1) Source selector: CD•USB/MW/FM/OFF
 - Select CD•USB, MW(AM), FM source, or turn off the unit.
- (2) **~**
 - · USB socket.
- (3) VOL+/-
 - Adjust volume.
- (4) Display panel
 - Show current status.
- (5) OPEN/CLOSE
 - Press to open or close the disc compartment.
- (6) Tuning
 - Tune to radio stations.
- (7) USB
 - Select USB device source.
- (8) CD
 - Select CD source.
- (9) ALBUM +
 - For MP3-CDs: skip to the next/ previous album in an MP3-CD.
- (10) |◀◀ / ▶▶|
 - Select the previous/next track.
 - Search backward/forward.
- (11) **▶**II
 - Pause or resume play.
- (12)
 - Stop play.
 - Erase a program.
- 13 MODE
 - Select a play mode: REPEAT or SHUFFLE.
- (14) PROG
 - For MP3-CDs: program tracks and browse the program.
- 15) Telescopic antenna
 - Adjust FM reception.

- (16) MP3 LINK
 - Socket for connecting an external device.
- (17) Battery compartment
- (18) AC~Mains
 - · Power supply socket.

3 Get started



Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:


Model No.	
Serial No	

Install batteries



Note

- You can use both batteries and AC power as power supply of this device.
- 1 Open the battery compartment.
- 2 Insert 6 x 1.5 V R14/UM2/C CELL batteries (not supplied) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

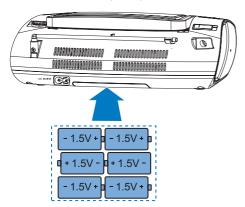


Connect power




Caution

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or the underside of the product.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before you connect the AC power cord, make sure that you have completed all other connections.
- 1 Switch the voltage selector at the bottom of the unit to local power line voltage.

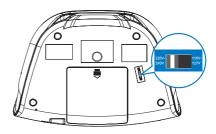

2 Connect AC power plug to AC outlet.

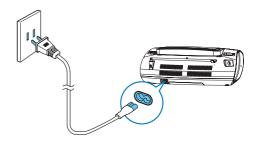

Turn on

After connected to power, the device switches to the last selected source automatically.



Tip

 Switch the source selector to OFF and disconnect the power plug from the wall outlet after use to save energy.

4 Use your CD Soundmachine

- 3 Insert a USB storage device into the ← socket.
- 4 Press ALBUM + to select a folder.
- 5 Press (◄ / ►►) to select a file, and press
 to start play.

Play a CD



Note

 You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio CDs:

- CD-Recordables (CD-R)
- CD-Rewritables (CD-RW)
- MP3-CDs
- WMA-CDs
- 1 Switch the source selector to CD•USB.
- 2 Press CD to select CD source.
- Press to open the lid of the CD compartment.
- 4 Insert a CD with the printed side facing up, and close the CD lid.
 - → Play starts automatically. If not, press ► II.
- To select a track, press I◄◄ / ▶▶I.
- To pause CD play, press ►II.
 - → [▶] flashes.
- To resume CD play, press ► II again.
- To stop CD play, press ■.

Play from USB device



Note

- Make sure that the USB device contains playable audio contents for supported formats.
- 1 Switch the source selector to CD•USB.
- 2 Press **USB** to select the USB source.

Listen to radio



Tip

- Position the antenna as far as possible from TV, VCR, or other radiation source.
- Fully extend and adjust the position of the antenna for optimal reception
- 2 Switch the MW/FM selector to MW or FM.
- 3 Rotate **TUNING** until you find optimal reception.
- 4 Repeat step 3 to tune to more stations.



Tip

- To improve FM reception, you can extend, incline, or turn the telescopic antenna for best reception.
- To improve MW reception, turn the device to face a different direction.

Control play

Buttons	Functions
VOL	Rotate to adjust volume.
	Stop play.
►II	Pause or resume play.
	Press to select a previous/next track.
	Press and hold to fast backward/
	forward in a track.
PROG	In CD/USB mode, program tracks.

MODE

Select a play mode.

[🗢] (repeat): repeat a track.

[\triangle ALL] (repeat all): repeat an entire CD/program.

[x] (shuffle): play tracks randomly.

[\Longrightarrow CDALL] (shuffle repeat all): repeat all tracks randomly.

To return to normal play, press

MODE repeatedly until play mode icons disappear.

-ALBUM+

Select previous/next album.



Tip

- When search reaches the end of the last track, the CD stops.
- Shuffle play cannot be selected when you play programmed tracks.

Program tracks

In DISC/USB mode, you can program up to 20 tracks in the desired sequence.

- 1 Press to stop play, and press PROG to active the program mode.
 - → [PROG] and [P01] are displayed.
- For MP3-CDs, press ALBUM + to select an album.
- 3 Press I◄ / ►►I to select a track, and then press PROG to confirm.
- 4 Repeat steps 2-3 to program more tracks.
 - → When all 20 tracks are stored, no more tracks can be selected and [FUL] is displayed.
- 5 Press ►II to play the programmed tracks.
 - During play, [PROG] (program) is displayed.
 - To erase the program, at the stop position, press ■.

5 Other features

Listen to an external device

You can also listen to an external audio device through this unit.

For an audio device with a headphone socket:

- Connect the supplied MP3 LINK cable to:
 - the MP3-LINK socket on the back of the unit.
 - the headphone socket on an MP3 player.
- 2 Start to play the MP3 player. (See the user manual of the MP3 player.)

6 Product information



Note

 Product information is subject to change without prior notice.

Specifications

Amplifier	
Total Output Power	2W
Frequency Response	125 -16000 Hz, -3dB
Signal to Noise Ratio	>55 dBA
Total Harmonic Distortion	<1 %

Disc

LaserType	Semiconductor
Disc Diameter	12 cm/8 cm
Support Disc	CD-DA, CD-R,
	CD-RW, MP3-CD
Audio DAC	24 Bits / 44.1 kHz
Total Harmonic	<1% (1 kHz)
Distortion	
Frequency Response	60 Hz - 16 kHz;
	±3 dB
S/N Ratio	>55 dBA

USB

USB Direct Version	USB 1.1 or 2.0
USB 5 V Power	≤300 mA

Tuner

Tuning Range	FM: 87.5-108 MHz
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>50 dBA

General information

Power Supply	
- AC Power	110-127/220-240 V~;
	50/60 Hz
- Battery	6 x 1.5 V R14/UM2/C
	CELL batteries
Operation Power	12 W
Consumption	
Dimensions - Main unit	
$(W \times H \times D)$	341 × 122 × 236 mm
Weight - main unit	1.8 kg

Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 999 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates: 32~256 (kbps), variable bit rates

USB playability information

Compatible USB devices:

- USB flash memory (USB1.1 or 2.0)
- USB flash players (USB1.1 or 2.0)

Supported USB formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- Directory nesting up to a maximum of 8 levels

- Number of albums/ folders: maximum
- Number of tracks/titles: maximum 999
- File name in Unicode UTF8 (maximum length: 16 bytes)

Unsupported USB formats:

- Empty albums: an empty album is an album that does not contain MP3 files, and is not shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files

7 Troubleshooting



Warning

· Never remove the casing of this device

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Make sure that the AC power plug of the unit is connected properly.
- Make sure that there is power at the AC outlet.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the battery.

No sound

- Adjust the volume.
- Make sure that the track played is of a compatible format.

Display does not function properly./No reaction to operation of any of the controls.

- Disconnect the AC power cord.
- Connect the AC power cord after a few seconds.

Cannot play disc

- Make sure that the disc label is inserted with the printed side facing up.
- Wipe the disc with fibre cleaning cloth from the centre to the edge in a straight line.
- This disc may be defective. Play another disc.
- Make sure that the CD is a finalized CD/ CD-R/CD-RW.

- Make sure that the laser lens is clean.
- Make sure that the CD is not encoded with copyright protection technologies.

The CD skips tracks

- Make sure that the CD is not damaged or dirty.
- Make sure that program/shuffle mode is deactivated.

USB device not supported

 The USB device is incompatible with the apparatus. Try another one.

8 Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.



The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

This apparatus includes these labels:



Class II equipment symbol



This symbol indicates that the apparatus has a double insulation system.



Note

· The type plate is located on the bottom of the device.



Specifications are subject to change without notice 2014 © WOOX Innovations Limited. All rights reserved. Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.

