



Thank you for choosing Philips.

## Need help fast?

Read your Quick Use Guide and/or Owner's Manual first for quick tips that make using your Philips product more enjoyable.

If you have read your instructions and still need assistance, you may access our online help at

[www.philips.com/usasupport](http://www.philips.com/usasupport)  
or call

**1-888-PHILIPS (744-5477)**  
while with your product.  
(and Model / Serial number)



Philips vous remercie de votre confiance.

## Besoin d'une aide rapide?

Les Guide d'utilisation rapide et Manuel de l'utilisateur regorgent d'astuces destinées à simplifier l'utilisation de votre produit Philips. Toutefois, si vous ne parvenez pas à résoudre votre problème, vous pouvez accéder à notre aide en ligne à l'adresse

[www.philips.com/usasupport](http://www.philips.com/usasupport)  
ou formez le

**1-800-661-6162 (Francophone)**  
**1-888-PHILIPS (744-5477) (English speaking)**  
Veillez à avoir votre produit à portée de main.  
(et model / serial nombre)



Gracias por escoger Philips

## Necesita ayuda inmediata?

Lea primero la Guía de uso rápido o el Manual del usuario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Philips. Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en

[www.philips.com/usasupport](http://www.philips.com/usasupport)  
o llame al teléfono

**1-888-PHILIPS (744-5477)**  
y tenga a mano el producto.  
(y número de model / serial)



# PHILIPS

**Note :** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **IMPORTANT !**

**modifications not authorized by the manufacturer may void users authority to operate this device.**

**Remarque :** Cet équipement a été testé et a été certifié conforme aux limites imposées pour un appareil numérique de Classe B, conformément à la partie 15 des règlements FCC. Ces limites sont définies aux fins d'assurer une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et émet des fréquences radio qui, en cas d'une mauvaise installation ou d'une utilisation non-conforme aux instructions de ce manuel d'utilisation peuvent causer des interférences nuisibles aux communications radio. Il n'y a toutefois aucune garantie que des interférences nuisibles ne se produiront pas dans une installation donnée. Si cet équipement cause des interférences nuisibles avec votre poste radio ou de télévision, ce que vous pouvez déterminer en éteignant et en rallumant votre équipement, il est conseillé à l'utilisateur d'essayer de pallier à ces interférences nuisibles en prenant l'une ou l'autre des mesures suivantes:

- Changez la position de l'antenne de réception.
- Augmentez la séparation entre l'équipement et le récepteur.
- Branchez l'équipement sur une source d'alimentation différente de celle sur laquelle le récepteur est branché.
- Consultez votre distributeur ou un technicien qualifié en la matière pour assistance.

### **IMPORTANTE !**

**las modificaciones no autorizadas por el fabricante pueden anular la autoridad de los usuarios para utilizar este aparato.**

**Nota :** Este aparato ha sido probado y cumple con los límites correspondientes a un aparato digital de Clase B, según la parte 15 de las Normas FCC. Estos límites han sido diseñados para facilitar suficiente protección frente a interferencias perjudiciales en una instalación residencial. Este aparato genera, utiliza y puede emitir energía de frecuencias de radio y, si no se instala y utiliza según el manual de instrucciones, puede provocar interferencias perjudiciales en las comunicaciones de radio. Sin embargo, no existe garantía de que las interferencias no ocurrirán en una instalación particular. Si este aparato provoca interferencias perjudiciales en la recepción de radio o televisión, que se puede identificar encendiendo y apagando el aparato, recomendamos al usuario que intente solucionar las interferencias siguiendo una o más de las siguientes medidas:

- Cambie la posición de la antena receptora.
- Aumente la separación entre el aparato y el receptor.
- Conecte el aparato a una toma de un circuito diferente al que está conectado el receptor.
- Consulte con el distribuidor o un técnico de radio/TV con experiencia para que le ayuden.

### **¡IMPORTANTE!**

**modificações não autorizadas pelo fabricante, podem causar danos na operação deste aparelho.**

**Return your Product Registration Card or register online at  
[www.philips.com/usasupport](http://www.philips.com/usasupport) today to get the very most from your purchase.**

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once, **or register online at [www.philips.com/usasupport](http://www.philips.com/usasupport)** to ensure:

**\*Proof of Purchase**

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

**\*Product Safety Notification**

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

**\*Additional Benefits**

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

# PHILIPS

***Congratulations on your purchase, and welcome to the "family!"***

**Dear PHILIPS product owner:**

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come. As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.


All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.


**PS. To get the most from your PHILIPS purchase, be sure to complete and return your Product Registration Card at once, or register online at:**

**[www.philips.com/usasupport](http://www.philips.com/usasupport)**

Know these  
**safety** symbols



 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**ATTENTION:** Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

**For Customer Use**

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

# PHILIPS

Visit our World Wide Web Site at <http://www.philips.com/usasupport>

 
# IMPORTANT SAFETY INSTRUCTIONS

1. **Read these instructions.**
2. **Keep these instructions.**
3. **Heed all warnings.**
4. **Follow all instructions.**
5. **Do not use this apparatus near water.**
6. **Clean only with dry cloth.**
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
8. **Do not install near any heat sources**

such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. **Do not defeat the safety**

**purpose** of the polarized or



**AC Polarized Plug**

grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. **Protect the power cord** from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. **Only use attachments/accessories** specified by the manufacturer.

12. **Use only with the cart,** stand,



tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is

used, use caution when moving the cart /apparatus combination to avoid injury from tip-over.

13. **Unplug this apparatus** during lightning storms or when unused for long periods of time.
14. **Refer all servicing** to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. **Battery usage CAUTION** –To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

Install **all** batteries correctly, **+** and **-** as marked on the unit.

Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).

Remove batteries when the unit is not used for a long time.

16. **Apparatus shall not be exposed to dripping or splashing.**
17. **Do not place any sources of danger on the apparatus** (e.g. liquid filled objects, lighted candles).
18. This product may contain lead and mercury. Disposal of these materials may be regulated due to environment considerations.

**For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).**

**EL 6475-S004: 03/12**

**Class II equipment symbol**

This symbol indicates that the unit has a double insulation system



## Canada

### English:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

### Français:

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Class B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

English ----- 6

Français ----- 40

Español ----- 76

**CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTIN TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.**

## CAUTION

*Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.*

## ATTENTION

*L'utilisation des commandes ou réglages ou le non-respect des procédures ci-incluses peuvent se traduire par une exposition dangereuse à l'irradiation.*

## ATENCIÓN

*El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.*

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reserve engineering or disassembly is prohibited.

# Contents

## General Information

Features .....	8
Supplied accessories .....	8
Environment information .....	8
Safety information .....	9
Maintenance .....	9

## Connections

Step1: Placing speakers and subwoofer .....	10
Step2: Connecting speakers and subwoofer... ..	10
Step3: Connecting TV set .....	11~12
Using Video in jack (CVBS)	
Using Component Video in jack (Pr Pb Y)	
Using S-Video in jack	
Using an accessory RF modulator	
Step4: Connecting the FM antenna .....	13
Step5: Connecting the power cord .....	13
Step6: Connecting a VCR or cable/satellite box.....	13
Step7: Connecting digital audio equipment....	14

## Functional Overview

Controls on the system .....	15
Remote control .....	16~17

## Getting Started

Step 1: Using the Remote Control .....	18
Step 2: Setting up the TV .....	18~20
Selecting the color system that matches your TV set	
Setting up Progressive Scan feature	
To deactivate Progressive manually	
Step 3: Setting language preference .....	20
Setting the OSD Language	
Setting the Audio, Subtitle and Disc Menu language	

## Basic Functions

Switching the system on/off .....	21
Power saving automatic standby .....	21
Volume control .....	21
Sound Control .....	21
DBB (Dynamic Bass Boost)	
DSC (Digital Sound Control)	

## Disc Operations

Playable Discs .....	22
Region Codes .....	22
Playing discs .....	23
Using the Disc Menu.....	23
Using PBC feature (available for 2.0-version VCD only)	
Resuming playback.....	23
Selecting and searching .....	23~24
Selecting a different track/chapter	
Fast forwarding/reversing	
GOTO	
Different play modes:	
REPEAT, SHUFFLE and REPEAT A-B .....	24
REPEAT	
SHUFFLE	
REPEAT A-B	
Programming favourite tracks .....	25
Display information .....	25
ZOOM.....	26
AUDIO .....	26
SUBTITLE .....	26
Playing a title .....	26
Playing MP3/WMA/JPEG disc .....	26
Playing MP3 music and JPEG picture simultaneously.....	27
Playing Kodak Picture disc .....	27

## DVD MENU Operations

Using the menu bar .....	28
Using setup menu (user preference settings) .....	29~31
TV Display	
Screen Saver	
Night Mode	
Test Tone	
Changing the password	
Restricting playback by setting parental level	
Rating explanations	
OSD language (menu language)	
Default	

---

## **Tuner**

Tuning to radio stations.....	32
Storing preset radio stations.....	32
Manual programming.....	32
Automatic programming.....	32
Listening to preset radio stations.....	32
Deleting a preset radio station.....	32

---

## **Clock/Timer**

Viewing clock.....	33
Setting clock.....	33
Setting wake-up timer.....	33
Setting sleep timer.....	33

---

<b>Specifications</b> .....	34
-----------------------------	----

---

<b>Troubleshooting</b> .....	35~37
------------------------------	-------

---

<b>Glossary</b> .....	38
-----------------------	----

---

# General Information

***This set complies with the FCC rules, Part 15 and with 21 CFR 1040.10.***

***Operation is subject to the following two conditions:***

- This device may not cause harmful interference, and***
- This device must accept any interference received, including interference that may cause undesired operation.***

## Features

Your DVD MICRO THEATRE System with 2.1-channel full analog amplifier creates the same dynamic sound qualities that you find in full fledged cinemas and incorporates some of the best features in home theater technology. Other features include:

### **Additional Component Connections**

Lets you connect other audio and audio/visual components to the DVD micro system.

### **Night Mode**

Selects Dynamic ON or OFF cyclically

### **Parental Control (Rating Level)**

Lets you set a ratings level so that your children cannot watch a DVD that has a rating higher than you set.

### **Parental Control (Rating Level) Sleep/Wake-up Timer**

Enables the system to switch on/off automatically at a preset time.

### **Progressive Scan**

Provides high quality flicker-free images for film based sources. When a picture refreshes, its vertical resolution can double to 525 lines.

**Note:**

- To fully enjoy the progressive scan feature, you need a progressive scan TV.***

## Supplied accessories

- Remote control with one CR2025 battery
- Two speakers and one subwoofer
- DIN cable
- Composite video cable (yellow)
- FM wire antenna
- User Manual and Quick Start Guide

***If any item is damaged or missing, contact your retailer or Philips.***

## Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



## Safety information

- Before operating the system, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your system is identical with the voltage of your local power supply. If not, please consult your dealer.
- Place the system on a flat, hard and stable surface.
- The apparatus shall not be exposed to dripping or splashing.
- Install the unit near the AC outlet and where the AC power plug can be easily reached.
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system. Allow at least 10 cm (4 inches) clearance from the rear and the top of the unit and 5 cm (2 inches) from each side.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Do not expose the system, batteries or discs to excessive moisture, rain, sand or heat sources caused by heating equipment or direct sunlight.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens of the disc unit inside the system. Should this occur, the CD player would not operate normally. Leave the power on for about one hour with no disc in the system until normal playback is possible.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- **When the system is switched to Standby mode, it is still consuming some power. To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.**


## Maintenance

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out, in a straight line.
- Do not expose the player, batteries or discs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight). Always keep the disc tray closed to avoid dust on the lens.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for colour discs.
- The lens may cloud over when the player is suddenly moved from cold to warm surroundings, making it impossible to play a disc. Leave the player in the warm environment until the moisture evaporates.



# Connections

## Step 1: Placing speakers and subwoofer

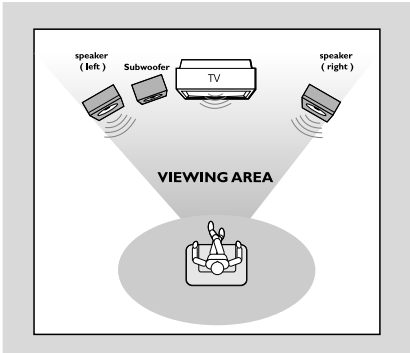

For best possible surround sound, locate your speakers and subwoofer as follows:

- Place the left and right speakers at equal distances from the TV set and at an angle of approximately 45 degrees from the listening position.
- Place the subwoofer on the floor:

### Notes:


- To avoid magnetic interference, position the speakers, subwoofer as far as possible from the main unit, TV set or other radiation source.
- Allow adequate ventilation around the DVD System.

### IMPORTANT!


**The type plate is located on the bottom of the system.**

**To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it.**

## Step 2: Connecting speakers and subwoofer

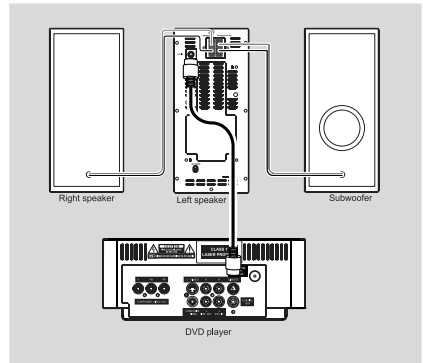

- Connect the supplied DIN cable to DVD player's DIN jack and the left speaker's DIN jack.
- Connect the supplied speaker wires of the right speaker to SPEAKER RIGHT on the left speaker; red wire to red jack ("+"), black wire to black jack ("-"). Fully insert the stripped portion of the speaker wire into the terminal as shown.

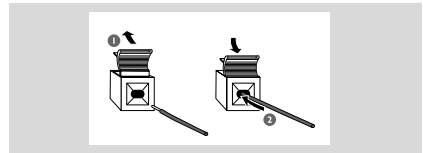

- Connect the supplied speaker wire of the subwoofer to SUBWOOFER OUT on the left speaker; green wire to green jack ("+"), white wire to white jack ("-").

### Notes:


- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of +/- speaker terminals.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

## Step 3: Connecting TV set

### IMPORTANT!

- You only need to make one video connection from the following options, according to the capabilities of your TV system.
- S-Video or Component Video connection provides higher picture quality. These options must be available on your TV set.
- Connect the system directly to the TV set.

### Using Video In jack (CVBS)

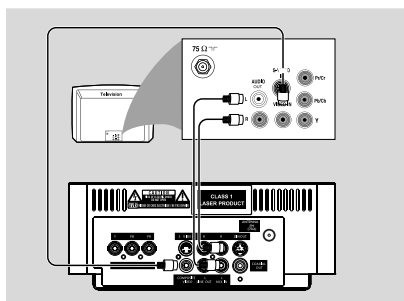


- Use the supplied composite video cable (yellow) to connect the system's **COMPOSITE VIDEO** jack to the video input jack (or labeled as A/V In, Video In, Composite or Baseband) on the TV set.
- To listen to TV channels through this system, use the audio cables (white/red, not supplied) to connect **AUX IN (L/R)** jacks to the corresponding AUDIO OUT jacks on the TV set.  
Or, to listen to disc playback of the system through your TV, use the audio cables (white/red, not supplied) to connect **LINE OUT (L/R)** jacks to the corresponding AUDIO IN jacks on the TV set.

### Using component Video In jack (Pr Pb Y)

- Use the component video cables (red/blue/green, not supplied) to connect the system's **PR/PB/Y** jacks to the corresponding Component video input jacks (or labeled as Pr/Cr Pb/Cb Y or YUV) on the TV set.
- To listen to TV channels through this system, use the audio cables (white/red, not supplied) to connect **AUX IN (L/R)** jacks to the corresponding AUDIO OUT jacks on the TV set.


Or, to listen to disc playback of the system through your TV, use the audio cables (white/red, not supplied) to connect **LINE OUT (L/R)** jacks to the corresponding AUDIO IN jacks on the TV set.

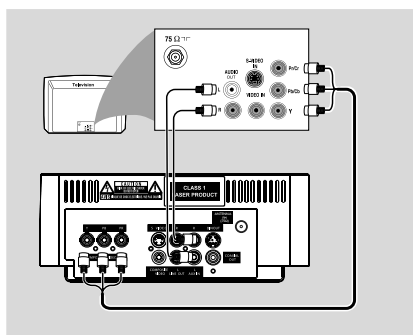

### Notes for progressive scan video:

- The progressive scan video quality is only possible when using Y Pb Pr, and a progressive scan TV is required.
- If you are using a Progressive Scan TV (TV must indicate Progressive Scan or ProScan capability), to activate TV Progressive Scan, please refer to your TV user manual. For DVD system's Progressive Scan function, see "Getting Started - Setting up Progressive Scan feature".
- If your TV does not support Progressive Scan, you will not be able to view the picture. Turn off progressive scan in PROGRESSIVE menu of the system setup menu.

## Using S-Video In jack

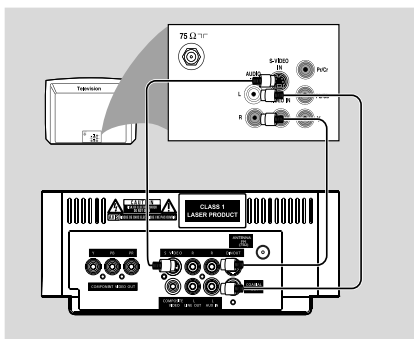


- Use the S-Video cable (not supplied) to connect the system's **S-VIDEO** jack to the S-Video input jack (or labeled as Y/C or S-VHS) on the TV set.
- To listen to TV channels through this system, use the audio cables (white/red, not supplied) to connect **AUX IN (L/R)** jacks to the corresponding AUDIO OUT jacks on the TV set. Or, to listen to disc playback of the system through the TV, use the audio cables (white/red, not supplied) to connect **LINE OUT (L/R)** jacks to the corresponding AUDIO IN jacks on the TV set.

## Using an accessory RF modulator

### IMPORTANT!

– If your TV set only has a single Antenna In jack (or labeled as 75 ohm or RF In), you will need a RF modulator in order to view the DVD playback via TV. See your electronics retailer or contact Philips for details on RF modulator availability and operations.

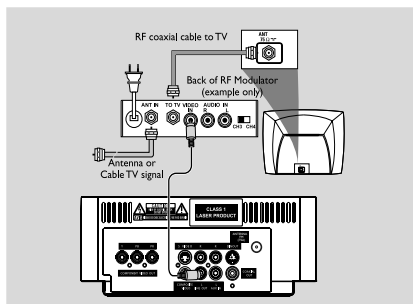

- Use the supplied composite cable (yellow) to connect the system's **COMPOSITE VIDEO** jack to the video input jack on the RF modulator.
- Use the RF coaxial cable (not supplied) to connect the RF modulator to your TV's RF jack.


## Step 4: Connecting the FM antenna

- Connect the supplied FM antenna to the FM (75  $\Omega$ ) jack at the back of the main unit. Extend the FM antenna and fix its end to the wall.

## Step 5: Connecting the power cord

### IMPORTANT!


- Never make or change any connection with the power switched on.

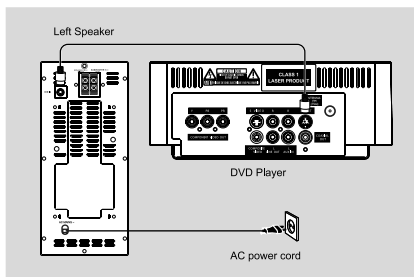

- After everything is connected properly, plug in the AC power cord to the power socket.

## Step 6: Connecting a VCR or cable/satellite box

### Viewing and listening to playback

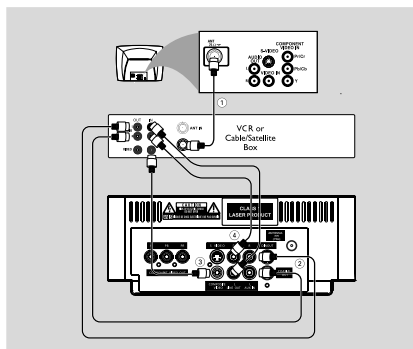

- 1 Connect the VCR or Cable/Satellite Box to the TV system as shown.
- 2 Using the audio cables (red/white, not supplied) Connect the system's **AUX IN (L/R)** jacks to the AUDIO OUT jacks on the VCR or Cable/Satellite box.

Before starting operation, press **AUX** on the remote control to select "AUX" in order to activate the input source.

### Using the VCR for recording DVDs

Some DVDs are copyright-protected. You cannot record or dub protected discs using a VCR.

- 3 Connect the system's **COMPOSITE VIDEO** jack to the VIDEO IN jack on the VCR.
- 4 Connect the system's **LINE OUT (R/L)** jacks to the AUDIO IN jacks on the VCR. This will allow you to make analog stereo (two channel, right and left) recording.

### To view DVD playback while recording

You must connect the system to your TV system using the **S-VIDEO** (as shown above) or the **COMPONENT VIDEO OUT** (Pr Pb Y) video connection.


## Step 7: Connecting digital audio equipment



### Recording (digital)

Connect the system's COAXIAL OUT (digital out) jack to the DIGITAL IN jack on a digital recording device (DTS-Digital Theater System compatible, with a Dolby Digital decoder; for example).

Before operation, set COAXIAL OUTPUT according to the audio connection.

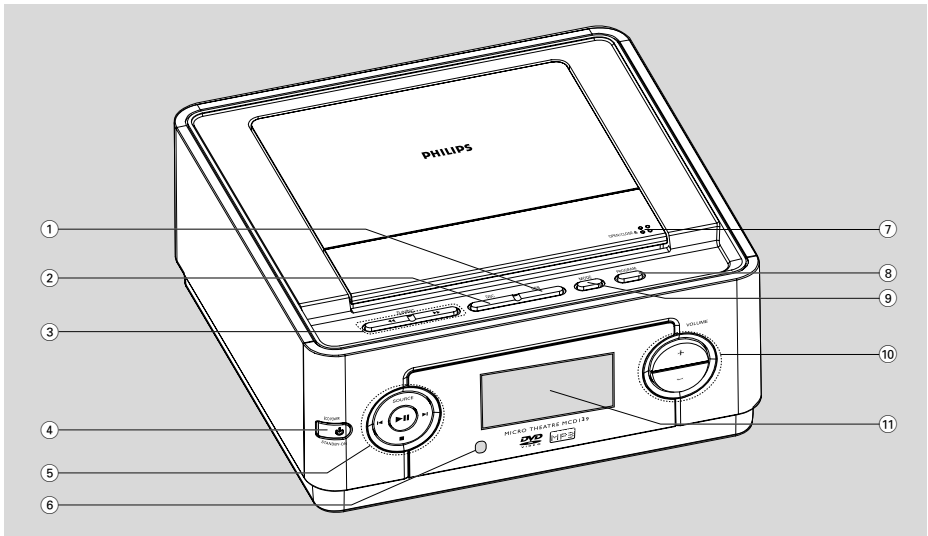

## Controls on the system

### ① **DBB**

- enables or disables bass enhancement.

### ② **DSC**

- selects different types of preset sound equalizer settings (CLASSIC, ROCK, JAZZ or POP).

### ③ **TUNING ◀▶**

Tuner.....tunes to a radio station  
 Disc..... fast searches backward/forward in a disc at different speeds.  
 Clock.....sets the minutes

### ④ **STANDBY-ON**

- switches the system on or to Eco-power standby /standby mode.

### ⑤ **▶ II**

- starts or interrupts disc playback

#### **SOURCE**

- selects the respective sound source: DVD, FM or AUX.

#### **◀ / ▶**

Disc.....press to skip to the previous/next chapter/title/track.

Tuner.....selects a preset radio station

Clock.....sets the hours



- stops disc playback or erases a program.

### ⑥ **iR Sensor**

- point the remote control towards this sensor.

### ⑦ **OPEN/CLOSE**

- opens or closes the disc door.

### ⑧ **PROGRAM**

- For VCD/CD only:** program the favourite tracks

### ⑨ **MODE**

- selects various repeat play modes (For VCD with PBC feature, PBC must be turned off.)

### ⑩ **VOLUME +/-**

- adjusts the volume upward/downward.


### ⑪ **Display**

- shows the current status of the DVD player.

# Functional Overview

## Remote control

- ① **Power**
  - switches the system to Eco-power standby / standby mode.
- ② **SOURCE (DISC/AUX/TUNER)**
  - switches on the system
  - selects the respective sound source for disc/FM/AUX
- ③ **A-B**
  - repeats playback of a specific section within a chapter of DVD or a track of VCD/CD.
- ④ **SYSTEM MENU**
  - enters or exits the system menu.
- ⑤ **MODE**
  - selects variations of continuous playback (For VCD with PBC feature, PBC must be turned off.)
  - For VCD/CD only: selects to playback in random order (For VCD with PBC feature, PBC must be turned off.)

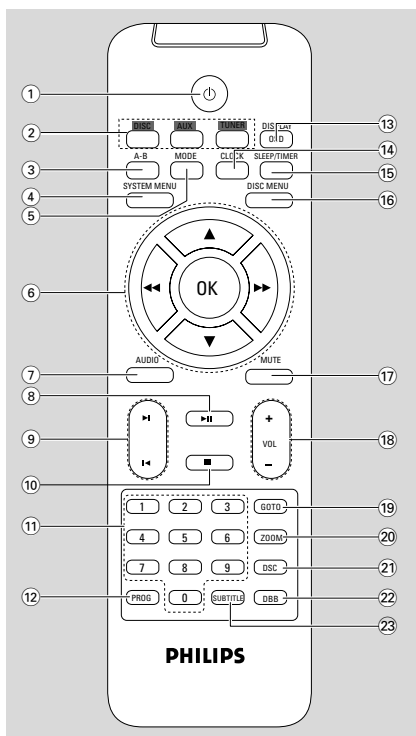

- ⑥ **OK**
  - confirms a selection.  
▼ / ▲ / ◀ / ▶
  - selects an item in a menu.
  - moves an enlarged picture up/down/left/right.  
◀◀ / ▶▶
  - Disc..... fast searches backward/forward in a disc at different speeds.
  - Tuner.....tunes to a radio station
  - Clock.....sets the minutes
- ⑦ **AUDIO**
  - for VCD**
    - sets Left vocal, Right vocal, Mono left, Mono right or Stereo sound mode.
  - for DVD**
    - selects an audio language.
- ⑧ **▶ ||**
  - starts or interrupts disc playback.
- ⑨ **◀ / ▶**
  - Tuner.....selects a preset radio station
  - Disc.....skips to the previous/next chapter/ title/track
  - Clock.....sets the hours
  - For JPEG: selects different zooming rates
- ⑩ **■**
  - stops disc playback or erases a program.
- ⑪ **Numeric Keypad (0-9)**
  - inputs a track/title/chapter number of the disc.
- ⑫ **PROG**
  - For VCD/CD only: program the favourite tracks
- ⑬ **DISPLAY (OSD)**
  - displays disc playback time during playback
- ⑭ **CLOCK**
  - sets and views the clock
- ⑮ **SLEEP/TIMER**
  - activates/deactivates or selects the sleep timer
  - activates/deactivates or sets the wake-up timer
- ⑯ **DISC MENU**
  - DVD/VCD: enters or exits the disc contents menu (For VCD with PBC feature, PBC must be turned on.)
  - MP3/WMA/JPEG: switches on or off the album/ picture menu.



## ⑪7 MUTE

- disables or enables sound output.

## ⑪8 VOL +/-

- adjusts the volume upward/downward.

## ⑪9 GOTO

- fast searches in a disc by entering a time, title or chapter (For VCD with PBC feature, PBC must be turned off.)

## ⑪0 ZOOM

- DVD/VCD/JPEG: enlarges a picture or active image on the TV screen.
- For JPEG: turns on/off the zooming feature

## ⑪1 DSC

- selects different types of preset sound equalizer settings (CLASSIC, ROCK, JAZZ or POP).

## ⑪2 DBB

- enables or disables bass enhancement.

## ⑪3 SUBTITLE

- selects a subtitle language.

### **Notes for remote control:**

– **First select the source you wish to control by pressing one of the source select keys on the remote control (for example CD , TUNER).**


– **Then select the desired function (for example ►, ◀, ▶).**

# Getting Started

## Step 1: Using Remote Control

### IMPORTANT!


- Before using the remote control, remove the insulation plastic tab as shown in the picture below.
- If the remote control does not function correctly or the operating range is reduced, replace the battery with a new (CR2025) battery.

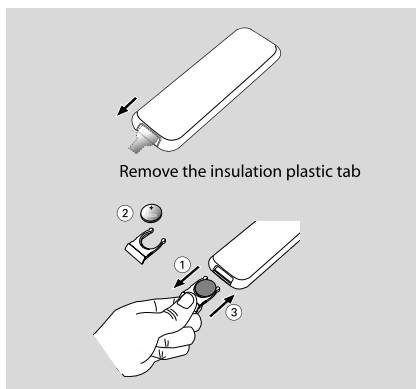

- 1 Push to open the battery tray.
- 2 Replace a new battery according to the indicated polarity.
- 3 Push the battery tray back to close it.

### Using the Remote Control to operate the Player

- 1 Aim the Remote Control directly at the remote sensor (IR) on the front panel.
- 2 Select the source you wish to control by pressing one of the source select buttons on the remote.
- 3 Then select the desired function (for example, ► II, ◀ or ►).

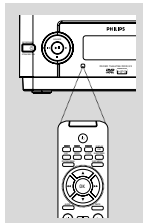

### CAUTION!

- Perchlorate Material-special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).
- Remove the battery if it is exhausted or if the Remote Control is not being used for a long time.

- Batteries contain chemical substances, so they should be disposed of properly.

## Step 2: Setting up the TV


### IMPORTANT!

Make sure you have completed all the necessary connections. (See “Connecting TV”).

- 1 Switch the DVD system on and then select DISC source. (See “Switching the system on/off”).
- 2 Turn on the TV and set to the correct video-in channel. You should see the blue Philips DVD background screen on the TV.
  - Usually these channels are between the lowest and highest channels and may be called FRONT, A/V IN, or VIDEO. See your TV manual for more details.
  - Or, you may go to channel 1 on your TV, then press the Channel up button repeatedly until you see the Video In channel.
  - Or, the TV Remote Control may have a button or switch that chooses different video modes.
  - Or, set the TV to channel 3 or 4 if you are using an RF modulator.

### Selecting the color system that matches your TV set

This DVD system is compatible with both NTSC and PAL. For the playback of a DVD disc on this DVD system, the color systems of the DVD, TV set and DVD System should match.

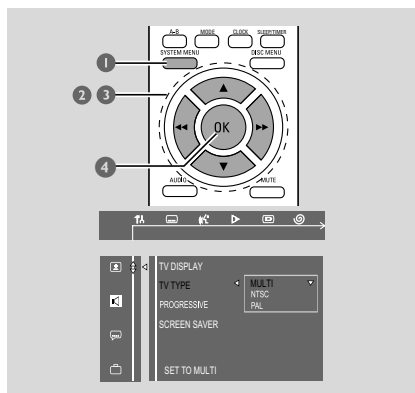

- 1 In disc mode, stop playback then press **SYSTEM MENU**.  
→ The menu bar will appear across the top of the TV screen.
- 2 Select **TV** icon and press ▼.
- 3 Press ◀▶ / ▼ / ▲ keys on the remote control to navigate in the menu.  
→ Move to **TV TYPE**, and press ▶▶.  
→ Move to "TV TYPE", and press ▶▶.

## MULTI

– Select this if the connected TV set is compatible with both NTSC and PAL (multi system). The output format will be consistent with the video signal of the disc.

## NTSC

– Select this if the connected TV set is NTSC system. It will change the video signal of a PAL video disc and output to NTSC system.

## PAL

– Select this if the connected TV set is PAL system. It will change the video signal of an NTSC disc and output to PAL format.

- 4 Select an item and press **OK**.  
→ The screen messages for further setting confirmation may appear. Follow the on-screen instructions to proceed to confirm the setting or not.

## To remove the menu

Press **SYSTEM MENU**.

## Setting up Progressive Scan feature (for Progressive Scan TV only)


The progressive scan display twice the number of frames per seconds than interlaced scanning (ordinary normal TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and quality.

## IMPORTANT!


**Before enabling the progressive scan feature, you must ensure:**

- 1) Your TV can accept progressive signals, a progressive scan TV is required.
- 2) You have connected the DVD player to your TV using Y Pb Pr (see "Connecting TV set")

- 1 Turn on your TV.
- 2 Turn off your TV progressive scan mode or turn on interlaced mode (refer to your TV user manual).
- 3 Press **STANDBY-ON** ⏻ to turn on the DVD player.
- 4 Select the correct Video Input channel.
- 5 Press **SYSTEM MENU** on the remote control.  
→ The menu bar will appear across the top of the TV screen.
- 6 Select **TV** icon and press ▼.  
→ Playback will pause.

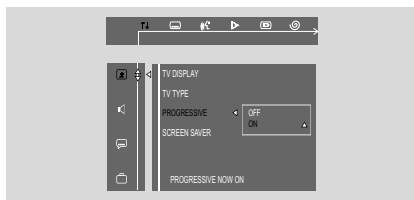

- 7 Press ◀▶ / ▼ / ▲ keys on the remote control to navigate in the menu.  
→ Move to **PROGRESSIVE**, and press ▶▶.  
→ Move to "PROGRESSIVE", and press ▶▶.  
→ Move to "ON", and press **OK**.  
→ The screen message below appears on the TV.

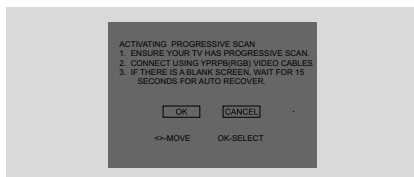

- 8 Press ◀▶ to highlight OK in the menu and press **OK** on the remote to confirm.  
→ The screen message for further progressive scan setting confirmation will appear.  
**There will be a distorted picture on your TV at this state until you turn on the progressive scan mode on your TV.**
- 9 Turn on your TV progressive scan mode (refer to your TV user manual).
- 10 In the confirmation menu, press ◀▶ to highlight OK in the menu and press **OK** on the remote to confirm.

# Getting Started

- Progressive scan is now set on. TV screen comes to the system menu.
- If distorted picture still appears, it indicates that your TV doesn't support progressive scan. In this case, turn off progressive scan as described in **"To deactivate Progressive manually"**.

- 1 Press **SYSTEM MENU** on the remote to exit the system menu.
  - The setup is complete now and you can start enjoying the high quality picture.

## To deactivate Progressive manually


- **When the distorted sign still appears on the TV**, it may be because the connected TV does not accept progressive signals, and progressive is set by mistake. You must reset the unit to interlace format.

- 1 Turn off your TV progressive scan mode or turn on to interlaced mode (refer to your TV user manual).
- 2 Turn off progressive scan by selecting "OFF" under PROGRESSIVE menu, then press **SYSTEM MENU** on the remote to exit the system menu.
- To turn off progressive scan, you may also first open the disc door; then hold down **▶** on the front panel, and press **numeric key "1"** on the remote.
  - Progressive scan is turned off.

## Step 3: Setting language preference

You can select your own preferred language settings. This DVD system will automatically switch to the selected language whenever you load a disc. If the language selected is not available on the disc, the disc's default language will be used instead. The OSD language in the system menu will remain once selected.

## Setting the OSD Language

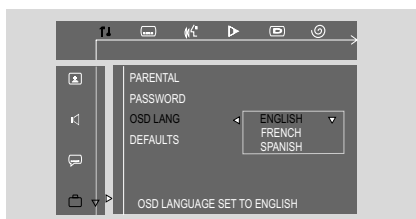

- 1 Press **SYSTEM MENU** on the remote control.
  - The menu bar will appear across the top of the TV screen.
- 2 Select **1A** icon and press **▼**.
  - Playback will pause.
- 3 Press **◀ / ▶ / ▼ / ▲** keys on the remote control to navigate in the menu.
  - Move to **1A**, and press **▶▶**.
  - Move to "OSD LANG", and press **▶▶**.
- 4 Select your desired language and press **OK**.

## To remove the menu

- Press **SYSTEM MENU** on the remote control again.

## Setting the Audio, Subtitle and Disc Menu language



- 1 In disc mode, stop playback then press **SYSTEM MENU**.
  - The menu bar will appear across the top of the TV screen.
- 2 Select **1A** icon and press **▼**.
- 3 Press **◀ / ▶ / ▼ / ▲** keys on the remote control to navigate in the menu.
  - Move to **1A**, and press **▶▶**.
  - Move to one of the following and press **▶▶**.
    - "Audio" (disc's soundtrack)
    - "Subtitle" (disc's subtitles)
    - "Disc Menu" (disc's menu)
- 4 Press **▼ / ▲** to select a language and press **OK**.

## To remove the menu

Press **SYSTEM MENU**.

## IMPORTANT!

- Before you operate the system, complete the connection procedures.
- When the system is switched to Standby mode, it is still consuming power. To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.

## Switching the system on/off

- In standby/Eco-power standby mode, press **STANDBY ON** (⏻) / **SOURCE** on the set, or **DISC/TUNER/AUX** on the remote to switch on the system.
  - "POWER ON" is displayed briefly.
  - The system will switch to the selected or last selected source.

### To switch the system to Eco-power standby mode

- In power-on mode, press briefly **STANDBY ON** (⏻) (⏻ on the remote).
  - "ECOPOWER" is displayed briefly.
  - Eco-power lamp (⏻) on the front panel will light up.
  - The LCD display will go blank.

### To switch the system to standby mode

- In power-on mode, press and hold **STANDBY ON** (⏻) (⏻ on the remote).
  - The clock time will be displayed. Or "---- : ----" will be displayed if clock time is not set.

#### Helpful hints:

- Pressing ⏻ on the remote can switch between Eco-power standby and normal standby.

## Power saving automatic standby

As a power-saving feature, the system will automatically switch to Standby mode if you don't press any button within 30 minutes in the stop mode.

## Volume control

Press **VOLUME (+/-)** (or **VOL +/-** on the remote) to increase or decrease the volume level.

→ The display briefly shows "VOL" and a volume value from "01" to "39" ("MIN" or "MAX" is displayed when adjusted to the lowest or highest volume level).

### To switch off the volume temporarily

- Press **MUTE** on the remote.
  - Playback will continue without sound and "MUTE" is displayed briefly.
- To activate sound reproduction, you can:
  - press **MUTE** again;
  - adjust the volume controls;
  - change source.

## Sound Control

### DBB (Dynamic Bass Boost)

DBB enhances the bass response.

- Press **DBB** to enable or disable DBB feature.
  - If DBB is activated, "DBB" will be shown.

#### Helpful hints:

- Some discs might be recorded in high modulation, which causes a distortion at high volume. If this occurs, switch off DBB or reduce the volume.


### DSC (Digital Sound Control)

DSC provides a different type of preset sound equalizer setting.

- Press **DSC** on the remote (or on the system) repeatedly to select: CLASSIC, ROCK, JAZZ or POP
  - The display shows the selected sound setting.

# Disc Operations

## IMPORTANT!

- Depending on the DVD or VIDEO CD, some operations may be different or restricted.
- Do not push on the disc tray or put any objects other than disc on the disc tray. Doing so may cause the disc player malfunction.
- If the inhibit icon  appears on the TV screen when a button is pressed, it means the function is not available on the current disc or at the current time.

## Playable Discs

Your DVD Player will play:

- Digital Versatile Discs (DVDs)
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- Digital Versatile Discs + Recordable (DVD+R)
- Digital Versatile Discs + Rewritable (DVD+RW)
- Compact Discs (CDs)
- MP3 disc on CD-R(W):
  - Supported sampling frequencies: 32kHz, 44.1kHz, 48kHz.
  - Supported Bit-rates : 32, 64, 96, 128, 192, 256(kbps)
- WMA-CDs (CD-ROMs with WMA tracks)
- Picture (JPEG) files on CD-R(W)



## Region Codes

DVDs must be labeled for ALL regions or Region 1 in order to play on this DVD system. You cannot play discs that are labeled for other regions.



### Note:

- If you are having trouble playing a certain disc, remove the disc and try a different one. Improper formatted disc will not play on this DVD Player.

## Playing discs

- 1 For DVDs and VCDs, make sure that the system is properly connected to your TV (See **Connecting a TV**), and your TV is turned on and set to video-in channel (See **Setting up the TV**).
- 2 Press **SOURCE** on the system once or more to select DVD mode ( or **DISC** on the remote control).
  - You should see the blue Philips DVD background screen on the TV.
- 3 Push **OPEN/CLOSE** on the top of the system to open the disc tray.
- 4 Insert a disc with the print side facing up and close the disc tray.
- 5 Playback will start automatically (depending on the disc type).
  - If a disc menu appears on the TV, see **"Using the Disc Menu"**.
  - If the disc is locked by parental control, you must enter your four-digit password. (See **"Changing the password"**).

### To interrupt playback

- Press **▶ II**.
  - "PAUSE" is displayed briefly on the TV screen.
- To resume playback, press **▶ II** again.

### To stop playback

- Press **■**.

## Using the Disc Menu

Depending on the disc, a menu may appear on the TV screen once you load the disc.

### To select a playback feature or item

- Use **◀ / ▶** / **▼ / ▲** and **OK** or **Numeric Keypad (0-9)** on the remote control, then press **▶ II** to start playback.

## Using PBC feature (available for 2.0-version VCD only)

PBC playback allows you to play Video CDs interactively, following the menu on the display, such as allowing you to select favourite songs.

### To switch PBC on or off

- 1 In disc mode, press **SYSTEM MENU**.
  - The menu bar will appear across the top of the TV screen.
- 2 Press **◀ / ▶** / **▼ / ▲** keys on the remote control to navigate in the menu.
  - Press **◀ / ▶** to move to PBC ON/OFF option, and press **▼**.
  - If PBC was ON, it will switch to OFF and continue playback.
  - If PBC was OFF, it will switch to ON and return to menu screen.
  - When PBC is ON, pressing **DISC MENU** will return to menu screen.

## Resuming playback

- During playback, press **■** once to stop the playback in resume mode, then press **▶ II** to start playback from where you have stopped.

### To cancel the resume mode

- In the stop position, press **■** again to fully stop the playback. Or open the disc door, or switch the system to standby mode.

## Selecting and searching

### Selecting a different track/chapter

#### For DVD/VCD/CD/MP3:

- During playback, briefly press **◀ / ▶** once or more until your desired track/chapter number appears.

#### Or,

use the **Numeric Keypad (0-9)** on the remote control to directly input your track/chapter number:

→ After selecting, playback will automatically start from the beginning of the selected chapter/track.

#### Helpful hints:

- Some VCDs have a single track, so track selecting or an invalid input value for the current disc will be ignored.
- If the player has been set to repeat chapter (track), pressing this button will replay the same chapter (track) from its beginning.

# Disc Operations

## Fast forwarding/reversing

### For DVD/VCD/CD/MP3:

- 1 During playback, press ◀▶ repeatedly to select fast search speed in forward (FF) or reverse (FR) playback.  
→ The disc plays at a high speed with no sound.
- 2 To resume to normal playback, press ▶II.  
Or, press ◀▶ repeatedly until "PLAY" is displayed on the TV screen.

### Helpful hints:

- For VCD/CD/MP3, fast searching forward/backward is available only within the same track.

## GOTO

- 1 During playback, press **GOTO** once or more on the remote control.  
→ For VCD with PBC feature, PBC must be turned off first.  
→ TV screen shows various search bars in the sequence as follows:

### For DVDs:

Title 04/04 Chapter  / 2 4

(used to select chapter number; or title field by using ◀▶ on the remote control)

Title 04/04 Time : :

(used to select playtime within the current title)

### For VCDs/CDs:

Go To: - - : - -

(used to select playtime within the entire disc)

- 2 Use the **Numeric Keypad (0-9)** on the remote control to input your title/chapter number or playtime.
- 3 Press **OK** on the remote to start playback from where you have selected.

### Helpful hints:

- An invalid input value for the current disc will be ignored.

## Different play modes: REPEAT, SHUFFLE and REPEAT A-B

### REPEAT

#### For DVDs/VCD/CD/MP3

- During playback, press repeatedly **MODE** on the system to choose desired repeat play modes.  
→ For VCD with PBC feature, PBC must be turned off first.  
→ TV screen shows the play modes in the sequence as follows:

### For DVDs

**CHAPTER REPEAT ON:** Repeats the current chapter

**TITLE REPEAT ON:** Repeats the current title

**REPEAT OFF:** Switchs off play mode

### For VCDs/CDs/MP3

**REPEAT TRACK:** Repeats the current track

**REPEAT ALL:** Plays all the tracks repeatedly

**REPEAT OFF:** Switchs off play mode

**REPEAT ALBUM (for MP3 only):**

Repeats the current album

- To return to normal playback, press **MODE** repeatedly until "OFF" is displayed.

## SHUFFLE

In this mode, all tracks will be played in random order.

### For VCD/CD

- 1 During playback, press ■ twice to fully stop the playback.
- 2 Press **MODE** on the remote.  
→ SHUFFLE ON is displayed.
- 3 Press ▶II to start shuffle play.
- 4 To switch off shuffle play, press ■ twice.

### Helpful hints:

- Selection of shuffle play is not available for DVD and MP3.

## Repeat A-B

### For DVD/VCD/CD/:

- 1 Press **A-B** on the remote at your chosen starting point.
- 2 Press **A-B** on the remote again at your chosen end point.  
→ The section will now repeat continuously.  
→ A-B play is available within a chapter of DVD or a track.
- 3 To exit the sequence, press **A-B** on the remote again.  
→ "A TO B CANCELLED" is displayed briefly on the TV screen.



## Programming favourite tracks

### For VCDs/CDs

You can select and program up to 99 desired tracks for playback in the desired sequence. If you like, store any track/chapter/title more than once.

- 1 During playback, press ■ twice to fully stop the playback.
- 2 Press **PROG** on the remote control (or **PRGOGRAM** on the system) to activate programming mode.
  - On the TV screen, "PROGRAM" and "P 00:00" are displayed.
  - On the system's display, "PRG" flashes, and P00: 00 is displayed.
- 3 Use the **Numeric Keypad (0-9)** on the remote control to enter your desired track number.
- 4 Press **OK** on the remote to store the track.
  - P00 is changed to P0 1, indicating the first programmed track is stored and the next program sequence is available.
- 5 Repeat **steps 3-4** to store other tracks.
  - If you attempt to program more than 99 tracks, FULL is displayed, and no track can be stored.
- 6 Press ►|| to playback the program.
  - "PRG" is displayed during playback.

### To Erase program

You can erase program by doing one of the following:

- During program playback, press ■ two times.
- Open the disc door:
  - "PRG" disappears from the display.

### Helpful hints:

- Programming is not available for DVD and MP3 disc.

## Display information

During playback, press **DISPLAY** on the remote control repeatedly to display various disc playback time on the TV screen ( and the system's display).

For **DVDs**:

**TITLE ELAPSED** - elapsed playback time of current title

**TITLE REMAIN** - remaining time of current title

**CHAPTER ELAPSED** - elapsed playback time of current chapter

**CHAPTER REMAIN** - remaining time of current chapter

**OFF** - turns off the display information

For **VCDs/CDs**

→ For VCD with PBC feature, PBC must be turned off first.

**SINGLE ELAPSED** - elapsed playback time of current track

**SINGLE REMAIN** - remaining time of current track

**TOTAL ELAPSED** - elapsed playback time of disc.

**TOTAL REMAIN** - remaining playback time of disc

**OFF** - turns off the display information

# Disc Operations

## ZOOM

For **DVDs/VCDs/JPEG**

Zooming allows you to enlarge the video/ JPEG image during playback.

- Press **ZOOM** repeatedly to zoom in on the playback video image.
  - For JPEG picture disc, press **ZOOM** to display "ZOOM ON", then press **◀/▶** to select different enlarging rates.
  - Image size enlarges at different rates.
- To return to normal playback, press **ZOOM** repeatedly until "ZOOM OFF" is displayed.

### Helpful hints:

– When zooming in, you may use **◀/▶/▼/▲** on the remote control to pan a picture across your TV screen in pause position or during playback.

## AUDIO

For **DVDs**

- On the remote control, press **AUDIO** repeatedly to select the desired language for sound track.
  - The feature is disc dependant.

For **VCDs**

- Press **AUDIO** repeatedly to select the audio channel for sound output displayed on the TV screen.

**LEFT VOCAL, RIGHT VOCAL, MONO LEFT, MONO RIGHT** and **STEREO**

## SUBTITLE (DVD only)

- Press repeatedly **SUBTITLE** on the remote control to select different subtitle languages.
  - The feature is disc dependant.

## Playing a Title (DVD only)

- 1 During playback, press **DISC MENU** on the remote control.
  - The disc title menu appears on the TV screen.
- 2 Use **◀/▶/▼/▲** or **Numeric Keypad (0-9)** to select a play option.
- 3 Press **OK** to confirm.


## Playing MP3/WMA/JPEG picture disc

### IMPORTANT!

– Make sure that the system is properly connected to your TV (see **Connecting a TV**), and your TV is turned on and set to video-in channel (**Setting up the TV**).

– For DRM-protected WMA files, use windows Media Player 10 (or later) for CD burning/conversion. Visit [www.microsoft.com](http://www.microsoft.com) for details about Windows Media Player and WM DRM (Windows Media Digital Rights Management).

- 1 Load a MP3/WMA/Picture (JPEG) disc.
  - The disc reading time may exceed 30 seconds due to complexity of the directory/file configuration.
- 2 Playback will start automatically.
  - The album/picture menu will appear on the TV screen. If not, press **DISC MENU** on the remote control.

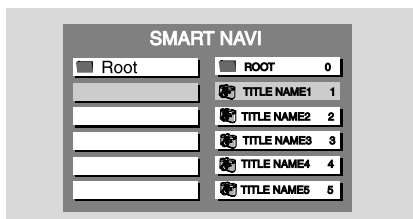

- ③ In the stop position, press ◀▶ / ▲ / ▼ to select a desired album, then select a desired title in the album.
- ④ Press **OK** or ▶II to start playback.
- You can also use the **numeric keys (0-9)** to enter your choice.
- During playback, you may press ◀ / ▶ to select the previous/next title.
- ⑤ To stop playback, press ■.

## If the MP3-CD menu is switched off

- You can only play the current title by pressing ▶II. While in playback mode, press ◀ / ▶ to select the previous/next title.  
→ The title number will appear.
- ⑥ During JPEG or Kodak Picture disc playback, press **PROG** repeatedly to select different slideshow view options. There are 12 options for selection. The selected option will be displayed on the TV screen.

## Playing MP3 music and JPEG pictures simultaneously

You can create a musical slide show if the disc contains both the MP3 music and JPEG picture files.

- ① Insert a MP3 disc that contains music and pictures.
- Press **DISC MENU** to display the menu if the menu is not displayed.
- ② In the stop mode, select a MP3 track in the menu and press **AUDIO**.  
→ "MP3 is selected" appears on the TV.
- ③ Use ▲ / ▼ keys to select a picture file, then press **OK**.
- ④ To stop simultaneous playback, press ■.  
→ The picture and MP3 music playback will stop.

## Playing Kodak picture disc

- ① Load a Kodak picture disc.  
→ The disc reading time may exceed 30 seconds due to complexity of the directory/file configuration.
- ② Playback will start automatically.
- ③ Press ■.  
→ 9 thumbnail pictures will appear on the TV screen.

(example for the Kodak disc menu)

1	2	3
4	5	6
7	8	9

- ④ Press ◀ / ▶ to view the previous/next page (if available).
- ⑤ Press ◀▶ / ▲ / ▼ to move within the menu and press **OK** to select the desired picture to play.

## During playback, you can:

- Press ◀ / ▶ to select another title/picture in the current folder.
- Press ◀▶ / ▲ / ▼ on the remote control to rotate or flip the picture files.
- Press ▶II to pause/resume playback.


## Notes:

- Due to the recording nature of Digital Audio MP3 (DAM), only digital audio music will play.
- It is normal to experience an occasional "skip" while you are listening to your MP3 discs.
- For multi-session discs with different formats, only the first session can be read and played.
- DISC MENU does not function during Kodak Picture disc playback.


# DVD Menu Operations

## Using the menu bar

You can continue some operations directly via the multiple menu bars on the TV screen without interrupting the disc playback. But when you enter **TA** (SETUP MENU), the playback will pause.

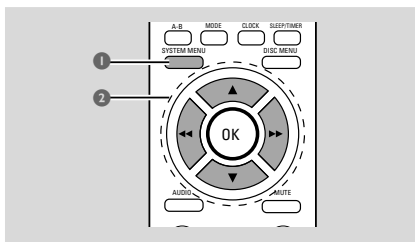

- 1 In disc mode, press **SYSTEM MENU**.  
→ The menu bar will appear across the top of the TV set screen.

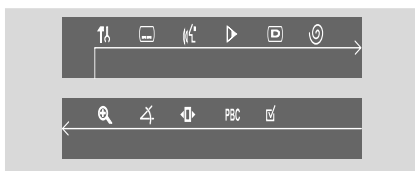

- 2 Press **◀/▶/▼/▲** on the remote control to navigate in the menu.  
→ Press **◀/▶** to move through the menu bar.  
→ Press **▼** to enter the selection.
- 3 Press **OK** to confirm the selection.  
→ Playback will resume or begin automatically.

### To remove the menu

Press **SYSTEM MENU** or **OK**.

### IMPORTANT!


- Some operations may be different or restricted according to the disc format. Refer to the jacket or care of the disc you are playing.
- You can change the Subtitle Language and Audio Language from the menu bar only on the current disc. But this operation cannot change the default preset.

	<b>Subtitle</b> Press <b>▼</b> to select a desired language in DVD mode.
	<b>Audio</b> Press <b>▼</b> to select a desired audio language on the SVCD,VCD: Left Vocal → Right Vocal → Mono Left → Mono Right → Stereo
	<b>Slow</b> The slow motion speed will display. Press <b>▼</b> repeatedly to select a reverse or forward slow motion speed. To cancel the slow function, press <b>▶ L</b> .
	<b>STATUS</b> In DISC mode, select this icon and press <b>▼</b> to view the time, title or chapter information of the playing disc.
	<b>Time Search</b> A time edit box appears on the display. Use the <b>numeric keys (0-9)</b> to enter the time (hours : minutes : seconds) at which you want to start playback, then press <b>OK</b> to start playback. (This function is not available in the PBC ON mode.)
	<b>ZOOM</b> Press <b>▼</b> repeatedly to select an enlarged picture ratio: 1.5, 2 or 4. You can press <b>◀◀/▶▶/▲/▼</b> to move within the enlarged picture on the TV set. To resume normal playback, repeat the above step to select ZOOM OFF.
	<b>ANGLE</b> Press <b>▼</b> to view the same scene from different angles if the DVD is recorded with multi-angles.
	<b>STEP</b> Press <b>▼</b> repeatedly to play forward the disc step by step (one frame every step). To cancel the step function, press <b>▶ L</b> .
	<b>PBC ON/OFF</b> Press <b>▼</b> to select PBC ON or OFF, and then playback will stop automatically. (This function is only available for VCD with PBC feature.)
	<b>PROGRAM</b> See "Programming favourite tracks", Using the menu bar to program.


# DVD Menu Operations

## Using the setup menu (user preference settings)

This DVD setup is carried out via your TV set, enabling you to customize the DVD System to suit your particular requirements

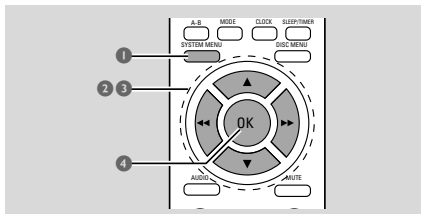

- 1 In disc mode, press **SYSTEM MENU**.  
→ The menu bar will appear across the top of the TV screen.
- 2 Select **11** icon and press ▼ to enter the setup menu. Then press ▲ ▼ to select one of the setup menu options and press ► to enter the submenu.  
→ Playback will pause.

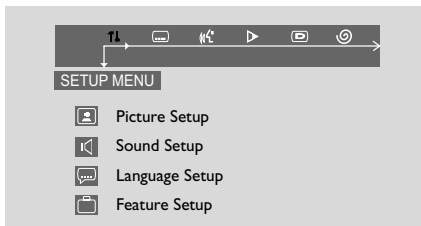

- 3 Press ◀▶/▼/▲ on the remote control to navigate in the menu.
- 4 Press **OK** to confirm your setting.

### To return to the upper-level menu

- Press ◀ or **OK** (in cases of value adjustment).

### To remove the menu

- Press **SYSTEM MENU** to exit the menu.  
→ Playback will resume and begin automatically.

#### Note:

– Some of the features in the System Menu Options are described in "Getting Started".


## TV Display (default: Normal/PS)

### IMPORTANT!

– This menu is accessible only in the stop position.

Set the aspect ratio of the DVD Player according to the TV you have connected.


→ **Normal/PS** (panscan): If you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.

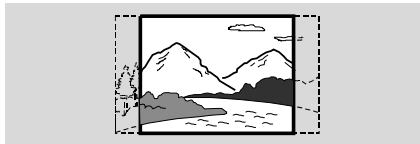

→ **Normal/LB** (letterbox): If you have a normal TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.




→ **Wide**: If you have a wide-screen TV.

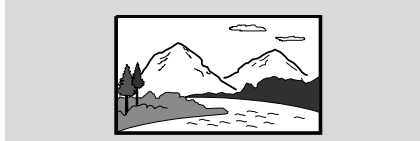

## Screen Saver (default: On)

This function is used to turn the screen saver on or off.

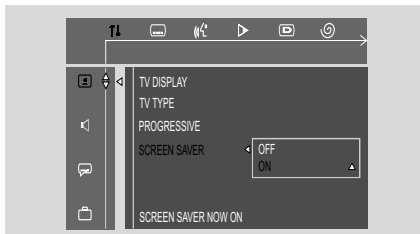


→ **ON**: In STOP, PAUSE or No DISC mode, if no actions are performed about 5 minutes, the screen saver will be activated.

→ **OFF**: Screen saver is disabled.

# DVD Menu Operations

## Night Mode

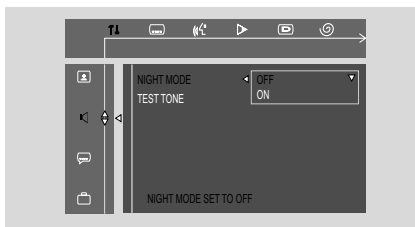


### OFF

Select this when you want to enjoy the surround sound with its full dynamic range.

### ON

Select this to level out the volume. High volume output will be softened and low volume output will be brought upward to an audio level. This feature is only available for movies with Dolby Digital mode.

## Test Tone

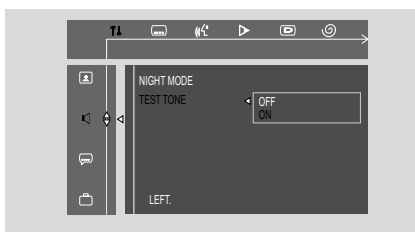

### ON

After selecting this item, the system will start testing the speaker from left, right, subwoofer cyclically until you exit tone test.


- You can adjust speakers level when you are testing the speaker.
- The availability of the various channels test depend on the number of speakers connected.

#### Notes:


- You can press **◀** to exit test tone mode at any time.

## Changing the password


You can change the four-digit code used as Password.

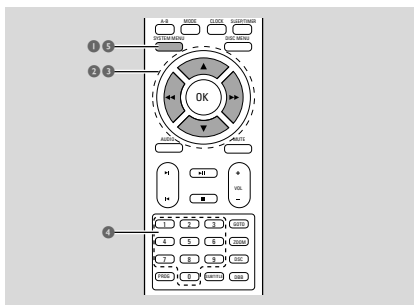

- 1 In disc mode, press **SYSTEM MENU**.
- 2 Select **M1** icon and press **▼**.  
→ Playback will pause.
- 3 Press **◀/▶/▼/▲** on the remote control to navigate in the menu.  
→ Move to **⏏**, and press **▶▶**.  
→ Move to "PASSWORD" and press **▶▶**.

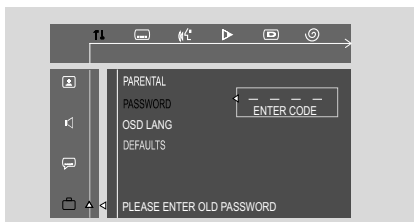


- 4 Use the **numeric keys (0-9)** to enter your current four-digit code.  
→ The password supplied by default is **1234**.  
→ If you forget the four-digit code, press **■** four times, the system will change back to the default password.
- 5 Then enter your new code. Press the same code again to confirm.

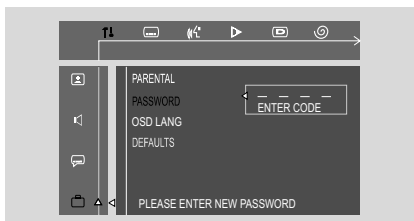


- 6 Press **SYSTEM MENU** again to remove the menu.

## Restricting playback by setting parental level

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country specific. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

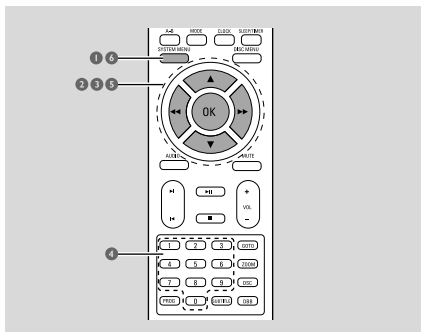


- 1 In disc mode, press **SYSTEM MENU**.
- 2 Select **PAUSE** icon and press **PAUSE**.  
→ Playback will pause.
- 3 Press **LEFT** / **RIGHT** / **UP** / **DOWN** on the remote control to navigate in the menu.  
→ Move to **PAUSE**, and press **RIGHT**.  
→ Move to "PARENTAL" and press **RIGHT**.

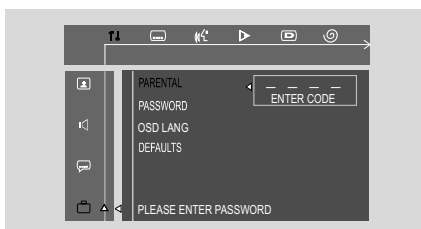

- 4 Use the **numeric keys (0-9)** to enter the four-digit code.

- 5 Press **UP** / **DOWN** to select a rating level between 1-8 and press **OK**.  
→ DVDs rated above the level you select will not play unless you enter your four-digit password or choose a higher level rating. Select "No Parental" to deactivate Parental level and have all discs play.

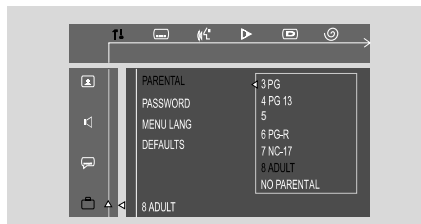

- 6 Press **SYSTEM MENU** again to remove the menu.

## Rating explanations

**NO PARENTAL** - It will play all discs.

**8 ADULT** - material for adults only; viewed only by adults due to graphic sexual scenes, violence, or language.

**7 NC-17** - No children under 17; not recommended for children under 17.

**6 PG-R** - Parental Guidance - Restricted; recommended that parents restrict children under 17 from viewing or allow them to view only when supervised by a parent or adult guardian.

**4 PG-13** - Material is unsuitable for children under age 13.

**3 PG** - Parental Guidance suggested.

**1 PG** - General Audience; recommended as acceptable for viewers of all ages.

## - OSD LANG (menu language)





 

 
To set the screen display language. The default setting is English.

## - Default

If **RESET** is selected, all the items in the setup menu will be reset to default setting, except Parental Setting and Password.

# Tuner



## Tuning to radio stations

- 1 Press **STANDBY-ON**  on the set to switch on the last selected source.
- 2 Press repeatedly **SOURCE** (or **TUNER** on the remote) until **FM** is displayed.
- 3 Press and hold **TUNING**   on the set until the frequency in the display starts changing.  
 → Display shows **SEARCH** during automatic tuning.  
 → After the system tunes to a station of sufficient reception, display shows its frequency .
- To tune to a weak station, press briefly and repeatedly **TUNING**   (or   on the remote) until an optimal reception is found.
- 4 Repeat Step 3 if necessary until you find the desired radio station.

## Storing preset radio stations

You can preset up to 40 FM stations regardless of the reception.

### Manual programming

- 1 Tune to your desired radio station (refer to "Tuning to radio stations").
- 2 Press briefly **PROGRAM (PROG)** on the remote control) on the remote.  
 → "P□□" and "PRG" are displayed.
- 3 Press   (or **Numeric keys** on the remote) to select the desired preset number.
- 4 Press again **PROGRAM (PROG)** on the remote control) to store the radio station.  
 → "PRG" disappears on the display.
- Repeat steps 1-4 to store other radio stations.

### Helpful hints:



– You can erase a preset station by storing another frequency in its place.

### Autostore: automatic programming



 
Autostore automatically starts programming radio stations from preset 1. Any previous presets e.g. manually programmed will be erased.

- In tuner mode, press and hold **PROGRAM** on the set until **AUTOPROG** appears.  
 → During automatic programming, display shows **AUTOPROG**.  
 → Available stations are programmed (40 FM).  
 → After all stations are stored, the first autostore preset station automatically plays.

## Listening to preset radio stations

- In tuner mode, press   (or **Numeric keys** on the remote) to select the desired preset number.  
 → The preset number, radio frequency, and waveband are displayed.

## Deleting a preset radio station

- 1 In tuner mode, press   (or **Numeric keys** on the remote) to select the desired preset number.  
 → The preset number, radio frequency, and waveband are displayed.
- 2 Press and hold  until "DELETED" appears.  
 → The current preset radio station will be deleted.  
 → All other preset radio stations with higher numbers are decreased by one.



## Viewing clock

The clock (if it is set) will be shown in standby mode.

### To view the clock in any source mode (DISC or TUNER for example), or Eco-power standby mode

- Press briefly **CLOCK** on the remote.
- Press and hold **MODE** for more than 5 seconds to toggle between 12-hour and 24-hour display.
  - The clock is displayed for a few seconds.
  - If the clock has not been set, "--:--:--" is displayed.

## Setting clock

- ① In standby or power on mode, press and hold **CLOCK** on the remote.
  - The clock digits flash on the display panel.
  - If the clock has not been set, "--:--:--" flashes
- ② Press **◀ / ▶** repeatedly to set the hour.
- ③ Press **◀◀ / ▶▶** repeatedly to set the minute.
- ④ Press **CLOCK** again to store the setting.
  - The clock starts working.

### Notes:

- The clock setting will be erased when the system is disconnected from the power supply.
- The system will exit clock setting mode if no button is pressed within 15 seconds.


## Setting wake-up timer

The system can switch on to DISC or TUNER mode automatically at a preset time, serving as an alarm to wake you up.

### IMPORTANT!

- Before setting the timer, ensure that the clock is set correctly.
- To set a new timer, you need to deactivate the previously set timer.

 
- ① In standby mode, press and hold **SLEEP/TIMER** on the remote for more than five seconds to enter timer setting mode.
  - The current source and timer digits flash on the display panel.
  - "NO TIMER" will be displayed briefly if wake-up timer is not set.

- ② Press **DISC** or **TUNER** to select the desired source.
  - Before setting timer, make sure the music source has been prepared.
    - DISC** – load the disc.
    - TUNER** – tune to the desired radio station.
- ③ Press **◀ / ▶** repeatedly to set the hour.
- ④ Press **◀◀ / ▶▶** repeatedly to set the minute.
- ⑤ Press **SLEEP/TIMER** to store the time.
  -  remains on the display.
- At the preset time, the selected source will play.

### To deactivate the wake-up timer

- In standby mode, press and hold **SLEEP/TIMER** until "TIMER OFF" is displayed.

### Notes:

- The system will exit timer setting mode if no button is pressed within 15 seconds.
- Display shows  if activated, and disappears if deactivated.

## Setting sleep timer

The sleep timer enables the system to switch off by itself after a set period of time.

- ① Press **SLEEP/TIMER** on the remote control repeatedly to select a preset time.
  - The selections are as follows (time in minutes):
    - 15 → 30 → 45 → 60 → 90 → 120 → OFF
- ② Press **SLEEP/TIMER** until you reach the desired length of time.

### To deactivate the sleep timer

- Press **SLEEP/TIMER** repeatedly until "OFF" is displayed, or press the **STANDBY ON**  button.

# Specifications

## AMPLIFIER

Total output power FTC .....	75W
Main speakers L/R.....	20W x 2 RMS ①
Subwoofer .....	35W RMS ②
Output power	
L/R speakers .....	25 W /channel RMS
Subwoofer .....	50 W RMS
Speaker channel	
Frequency Response .....	
.....	200 Hz - 18 kHz / $\pm 3$ dB
Signal-to-Noise Ratio .....	> 60dB (A-weighted)
Input Sensitivity	
AUX In .....	500 mV
Output Sensitivity	
Line Out(1KHZ 0dB) .....	2 + 0.2V

Notes:

- ① Main speakers: 20W FTC x 2 with 8 ohm 1KHZ THD = / < 0.5%  
 ② Subwoofer: 35W FTC with 6 ohm 80 HZ THD = / < 10%

## TUNER

Tuning Range.....	FM 87.5 – 108 MHz
Signal-to-Noise Ratio .....	FM $\geq 50$ dB

## DVD

Laser Type .....	Semiconductor
Disc Diameter .....	12cm / 8cm
Video Decoding .....	MPEG-2 / MPEG-1
Video DAC .....	12 Bits
Signal System .....	PAL / NTSC
Video Format .....	4:3 / 16:9
Video S/N .....	56 dB (minimum)
Composite Video Output .....	1.0 Vp-p, 75 $\Omega$
S-Video Output .....	Y - 0.714 Vp-p, 75 $\Omega$
.....	C - 0.286 Vp-p, 75 $\Omega$
Audio DAC .....	24 Bits / 96 kHz

## MAIN UNIT

Power Supply Rating .....	120 V / 60 Hz
Power Consumption	
Active .....	30 W
Eco-power standby .....	< 1 W
Dimensions (w x h x d)....	218 x 90 x 222 (mm)
Weight.....	1.24kg
Package Dimension (w x h x d).....	
.....	550 x 314 x 330 (mm)
Gross weight.....	9.7kg

## SPEAKERS

System .....	1-way, Bass reflex
Impedance .....	8 $\Omega$
Speaker drivers .....	3" fullrange
Frequency response .....	80 Hz – 20 kHz
Package Dimension (w x h x d).....	
.....	125 x 250 x 232 (mm)
Weight .....	2.4 kg/left speaker
.....	1.76 kg/right speaker

## SUBWOOFER



Impedance.....	6 $\Omega$
Speaker driver .....	5.25" subwoofer
Frequency response.....	60HZ—1K HZ
Dimensions(w x h x d ).....	
.....	147 x 250 x 232(mm)
Weight .....	2.4kg

**Specifications and external appearance are subject to change without notice.**

## WARNING

**Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.**

**If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.**

Problem	Solution
<b>No power.</b>	<ul style="list-style-type: none"> <li>✓ Check if the AC power cord is properly connected.</li> <li>✓ Press STANDBY ON  on the DVD System or  on the remote to turn on the power.</li> </ul>
<b>No picture.</b>	<ul style="list-style-type: none"> <li>✓ Check if the TV is switched on.</li> <li>✓ Check the video connection.</li> <li>✓ Press SOURCE on the DVD player repeatedly to select "DVD" or press DISC on the remote.</li> <li>✓ Set your TV to the correct Video In channel. This channel is usually near channel 00. Or; you may have a button on the TV remote control that selects Auxiliary or A/V IN channel. See your TV owner's manual for details. Or; change channels at the TV until you see DVD screen on the TV.</li> <li>✓ If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see page 19-20 for proper progressive scan setup or deactivate the progressive scan feature as below:               <ol style="list-style-type: none"> <li>1) Turn off your TV progressive scan mode or turn on to interlaced mode.</li> <li>2) Select "OFF" in PROGRESSIVE menu of system setup menu to turn off progressive, then press SYSTEM MENU to exit the menu.</li> </ol> </li> </ul>
<b>Distorted or poor picture.</b>	<ul style="list-style-type: none"> <li>✓ Sometimes a small amount of picture distortion may appear. This is not a malfunction.</li> <li>✓ Clean the disc.</li> </ul>
<b>Completely distorted picture or black/white picture.</b>	<ul style="list-style-type: none"> <li>✓ TV has a colour system standard. If the disc's or DVD system's colour system is different than your TV's colour system, the picture may be distorted or colourless.</li> </ul>

# Troubleshooting

**The aspect ratio of the screen cannot be changed even though you have set the TV shape.**

- ✓ The aspect ratio is fixed on the DVD disc.
- ✓ Depending on the TV, it may not be possible to change the aspect ratio.

**No sound or distorted sound.**

- ✓ Adjust the volume.
- ✓ Check that the speakers are connected correctly.
- ✓ Replace the speaker cables.
- ✓ Disconnect the headphones.
- ✓ The system is in pause, slow motion or fast forward/reverse mode, press ►|| (or ►|| on the remote) to resume normal play mode.

**The micro DVD player does not start playback.**

- ✓ Insert a readable disc with the playback side facing down.
- ✓ Check the disc type, colour system and regional code. Check for any scratches or smudges on the disc.
- ✓ Press SYSTEM MENU to turn off the setup menu screen.
- ✓ Cancel the parental control rating function or change the rating level.
- ✓ Moisture has condensed inside the system. Remove the disc and leave the system turned on for about an hour.

**The DVD micro system does not respond when the buttons are pressed.**

- ✓ Disconnect the power plug from the outlet and insert again.

**Cannot activate some features, such as Subtitles, or multi-language Audio.**

- ✓ Multi-language sound or subtitle is not recorded on the DVD.
- ✓ Changing the language for the sound or subtitle is prohibited on the DVD.
- ✓ The features may not be available on the disc.

**Radio reception is poor.**

- ✓ If the signal is too weak, adjust the antenna or connect an external antenna for better reception.
- ✓ Increase the distance between the Mini HiFi System and your TV or VCR.

**The timer is not working.**

- ✓ Set the clock correctly.

**The Clock/Timer setting is erased.**

- ✓ Power has been interrupted or the power cord has been disconnected. Reset the clock/timer.

**The remote control does not function.**

- ✓ Select the correct source (DISC or AUX for example) before pressing the function button.
- ✓ Point the remote control at the remote sensor of the unit.
- ✓ Reduce the distance to the player.
- ✓ Remove any possible obstacles.
- ✓ Replace the battery with new one.
- ✓ Check that the battery is loaded correctly.

**Low hum or buzz sound.**

- ✓ Place the DVD micro system as far away as possible from electrical devices (such as speakers, TV) that may be causing interference.

**Low bass response.**

- ✓ Check all speakers for correct polarity.

**Unable to select Progressive Scan**

- ✓ Check that the output of the video signal is switched to "Ypbpr".

# Glossary

**Analog:** Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

**Aspect ratio:** The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs is 4:3, and that of wide-screens is 16:9.

**AUDIO OUT Jacks:** Jacks on the back of the DVD System that send audio to another system (TV set, Stereo, etc.).

**Bit Rate:** The amount of data used to hold a given length of music; measured in kilobits per second, or kbps. Or, the speed at which you record. Generally, the higher the bit rate the better the sound quality. However, higher bit rates use more space on a Disc.

**Chapter:** Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

**Component Video Out Jacks:** Jacks on the back of the DVD System that send high-quality video to a TV set that has Component Video In jacks (R/G/B, Y/Pb/Pr, etc.).

**Disc menu:** A screen display prepared for the selection of images, sound, subtitles, multi-angles, etc recorded on a DVD.

**Digital:** Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT COAXIAL or OPTICAL jacks. These jacks send audio through multiple channels, instead of just two channels as analog does.

**Dolby Digital:** A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right and center).

**DTs:** Digital Theater Systems. This is a surround sound system, but different from Dolby Digital. The formats were developed by different companies.

**JPEG:** A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

**MP3:** A file format with a sound data compression system, "MPE" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. Through the MP3 format, one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can.

**Multichannel:** DVD is specified to have all sound tracks constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

**Parental control:** A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

**PCM (Pulse Code Modulation):** A system for converting analog sound signal to digital signal for later processing without data compression.

**Playback control (PBC):** Refers to the signal recorded on video CDs or SVCDs for reproduction control. By using screen menus recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

**Progressive Scan (P-Scan):** It displays all the horizontal lines of a picture at one time, as a signal frame. This system can convert interlaced video from DVD into progressive format for connection to a progressive display. It dramatically increases the vertical resolution. A progressive scan TV set is needed to receive progressive scan output from the system.

**Region code:** A system allowing discs to be played only in preset regions. This unit will only play discs that have compatible region codes. You can find the region code of your unit from the product label. Some discs are compatible with more than one region (or ALL regions).

**S-Video:** Produces a clear picture by sending separate signals for luminance and the color. You can use S-Video only if your TV set has S-Video In jack.

**Sampling Frequency:** Frequency of data sampling when analog data is converted to digital data. Sampling frequency numerically represents how many times the original analog signal is sampled per second.

**Surround:** A system for users to create realistic three-dimensional sound fields full of realism by arranging multiple speakers around the listener.

**Title:** The longest section of a picture or music feature on DVD, music, etc., in video software, or the entire album in audio software. Each title is assigned a title number enabling you to locate the title you want.

**VIDEO OUT jack:** Jack on the back of the DVD System that sends video to TV.

## PHILIPS LIMITED WARRANTY ONE (1) YEAR

### WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth below.

### WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

### WHAT IS COVERED:

The Philips warranty covers new products if a defect arises and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product.

Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is given, your product becomes Philips' property.

**Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.**

**Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.**

### WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

### This Limited Warranty does not cover:

- Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage occurring to product during shipping.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

### TO OBTAIN ASSISTANCE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at:  
1-888-PHILIPS (1-888-744-5477)

### TO OBTAIN ASSISTANCE IN CANADA...

1-800-661-6162 (French Speaking)  
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*

Philips, P.O. Box 671539, Marietta, GA. 30006-0026

3121 233 48801

# PHILIPS CONSUMER ELECTRONICS NORTH AMERICA


P.O. BOX 671539, Marietta, GA. 30006-0026

Meet Philips at the Internet  
<http://www.philips.com/usasupport>

English

Français

Español

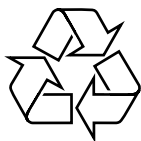

MCD139B

**CLASS 1  
LASER PRODUCT**



Printed In China

PDCC-JH-0652