





Always there to help you
Register your product and get support at
www.philips.com/support






Short User Manual

OTT2000

PHILIPS

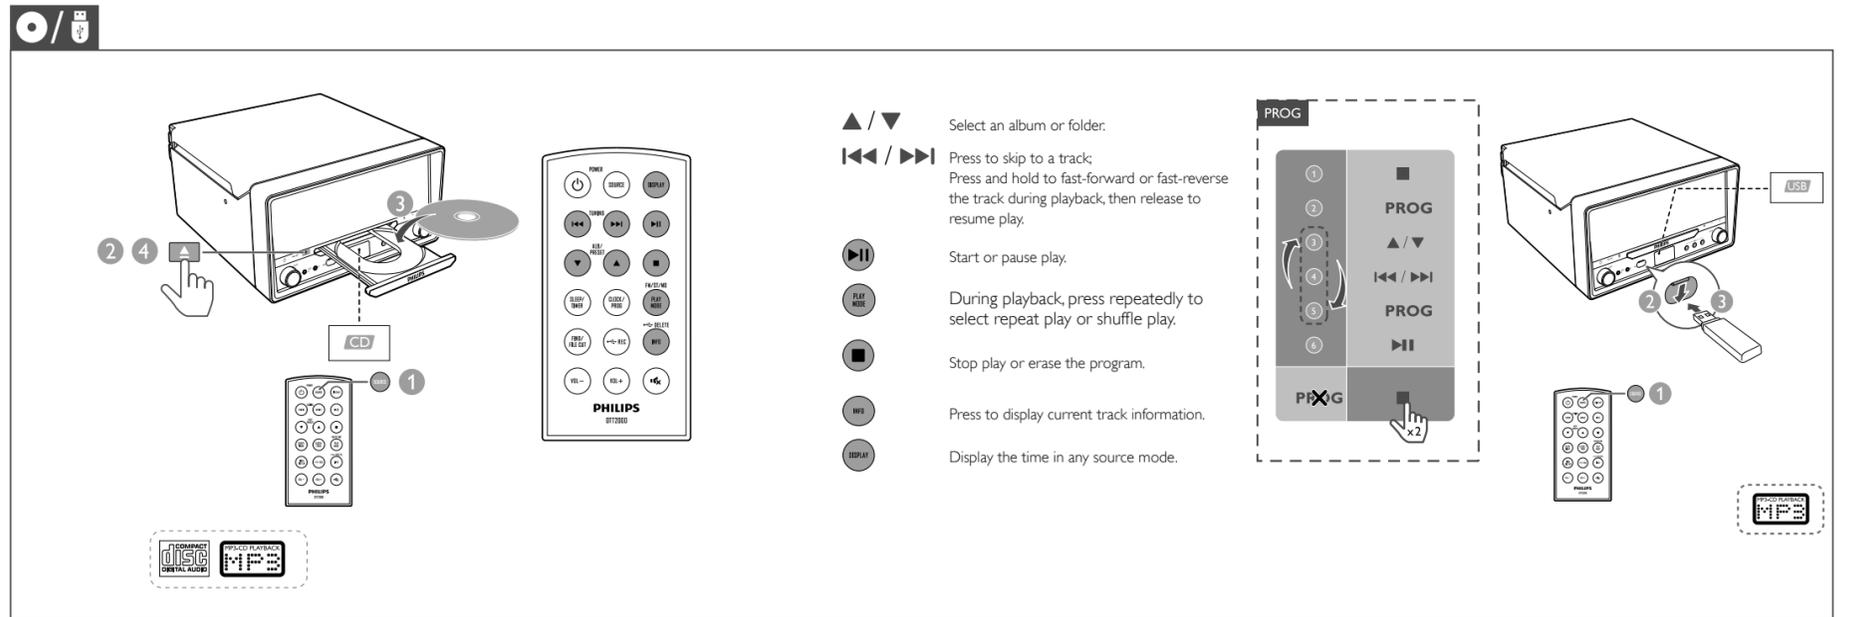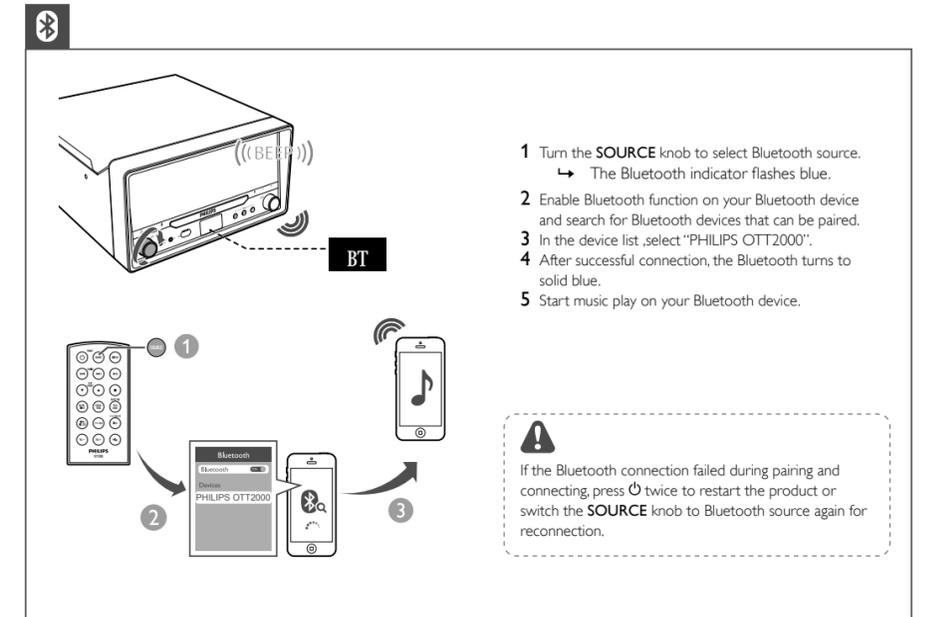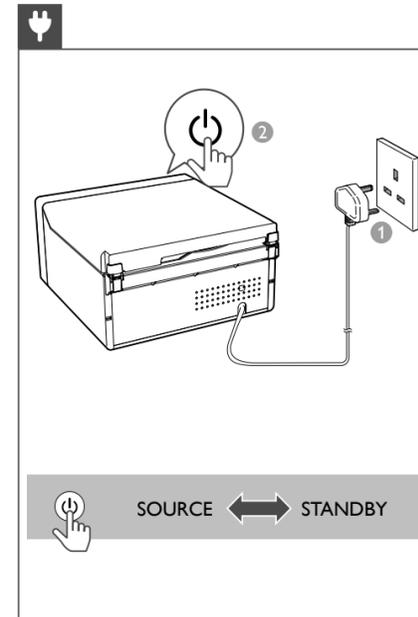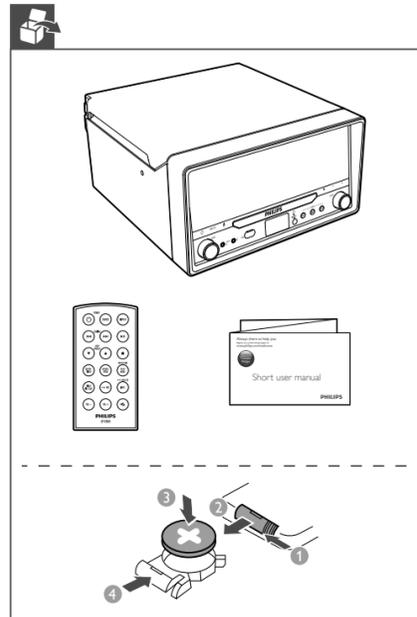

Specifications are subject to change without notice.
2014 © WOOX Innovations Limited. All rights reserved.
Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.
OTT2000_05_Short User Manual_V1.0

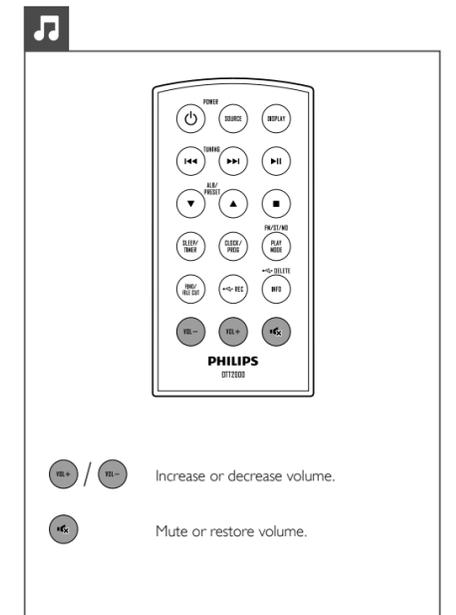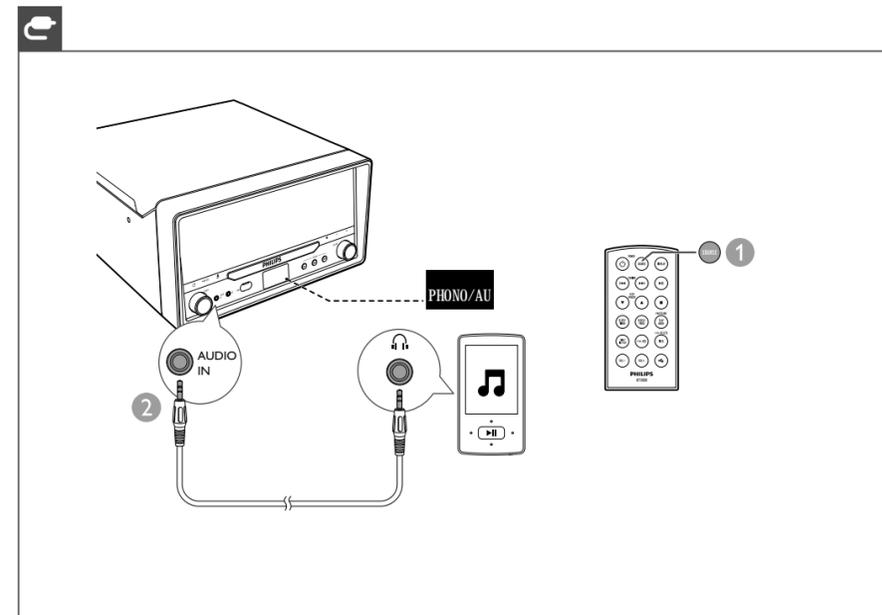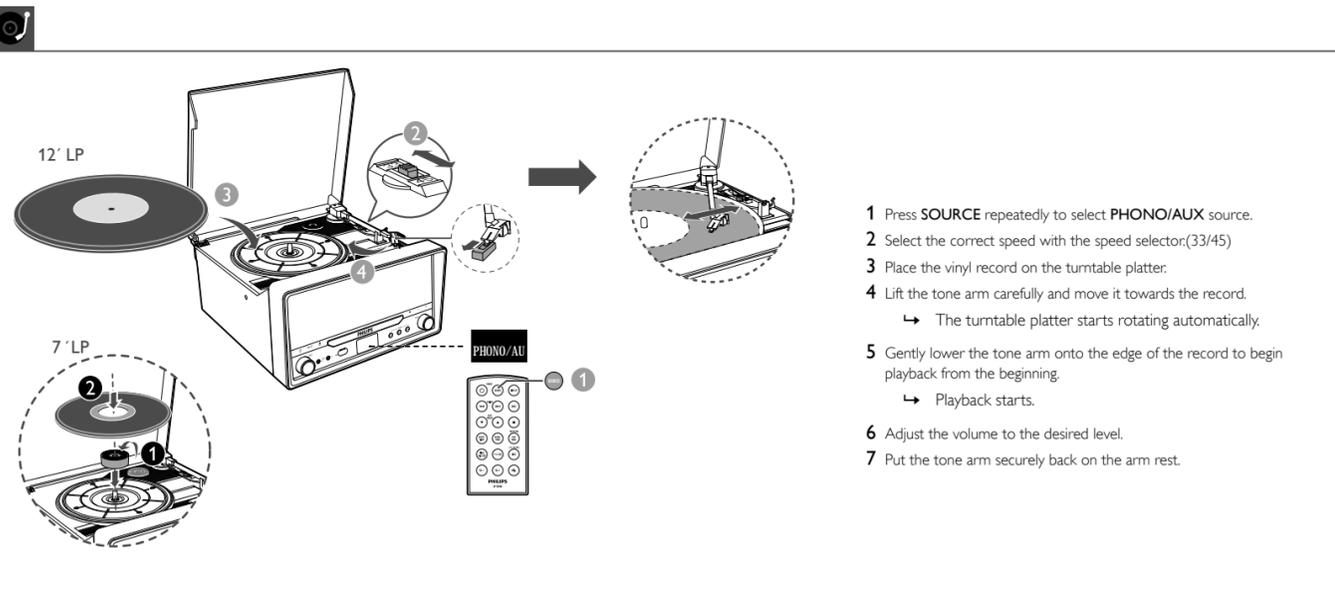

REC

- 1 Plug the USB device into the socket.
- 2 Prepare the source (Disc, Radio, Aux in, Phono, or Bluetooth source) to record from.
- 3 Press to start recording.
 - To stop recording, press .

CLOCK/PROG

- 1 In standby mode, press and hold **CLOCK/PROG** on the remote control to activate the clock setting mode.
- 2 Press / to select hour format.
- 3 Press **CLOCK/PROG** to confirm.
- 4 Repeat the above steps to set hour and minute.

Program radio stations automatically

- 1 Press **CLOCK/PROG** for more than 2 seconds to activate automatic program mode.
- 2 Press / to select preset radio stations.

Program radio stations manually

- 1 Press / to tune to a radio station.
- 2 Press **CLOCK/PROG** to activate the programming.
- 3 Press / to select allocate a number to this radio station.
- 4 Press **CLOCK/PROG** to confirm.
- 5 Repeat steps 1-4 to program more radio stations.

Press **FM/ST/MO** to select stereo broadcast or mono broadcast.

SLEEP/TIMER

Make sure that you have set the clock correctly.

- 1 In standby mode, press and hold **SLEEP/TIMER**.
- 2 Press **SOURCE** repeatedly to select an alarm source.
- 3 Press **SLEEP/TIMER** to confirm.
- 4 Press / to set the hour.
- 5 Press **SLEEP/TIMER** to confirm.
- 6 Repeat the above steps to set minute.

SLEEP TIMER

15 → 30 → 45 → 60 → 75 → 90

OFF

Press to select the sleep timer period. When [OFF] is displayed, the sleep timer is deactivated.

To download the full user manual, visit www.philips.com/support.

Specifications

AC Power Rating	220 - 240 V~, 60 Hz
Operation Power Consumption	16 W
Standby power consumption	< 1 W
Dimensions - Main Unit (W x H x D)	335 x 311 x 169 mm
Weight (Main Unit)	2.5 kg

Tuner

Tuning Range	FM: 87.50 - 108.00 MHz;
Tuning grid	50 kHz
Signal to Noise Ratio	> 50 dB
Number of preset radio stations	20

Vinyl

Supported vinyl size	7 inch / 12inch
Speed	33/45

Amplifier

Rated Output Power	1.5 W x 2 RMS
Frequency Response	60 Hz - 16 kHz, ±3 dB
Signal to Noise Ratio	> 65 dB
Aux Input	0.5 V RMS 20 kohm

Speakers

Speaker Impedance	4 ohm
Speaker Driver	2 X 3" full range
Sensitivity	84 dB/m/W

Bluetooth

Communication system	Bluetooth Standard version 2.1
Output	Bluetooth Standard Power Class 2
Maximum communication range	Line of sight approx. 10m (30 feet)
Frequency band	2.4 GHz band (2.4000 GHz - 2.4835 GHz)
Compatible Bluetooth profiles	Advanced Audio Distribution Profile (A2DP)
Supported codecs	SBC (Sub Band Codec)
- Receive	Not supported
- Transmit	Not supported

Safety

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never look into the laser beam inside this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

- The device shall not be exposed to dripping or splashing. Do not place any source of danger on the device (e.g. liquid filled objects, lit candles).
 - Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
 - Make sure that there is enough free space around the product for ventilation.
 - Only use attachments/accessories specified by the manufacturer.
- Risk of electric shock or fire!**
- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are split on or into the product, disconnect it from the power outlet immediately. Contact Consumer Care to have the product checked before use.
 - Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
 - Never insert objects into the ventilation slots or other openings on the product.
 - Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
 - Disconnect the product from the power outlet before lightning storms.
 - When you disconnect the power cord, always pull the plug, never the cable.
 - Never remove the casing of this product.
- Risk of short circuit or fire!**
- Before you connect the product to the power outlet, make sure that the power voltage matches the value printed on the back of the product. Never connect the product to the power outlet if the voltage is different.
 - Never expose the product to rain, water, sunshine, or excessive heat.
 - Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.
- Risk of injury or damage to the product!**
- This product shall not be exposed to dripping or splashing!
 - Do not place any sources of danger on this product (e.g. liquid filled objects, lighted candles).
 - Never place the product or any objects on power cords or on other electrical equipment.
 - If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
 - Only use attachments/accessories specified by the manufacturer.
- Risk of overheating!**
- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation.
 - Make sure that curtains or other objects never cover the ventilation slots on the product.
- Risk of swallowing coin battery!**
- The device may contain a coin/button type battery, which can potentially be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
 - If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
 - When you change the batteries, always keep all new and used batteries out of reach of children. Make sure that the battery compartment is completely secure after you replace the battery.
 - If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

Note

- The type plate is located on the back of the product.

Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

Compliance

This product complies with the radio interference requirements of the European Community. **CE 0890**

Hereby, WOOX Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.philips.com/support. This is CLASS II apparatus with double insulation, and no protective earth provided.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

Care of the environment

Disposal of your old product and battery

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

This symbol on a product means that the product is covered by European Directive 2012/19/EU.

This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet). Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Trademark notice

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOOX Innovations is under license.

Important notes for users in the U.K.

Mains fuse

This information applies only to products with a UK mains plug. This product is fitted with an approved molded plug. If you replace the fuse, use one with:

- the ratings shown on the plug,
- a BS 1362 approval, and
- the ASTA approval mark.

Contact your dealer if you are not sure about what type of fuse to use.

Caution: To conform with the EMC directive (2004/108/EC), do not detach the plug from the power cord.

How to connect a plug

The wires in the power cord are colored as follows: blue = neutral (N), brown = live (L). If the colors do not correspond with the colors on your plug, identify the terminals in your plug as follows:

- 1 Connect the blue wire to the terminal marked N or colored black.
- 2 Connect the brown wire to the terminal marked L or colored red.
- 3 Do not connect either wire to the earth terminal in the plug, marked E (or e) or colored green (or green and yellow).

Before you replace the plug cover, make sure that the cord grip is clamped over the sheath of the cable and not just over the two wires in the cable.

Copyright in the U.K.

Recording and playback of material may require consent. see Copyright Act 1956 and The performer's Protection Acts 1958 to 1972.

Copyright

2014 © WOOX Innovations Limited. All rights reserved. Specifications are subject to change without notice. WOOX reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.