





# PHILIPS

## AZ1836

### 1 Choosing Power Supply

- Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
- OR-
- Open the **battery door** and insert 6 x C batteries (not included).

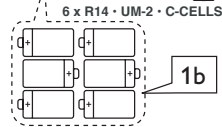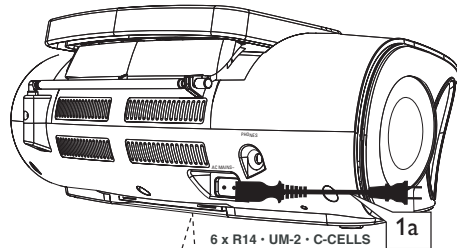

**R-14, UM-2 or C-cells**  
(not included)


### 2 Listening to the Radio

- Push the **source selector** to **FM** or **MW**.
- Turn **TUNING** to tune to a station.

### 3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3-CD, and WMA.

- Adjust the **source selector** to **CD/USB**.
- Press **CD/USB** to enter CD mode if "USB" is displayed.
- Open the disc door.
- Insert a disc with the printed side facing up and close the door.
- Press **▶||** to start playback.
- To stop disc playback, press **■**.

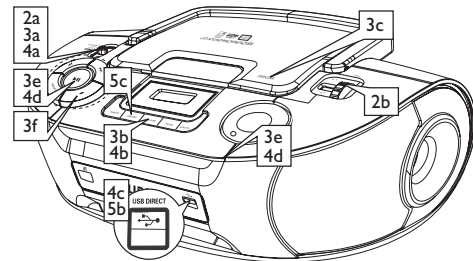

### 4 Playing a USB device

- Push the **source selector** to **CD/USB**.
- Press **CD/USB** to enter USB mode if "USB" is NOT displayed.
- Plug a compatible USB mass storage device to AZ1836's USB port marked **→**.
- Press **▶||** on your AZ1836 to start play.

### 5 CD ripping

- Follow **steps a-d** from "3 Playing a disc".
- Plug a USB mass storage device.  
**To record one**
  - Select the track you want to record.
  - Press once or repeatedly **USB REC** (or **REC** on the remote) until **ONE** appears, flashing.  
**To record all**
    - Press repeatedly **USB REC** (or **REC** on the remote) until **ALL** appears, flashing.
    - Disc playback will start automatically.

**Source selector**

Slide to select function: CD/MP3 (or USB mode), FM or AM



Briefly press to skip to the beginning of the current/previous/ later disc track; During disc playback, press and hold to find a particular passage backward/forward



Press to start or pause disc/USB playback

**PROG**

Use to program disc tracks and review a disc program



Press to stop disc/USB playback, or erase a disc program

**USB REC**

Copy one file or all files of a disc to an external portable USB storage device/MP3 player

**CD/USB**

Press to enter disc or USB mode

**Telescopic antenna**

Improves FM reception

**Display**

Shows disc/USB functions

**OPEN•CLOSE**

Push to open the disc door

**TUNING**

Turn to tune to a station

**VOLUME**

Turn to adjust volume level

**ALBUM +/-**

 

For **MP3-CD/USB/WMA** play: Press to select albums

**MODE**

Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)

**USB Port**

Connects an external USB mass storage device

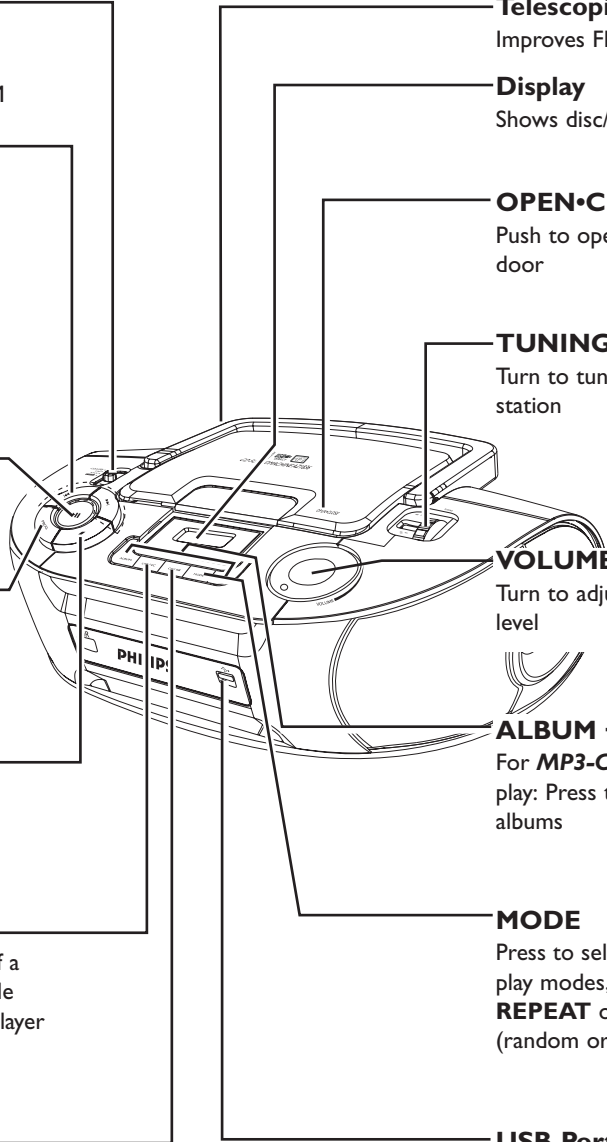

Removing the insulation plastic tab

