



© Royal Philips Electronics N.V. 2009
All rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

Printed in China
DC190(B)_37_QSG_V3.0



Register your product and get support at
www.philips.com/welcome



Docking Entertainment System
DC190
DC190B

 
Quick start guide

- 1 Connect
- 2 Setup
- 3 Enjoy

PHILIPS

EN

What's in the box

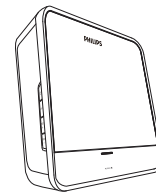

Main unit



 
Power adaptor



MP3 link cable



Quick Start Guide




User Manual

1 Connect

A Connect power

 - 1 Connect the power adaptor to
 - the **DC IN** jack on the rear of the main unit
 - the power socket.

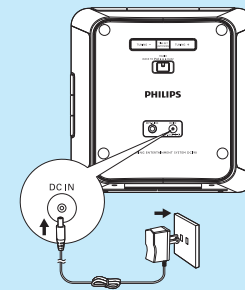

2 Setup

A Set clock

- 1 In standby mode, press and hold **TIME SET/AUTO SCAN** for 2 seconds.
↳ The hour digits begin to blink.
- 2 Press **TUNING +/-** to set the hour.
- 3 Press **TIME SET/AUTO SCAN**.
↳ The minute digits begin to blink.
- 4 Press **TUNING +/-** to set the minute.
- 5 Press **TIME SET/AUTO SCAN** to confirm.
↳ The week day digits begin to blink.
- 6 Press **TUNING +/-** to set the week day.
- 7 Press **TIME SET/AUTO SCAN** to confirm.

B Set the alarm timer

- 1 Ensure that you have set the clock correctly.
- 2 Press and hold **ALARM 1** or **ALARM 2** for 2 seconds.
↳ 1 or 2 and hour digits begin to blink.
- 3 Press **TUNING +/-** repeatedly to set the hour.
- 4 Press **ALARM 1** or **ALARM 2** to confirm.
↳ 1 or 2 and minute digits begin to blink.
- 5 Repeat steps 3-4 to set the minute.
- 6 Repeat steps 3-4 to select whether to ring alarm on weekdays or at weekend.
↳ "L XX(volume level)" begins to blink.
- 7 Repeat steps 3-4 to set the maximum alarm volume.

2 Setup

Set alarm mode

- 1 Adjust the **WAKE TO iPod/RADIO/BUZZ** control to select the source for the alarm.
↳ When the alarm time comes, the selected iPod, radio or buzzer turns on.

Activate and deactivate the alarm timer

- 1 Press **ALARM 1** or **ALARM 2** repeatedly to activate the timer.
↳ If the timer is activated, 1 or 2 is displayed.
 - To deactivate the alarm timer, press **ALARM 1** or **ALARM 2** repeatedly until is displayed.
- ↳ If the timer is deactivated, 1 or 2 disappears.

Repeat alarm

- 1 When the alarm rings, press **REPEAT ALARM/BRIGHTNESS CONTROL**.
↳ The alarm repeats ringing minutes later.

* Tip

- You can press **TUNING +/-** to adjust interval to repeat alarm.

 
Stop alarm ring

- 1 When the alarm rings, press the corresponding **ALARM 1** or **ALARM 2**.
↳ The alarm stops but the alarm settings remain.

3 Enjoy

A Play from iPod

- 1 Push to open the dock compartment.

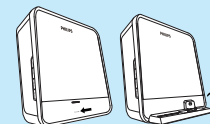

- 2 Place the iPod in the dock.



- 3 Press **SOURCE** repeatedly to select iPod source.
↳ The connected iPod plays automatically.
 - To pause/resume play, press .
 - To skip to a track, press or .
 - To search during play, press and hold or , then release to resume normal play.

B Program and listen to radio stations

- 1 In the tuner mode, press and hold **TIME SET/AUTO SCAN** for more than 2 seconds to activate automatic program mode.
↳ All available stations are programmed in the order of waveband reception strength.
↳ The first programmed radio station is broadcast automatically.
- 2 Press **PRESET +/-** to select a preset number.

* Tip

- Detailed functions and features are described in the user manual.