

Quick start guide



Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

 


FM antenna



Remote Control

Pull out the plastic protective sheet before use.




Quick Start Guide



User Manual



Control cable

Step A *Connect*

1

Connect the speaker cables.

2

 
Connect the FM antenna.

3

Connect the control cable.

4

Connect the power cord of the system.

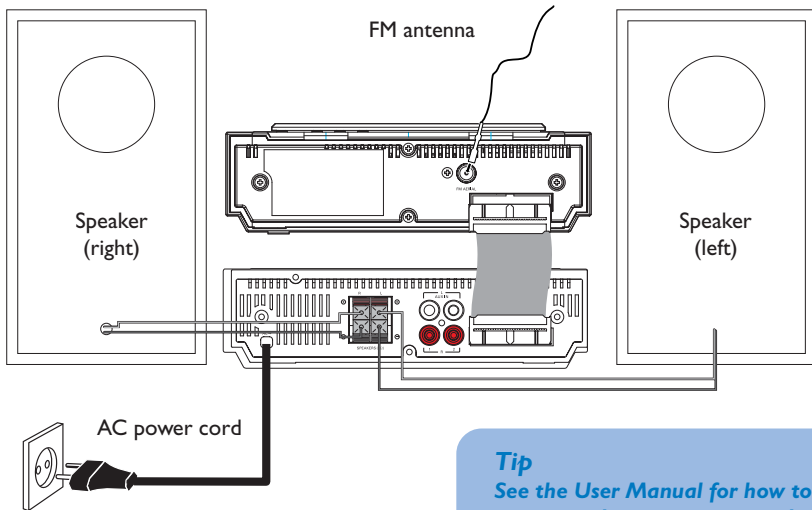


Tip

See the User Manual for how to connect other equipment to this system.

Step B *Setup*

Setting the clock

IMPORTANT!

- To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY-ON**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK** on the remote.

2

 
When the hour digits flash, turn **VOLUME +/-** on the system or press **VOL +/-** on the remote to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then turn **VOLUME +/-** on the system or press **VOL +/-** on the remote to set the minutes.


4

Press **CLOCK** again to confirm the time setting.

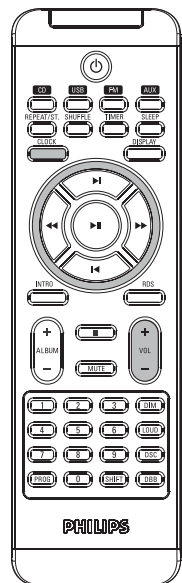


Playing a disc

- 1 Press **SOURCE** on the top of the system to select DISC or press **DISC** on the remote.
- 2 Press **▲** to open the CD compartment.
- 3 Insert a disc with the printed side facing up. Press **▲** again to close the compartment.
- 4 Playback will start automatically. If not press **▶||**.
- 5 To stop playback, press **■**.

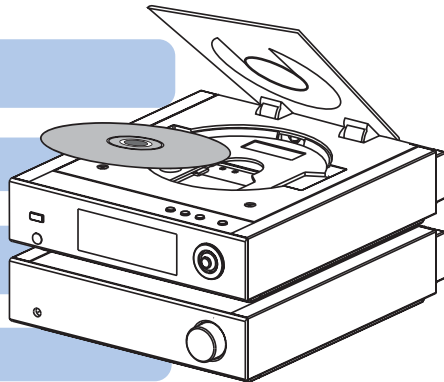 

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

