Troubleshootting

Problem	Solution	
No sound	 Check if the audio cable is well connected Check if the power cable of the speakers is well connected Check if Pipe Speaker power is turned on. 	
No any response after pressed the buttons on the remote control	 Check if the power cord to the docking station is well connected Point the remote control to the docking station. The remote control is designed for the docking station instead of your iPod or GoGear. Check if the plastic protective sheet has been removed Check if the battery of the remote control is used up. If yes, replace it with a new one Some functions buttons do not applicable for GoGear (see Enjoy section for details.) 	
Sound can't be adjusted	• Check if the audio cable is properly connected: the audio cable should be connected to the black 3.5mm jack in the middle of the backside of the docking station.	
Sound distorted	 Set EQ to 'Off' status: a. Press MENU b. Press ▲ or ▼ to select EQ and then press OK to confirm c. Press ▲ or ▼ to select Off and then press OK to confirm 	
Sound isn't loud enough	 The voltage output level of your iPod decided the pipe speaker's maximum volume 	
Specifications		

- Output Power : 2 x 15 Watts RMS Sound - Sound Enhancement : Class "D" Amplifier Loudspeakers - Main Speaker : 4 x Nano Speakers, front firing with adjustable angle. - Subwoofer : 4 x Pipe Shaped Woofers - Audio Out : 3.5 mm (Cable Provided) Dock Connectivity - AV Out : 3.5 mm for Audio/Video Out (Cable Optional) - DC in for iPod : 3mm (Cable Provided) - DC in for GoGear and iPod : 9 pins (Cable Optional) - USB : Mini USB (Cable Optional) - Remote Control : IR build-in

Need help?

Online help: www.philips.com/support Contact line: | 800 53 | 0039

Country	Helpdesk	Tariff / min	Keep ready
österreich	0820 901115	€0.20	Das Kaufdatum. Modellnummer und Seriennummer
Belgique	070 253 010	€0.17	La date d'achat la référence et le numéro de série du produit
Canada	1-800-661-6162 (Francophone) 1-888-744-5477 (English / Spanish)	Free	Date of Purchase. Model number and Serial number
Danmark	3525 8761	Local tariff	Forbrugeren's indkøbsdato, type/model-og serienummer
Suomi	09 2290 1908	Local tariff	Ostopäivä ja tarkka mallinumero ja sarjanumero
France	08 9165 0006	€0.23	La date d'achat la référence et le numéro de série du produit
Deutschland	0180 5 007 532	€0.20	Das Kaufdatum, Modellnummer und Serial nummer
Ελλάδα	0 0800 3122 1223	Free	Την ημερομηνία αγοράς και Τον ακριβή κωδικό μοντέλου και Τον αριθμό σειράς του προϊόντος σας
Ireland	01 601 1161	Local tariff	Date of Purchase. Model number and Serial number
Italia	199 404 042	€0.21	La data di acquisto, numero di modello e numero di serie
Luxembourg	26 84 30 00	Local tariff	La data d'achat, la référence et le numéro de série du produit
Nederland	0900 0400 063	€0.20	De datum van aankoop, modelnummer en serienummer
Norge	2270 8250	Local tariff	Datoen da du kjøpte produktet & modellnummer & serienummeret
Portugal	2 1359 1440	Local tariff	A data de compra, número do modelo e número de série
España	902 888 785	€0.15	Fecha de compra e número del modelo e número de serie
Sweden	08 632 0016	Local tariff	Inköpsdatum, modellnummer och serienummer
Schweiz	02 2310 2116		Das Kaufdatum und Modellnummer und Seriennummer
UK	0906 1010 017	£0.15	Date of Purchase, Model number and Serial number
USA	1-888-744-5477	Free	Date of Purchase, Model number and Serial number





Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. 2006 © Koninklijke Philips Electronics N.V. All rights reserved.





waDC700

Connect

Install

C Enjoy

B

What's in the box

Quick Start guide









Pipe speaker

Docking cradle

8 x iPod dock adaptor

DC Cable

3 x GoGear dock adaptors









Audio Cable



PHILIPS



Quick Start Guide



one CR2032 battery

pre-installed

PHILIPS

GoGear

Remote control with

What else you'll need



Important!

The docking cradle only supports the devices listed below. Do not try it on any other device!

- Apple iPod (iPod video, iPod nano, iPod Photo and iPod mini)
- Philips GoGear HDD players (Charge function optional)


AC adapter

AC Power cord



Connect AC power

Connect the DC cable with the docking cradle and Pipe speaker first, then connect it with the AC adapter, and then connect the adapter with the AC power cord. Then plug the AC plug into a standard AC outlet.

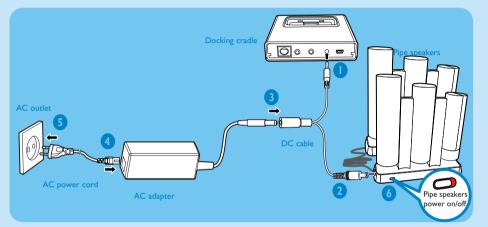


CAUTION:

This product is powered by a specified power supply unit SA1460-240200 (I/P: AC 100-240 V~, 50/60 Hz, 1.5 A; O/P: DC 24V === , 2.0 A).

Connect audio cable

Plug one end of the audio cable to the black 3.5mm Audio Out jack, and the other end to the audio in jack on the pipe speaker.

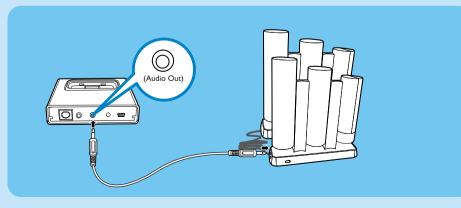




U Change the docking cradle to match with your portable player

The docking cradle can support both iPod and GoGear. Follow steps below to change it into desired mode

- Default position is prepared for iPod

- Go to B2 Install for iPod user.

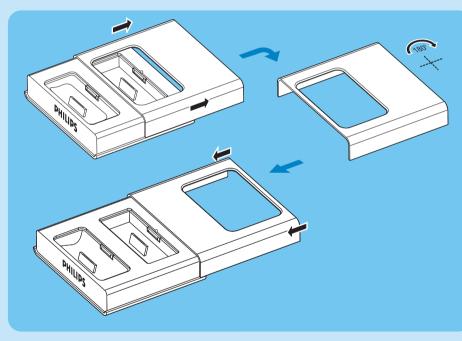

- I. Slide the front cover horizontally in the direction shown above to open the front cover
- 2. Rotate the front cover in 180 degree
- 3. Slide the front cover back onto the docking cradle













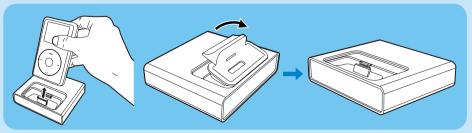

Install

Unstall dock adaptor

 Insert a dock adapter that matches with your portable player (take iPod adapter as



3 Install portable player

Plug your portable player into the cradle (take iPod as example). -Turn on the power of pipe speakers.



Un-install

To connect with a different iPod portable players, dismount the iPod first, then pop up the corresponding dock adapter and replace with a new one of the matching type.



You can use the controls on your iPod/GoGear to playing music. However, with the supplied remote control, you can enjoy music in a more easy and comfortable way.

Power on/off Press **Power** to turn the iPod on or off

Note: This function isn't applicable for GoGear

Play

Press 🔰 to start playing

• While playing, press 🍽 to stop playing temporarily. Press 🍽 again to resume playing.

Adjust volume

Press Volume -/+ to increase or reduce volume

Skip to the previous or next track

• Press 🗰 to skip to the previous track

• Press 🗪 to skip to the next track

Searching for desired track

- I. Press **MENU** button
- The **MENU** screen is shown on the iPod
- 2. Press \blacktriangle or \triangledown to select desired folder, then press Select (**OK**) button to confirm the selection

Note: This function isn't applicable for GoGear

Charging iPod using the docking station

When the iPod is properly connected on the docking cradle and the power supply to the docking cradle is connected, battery charging start automatically.

Helpful hint:

• You can also use a USB cable (not supplied) to connect the docking cradle with your PC to charge your iPod or GoGear



