



- 1** Turn on your device (e.g.TV).
Check if the TV responds to all key commands.
If the TV does not respond, continue with step 2.



- 2** Press the **TV** key until it flashes twice and then remains lit.



- 3**
- Look up the code for your brand in the 'Shortlist with brands' in this Quick Start Guide.
 - Note the 4-digit code for your brand.
 - Enter the code, using the digit keys.



- 4** **Press and hold** the **TV** key and **immediately** release it when the device (e.g.TV) switches off (standby). This may take up to 30 seconds.



- 5** Turn on your device (e.g.TV) and check whether the keys you need for operating the device are working.

If the TV responds to all of the key commands, the SRP 3004 is ready for use.

If a key does not function (properly), keep it pressed and **immediately** release it when the device responds. Repeat this for every key that does not work.

Remark:

If the TV does not react as needed, repeat step **4** until you get a good result.

(Press and hold the **TV** key. Release the key **immediately** as soon as the TV switches off).



- 6** Press the **TV** key **twice** to exit setup mode and save your settings

Brand	4-digit code	Brand.....	4-digit code
Akai.....	0074	Magnum	1709
Basic Line.....	0325	Medion	1787
Blue Sky	0395	Mivar.....	1857
BT Vision.....	3742	Numericable	3949
Carrefour	0492	Pace.....	2134
CyberHome.....	0672	Panasonic.....	2153
Daewoo	0692	Philips	2195
Digiturk.....	0783	Premiere	3666
Echostar	0866	Proline.....	2274
Emerson.....	0917	Saivod	2439
Firstline	1008	Samsung	2448
Foxtel	1029	Sanyo	2462
France Telecom	1033	Sharp.....	2550
Haier.....	1175	Sky.....	2610
Hisense	1249	Skymaster.....	2621
Hitachi.....	1251	Sony	2679
Humax.....	1298	TCL.....	2856
JVC.....	1464	TechniSat.....	2873
Kabel Deutschland	1468	Telefonica.....	2913
Kathrein.....	1486	TNT	4184
LG	1628	Toshiba	3021
Loewe.....	1660	Vestel.....	3148



For brands not mentioned in this shortlist, refer to the codelist in the back of the user manual.

Important!

- Restart from the beginning if you make a mistake. If you encounter problems or have questions, please consult the user manual. It is provided to help you set up and use the remote control.
- Before operating a device, first select the device by pressing the corresponding device selection key: **TV**, **STB**, **VCR** or **DVD**.

© 2010 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.