

Register your product and get support at
www.philips.com/welcome

DVP3310K



EN User manual

ZH-TW 使用手冊

MS-MY Manual pengguna

PHILIPS

Contents

1 Important	4
Safety and important notice	4
Trademark notice	5

2 Your DVD player	6
Feature highlights	6
Product overview	7

3 Connect	9
Connect video cables	9
Connect audio cables	10
Route audio to other devices	10
Connect to power outlet	11

4 Get started	12
Prepare the remote control	12
Find the correct viewing channel	13
Select menu display language	13
Turn on Progressive Scan	14

5 Play	15
Play from disc	15
Play video	16
Play music	18
Play photo	19

6 Adjust sound	21
Karaoke settings	21
Turn off vocal (cancel voice)	21

7 Adjust settings	22
General setup	22
Audio setup	22
Video setup	23
Preferences	24

8 Additional information	26
Update software	26
Care	26

9 Specification	27
------------------------	----

10 Troubleshooting	29
---------------------------	----

11 Glossary	30
--------------------	----

1 Important

Safety and important notice

 
Warning

- Risk of overheating! Never install the DVD player in a confined space. Always leave a space of at least 4 inches around the DVD player for ventilation. Ensure curtains or other objects never cover the ventilation slots on the DVD player.
- Never place the DVD player, remote control or batteries near naked flames or other heat sources, including direct sunlight.
- Only use this DVD player indoors. Keep this DVD player away from water, moisture and liquid-filled objects.
- Never place this DVD player on other electrical equipment.
- Keep away from this DVD player during lightning storms.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Visible and invisible laser radiation when open. Avoid exposure to beam.

About Progressive Scan

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service center.

Recycle notice

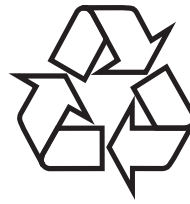

This electronic equipment contains a large number of materials that can be recycled or reused if disassembled by a specialized company. If you are disposing of an old machine, please take it to a recycling center. Please observe the local regulations regarding disposal of packaging materials, exhausted batteries and old equipment.

Copyright notice



**Be responsible
Respect copyrights**

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Trademark notice



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

2 Your DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

This DVD player brings audio and video to life. Just plays practically any disc format, including the digital photos with absolutely no compromise to picture quality.

Feature highlights

Screen Fit

View the movie in full screen display on any TV.

Progressive scan component video



Pushes the limits of standard resolution and provides a more film-like image display that is more pleasing for viewing DVDs on a TV display.

Karaoke scoring function

Karaoke scoring gives a score for each performance. Have your singing performance scored for even more karaoke fun at home!


Region codes

You can play discs with the following region codes.

DVD region code	Countries
	Asia Pacific, Taiwan, Korea
	Australia, New Zealand


Product overview

 Main unit

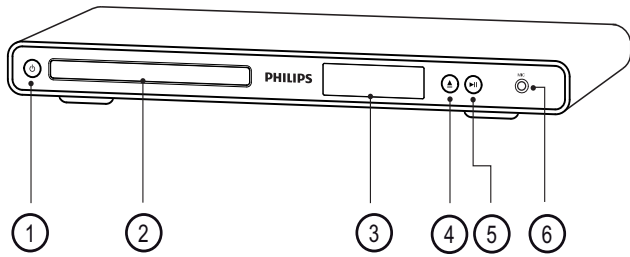

- ① **⏻ (Standby-On)**
 - Turns on the DVD player or switches to standby mode.
- ② **Disc compartment**
- ③ **Display panel**
- ④ **▲ (Open/Close)**
 - Opens or closes the disc compartment.
- ⑤ **▶|| (Play/Pause)**
 - Starts, pauses or resumes disc play.
- ⑥ **MIC**
 - Audio input from a microphone.

 Remote control

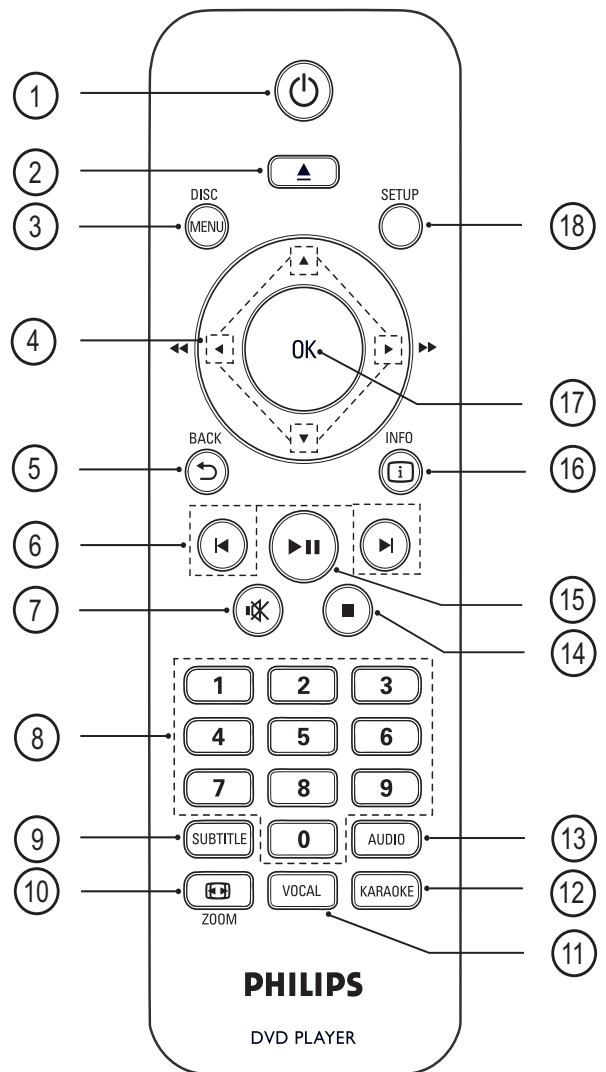

- ① **⏻ (Standby-On)**
 - Turns on the DVD player or switches to standby mode.
- ② **▲ (Open/Close)**
 - Opens or closes the disc compartment.
- ③ **DISC MENU**
 - Accesses or exits the disc menu.
 - For VCD and SVCD, turns PBC (playback control) on or off in PBC mode.

- ④ **▲▼◀▶ (Navigation buttons)**
 - Navigates through the menus.
 - Searches fast-forward (right) or fast-backward (left). Press repeatedly to change the search speed.
 - Searches slow-forward (up) or slow-backward (down). Press repeatedly to change the search speed.
- ⑤ **↶ BACK**
 - Returns to the previous menu.
 - For DVD, navigates to title menu.
 - For VCD version 2.0 or SVCD with PBC turned on, returns to the menu.
- ⑥ **◀/▶ (Previous/Next)**
 - Skips to the previous or next title, chapter, or track.
 - Press and hold for fast-backward or fast-forward search.
- ⑦ **🔇 (Mute)**
 - Mutes or restores audio output.
- ⑧ **Numeric buttons**
 - Selects an item to play.
- ⑨ **SUBTITLE**
 - Enables or disables subtitles.
- ⑩ **📺 ZOOM**
 - Fits the picture format to the TV screen.
 - Zooms in or out of the picture.
- ⑪ **VOCAL**
 - Changes the audio channel of a karaoke disc.
- ⑫ **KARAOKE**
 - Accesses or exits the karaoke menu.
- ⑬ **AUDIO**
 - Selects an audio language or channel on a disc.
- ⑭ **■ (Stop)**
 - Stops disc play.
- ⑮ **▶|| (Play/Pause)**
 - Starts, pauses or resumes disc play.
- ⑯ **ℹ INFO**
 - For discs, displays information about the current status or the disc.
 - For slideshows, displays a thumbnail view of photo files.
- ⑰ **OK**
 - Confirms an entry or selection.
- ⑱ **SETUP**
 - Accesses or exits the setup menu.

3 Connect

Make the following connections to use your DVD player.

Basic connections:

- Video
- Audio

Optional connections:

- Route audio to other devices:
 - Digital amplifier/receiver
 - Analog stereo system

Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all the devices are disconnected from the power outlet.

Tip

- Different types of connectors may be used to connect this product to your TV, depending on availability and your needs. A comprehensive interactive guide to help you connect your product is available at www.connectivityguide.philips.com.

Connect video cables


Connect this DVD player to TV to view disc play. Select the best video connection that the TV can support.

- Option 1: Connect to component video jacks (for a standard TV or Progressive Scan TV).
- Option 2: Connect to video (CVBS) jack (for a standard TV).

Note

- You must connect this DVD player directly to a TV.

 Option 1: Connect to component video jacks

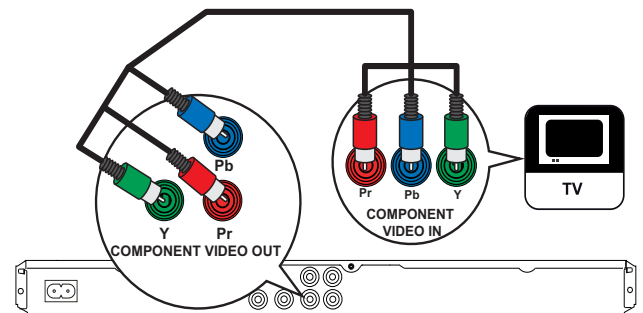


- 1 Connect the component video cables (not supplied) to the **Y Pb Pr** jacks on this DVD player and the component video input jacks on the TV.
 - If a progressive scan TV is used, you may turn on the progressive scan mode.

Tip

- The component video input jacks on the TV may be labeled as Y Pb/Cb Pr/Cr or YUV.
- This type of connection provides good picture quality.

 Option 2 : Connect to video (CVBS) jack

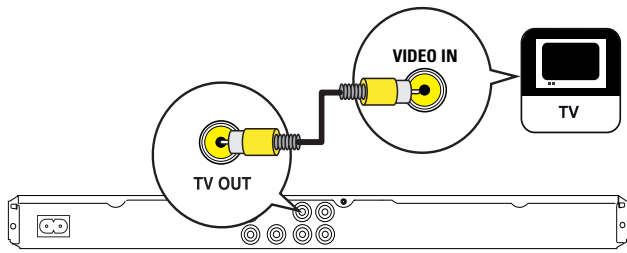


- 1 Connect a composite video cable (supplied) to the **TV OUT** jack on this DVD player and the video input jack on the TV.

Tip

- The video input jack on the TV may be labeled as A/V IN, VIDEO IN, COMPOSITE or BASEBAND.
- This type of connection provides standard picture quality.

Connect audio cables

 Connect the audio from this DVD player to the TV to allow sound output through the TV.

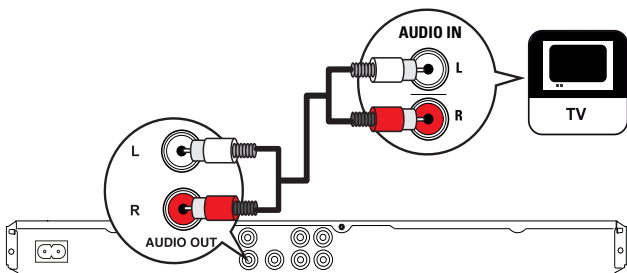


- 1 Connect the audio cables (supplied) to the **AUDIO OUT L/R** jacks on this DVD player and the audio input jacks on the TV.

Route audio to other devices

Route the audio from this DVD player to other devices to enhance audio play.

 Connect to digital amplifier/receiver

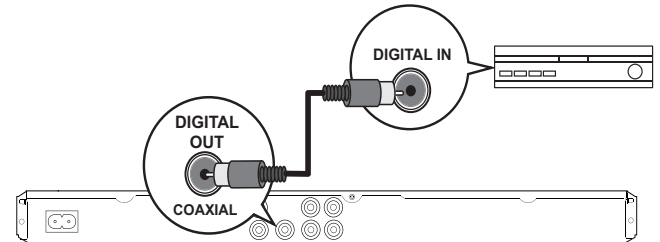


- 1 Connect a coaxial cable (not supplied) to the **COAXIAL/DIGITAL OUT** jack on this DVD player and the **COAXIAL/DIGITAL** input jack on the device.

Tip

- You can optimize the audio output (see chapter 'Adjust settings' - [Audio Setup] > [Digital Output]) for details.

 Connect to analog stereo system

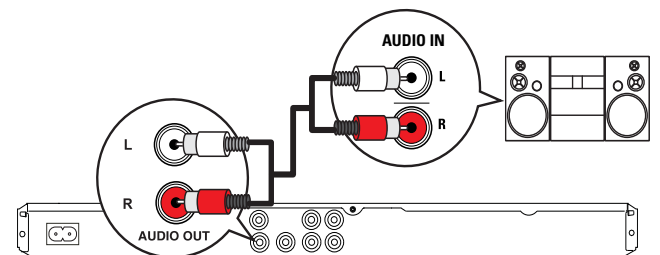

- 1 Connect the audio cables (supplied) to the **AUDIO OUT L/R** jacks on this DVD player and the audio input jacks on the device.

Connect to power outlet



 
Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the DVD player.

- 1 Connect the power cord to the power outlet.
 - ↳ The DVD player is ready to be set up for use.

4 Get started

Prepare the remote control

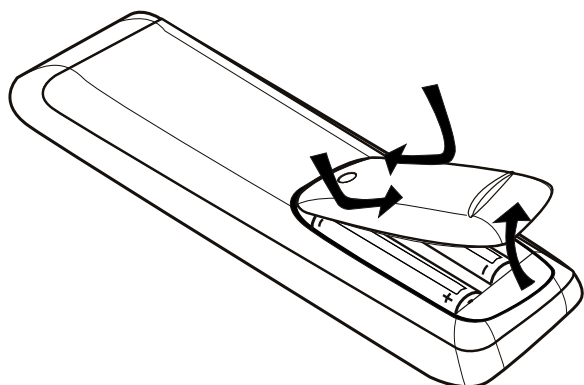


- 1 Push to open the battery compartment cover.
- 2 Insert 2 AAA batteries with correct polarity (+/-) as indicated.
- 3 Close the cover.

Caution

 - Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Batteries contain chemical substances, they should be disposed off properly.

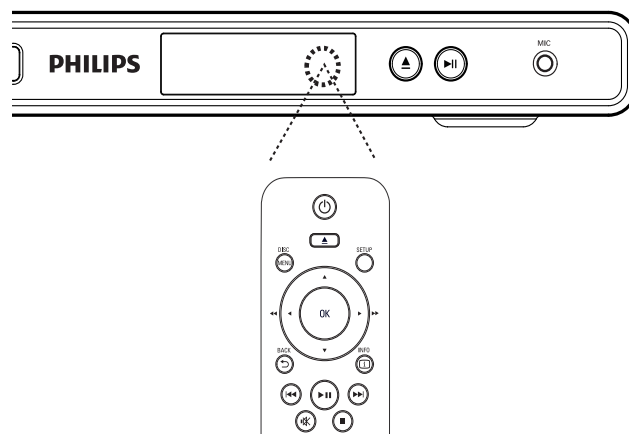

Navigate the menu



- 1 Point the remote control directly at the remote sensor on this DVD player and select the desired function.
- 2 Use the following buttons on the remote control to navigate through the on-screen menus.

Button	Action
▲▼	Moves up or down.
◀▶	Moves left or right.
OK	Confirms a selection.
1 2 3 4 5 6 7 8 9 0	Enters numbers

Find the correct viewing channel

 
- 1 Press  to turn on the DVD player.
- 2 Turn on the TV and switch to the correct video-in channel in one of the following ways:
 - Go to the lowest channel on your TV, then press the Channel Down button until you see the Philips screen.
 - Press  **SOURCE** button repeatedly on the remote control of your TV.



Tip

- The video-in channel is between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO, HDMI etc.. See the TV user manual on how to select the correct input on your TV.
- If the audio output of this DVD player is routed to other audio device (such as audio system or receiver), turn on the audio device to the appropriate audio input channel. Refer to the device user manual for details.

Select menu display language

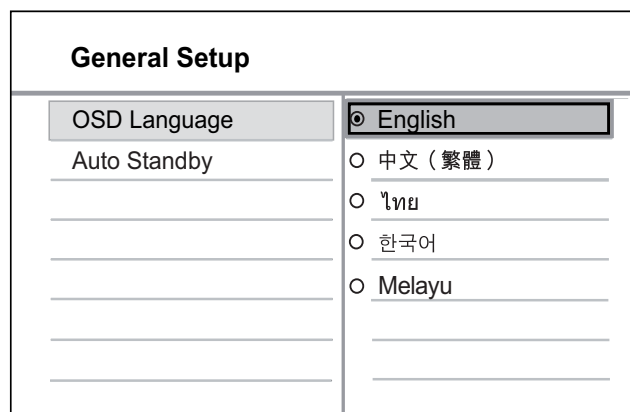

- 1 Press **SETUP**.
↳ **[General Setup]** menu is displayed.
- 2 Select **[OSD Language]**, then press **▶**.
 - The language options are different depending on your country or region. It may not correspond to the illustration shown here.
- 3 Press **▲▼** to select a language, then press **OK**.

 


Tip

- You can set the default language for DVD audio and disc menu, see chapter 'Adjust settings' - **[Preferences]** for details.

Turn on Progressive Scan

Connect a progressive scan TV with component video jacks (see chapter 'Connect video cables - Option 1: Connect to component video jacks' for details).

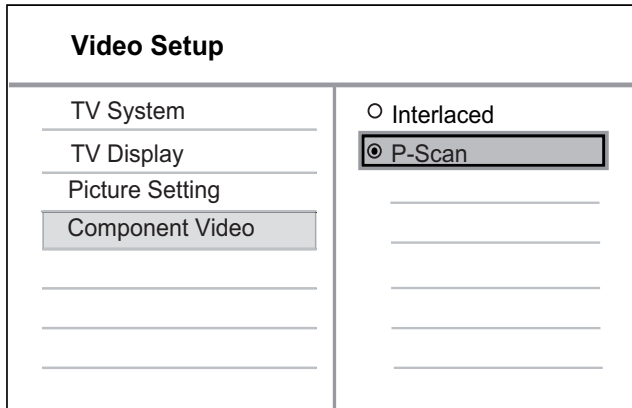

- 1 Turn on the TV to the correct viewing channel for this DVD player.
- 2 Press **SETUP**.
- 3 Press **▼** to select [**Video Setup**].
- 4 Select [**Component Video**] > [**P-Scan**], then press **OK**.
 - ↳ A warning message is displayed.
- 5 To proceed, select [**Yes**] and press **OK**.
 - ↳ The progressive setup is complete.

Note

- If a blank/distorted screen is displayed, wait for 15 seconds for the auto recover.
- If no picture displayed, turn off the progressive scan mode as follows: 1) Press **▲** to open the disc compartment. 2) Press the **Numeric button '1'**.

- 6 Press **SETUP** to exit the menu.
- 7 You can now turn on the progressive scan mode on the TV (see the TV user manual).

Note

- During play, when progressive scan mode is on for both this DVD player and the TV, distorted picture may display. Turn off the progressive scan feature on both this DVD player and the TV.

5 Play

Play from disc

Note

- DVDs and DVD players are designed with regional restrictions. Ensure that the DVD video you play is for the same region zone as your player (indicated on its back).
- The DVD player can support play of the following file formats: MP3/WMA/JPEG.
- To play DVD-R, DVD+R or DVD-RW, the disc must be finalized.

Tip

- If the password entry menu is displayed, you have to enter the password before it can be played.
- If you pause or stop a disc for about 5 minutes, the screen saver activates. To deactivate the screen saver, press **DISC MENU**.
- After you pause or stop a disc and no buttons are pressed within 15 minutes, this DVD player automatically switches to standby mode.

Play a disc

Caution

- Never place any objects other than discs into the disc compartment.

- 1 Press **▲** to open the disc compartment.
- 2 Insert a disc with its label facing up.
 - For double-sided discs, load the playing side facing up.
- 3 Press **▲** to close the disc compartment.
 - To view disc play, turn on the TV to the correct viewing channel for this DVD player.
 - If play does not start automatically, press **▶||**.
- 4 To stop disc play, press **■**.







Play video

Note

- For video disc, play always resumes from the point where it was last stopped. To start play from the beginning, press **◀** while the message is displayed.




Control a title

- 1 Play a title.
- 2 Use the remote control to control the title.

Button	Action
	Starts, pauses or resumes disc play.
	Stops disc play.
	Skips to the next title or chapter.
	Skips to the beginning of the current title or chapter. Press twice to jump to the previous title or chapter.
	Searches fast-forward (right) or fast-backward (left). Press repeatedly to change the search speed.
	Searches slow-forward (up) or slow-backward (down). Press repeatedly to change the search speed. For VCD/SVCD, slow-backward search is not available.

Change video play


- 1 Play a title.
- 2 Use the remote control to change the video play.

Button	Action
AUDIO	Changes audio language. Only applicable to discs with multiple audio language or channel.
SUBTITLE	Changes subtitle language. Only applicable to discs with multiple subtitle language.
 ZOOM (Screen Fit)	Fits the picture format to the TV screen. Press repeatedly until the image is scaled to fit to the TV screen.
 ZOOM	Toggles between screen aspect ratio and different zoom factor. To pan through the zoomed image, press the Navigation buttons .
 INFO	Displays the current status or disc information. You can change the video play options here without interrupting disc play.

Note

- Some operations may not work with some discs. See the information accompanying the disc for details.

 Access DVD menu

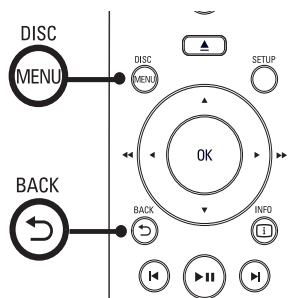

- 1 Press **DISC MENU** to access disc main menu.
- 2 Select a play option, then press **OK**.
 - In some menus, press the **Numeric buttons** to input your selection.
 - To return to the title menu during play, press **↶ BACK**.

Access VCD menu

The PBC (Playback Control) for VCD/SVCD is turned on by default in the factory. When you load in a VCD/SVCD, the contents menu is displayed.

- 1 Press **Numeric buttons** to select a play option, then press **OK** to start play.
 - If PBC is off, it skips the menu and starts play from the first track.
 - To return to the menu during play, press **↶ BACK** (only possible if the PBC mode is on).



Tip

- Press **DISC MENU** to turn on or off the PBC mode.

Quick skip play to a specific time

- 1 During play, press **INFO**.
 - ↳ The disc status menu is displayed.
- 2 Select the current elapsed playing time, then press **▶**.
 - **[TT Time]** (title time)
 - **[Ch Time]** (chapter time)
 - **[Disc Time]** (disc time)
 - **[Track Time]** (track time)
- 3 Press the **Numeric buttons** to enter the time where you want to skip to, then press **OK**.

Display play time

- 1 During play, press **INFO**.
 - ↳ The disc status menu is displayed.
- 2 Select **[Time Disp.]**, then press **▶**.
 - ↳ The display options are different depending on the disc type.

Option	Action
[Title Elapsed] / [Chapter Elapsed]	Displays DVD title or chapter elapsed play time.
[Title Remain] / [Chapter Remain]	Displays DVD title or chapter remaining play time.
[Total Elapsed] / [Single Elapsed]	Displays VCD/SVCD disc or track elapsed play time.
[Total Remain] / [Single Remain]	Displays VCD/SVCD disc or track remaining play time.

- 3 Select an option, then press **OK**.

View video play from different camera angles

- 1 During play, press **INFO**.
↳ The disc status menu is displayed.
- 2 Select **[Angle]**, then press **▶**.
- 3 Press the **Numeric buttons** to change the angle.
↳ Play changes to the selected angle.

Note

- Applicable only to discs contain multi-angle scenes.

Repeat play - video

- 1 During play, press **INFO**.
↳ The disc status menu is displayed.
- 2 Select **[Repeat]** in the menu, then press **▶**.
- 3 Press **▲▼** to select a repeat option, then press **OK**.

Note

- For VCD/SVCD, repeat play is only possible if the PBC mode is turned off.

Repeat play a specific section

- 1 During play, press **INFO**.
↳ The disc status menu is displayed.
- 2 Select **[Repeat AB]** in the menu and press **OK** at the start point.
- 3 Press **OK** again to set the end point.
↳ Repeat play starts.
- 4 To cancel repeat play, press **OK** again.

Note

- The marked section for repeat play is only possible within a track/title.

Play music

Note

- For some commercial audio disc, play may resume from the point where it was last stopped. To start play from first track, press **◀**.

Control a track

- 1 Play a track.
- 2 Use the remote control to control the track.

Button	Action
▶ 	Starts, pauses or resumes disc play.
■	Stops disc play.
▶	Skips to the next track.
◀	Skips to the beginning of the current track. Press twice to jump to the previous track.
1 2 3 4 5 6 7 8 9 0	Selects an item to play.
◀◀ ▶▶	Searches fast-forward (right) or fast-backward (left). Press repeatedly to change the search speed. To change search speed, press this button repeatedly.

Repeat play - audio

For audio CD

- 1 During play, press **INFO**.
↳ The disc status menu is displayed.
- 2 Select **[Repeat]** in the menu, then press **▶**.
- 3 Press **▲▼** to select a repeat option, then press **OK**.

For MP3/WMA files

- 1 During play, press **INFO** to select a repeat option.

Play MP3/WMA music

MP3/WMA is a type of highly compressed audio file (files with .mp3, .wma extensions).

- 1 Insert a disc that contains the MP3/WMA music.
↳ A contents menu is displayed.
- 2 Play starts.
 - To select another track, press **▲▼**, then press **OK**.
- 3 To return to the main menu, press **▲** until the root menu is selected, then press **OK**.
 - To select a folder, press **▲▼**, then press **OK**.



Note

- For CDs recorded in multiple sessions, only the first session is played.
- This DVD player does not support MP3PRO audio format.
- If any special characters are present in the MP3 track name (ID3) or album name, it may not display correctly on the screen because these characters are not supported.
- Some WMA is protected by Digital Rights Management (DRM), it cannot be played on this DVD player.
- Folders/files exceed the supported limit of this DVD player are not displayed or played.

Play photo

Play photo as slideshow

This DVD player can play JPEG photos (files with .jpeg or .jpg extensions).



- 1 Insert a disc that contains the JPEG photos.
↳ Slideshow begins (for Kodak disc) or a contents menu (for JPEG disc) is displayed.
- 2 Select the folder/album you want to play.
 - To preview the photos in the folder/album, press **INFO**.
 - To go to previous or next screen display, press **◀/▶**.
 - To select a photo, press the **Navigation buttons**.
 - To display the selected photo only, press **OK**.
- 3 Press **OK** to start slideshow play.
 - To return to the menu, press **↶ BACK**.

Note

- You may require longer time to display the disc content on the TV due to the large number of songs/photos compiled onto one disc.
- If the JPEG photo is not recorded with an 'exif' type file, the actual thumbnail picture is not be shown on the display. It is replaced by a 'blue mountain' thumbnail picture.
- This DVD player can only display digital camera pictures according to the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG and pictures in formats other than JPEG, or sound clips associated with pictures.
- Folders/files that exceed the supported limit of this DVD player are not displayed or played.

Control photo play

- 1 Play photo slideshow.
- 2 Use the remote control to control the photo.

Button	Action
◀	Rotates the photo anti-clockwise.
▶	Rotates the photo clockwise.
▲	Rotates the picture 180°.
▼	Rotates the picture 180°.
⏏ ZOOM	Zooms in or out of the picture. Play pause in zoom mode.
■	Stops play.

 
Play musical slideshow

Play MP3 music files and JPEG photo files simultaneously to create musical slideshow. The MP3 and JPEG files must be stored on the same disc.

- 1 Play MP3 music.
- 2 Navigate to the photo folder/album and press **OK** to start slideshow play.
 - ↳ Slideshow begins and continues till the end of the photo folder or album.
 - ↳ Audio continues to play till the end of the disc.
 - To return to the menu, press ↩.
 - **BACK.**
 - To stop slideshow play, press ■.
 - To stop music play, press ■ again.

6 Adjust sound

Karaoke settings

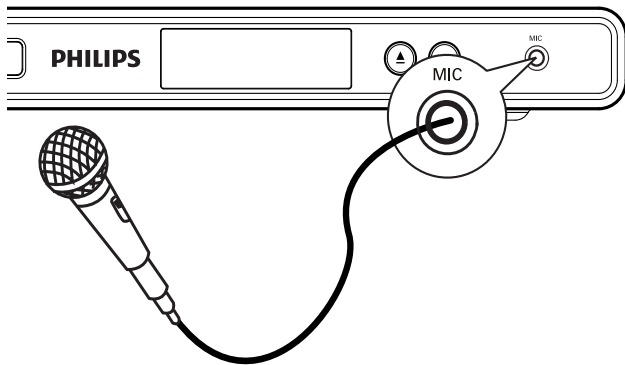


- 1 Turn on the TV to the correct viewing channel for this DVD player.
- 2 Connect a microphone (not supplied) to **MIC** jack on this DVD player.
- 3 Press **KARAOKE**.
- 4 Press **OK** to select **[On]** to access various setting options.
 - [Key Shift]**: Press ◀▶ to set the pitch level that match your voice.
 - [Echo]**: Press ◀▶ to set the echo level.
 - [Volume]**: Press ◀▶ to set the microphone volume level.
 - [Voice cancel]**: Press ◀▶ to set the voice cancel on or off.
 - [Karaoke Scoring]**: Select a karaoke rating:
 - **[Off]** - no score rating display.
 - **[Basic]** - basic rating.
 - **[Intermediate]** - intermediate rating.
 - **[Advance]** - advance rating.

- 5 To exit the menu, press **KARAOKE**.

Note

- A karaoke score is displayed at the end of the song. Press **OK** to exit and resume karaoke session.
- Karaoke score function is only available for DVD and VCD discs.
- Set the microphone volume to the minimum level before connecting the microphone to prevent howling.

 Turn off vocal (cancel voice)

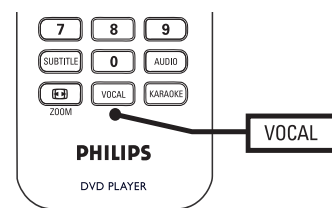





- 1 Press **VOCAL** repeatedly to toggle through various audio modes or turn off the vocal.

Note

- You cannot cancel the voice output from MP3 discs.

7 Adjust settings

This section describes the various setting options of this DVD player.

Symbol	Option
	[General Setup]
	[Audio Setup]
	[Video Setup]
	[Preferences]

Note

- If the setup option is grayed out, it means the setting cannot be changed at the current state.

General setup

General Setup	
OSD Language	
Auto Standby	

- 1 Press **SETUP**.
↳ [General Setup] menu is displayed.
- 2 Press **▶**.
- 3 Select an option, then press **OK**.

- 4 Select a setting, then press **OK**.
 - To return to the previous menu, press **◀**.
 - To exit the menu, press **SETUP**.

[OSD Language]

Selects the default on-screen menu language.

[Auto Standby]

Turns off or on automatic standby switching mode. It is an energy saving feature.

- **[On]** – Switches to standby after 15 minutes of inactivity (for example, in pause or stop mode).
- **[Off]** – Disables auto standby mode.

Audio setup

Audio Setup	
Digital Output	
Volume	
Down Sampling	
Night Mode	

- 1 Press **SETUP**.
↳ [General Setup] menu is displayed.
- 2 Press **▼** to select [Audio Setup], then press **▶**.
- 3 Select an option, then press **OK**.
- 4 Select a setting, then press **OK**.
 - To return to the previous menu, press **◀**.
 - To exit the menu, press **SETUP**.

Note

- See the explanations of the above options in the following pages.

[Digital Output]

Selects the setting based on the digital amplifier/receiver that is connected through the digital jack.

- **[Off]** - Disables digital output.
- **[PCM]** - Downmixes to PCM format (2 channel).
- **[All]** - Supports multi-channel audio formats.

[Volume]

Sets the default volume level when you play a disc.

1. Press **OK**.
2. Press **◀▶** to set the volume.
3. Press **OK** to confirm and exit.

[Down Sampling]

Selects the output sampling rate for better sound quality.

- **[On]** - for discs recorded at sampling rate of 48 kHz.
- **[Off]** - for discs recorded at sampling rate of 96 kHz.

[Night Mode]

Makes loud sound level softer and soft sound level louder so that you can watch the DVD movies at a low volume, without disturbing others.

- **[On]** – Enjoys quiet viewing at night.
- **[Off]** – Enjoys surround sound with a full dynamic range.

Note

- Applicable only to Dolby Digital encoded DVD.

Video setup

Video Setup	
TV System	
TV Display	
Picture Setting	
Component Video	

- 1 Press **SETUP**.
↳ **[General Setup]** menu is displayed.
- 2 Press **▼** to select **[Video Setup]**, then press **▶**.
- 3 Select an option, then press **OK**.
- 4 Select a setting, then press **OK**.
 - To return to the previous menu, press **◀**.
 - To exit the menu, press **SETUP**.

Note

- See the explanations of the above options in the following pages.

[TV System]

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- **[NTSC]** – For NTSC-system TV.
- **[PAL]** – For PAL-system TV.
- **[Multi]** – For TV that is compatible with both PAL and NTSC.

Confirm the setting by pressing **◀** to select **[Yes]**, then press **OK**.

[TV Display]

Selects one of the following display formats:



4:3 Pan Scan (PS)



4:3 Letter Box (LB)



16:9 (Wide Screen)

- **[4:3 Pan Scan]** – For 4:3 screen TV: full-height display with the trimmed sides.
- **[4:3 Letter Box]** – For 4:3 screen TV: wide-screen display with black bars on the top and bottom of the screen.
- **[16:9]** – For wide-screen TV: display ratio 16:9.

[Picture Setting]

Selects a predefined set of picture color settings or customize the personal setting.

- **[Standard]** – Original color setting.
- **[Bright]** – Vibrant color setting.
- **[Soft]** – Warm color setting.
- **[Personal]** – Customizes the color setting. Set the level of brightness, contrast, tint and color saturation, then press **OK**.

[Component Video]

Selects the video output that matches the video connection between this DVD player and the TV.

- **[Interlaced]** – for component video (Y Pb Pr) connection.
- **[P-Scan]** - for component video (Y Pb Pr) connection with progressive scan mode.

Confirm the setting by pressing **◀** to select **[Yes]**, then press **OK**.



Tip

- There is more detailed description available. See chapter 'Get started - Turn on Progressive Scan' for details.

Preferences



Note

- Stop disc play before you can access to **[Preferences]**.

Preferences	
Audio	
Subtitle	
Disc Menu	
Parental Control	
Password	
Version Info	
Default	

- 1 Press **SETUP**.
↳ **[General Setup]** menu is displayed.
- 2 Press **▼** to select **[Preferences]**, then press **▶**.
- 3 Select an option, then press **OK**.
- 4 Select a setting, then press **OK**.
 - To return to the previous menu, press **◀**.
 - To exit the menu, press **SETUP**.



Note

- See the explanations of the above options in the following pages.

[Audio]

Selects the default audio language for disc play.

[Subtitle]

Selects the default subtitle language for disc play.

[Disc Menu]

Selects the disc menu language.

 **Note**

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some DVDs, the subtitle/audio language can only change from the disc menu.

[Parental Control]

Restricts access to discs that are unsuitable for children. These types of discs must be recorded with ratings.

1. Press **▶**.
2. Select a rating level, then press **OK**.
3. Press the **Numeric buttons** to enter the password.

 **Note**


- Rated DVDs above the level you set in **[Parental control]** require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select **'8'**.
- Some discs have ratings printed on them but are not recorded with ratings. This function has no effect on such discs.

 **Tip**

- You can set or change the password, go to **[Preferences] > [Password]**.

[Password]

Sets or changes the password for locked discs and play restricted DVDs.

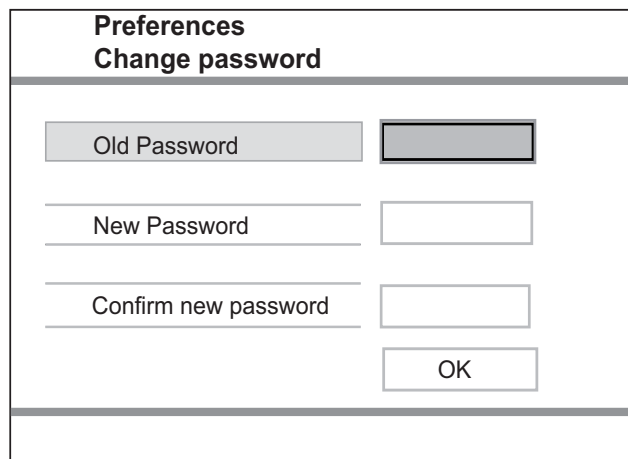

- 1) Press the **Numeric buttons** to enter '0000' or the last set password at **[Old Password]** field.
- 2) Enter the new password at **[New Password]** field.
- 3) Enter the new password again at **[Confirm new password]** field.
- 4) Press **OK** to exit the menu.

 **Note**

- If you forget the password, enter '0000' before you set a new password.

[Version Info]

Displays the software version of this DVD player.

 **Tip**

- This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this DVD player.

[Default]

Resets all the settings of this DVD player to factory default, except for **[Parental Control]** and **[Password]** settings.

8 Additional information

Update software

To check for updates, compare the current software version of this DVD player with the latest software version (if available) at the Philips website.

! Caution

- Power supply must not be interrupted during software upgrade.

Preferences	
Audio	
Subtitle	
Disc Menu	
Parental Control	
Password	
Version Info	
Default	

- 1 Press **SETUP**.
- 2 Select **[Preferences] > [Version Info]**, then press **OK**.
- 3 Write down the file name, then press **SETUP** to exit the menu.
- 4 Visit www.philips.com/support to check for the latest software version, using the file name for this DVD player.
- 5 Refer to the upgrade instructions for more information.

≡ Note

- Disconnect the power cord for a few seconds and connect again to reboot the system.

 
 
Care

! Caution

- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.

Clean discs

Wipe the disc with a micro fibre cleaning cloth from the center to the edge in a straight line movement.

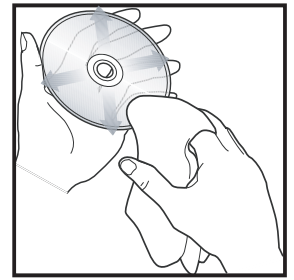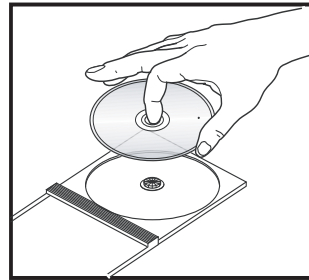

9 Specification



Note

- Specification and design are subject to change without notice.

Accessories supplied

- Quick Start Guide
- Remote control and batteries
- Audio/video cables
- Power cable

Playback media

- DVD-Video, Video CD/SVCD, Audio CD, CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, Picture CD, MP3-CD, WMA-CD

TV standard

- Number of lines:
 - 625 (PAL/50Hz); 525 (NTSC/60Hz)
- Playback: Multi-standard (PAL/NTSC)

Video performance

- Video DAC: 14 bits, 108 MHz
- Y Pb Pr: 0.7 Vpp ~ 75 ohm
- Video output: 1 Vpp ~ 75 ohm

Video format

- Digital compression:
 - MPEG 2: DVD/SVCD
 - MPEG 1: VCD
- Horizontal resolution:
 - DVD: 720 pixels (50 Hz); 720 pixels (60 Hz)
 - VCD: 352 pixels (50 Hz); 352 pixels (60 Hz)
- Vertical resolution:
 - DVD: 576 pixels (50 Hz); 480 pixels (60 Hz)
 - VCD: 288 lines (50 Hz); 240 lines (60 Hz)

Audio performance

- DA converter: 24 bits, 192 kHz
- Frequency response:
 - DVD: 4 Hz - 22 kHz (48 kHz); 4 Hz - 44 kHz (96 kHz)
 - SVCD: 4 Hz - 20 kHz (44.1 kHz); 4 Hz - 22 kHz (48 kHz)
 - CD/VCD: 4 Hz - 20 kHz (44.1 kHz)
- Signal-Noise (1 kHz): > 90 dB (A-weighted)
- Dynamic range (1 kHz): > 80 dB (A-weighted)
- Crosstalk (1 kHz): > 90 dB
- Distortion/noise (1 kHz): > 65 dB
- MPEG MP3: MPEG Audio L3

Audio format

- Digital:
 - MPEG/AC-3/PCM: Compressed digital (16, 20, 24 bits fs, 44.1, 48, 96 kHz)
 - MP3 (ISO 9660): 96, 112, 128, 256 kbps & variable bit rate fs, 32, 44.1, 48 kHz
- Analog sound stereo
- Dolby surround compatible downmix from Dolby Digital multi-channel sound

Connections

- Y Pb Pr output: Cinch 3x
- Video output: Cinch (yellow)
- Audio output (L+R): Cinch (white/red)
- Digital output:
 - 1 coaxial: IEC60958 for CDDA/LPCM; IEC61937 for MPEG 1/2, Dolby Digital

Main unit

- Dimensions (w x h x d): 360 x 37 x 209 (mm)
- Net Weight: approximately 1.3 kg

Power

- Power supply rating: 110 V - 240 V; 50/60 Hz
- Power consumption: < 10 W
- Power consumption in standby mode: < 1 W

Laser specification

- Type: Semiconductor laser InGaAlP (DVD), AlGaAs (CD)
- Wave length: 655 nm (DVD), 790 nm (CD)
- Output Power: 10 mW (DVD), 5 mW (VCD/CD)
- Beam divergence: 60 degrees

10 Troubleshooting



Warning

- Risk of electric shock. Never remove the casing of the DVD player.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the DVD player, check the following points before requesting service. If the problem remains unsolved, register your DVD player and get support at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of your DVD player. The model number and serial number are on the back or bottom of your DVD player. Write the numbers here:

Model No. _____

Serial No. _____

Main unit

The buttons on this unit do not work.

- Disconnect this DVD player from the power outlet for a few minutes, then connect again.

Picture

No picture.

- See the TV's user manual on how to select the correct input on the TV. Change the TV channel until you see the Philips screen.

If you have turned on the progressive scan setting or change the TV system setting, switch back to default mode: 1) Press ▲ to open the disc compartment. 2) Press the **Numeric button '1'** (for progressive scan) or the **Numeric button '3'** (for TV system).

Sound

No sound.

- Ensure that the audio cables are connected and the connected device is turned on to the correct input source.

Play

The aspect ratio of the screen is not aligned with the TV display setting.

- The aspect ratio is fixed on the disc.

11 Glossary

A

Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

J

JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognized by their file extension '.jpg' or '.jpeg.'

M

MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

P

PBC

Playback Control. A system where you navigate through a Video CD/Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

Progressive scan

The progressive scan displays twice the number of frames per second than in an ordinary TV system. It offers higher picture resolution and quality.

W

WMA

Windows Media™ Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded with Windows Media player version 9 or Windows Media player for Windows XP. Files are recognized by their file extension '.wma.'

**PHILIPS CONSUMER ELECTRONICS
WARRANTY POLICY FOR AUSTRALIA**

Effective 1st October 2007

Philips provides the following Consumer Electronics products with a 1 Year Manufacturers Warranty:-

Colour Televisions, Projection TV, Plasma & LCD TV, DVD Players, DVD Recorders, DVD Recorders with Hard Disk, Personal Video Recorders, Audio Systems, Wireless Audio Systems, Home Theatre systems, Digital Set Top Box, Digital Photo Display, MP3 players & Portable Audio products.

Additionally, all Philips LCD televisions with a built-in digital tuner sold after 1st October 2007, are supported by a 3 Year Manufacturers Warranty.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

The conditions contained in this warranty replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Please record the following information for your records and keep in a safe place.
It is essential that you retain your original purchase receipt to make a warranty claim.

Model number :

Serial number :

Date of purchase :

Retailer :

If you require assistance with the operation of the product, its features or specifications, you may call the **Philips Technology Care Centre** on **1300 363 391** where support is provided by our trained call centre staff.

If the product fails within the warranty period then the following will apply.

Free Repair Service – at an Authorised Service Centre

For the products listed below, please contact one of our Authorised Service Centres on 1300 361 392.
Colour Television, Plasma or LCD Television, LCD Television, Projection Television, DVDR/VCR Combo, DVD Recorder with Hard Drive, Personal Video Recorder, LCD Projector, Wireless Audio System, Audio System, Home Theatre System, Digital Set-Top-Box or a Portable DVD player with an LCD screen for which you paid more than \$250.

Version 1.2: 1st October 2007

Free Replacement – at your Retailer

For Digital Photo Frames or any product with a purchase price of less than \$250, please return the faulty product to the place of purchase. The retailer will arrange a replacement product for you.

If your Philips product develops a fault outside of the warranty period, please contact a Philips **Authorised Service Centre** on **1300 361 392** to discuss your repair options.

Conditions of Repair Warranty

- a. All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Proof of the original date of purchase must be provided.
- b. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
- c. Philips may, at its discretion choose to replace rather than repair any product covered by this Warranty.
- d. If a replacement product is supplied under the repair policy, it is warranted for the remainder of the warranty period, from the original date of purchase.
- e. Home service is provided only within the normal service area of the nearest Philips Authorised Service Centre. Home Service will be provided for television only with a screen size of 29 inch or above (product includes CRT, LCD TV, Projection TV, and Plasma TV). For televisions with screen sizes of less than 29 inch and all other products with a repair warranty, please take these products to the nearest Authorised Service Centre.
- f. This Manufacturers Warranty is limited to 3 months for products used in commercial applications.
- g. Product accessories are covered by the same warranty period. If an accessory is faulty, please contact the Philips Technology Care Centre for a replacement.
- h. This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.
- i. The warranty period is valid from the original date of purchase of the product.

This Warranty does not cover:-

- a. Mileage or travel is not covered outside the Philips Authorised Service Centres' normal service area.
- b. Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
- c. Product failures caused by misuse, neglect, accidental breakage, transit damage, amateur repairs or modification by un-authorized persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- d. Cleaning of video or audio heads.
- e. Reception problems.
- f. Replacement of worn or used batteries or other consumables.
- g. Second hand products.
- h. Refurbished products which are covered by a 6 month manufacturers warranty.

New Zealand - Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

- 1.** The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
- 2.** The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
- 3.** The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
- 4.** Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
- 5.** In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.


However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

**The Guarantee Controller
Philips New Zealand Ltd.**

P.O. Box 41.021

Auckland

 **(09) 84 94 160**

fax  **(09) 84 97 858**

