

 
1 Connect DVD recorder

- 1 Remove the antenna cable plug from your TV (or Satellite Receiver/Cable Box). Connect it to the **ANTENNA** input socket at the back of the DVD recorder.
- 2 Use the supplied antenna cable to connect the DVD recorder's **TV** output socket to the antenna input socket at the back of your TV set.
- 3 Use the supplied scart cable to connect the DVD recorder's **EXT 1 TO TV-I/O** socket to the SCART socket at the back of your TV set.
- 4 Connect the power cable of the DVD recorder's **~ MAINS** to the power supply.

Helpful Hints:

If your TV does not have the above-mentioned connectors, please refer to the user manual for more information on others possible connection to your TV set.

2 Prepare the remote control

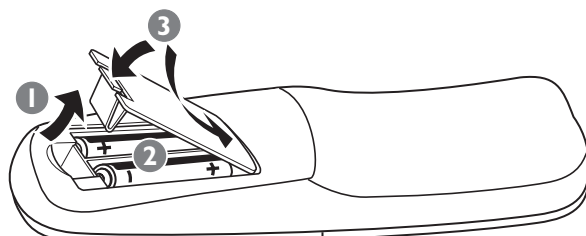



3 Start first installation

- 1 Press **STANDBY-ON** on the DVD recorder to switch it on.
- 2 Switch on the TV set and select the correct video in channel, the First Installation menu appears on the TV.
NO PICTURE! Press the TV/AV button or CHANNEL button on the TV to select the correct video in channel, for example, 'EXT', '0', or 'AV'.
- 3 Press to select an item in the menu. Press to access the selected item's options. Press to confirm your selection. When you complete, select { **Done** } in the menu and press **OK** to continue.
- 4 { **Language and Country** } menu appears.
 { **Language** } – select on-screen display language.
 { **Country** } – select country of your residence.
- 5 { **TV Format** } menu appears.
 { **TV Format** } – select TV screen display.
- 6 { **Channel Search** } menu appears.
 Press **OK** to start automatic TV channel search.
 Once the TV channel search is completed, the total number of channels found is displayed.
- 7 { **Time and Date** } menu appears.
 If the time and date shown on the TV are not correct, press to enter the respective time/date field. Press to change the first digit and press to go to the next digit field. Once complete, press **OK** to confirm.
- 8 Press to select { **Done** } and press **OK** to save the changes.
 → The first installation is now complete.

The DVD recorder is ready for use!

See next page for basic recording and playback.

  ... cont.

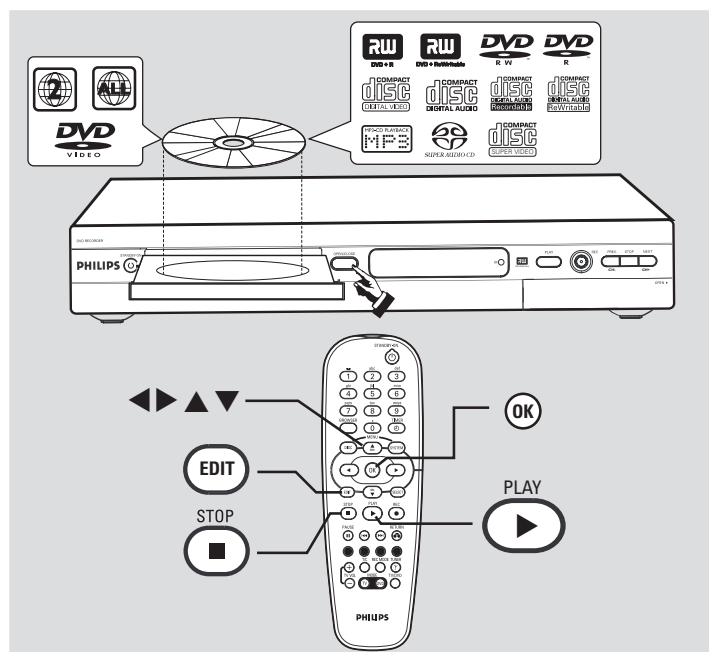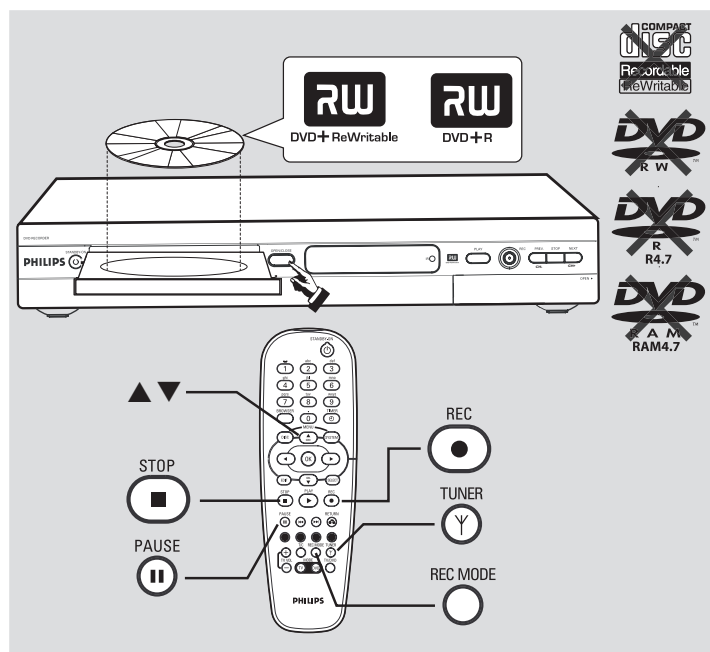

4 Start manual recording

- 1 Insert a recordable DVD+R(W) with the label side facing up.
- 2 Press **TUNER** on the remote control to see the TV programmes, then press **▲ ▼** to select the programme number you wish to record.
→ If you wish to record from additional devices (e.g. Video Cassette Recorder), press **▲ ▼** on the remote control to select the correspond external input channel.
For example, select { EXT2 } if you have connected the VCR to **EXT2 AUX-I/O** scart socket at the back of the DVD recorder.
- 3 Press **REC MODE** to select a desired recording mode. It defines the picture quality and the maximum recording time for a disc.

Record Mode	Picture Quality	Maximum Recording Time per Disc
M1	High quality (HQ)	1 hour
M2	DVD quality-Standard Play (SP)	2 hours
M2x	DVD quality-Standard Play Plus (SP+)	2.5 hours
M3	S-VHS quality-Long Play (LP)	3 hours
M4	VHS quality-Extended Play (EP)	4 hours
M6	VHS quality-Super Long Play (SLP)	6 hours
M8	VHS quality-Super Extended Play (SEP)	8 hours

Note: {M1} record mode only available for DVDR615 and DVDR616.
{M2x} is the factory default setting for recording mode.

- 4 Press **REC ●** to start recording.
● If required, you can press **REC ●** twice to start a 30-minute recording. Each time you press **REC ●** button, you will add 30 minutes to the recording time.
- 5 During recording, you may press **PAUSE II** to pause the recording and press **REC ●** to continue.
- 6 To stop the recording, press **STOP ■**.
→ Wait until the message disappears from the display panel before you remove the disc.

5 Start Playback

- 1 Insert a disc with the label side facing up.
- 2 Playback will start automatically.
→ If a dialogue appears on the TV showing { Do you want to access the disc content? }, press **▲ ▼** to select { Yes } to show the disc content
→ If a disc menu appears, press **◀ ▶ ▲ ▼** to navigate within the menu, highlight a title and press **OK** or **PLAY ▶** to start playback.

NO SOUND! Connect the AUDIO L/R (red/white) sockets at the back of the DVD recorder to the correspond AUDIO input sockets on a TV set, stereo system or receiver. Turn on the connected system and select the appropriate channel.

- 3 To stop playback, press **STOP ■**.

 
To watch the TV programmes

- 1 Press **TUNER** on the remote control, then press **▲ ▼** to select the programme number.

To play a DVD+R on other DVD players, you must finalise it first

- 1 Press **EDIT** on the remote control.
- 2 Press **▲ ▼** to select { **Finalise** } in the menu, then press **OK** to start finalising the DVD+R.

Once a DVD+R is finalised, no further recording or editing is possible. Unfinalising a DVD+R is not possible.

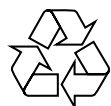

Detailed playback features and additional functions are described in the accompanying user manual.