

English FUNCTIONAL OVERVIEW

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **II** - Pause playback
- ④ **VOLUME** - Volume control
- ⑤ **PHONE 1 & 2** - Headphones jack
- ⑥ **AV/OUT** - Audio/Video output jack
- ⑦ **AV IN** - A/V IN (AUX)
- ⑧ **OPEN** - Open disc door to insert or remove disc
- ⑨ **IR REMOTE** - Remote sensor
- ⑩ **CHGPOWER** - Power and charging indicator

Front of player (see figure 1)

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **II** - Pause playback
- ④ **VOLUME** - Volume control
- ⑤ **PHONE 1 & 2** - Headphones jack
- ⑥ **AV/OUT** - Audio/Video output jack
- ⑦ **AV IN** - A/V IN (AUX)
- ⑧ **OPEN** - Open disc door to insert or remove disc
- ⑨ **IR REMOTE** - Remote sensor
- ⑩ **CHGPOWER** - Power and charging indicator

GENERAL INFORMATION

- Do not disassemble the unit for laser rays are dangerous to eyes.
- Any service should be done by qualified service personnel.
- Unplug the AC adapter to cut the power if liquid or objects get inside the unit.
- Take care not to drip the fluid or subject it to strong shocks, which may cause malfunction.
- Hearing safety: listen at a moderate volume. Using headphones at high volume can impair your hearing.

Safety and maintenance

- Do not use this product for laser rays are dangerous to eyes.
- Any service should be done by qualified service personnel.
- Unplug the AC adapter to cut the power if liquid or objects get inside the unit.
- Take care not to drip the fluid or subject it to strong shocks, which may cause malfunction.
- Hearing safety: listen at a moderate volume. Using headphones at high volume can impair your hearing.

On handling the LCD screen

- The LCD is manufactured using high precision technology. You may, however, see tiny black spots and/or bright pointed blue-green that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.
- Environmental information: We have reduced the packaging to its minimum and made it easy to separate into more materials: cardboard, PS, PE and PET.

Copyright information

- All other brand and product names are trademarks of their respective companies or organizations.
- Unauthorized duplication of any recordings produced under the internet or made from CDs / VCDs / DVDs is a violation of copyright laws and international treaties.
- Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or in other countries.

PREPARATIONS

- Switch the power on.
- Connect the supplied adapter to the set and the main power supply (as shown).
- To avoid damage to the player, switch off before plugging or unplugging the AC adapter.

Power supply

- When connecting with car power (cigarette lighter) adapter, be sure the input voltage of the adapter is identical with car voltage.
- Powering your remote control: Open the battery compartment. Remove the protective plastic tab (first time users only). Insert 1 x lithium-3V battery, type CR2025, then close the compartment.

Using the AC / DC adapter

- Connect the supplied adapter to the set and the main power supply (as shown).
- To avoid damage to the player, switch off before plugging or unplugging the AC adapter.

Powering your remote control

- Open the battery compartment. Remove the protective plastic tab (first time users only). Insert 1 x lithium-3V battery, type CR2025, then close the compartment.

CAUTION

- Be careful not to use chemical substances, so they should be disposed of properly.
- Be careful of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Attaching and charging the battery pack

- Switch off the set. Attach the battery pack as shown.
- Connect the supplied adapter to the set and the main power supply (as shown). Charge until the red indicator turns off (approximately 4.5 - 6.5 hours when unit is charged from power off).

Connections

- Connect the headphones to the **PHONE 1** or the **PHONE 2** jack of your set.
- Connect the headphones to the **PHONE 1** or the **PHONE 2** jack of your set.

Connecting additional equipment

- Turn off your set before connecting to any additional equipment.
- You can connect the player to a TV or an amplifier to enjoy DVDs or karaoke.

AV OUT


- You can connect the player to a TV.

AV IN

- On the DVD player panel, press **AV IN** to select AV IN (AUX).

Connection Color

- Video: Yellow
- Audio (Left): White
- Audio (Right): Red

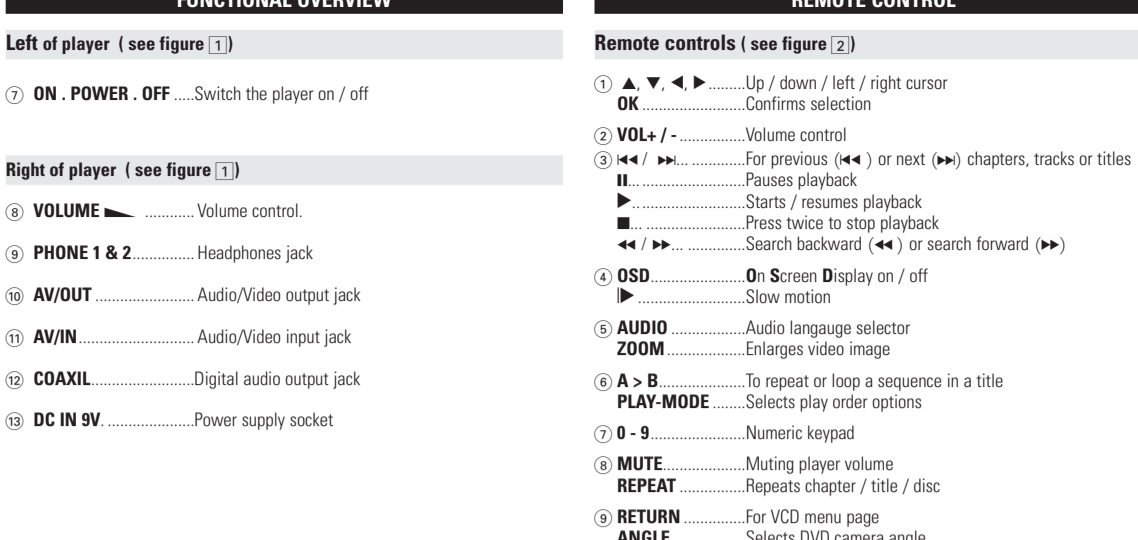

REMOTE CONTROL

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **VOL +/-** - Volume control
- ④ **II** - Pause playback
- ⑤ **SEARCH** - Search backward / forward
- ⑥ **OSD** - On Screen Display on / off
- ⑦ **REPEAT** - Repeat chapter / title / disc
- ⑧ **RETURN** - For VCD menu page
- ⑨ **ANGLE** - Selects video angle options
- ⑩ **0 - 9** - Numeric keypad
- ⑪ **MUTE** - Muting playback volume
- ⑫ **REPEAT** - Repeats chapter / title / disc
- ⑬ **RETURN** - For VCD menu page
- ⑭ **ANGLE** - Selects video angle options
- ⑮ **LANGUAGE** - Language selector
- ⑯ **SUBTITLE** - Subtitle language selector
- ⑰ **MENU** - Displays MENU page
- ⑱ **SETUP** - Enters SETUP menu
- ⑲ **Infra Red** - Port
- ⑳ **BATTERY COMPARTMENT**

Left of player (see figure 1)

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **VOL +/-** - Volume control
- ④ **II** - Pause playback
- ⑤ **SEARCH** - Search backward / forward
- ⑥ **OSD** - On Screen Display on / off
- ⑦ **REPEAT** - Repeat chapter / title / disc
- ⑧ **RETURN** - For VCD menu page
- ⑨ **ANGLE** - Selects video angle options
- ⑩ **0 - 9** - Numeric keypad
- ⑪ **MUTE** - Muting playback volume
- ⑫ **REPEAT** - Repeats chapter / title / disc
- ⑬ **RETURN** - For VCD menu page
- ⑭ **ANGLE** - Selects video angle options
- ⑮ **LANGUAGE** - Language selector
- ⑯ **SUBTITLE** - Subtitle language selector
- ⑰ **MENU** - Displays MENU page
- ⑱ **SETUP** - Enters SETUP menu
- ⑲ **Infra Red** - Port
- ⑳ **BATTERY COMPARTMENT**

Remote controls (see figure 2)

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **VOL +/-** - Volume control
- ④ **II** - Pause playback
- ⑤ **SEARCH** - Search backward / forward
- ⑥ **OSD** - On Screen Display on / off
- ⑦ **REPEAT** - Repeat chapter / title / disc
- ⑧ **RETURN** - For VCD menu page
- ⑨ **ANGLE** - Selects video angle options
- ⑩ **0 - 9** - Numeric keypad
- ⑪ **MUTE** - Muting playback volume
- ⑫ **REPEAT** - Repeats chapter / title / disc
- ⑬ **RETURN** - For VCD menu page
- ⑭ **ANGLE** - Selects video angle options
- ⑮ **LANGUAGE** - Language selector
- ⑯ **SUBTITLE** - Subtitle language selector
- ⑰ **MENU** - Displays MENU page
- ⑱ **SETUP** - Enters SETUP menu
- ⑲ **Infra Red** - Port
- ⑳ **BATTERY COMPARTMENT**

Upgrading

- First check and identify the contents of your package, as listed below:
- Portable DVD player
- Car adaptor (TV)
- Rechargeable battery pack
- Warranty

Placement

- Place the player on a firm, flat surface.
- Keep away from domestic heating equipment and direct sunlight.
- Always keep the disc door closed to avoid dust on the lens.
- The lens may cloud over when the player is suddenly moved from cold to warm surroundings. It is then not possible to play a DVD. Leave the player in a warm environment until the moisture evaporates.

PREPARATIONS

- Switch the power on.
- Connect the supplied adapter to the set and the main power supply (as shown).
- To avoid damage to the player, switch off before plugging or unplugging the AC adapter.

Power supply

- When connecting with car power (cigarette lighter) adapter, be sure the input voltage of the adapter is identical with car voltage.
- Powering your remote control: Open the battery compartment. Remove the protective plastic tab (first time users only). Insert 1 x lithium-3V battery, type CR2025, then close the compartment.

Using the AC / DC adapter

- Connect the supplied adapter to the set and the main power supply (as shown).
- To avoid damage to the player, switch off before plugging or unplugging the AC adapter.

Powering your remote control

- Open the battery compartment. Remove the protective plastic tab (first time users only). Insert 1 x lithium-3V battery, type CR2025, then close the compartment.

CAUTION

- Be careful not to use chemical substances, so they should be disposed of properly.
- Be careful of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Attaching and charging the battery pack

- Switch off the set. Attach the battery pack as shown.
- Connect the supplied adapter to the set and the main power supply (as shown). Charge until the red indicator turns off (approximately 4.5 - 6.5 hours when unit is charged from power off).

Connections

- Connect the headphones to the **PHONE 1** or the **PHONE 2** jack of your set.
- Connect the headphones to the **PHONE 1** or the **PHONE 2** jack of your set.

Connecting additional equipment

- Turn off your set before connecting to any additional equipment.
- You can connect the player to a TV or an amplifier to enjoy DVDs or karaoke.

AV OUT


- You can connect the player to a TV.

AV IN

- On the DVD player panel, press **AV IN** to select AV IN (AUX).

Connection Color

- Video: Yellow
- Audio (Left): White
- Audio (Right): Red

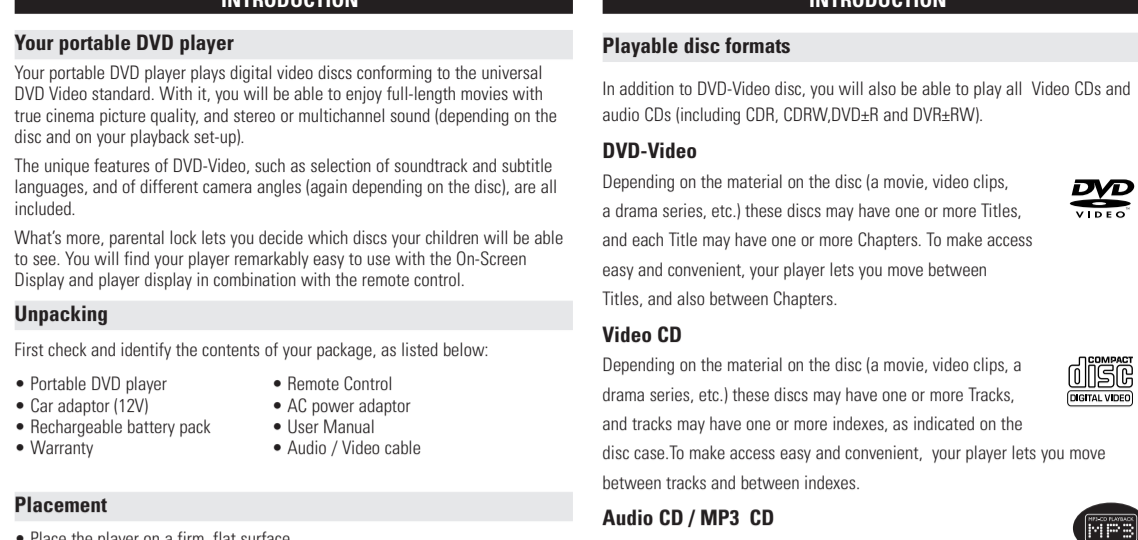

REMOTE CONTROL

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **VOL +/-** - Volume control
- ④ **II** - Pause playback
- ⑤ **SEARCH** - Search backward / forward
- ⑥ **OSD** - On Screen Display on / off
- ⑦ **REPEAT** - Repeat chapter / title / disc
- ⑧ **RETURN** - For VCD menu page
- ⑨ **ANGLE** - Selects video angle options
- ⑩ **0 - 9** - Numeric keypad
- ⑪ **MUTE** - Muting playback volume
- ⑫ **REPEAT** - Repeats chapter / title / disc
- ⑬ **RETURN** - For VCD menu page
- ⑭ **ANGLE** - Selects video angle options
- ⑮ **LANGUAGE** - Language selector
- ⑯ **SUBTITLE** - Subtitle language selector
- ⑰ **MENU** - Displays MENU page
- ⑱ **SETUP** - Enters SETUP menu
- ⑲ **Infra Red** - Port
- ⑳ **BATTERY COMPARTMENT**

Left of player (see figure 1)

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **VOL +/-** - Volume control
- ④ **II** - Pause playback
- ⑤ **SEARCH** - Search backward / forward
- ⑥ **OSD** - On Screen Display on / off
- ⑦ **REPEAT** - Repeat chapter / title / disc
- ⑧ **RETURN** - For VCD menu page
- ⑨ **ANGLE** - Selects video angle options
- ⑩ **0 - 9** - Numeric keypad
- ⑪ **MUTE** - Muting playback volume
- ⑫ **REPEAT** - Repeats chapter / title / disc
- ⑬ **RETURN** - For VCD menu page
- ⑭ **ANGLE** - Selects video angle options
- ⑮ **LANGUAGE** - Language selector
- ⑯ **SUBTITLE** - Subtitle language selector
- ⑰ **MENU** - Displays MENU page
- ⑱ **SETUP** - Enters SETUP menu
- ⑲ **Infra Red** - Port
- ⑳ **BATTERY COMPARTMENT**

Remote controls (see figure 2)

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **VOL +/-** - Volume control
- ④ **II** - Pause playback
- ⑤ **SEARCH** - Search backward / forward
- ⑥ **OSD** - On Screen Display on / off
- ⑦ **REPEAT** - Repeat chapter / title / disc
- ⑧ **RETURN** - For VCD menu page
- ⑨ **ANGLE** - Selects video angle options
- ⑩ **0 - 9** - Numeric keypad
- ⑪ **MUTE** - Muting playback volume
- ⑫ **REPEAT** - Repeats chapter / title / disc
- ⑬ **RETURN** - For VCD menu page
- ⑭ **ANGLE** - Selects video angle options
- ⑮ **LANGUAGE** - Language selector
- ⑯ **SUBTITLE** - Subtitle language selector
- ⑰ **MENU** - Displays MENU page
- ⑱ **SETUP** - Enters SETUP menu
- ⑲ **Infra Red** - Port
- ⑳ **BATTERY COMPARTMENT**

Upgrading

- First check and identify the contents of your package, as listed below:
- Portable DVD player
- Car adaptor (TV)
- Rechargeable battery pack
- Warranty

Placement

- Place the player on a firm, flat surface.
- Keep away from domestic heating equipment and direct sunlight.
- Always keep the disc door closed to avoid dust on the lens.
- The lens may cloud over when the player is suddenly moved from cold to warm surroundings. It is then not possible to play a DVD. Leave the player in a warm environment until the moisture evaporates.

PREPARATIONS

- Switch the power on.
- Connect the supplied adapter to the set and the main power supply (as shown).
- To avoid damage to the player, switch off before plugging or unplugging the AC adapter.

Power supply

- When connecting with car power (cigarette lighter) adapter, be sure the input voltage of the adapter is identical with car voltage.
- Powering your remote control: Open the battery compartment. Remove the protective plastic tab (first time users only). Insert 1 x lithium-3V battery, type CR2025, then close the compartment.

Using the AC / DC adapter

- Connect the supplied adapter to the set and the main power supply (as shown).
- To avoid damage to the player, switch off before plugging or unplugging the AC adapter.

Powering your remote control

- Open the battery compartment. Remove the protective plastic tab (first time users only). Insert 1 x lithium-3V battery, type CR2025, then close the compartment.

CAUTION

- Be careful not to use chemical substances, so they should be disposed of properly.
- Be careful of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Attaching and charging the battery pack

- Switch off the set. Attach the battery pack as shown.
- Connect the supplied adapter to the set and the main power supply (as shown). Charge until the red indicator turns off (approximately 4.5 - 6.5 hours when unit is charged from power off).

Connections

- Connect the headphones to the **PHONE 1** or the **PHONE 2** jack of your set.
- Connect the headphones to the **PHONE 1** or the **PHONE 2** jack of your set.

Connecting additional equipment

- Turn off your set before connecting to any additional equipment.
- You can connect the player to a TV or an amplifier to enjoy DVDs or karaoke.

AV OUT


- You can connect the player to a TV.

AV IN

- On the DVD player panel, press **AV IN** to select AV IN (AUX).

Connection Color

- Video: Yellow
- Audio (Left): White
- Audio (Right): Red

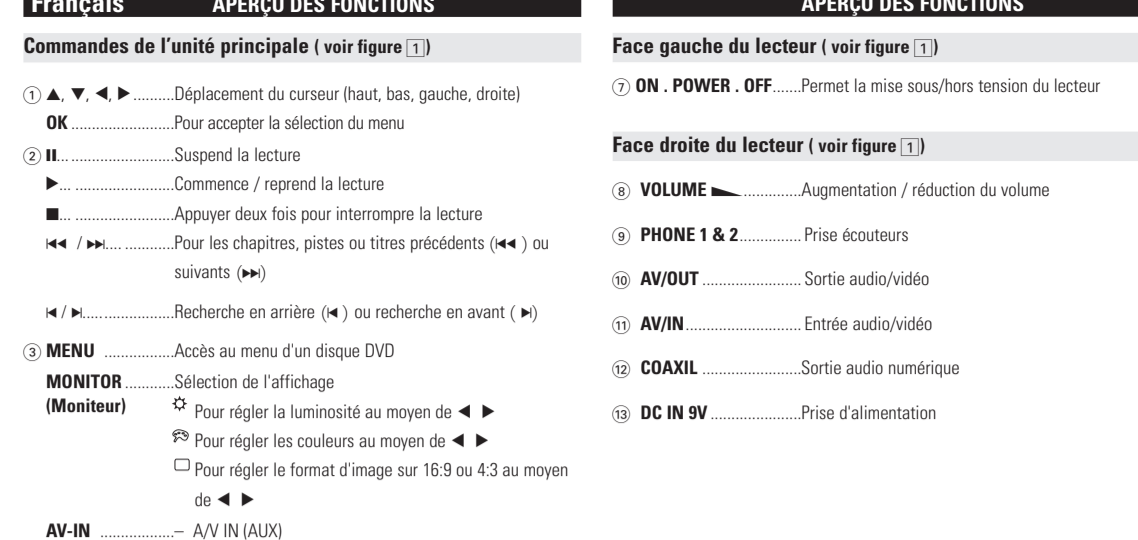

REMOTE CONTROL

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **VOL +/-** - Volume control
- ④ **II** - Pause playback
- ⑤ **SEARCH** - Search backward / forward
- ⑥ **OSD** - On Screen Display on / off
- ⑦ **REPEAT** - Repeat chapter / title / disc
- ⑧ **RETURN** - For VCD menu page
- ⑨ **ANGLE** - Selects video angle options
- ⑩ **0 - 9** - Numeric keypad
- ⑪ **MUTE** - Muting playback volume
- ⑫ **REPEAT** - Repeats chapter / title / disc
- ⑬ **RETURN** - For VCD menu page
- ⑭ **ANGLE** - Selects video angle options
- ⑮ **LANGUAGE** - Language selector
- ⑯ **SUBTITLE** - Subtitle language selector
- ⑰ **MENU** - Displays MENU page
- ⑱ **SETUP** - Enters SETUP menu
- ⑲ **Infra Red** - Port
- ⑳ **BATTERY COMPARTMENT**

Left of player (see figure 1)

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **VOL +/-** - Volume control
- ④ **II** - Pause playback
- ⑤ **SEARCH** - Search backward / forward
- ⑥ **OSD** - On Screen Display on / off
- ⑦ **REPEAT** - Repeat chapter / title / disc
- ⑧ **RETURN** - For VCD menu page
- ⑨ **ANGLE** - Selects video angle options
- ⑩ **0 - 9** - Numeric keypad
- ⑪ **MUTE** - Muting playback volume
- ⑫ **REPEAT** - Repeats chapter / title / disc
- ⑬ **RETURN** - For VCD menu page
- ⑭ **ANGLE** - Selects video angle options
- ⑮ **LANGUAGE** - Language selector
- ⑯ **SUBTITLE** - Subtitle language selector
- ⑰ **MENU** - Displays MENU page
- ⑱ **SETUP** - Enters SETUP menu
- ⑲ **Infra Red** - Port
- ⑳ **BATTERY COMPARTMENT**

Remote controls (see figure 2)

- ① **ON. POWER OFF** - Switch the player on / off
- ② **OK** - Confirm selection
- ③ **VOL +/-** - Volume control
- ④ **II** - Pause playback
- ⑤ **SEARCH** - Search backward / forward
- ⑥ **OSD** - On Screen Display on / off
- ⑦ **REPEAT** - Repeat chapter / title / disc
- ⑧ **RETURN** - For VCD menu page
- ⑨ **ANGLE** - Selects video angle options
- ⑩ **0 - 9** - Numeric keypad
- ⑪ **MUTE** - Muting playback volume
- ⑫ **REPEAT** - Repeats chapter / title / disc
- ⑬ **RETURN** - For VCD menu page
- ⑭ **ANGLE** - Selects video angle options
- ⑮ **LANGUAGE** - Language selector
- ⑯ **SUBTITLE** - Subtitle language selector
- ⑰ **MENU** - Displays MENU page
- ⑱ **SETUP** - Enters SETUP menu
- ⑲ **Infra Red** - Port
- ⑳ **BATTERY COMPARTMENT**

Upgrading

- First check and identify the contents of your package, as listed below:
- Portable DVD player
- Car adaptor (TV)
- Rechargeable battery pack
- Warranty

Placement

- Place the player on a firm, flat surface.
- Keep away from domestic heating equipment and direct sunlight.
- Always keep the disc door closed to avoid dust on the lens.
- The lens may cloud over when the player is suddenly moved from cold to warm surroundings. It is then not possible to play a DVD. Leave the player in a warm environment until the moisture evaporates.

PREPARATIONS

- Switch the power on.
- Connect the supplied adapter to the set and the main power supply (as shown).
- To avoid damage to the player, switch off before plugging or unplugging the AC adapter.

Power supply

- When connecting with car power (cigarette lighter) adapter, be sure the input voltage of the adapter is identical with car voltage.
- Powering your remote control: Open the battery compartment. Remove the protective plastic tab (first time users only). Insert 1 x lithium-3V battery, type CR2025, then close the compartment.

Using the AC / DC adapter

- Connect the supplied adapter to the set and the main power supply (as shown).
- To avoid damage to the player, switch off before plugging or unplugging the AC adapter.

Powering your remote control

- Open the battery compartment. Remove the protective plastic tab (first time users only). Insert 1 x lithium-3V battery, type CR2025, then close the compartment.

CAUTION

- Be careful not to use chemical substances, so they should be disposed of properly.
- Be careful of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Attaching and charging the battery pack

- Switch off the set. Attach the battery pack as shown.
- Connect the supplied adapter to the set and the main power supply (as shown). Charge until the red indicator turns off (approximately 4.5 - 6.5 hours when unit is charged from power off).

Connections

- Connect the headphones to the **PHONE 1** or the **PHONE 2** jack of your set.
- Connect the headphones to the **PHONE 1** or the **PHONE 2** jack of your set.

Connecting additional equipment

- Turn off your set before connecting to any additional equipment.
- You can connect the player to a TV or an amplifier to enjoy DVDs or karaoke.

AV OUT

- You can connect the player to a TV.

AV IN

- On the DVD player panel, press **AV IN** to select AV IN (AUX).

Connection Color

