Register your product and get support at www.philips.com/welcome

HTS6120



EN	User manual	3
ES	Manual del usuario	3
FR-CA	Manuel d'utilisation	3

PHILIPS

Return your Product Registration Card or register online at

www.philips.com/welcome today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once, **or register online at www.philips.com/welcome** to ensure:

*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

*Additional Benefits

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

PHILIPS

Congratulations on your purchase, and welcome to the "family!"

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.

P.S. To get the most from your PHILIPS purchase, be sure to complete and return your Product Registration Card at once, or register online at: www.philips.com/welcome

Know these



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. Serial No.

PHILIPS

Visit our World Wide Web Site at http://www.philips.com/welcome

Contents

1	Important Important safety instruction Trademark notice	4 4 6
2	Your Home Theater System Feature highlights Product overview	7 7 8
3	Connect Place the Home Theater System Connect video cables Connect subwoofer Connect radio antenna Connect audio cables/other devices Connect power cord Mount the Home Theater System	10 10 11 14 14 15 17 17
4	Get started Insert the remote control batteries Find the correct viewing channel Start Ambisound setup Use PBS to configure and clone the settings Turn on Progressive Scan Use Philips EasyLink Select a play source	19 19 20 20 22 24 24 24 26
5	Play Play a disc Play video Play music Play photo Play from USB device Play from portable media player Play from radio	27 27 30 31 32 33 33
6	Adjust sound Control the volume Adjust Bass/Treble Select Ambisound Select a preset sound	35 35 35 35 35

7	Adjust settings General setup Audio setup Video setup Preferences	36 36 39 40 41	English
8	Additional Information Update software Care	44 44 44	Contents
9	Specifications	45	
10	Troubleshooting	47	
11	Glossary	49	
12	Limited Warranty	51	

1 Important

Important safety instruction

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Para

- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **Protect the power cord** from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.



- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storm or when unused for long periods of time.
- **Refer all servicing** to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage or damage to the unit:
 - Install all batteries correctly, + and
 as marked on the unit.
 - Do not mix batteries (**old and new** or **carbon** and **alkaline**, etc.).
 - Remove batteries when the unit is not used for a long time.
- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.com
- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Important

Warning

- Modifications not authorized by the manufacturer may void user authority to operate this device.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Risk of overheating! Never install the Home Theater System in a confined space. Always leave a space of at least 4 inches around the Home Theater System for ventilation. Ensure curtains or other objects never cover the ventilation slots on the Home Theater System.

Recycle notice



This electronic equipment contains a large number of materials that can be recycled or reused if disassembled by a specialized company. If you are disposing of an old machine, please take it to a recycling center. Please observe the local regulations regarding disposal of packaging materials, exhausted batteries and old equipment.

Notice for USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Of this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice for Canada

Class B Clause

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class B digital apparatus complies with Canadian ICES-003.

Copyright notice

Be responsible Respect copyrights

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

About Progressive Scan

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service center.

Trademark notice

DIGITAL PRO LOGIC II

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.



DivX, DivX Ultra Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Official DivX® Ultra Certified product. Plays all versions of DivX® video (including DivX® 6) with enhanced playback of DivX® media files and the DivX® Media Format. Plays DivX® video with menus, subtitles and audio tracks.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.



2 Your Home **Theater System**

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Feature highlights

Philips EasyLink

Your Home Theater System supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.



Note

 Philips does not guarantee 100% interoperability with all HDMI CEC devices.

Philips Ambisound

Philips Ambisound technology reproduces multi-channel surround sound with fewer speakers to give an embracing surround experience without the hassle of setting up a full range of speaker systems.

Video upscaling to 1080p

Enjoy watching discs in the highest picture quality available for your HDTV. This Home Theater System offers full high-definition video playback up to 1080p resolution that provides a highly detailed picture and increased sharpness that delivers a more true-to-life picture for an amazing viewing experience.

Simply plug your USB device into the USB jack to play your MP3/WMA/JPEG/DivX files; or plug your portable media player to the MP3 LINK jack to enjoy the music play in superb sound quality.

Sync the audio output with the video play

Synchronize audio and video by delaying the audio output if the video signal sent to the TV is slower than the audio streams.

Region codes

You can play discs with the following region codes.

DVD	region	code




U.S.A. and Canada

Countries

English

Product overview

Main unit

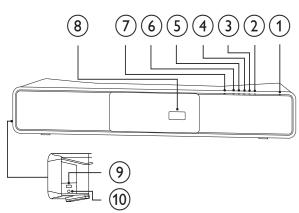

- (1 (Standby-On)
 - Turns on the Home Theater System or switches to standby mode.
- 2 SOURCE
 - Selects a media to play or listen to audio from the connected device.
- 3 VOL +/-
 - Increases or decreases volume.


④ ■ STOP

- Stops disc play.
- In radio mode, erases the current preset radio station.
- (5) ► III PLAY/PAUSE
 - Starts, pauses or resumes disc play.
 - In radio mode, automatically tunes radio stations during first-time setup.

⑥ ▲ OPEN/CLOSE

- Opens or closes the disc compartment.
- 7 Display panel
- 8 Disc compartment
- - Connects a USB supported device.
- 10 MP3 LINK
 - Connects a portable audio player.

Remote control

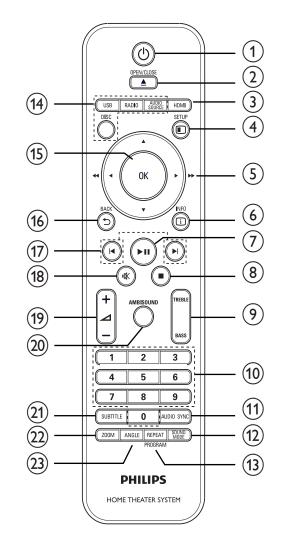

- (1 (Standby-On)
 - Turns on the Home Theater System or switches to standby mode.
 - When EasyLink is enabled, switches the Home Theater System and all EasyLink devices to standby. Note that you must press and hold () (Standby-On) for at least 3 seconds for this to occur.

- Opens or closes the disc compartment.
- 3 HDMI
 - Selects the video resolution of HDMI output.

8 EN

(4) 🗉 SETUP

• Accesses or exits the setup menu.

5 ▲▼◀► (Navigation buttons)

- Navigates through the menus.
- Press left and right for fast backward or forward search.
- In radio mode, press up and down to tune the radio frequency.
- In radio mode, press left or right to start auto search.

6 🗉 INFO

- For discs, displays information about the current status or the disc.
- For slideshows, displays a thumbnail view of photo files.

(7) ►II (Play/Pause)

- Starts, pauses or resumes disc play.
- In radio mode, automatically tunes radio stations during first-time setup.

(8) ■ (Stop)

- Stops disc play.
- In radio mode, erases the current preset radio station.

9 TREBLE / BASS

 Selects Treble or Bass mode, then press ∠ +/- to set the level for treble or bass output.

(10) Numeric buttons

- Selects an item to play.
- (1) AUDIO SYNC
 - Selects an audio language or channel on a disc.
 - Press and hold to access the setting for audio sync, then press ∠ +/- to set the audio delay time.
 - In radio mode, toggles between FM stereo and FM mono.

12 SOUND MODE

• Selects a predefined sound effect.

(13) REPEAT / PROGRAM

- Selects or turns off repeat or shuffle mode.
- In radio mode, resets the list of preset stations: press to manually reset; press and hold to automatically reset.

(14) Source buttons

- **DISC**: Switches to the disc source.
- USB: Switches to the USB source.
- **RADIO**: Switches to FM band.
- AUDIO SOURCE: Selects an audio input source.

(15) OK

• Confirms an entry or selection.

- Returns to a previous screen.
- For DVD, goes to the title menu.
- For VCD version 2.0 or SVCD with PBC turned on, returns to the menu during playback.

(17) I√ ► (Previous/Next)

Skips to the previous or next title, chapter, or track.

(18) ⊮ (Mute)

- Mutes or restores audio output.
- (19) ⊿ +/-
 - Increases or decreases volume.

20 AMBISOUND

• Selects stereo sound output or multi-channel surround output.

21) SUBTITLE

• Selects the subtitle language on a disc.

22 ZOOM

• Zooms in or out of the picture.

23 ANGLE

• Displays video from different camera angles.

3 Connect

Make the following connections to use your Home Theater System.

Basic connections:

- Video
- Subwoofer
- Power

Optional connections:

- Radio antenna
- Audio
 - Audio from TV
 - Audio from cable box/recorder/ game console
- Other devices
 - Portable media player
 - USB device
- Mount the Home Theater System

- Note


- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all the devices are disconnected from the power outlet.

🔆 Tip

• Different types of connectors may be used to connect this product to your TV, depending on availability and your needs. A comprehensive interactive guide to help you connect your product is available at www.connectivityguide. philips.com.

Place the Home Theater System

- Place the Home Theater System where it cannot be pushed, pulled over or knocked down. Do not place it in an enclosed cabinet.
- Be sure that you have full access to the power cord for easy disconnection of the Home Theater System from the power supply.

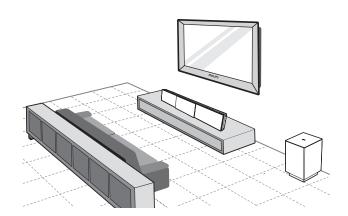

- 1 Place this Home Theater System near the TV.
 - Position this Home Theater System directly parellel to the listening area.
 - If you mount this Home Theater System on the wall, place it at a height that is closest to the listening ear-level.





2 Place the subwoofer at the corner of the room or at least 3 feet away from the TV.



- To avoid magnetic interference or unwanted noise, never place this Home Theater System too close to any radiation devices.
- You may purchase a separate table top stand that can support both your Philips Plasma/LCD TV and this Home Theater System from the nearest Philips retailers.

Connect video cables

Connect this Home Theater System to TV to view disc play. Select the best video connection that the TV can support.


- Option 1: Connect to the HDMI jack (for a HDMI, DVI or HDCP-compliant TV).
- Option 2: Connect to the component video jacks (for a standard TV or Progressive Scan TV).
- Option 3: Connect to the video (CVBS) jack (for a standard TV).
- Option 4: Connect to the RF modulator (for TV with only a single antenna input jack).

Note


• You must connect this Home Theater System directly to a TV.

Before you connect

1 Push up the catches at the bottom of the rear cover and lift it up.

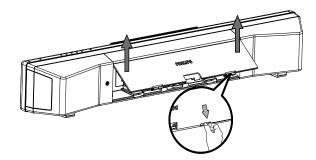

- 2 Connect the cables to the corresponding jacks and direct the cables to the CABLE OUT point.
 - See the connection options in the following pages.

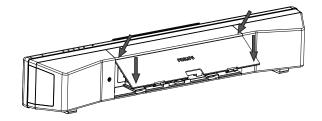

3 Once complete, close the rear cover.

Note

• All the cables must be placed inside the rear panel in order to close the rear cover properly.

HDMI IN

Option 1: Connect to the HDMI jack

1 Connect an HDMI cable (not supplied) to the HDMI OUT jack on this Home Theater System and the HDMI input jack on the TV.


Note

 If your device supports HDMI CEC, you can control compliant devices with a single remote control. (see 'Get started' > 'Use Philips EasyLink').

🔆 Тір

- If the TV has a DVI connection only, connect via a HDMI/DVI adaptor. Connect an audio cable for sound output.
- You can optimize the video output. (see 'Adjust settings' > 'Video setup' > [HDMI Setup]).
- This type of connection provides the best picture quality.

Option 2: Connect to the component video jack

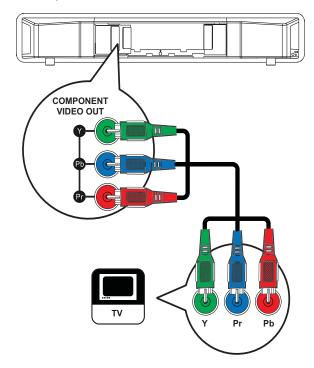


- 1 Connect the component video cable (not supplied) to the **Y Pb Pr** jacks on this Home Theater System and the COMPONENT VIDEO input jacks on the TV.
 - If a progressive scan TV is used, you may turn on the progressive scan mode. (see 'Get started' > 'Turn on Progressive Scan').

Note

- The component video input jack on the TV might be labeled as Y Pb/Cb Pr/Cr or YUV.
- This type of connection provides good picture quality.

Connect

Option 3: Connect to the Video (CVBS) jack

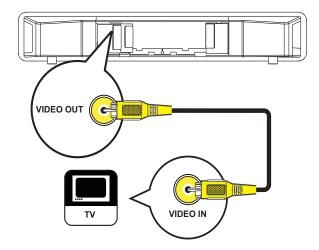


1 Connect a composite video cable to the VIDEO OUT jack on this Home Theater System and the VIDEO input jack on the TV.

- Note

- The video input jack on the TV might be labeled as A/V IN, VIDEO IN, COMPOSITE or BASEBAND.
- This type of connection provides standard picture quality.

Option 4: Connect to the RF modulator

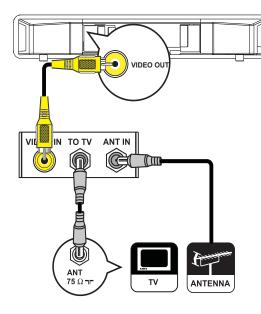


If your TV only has a single Antenna Input jack (labeled as 75 ohm or RF In), use a RF modulator to view the disc play on the TV.

- 1 Connect a composite video cable (yellow) from the **VIDEO** jack on this Home Theater System to the video input jack on RF modulator.
- 2 Connect a RF coaxial cable (not supplied) from the ANTENNA OUT or TO TV jack on the RF modulator to the ANTENNA IN jack on your TV.
- 3 If the off-air antenna or Cable TV service signal is connected to your TV, disconnect it from your TV and connect it to the ANTENNA IN or RF IN jack on the RF modulator.

🔆 Тір


• See your electronics retailer or contact Philips for details about RF modulator availability and operations.

Connect subwoofer

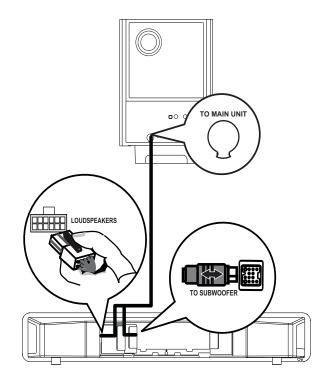

- 1 Unwind the subwoofer's interconnect cable at **TO MAIN UNIT**.
- 2 Connect the white end of the interconnect cable to the LOUDSPEAKERS jack on this Home Theater System.
- **3** Connect the gray end of the interconnect cable to the **TO SUBWOOFER** jack on this Home Theater System.

Connect radio antenna

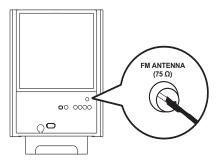

- 1 Connect the FM antenna to the FM75 Ω jack on the subwoofer (for some models, this cable is already connected).
- 2 Extend the FM antenna and fix its ends to the wall.

🔆 Тір

• For better FM stereo reception, connect to an external FM antenna.


Connect

Connect audio cables/other devices

Route the audio from other devices to this Home Theater System to enjoy audio play with multi-channel surround capabilities.

Connect audio from TV

(also used for EasyLink control)

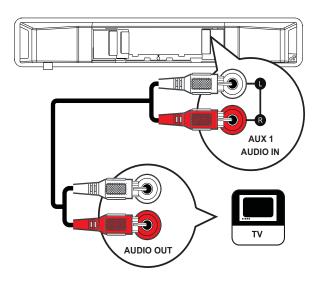

1 Connect the audio cables (not supplied) to the AUDIO IN-AUX1 jacks on the Home Theater System and the AUDIO output jacks on the TV.


Note

• To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'AUX1 INPUT' is displayed on the display panel.

Connect audio from cable box/ recorder/game console

You can choose to connect to analog or digital jack depending on the device capabilities.

Connect to analog jacks

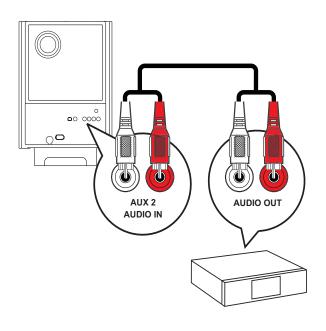


1 Connect the audio cables (not supplied) to the AUDIO IN-AUX2 or AUX3 jacks on the subwoofer and the AUDIO output jacks on the device.

Note

• To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'AUX2 INPUT' or 'AUX3 INPUT' is displayed on the display panel.

Connect to coaxial jack

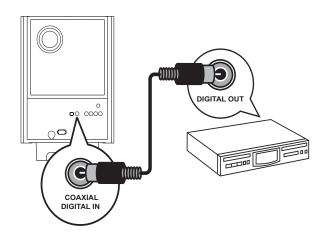

1 Connect a coaxial cable (not supplied) to the COAXIAL DIGITAL-IN jack on the subwoofer and the COAXIAL/DIGITAL output jack on the device.

Note


• To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'COAXIAL INPUT' is displayed on the display panel.

Connect to optical jack



• To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'OPTICAL INPUT' is displayed on the display panel.


Connect portable media player

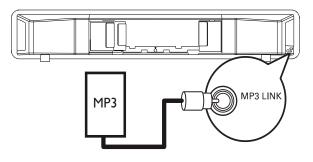

1 Connect a 3.5mm stereo audio cable (not supplied) to the MP3 LINK jack on this Home Theater System and the phone jack on the portable media player (such as MP3 player).




- To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'MP3 LINK' is displayed on the display panel.

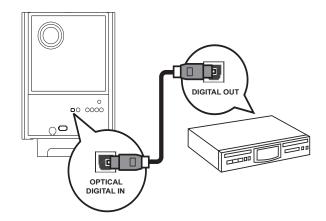

1 Connect an optical cable (not supplied) to the OPTICAL DIGITAL-IN jack on the subwoofer and the OPTICAL/SPDIF output jack on the device.

English

Connect USB device

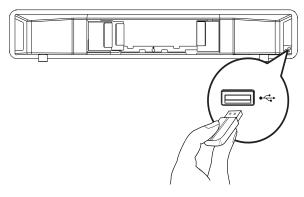

1 Connect the USB device to ⊷↔USB jack on this Home Theater System.



- This Home Theater System can only play/view MP3, WMA, DivX (Ultra) or JPEG files that are stored on such devices.
- Press **USB** to access the content and play the files.

Connect power cord


Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the Home Theater System.
- 1 Connect the power cord to the power outlet when all the required connections are done.
 - → The Home Theater System is ready to be set up for use.


Mount the Home Theater System

Caution


- Risk of personal injury and damage to the product. Allow only qualified persons to mount the product.
- 1 Ensure all the required cables are connected to this Home Theater System and close the rear cover.
- 2 Attach the supplied knobs to the rear of this Home Theater System.

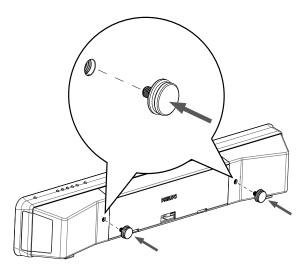


- **3** Turn this Home Theater System over so that its bottom faces up.
- 4 Remove the rubber feet by pushing it towards the back of this Home Theater System. Repeat the step to remove the other rubber feet.

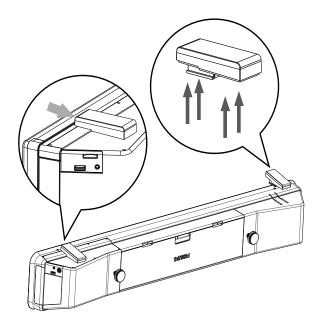


- 5 Position the supplied bracket on the wall, drill the screw holes and insert the rubber wall plugs (not supplied) into the holes.
 - To mount this Home Theater System below the TV, leave at least 4 inches of space between the TV and the bracket.

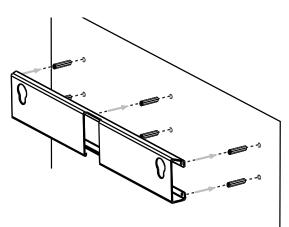

6 Secure the bracket onto the wall with screws (not supplied).

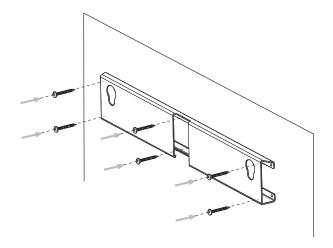


7 Hook this Home Theater System firmly onto the mounted bracket. Slide the knobs through the key holes to lock into position.

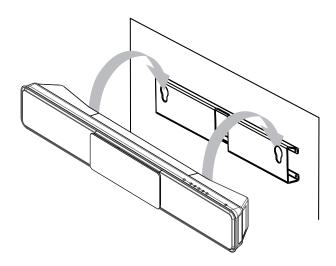

4 Get started

Insert the remote control batteries

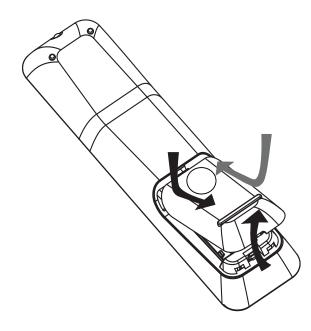

- 1 Slide the battery cover off the back of the remote control.
- 2 Insert the 2 supplied batteries (AAA). Be sure the + and - ends of the batteries line up with the markings inside the case.
- **3** Slide the cover back into position.


- Note

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Control a play source

- 1 Press **RADIO**, **USB** or **DISC** button to select the source you wish to control.
- 2 Select the desired function (for example $| \blacktriangleleft, \triangleright |$).

Navigate through the menu

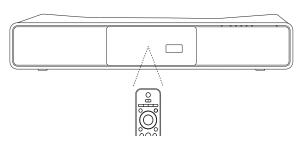

- 1 Point the remote control directly at the remote sensor on the product and select the desired function.
- 2 Press the following buttons on the remote control to navigate through the on-screen menus.

Button	Action
AV	Move up or down
•	Move left or right
ОК	Confirm a selection
1 2 3 4 5 6 7 8 9 0 0	Enter numbers

Find the correct viewing channel

- 1 Press \oplus to turn on the Home Theater System.
- 2 Press **DISC** to switch to disc mode.
- 3 Turn on the TV and switch to the correct video-in channel in one of the following ways:
 - Go to the lowest channel on your TV, then press the Channel Down button until you see the Philips screen.
 - Press SOURCE button repeatedly on the remote control of your TV.
 - Set the TV to channel 3 or 4 if a RF modulator is used.



• The video-in channel is between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO, HDMI etc.. See the TV user manual on how to select the correct input on your TV.


Start Ambisound setup

When you turn on this Home Theater System for the first time, follow the instructions on the TV to complete the Ambisound setup in order to obtain the best possible surround sound effect.



Note


- Before you start, ensure that you have made all the required connections.
- Complete the Ambisound setup before you insert a disc to play.
- 1 Press **DISC** to switch to disc mode.
- 2 Turn on the TV and switch it to the correct video-in channel.
 - → [OSD Language] screen is displayed.

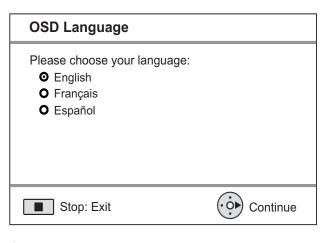

3 Select a language for on-screen menu display, then press \blacktriangleright .

 \rightarrow A welcome message is displayed.


- 4 Press \blacktriangleright to continue.
 - → A message on product orientation is displayed.
- 5 Press ► to continue. → [Room Acoustics] screen is displayed.

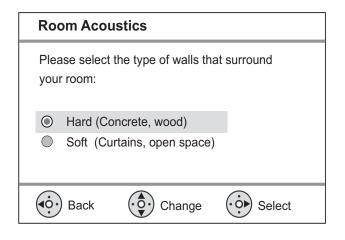


- 6 Select the condition of the room, then press ▶.
 - → [Room Placement] screen is displayed.

Roo	Room Placement		
Ι.	ect the Sou our room:	ind Bar system plac	ement position
\odot	Middle of	room	
0	Corner of	f room	
	Near the right wall		
0	Near the	left wall	
	Back	Change	Select

7 Select this Home Theater System placement in the room, then press \blacktriangleright . → [Height] screen is displayed.

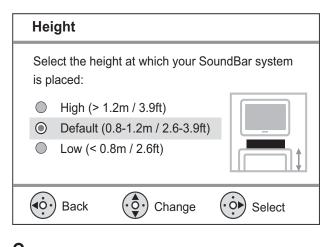

- 8 Select the height of which this Home Theater System is placed, then press \blacktriangleright .
 - → [Listening Position] screen is displayed.

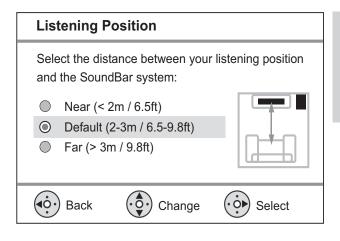

- 9 Select the distance between the listening position and the speakers, then press \blacktriangleright .
- **10** The speaker setting is complete, press ► to exit.

This Home Theater System is now ready for use.



Tip

- You can change the menu display language (see 'Adjust settings' > 'Preferences' > [OSD Language]).
- If you connect this Home Theater System to HDMI CEC compliant TV using HDMI cable, it switches automatically to the menu display language as per your TV setting.

Use PBS to configure and clone the settings

PBS (Professional and Business Solution) contains a list of configuration parameters of this Home Theater System. Once the settings have been configured, you can clone the PBS setup via a USB to the next Home Theater System in one single process.

Step 1: Configure the settings

- 1 Switch the TV to the correct viewing channel for this Home Theater System.
- 2 Complete the Ambisound setup (see 'Get started' > 'Start Ambisound setup').
- **3** Press **RADIO**.
- 4 Press ►II to start install all the available radio stations.
- 5 Once complete, press **DISC** to switch to disc mode.
- 6 Press '999981' on this Home Theater System remote control (or press 'D' on PBS green setup remote control) to access PBS setup menu.

General Setup	
Disc Lock	PBS Mode
Display Dim	High Security
OSD Language	Local Key Lock
Screen Saver	RC Key Lock
Sleep Timer Max Setting	
Low Power Standby	Switch-On Setting
DivX(R) VOD Code	Sound Presets
PBS Setup	Radio Presets

- 7 Select [PBS Setup] in the menu, then press ►.
- 8 Configure the settings for this Home Theater System.
 - See the explanations of the PBS setup options in the table below.

9 Once complete, select [PBS Mode] > [On] to activate PBS settings.

10 Press **E SETUP** to exit the menu.

Option	Description
[PBS	Turns on or off PBS setting.
Mode]	If activated, access to other setup
	options are blocked.
[High	Defines access to PBS setup
Security]	menu when PBS mode is
/ -	activated.
	[On] - Press 'D' on PBS green
	setup remote control. [Off] -
	Press ' D ' on PBS green setup
	remote control or press '999981'
	on Home Theater System remote
	control while in the no disc state
	to call out the setup menu.
[Local	Enables or disables the functions
Key Lock]	
	Home Theater System.
	If activated, all the front control
	buttons are blocked once the
	Home Theater System is turned
	on, only ひ (Standby-On) button
	can be used to turn off the Home
	Theater System.
[RC Key	Enables or disables the functions
Lock]	of remote control buttons of this
LOCKJ	Home Theater System.
	If activated, all the remote control
	buttons are blocked once the
	Home Theater System is turned
	on, only ' 999981 ' keycode and
	'D ' button on PBS green setup
	remote control can be used to
	access PBS setup.
[Max	I
[Max Sotting]	Sets the maximum volume, bass and treble level.
Setting]	
[Switch-	Sets the level of volume, bass and
on	treble when switching on this
Setting]	Home Theater System.
[Sound	Enables or disables the functions
Presets]	of SOUND buttons on this
	Home Theater System.

English

Option Description

[Radio	Enables or disables the functions
Presets]	of changing the radio presets on
	this Home Theater System.
[Clone]	Copies the PBS configurations
	(HTS6XXX.dat) to a USB device.
	A USB device must be inserted
	to this Home Theater System.
	The USB minimum storage
	capacity is 512KB.

Note

If the [PBS Setup] is not shown in the [General Setup] menu, do the following steps to call out the menu: 1) Press ▲ to open the disc compartment. 2) Press ■. 3) Press the Numeric buttons '181' to set PBS menu on.

Step 2: Copy the configuration to a USB device

- 1 In disc mode, insert a USB device to the USB jack on this Home Theater System.
- 2 Press USB.
- **3** Press 'D' on PBS green setup remote control to access PBS setup menu.
- 4 Select [Clone] in the menu, then press ►.
- 5 Press OK to start copy the configuration to USB.
 - Once complete, the PBS configuration file in the USB is displayed on the TV.

Note

• The USB minimum storage capacity is 512KB.

Step 3: Clone the configuration settings

- 1 Connect another Home Theater System to the power outlet and turn on the power.
- 2 Insert the USB device that contains the PBS configuration file to the Home Theater System.
- **3** Press USB.
 - The file transfer message is displayed on the TV.
- 4 Press OK on Home Theater System remote control (or 'E' on PBS green setup remote control) to start the cloning process.
 - Do not remove the USB device when cloning is in progress.
 - Once complete, a message appears indicating that the configuration settings have been cloned to the Home Theater System.

Turn on Progressive Scan

If the TV supports progressive scan output, you can connect this Home Theater System and the TV using component video connection. (see 'Connect video cables' > 'Connect to the component video jack').

Video Setup	
TV System	O On
TV Display	Off
Picture Setting	
HDMI Setup	
Closed Caption	
Progressive	
-	

- 1 Turn on the TV and ensure that the TV progressive scan mode is deactivated (see the TV user manual).
- 2 Switch the TV to the correct viewing channel for this Home Theater System.
- **3** Press **DISC**.
- 4 Press E SETUP.
- 5 Press ▼ to select [Video Setup] in the menu, then press ►.
- 6 Select [Progressive] > [On], then press OK.

→ A warning message is displayed.

- 7 To proceed, select [Ok] and press OK.
 → The progressive setup is complete.
 - Note
 - If a blank/distorted screen is displayed, wait for 15 seconds for the auto recover.
 - If no picture displayed, turn off the progressive scan mode as follows: 1) Press ≜ to open the disc compartment. 2) Press ◄. 3) Press AUDIO SYNC.

8 Press SETUP to exit the menu.

9 You can now turn on the progressive scan mode on the TV.



• During play, when progressive scan mode is on for both this Home Theater System and the TV, distorted picture may display. Turn off the progressive scan feature on both this Home Theater System and the TV.

Use Philips EasyLink

Your Home Theater System supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.



Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.
- 1 Turn on the HDMI CEC operations on the TV and other connected devices. See TVs/devices manual for details.
- 2 You can now enjoy the following Philips EasyLink controls.

EasyLink

You can turn off or turn on all EasyLink features.

One-touch play

When you connect your Home Theater System to devices that support one-touch play, you can control your Home Theater System and the devices with one remote control. For example, when you press Play on your DVD remote control, your TV automatically switches to the correct channel to show the DVD content.

To enable One-touch play, a video disc must be placed in the disc compartment before operation.

English

One-touch standby

When you connect your Home Theater System to devices that support standby, you can use your Home Theater System remote control to put your Home Theater System and all connected HDMI devices in standby mode. You can perform one-touch standby using the remote control from any of the connected HDMI devices.

System Audio Control

When you connect your Home Theater System to HDMI CEC compliant devices, your Home Theater System can switch automatically to play audio from the connected device.

To use one-touch audio, you must map the audio input from the connected device to your Home Theater System.

Audio Input Mapping

When you map the audio input correctly, this Home Theater System switches to the audio from the played device automatically.

Map the audio inputs to the connected devices



• Before you start, ensure that the audio output of the HDMI TV and other HDMI devices have been connected to the audio input jacks on this Home Theater System.

General Setup	
EasyLink Setup	O EasyLink
Disc Lock	One Touch Play
Display Dim	One Touch Standby
OSD Language	O System Audio Control
Screen Saver	Audio Input Mapping
Sleep Timer	
Low Power Standby	
DivX(R) VOD Code	


- 1 Press DISC.
- 2 Press SETUP.
 → [General Setup] menu is displayed.
- **3** Press ►.
- 4 Select [EasyLink Setup], then press ►
 - [One Touch Play] and [One Touch Standby] functions are turned on by default in the factory.
- 5 Select [System Audio Control] > [On], then press OK to start scanning devices.
 - → Once complete, audio input mapping menu is displayed.

Audio Input Mapping	
Aux1 Input	O [TV]
Aux2 Input	O [DVD 3400]
Aux3 Input	• other(non-HDMI)
Coaxial Input	
Optical Input	

- 6 Select the audio input of this Home Theater System that is used to connect to other HDMI device, then press ►.
 - For example, if the TV audio is connected to the AUX1 jack on this Home Theater System, select [Aux1 Input] and map with the TV (brand name) at the right panel.
- 7 Select the correct connected device, then press OK.
 - → Repeat steps 5~7 to map other connected devices.
- 8 Press E SETUP to exit the menu.


Select a play source

On the main unit

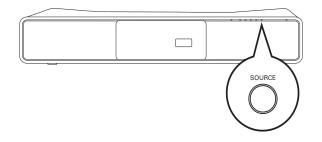

 Press SOURCE button repeatedly to select: DISC > RADIO FM > COAXIAL INPUT > OPTICAL INPUT > AUX1 INPUT> AUX2 INPUT > AUX3 INPUT > MP3 LINK > USB > DISC ...

 On the remote control



• Press AUDIO SOURCE repeatedly to switch to the connected audio source:

Display	Device connected to
AUX1 INPUT	AUDIO IN-AUX1 jacks
AUX2 INPUT	AUDIO IN-AUX2 jacks
AUX3 INPUT	AUDIO IN-AUX3 jacks
COAXIAL	DIGITAL IN-COAXIAL jack
INPUT	
OPTICAL	DIGITAL IN-OPTICAL jack
INPUT	
MP3 LINK	MP3 LINK jack

- Press **RADIO** to switch to FM band.
- Press **USB** to switch to USB mode.
- Press **DISC** to switch to disc mode.

5 Play

Play a disc

Caution

- Never place any objects other than discs into the disc compartment.
- Never touch the disc optical lens inside the disc compartment.
- 1 Press \triangleq to open the disc compartment.

2 Insert a disc with its label facing up.

- For double-sided disc, load the side to play faces up.
- **3** Press **▲** to close the disc compartment and start disc play.
 - To view disc play, turn on the TV to the correct viewing channel for this Home Theater System.
 - To stop disc play, press ■.

- Note

- Check the types of discs supported (see 'Specifications' > 'Playback media').
- If the password entry menu is displayed, enter the password before you can play the locked or restricted disc.
- If you pause or stop a disc for about 15 minutes, the screen saver activates. To deactivate the screen saver, press **DISC**.
- After you pause or stop a disc and no buttons are pressed within 30 minutes, this Home Theater System automatically switches to standby mode.

Play video

Note

• For video disc, playback always resumes from the point where it was last stopped. To start play from the beginning, press I◀ while the message is displayed.

Control video play

- **1** Play a title.
- 2 Use the remote control to control the title.

Button	Action
► II	Starts, pauses or resumes disc
	play.
	Stops disc play.
	Skips to the next title or chapter.
	Skips to the beginning of the
	current title or chapter. Press
	twice to jump to the previous
	title or chapter.
◀◀ / ▶▶	Searches fast-forward (right)
	or fast-backward (left). Press
	repeatedly to change the search
	speed.
	In pause mode, slow motion
	backward or forward play.
▲ / ▼	Searches slow-forward (down)
	or slow-backward (up). Press
	repeatedly to change the search
	speed.
	For VCD, only slow-forward play
	is possible.

Change video play


- **1** Play a title.
- 2 Use the remote control to change the video play.

Button	Action
AUDIO	Selects an audio language or
SYNC	channel on a disc.
SUBTITLE	Selects the subtitle language on a disc.
REPEAT	Selects or turns off repeat or shuffle mode. Repeat options vary depending on the disc type. For VCDs, repeat play is only possible if the PBC mode is turned off.
ZOOM	Zooms in or out of the picture. To pan through the zoomed image, press the Navigation buttons .
INFO	Displays the current status or disc information. You can change the video play options here without interrupting disc play.

Note

• Some operations may not work with some discs. See the information accompanying the disc for details.

Access DVD menu

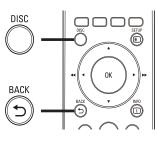

1 Press **DISC** to access disc main menu.

2 Select a play option, then press OK.

- In some menus, press the **Numeric buttons** to input your selection.
- To return to the title menu during play, press → BACK.

Access VCD menu

The PBC (Playback Control) for VCD is activated by default in the factory. When you load in a VCD, the contents menu is displayed.

- Press ▲▼ to select a play option, then press OK to start play.
 - If PBC is off, it skips the menu and starts play from the first title.
 - To return to the menu during play, press BACK (only possible if the PBC mode is on).


Тір

• You can change the PBC setting (see 'Adjust settings' > 'Preferences' > **[PBC]**).

Play

Sync audio output with video play

If the video play is slower than the audio output (sound does not match with the pictures), you can delay the audio output to match the video.

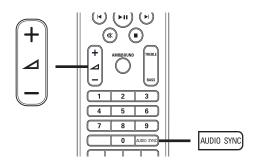

- 1 Press and hold **AUDIO SYNC** until 'AUDIO SYNC' is displayed.
- 2 Within five seconds, press → +/- to set the delay time for audio output.

- Note

• If the volume control is not used within five seconds, it resumes normal volume control function.

 
View video play from different camera angles

- 1 During play, press and hold **ANGLE** to display the angle options.
- 2 Press the Numeric buttons to select an angle.
 - \mapsto Play changes to the selected angle.

- Note

• Applicable only to discs contain multi-angle scenes.

Quick skip play to a specific time



- During play, press ⊡ INFO.
 → The disc status menu is displayed.
- 2 Press ▲▼ to view information, then press OK.
 - **[TT Time]** (title time)
 - [Ch Time] (chapter time)
 - [Disc Time] (disc time)
 - [Track Time] (track time)
- **3** Press the Numeric buttons to enter the time where you want to skip to, then press **OK**.

Note

• The options are different depending on the disc type.

Play DivX® video

DivX video is a digital media format that retains high quality despite a high rate of compression. You can enjoy DivX video on this DivX® Certified Home Theater System.

- 1 Insert a disc or USB that contains the DivX videos.
- 2 Press DISC or USB.→ A contents menu is displayed.
- 3 Select a title to play, then press ► II.
- **4** Use the remote control to control the title.

Button	Action
AUDIO	Selects an audio language or
SYNC	channel.
SUBTITLE	Select DVD or DivX subtitle
_	languages.
	Stops play.
	For DivX Ultra video, press
	this button again to display the
	contents menu.
INFO	Displays DivX Ultra video
	information.

Note

- You can only play DivX videos that were rented or purchased with the DivX registration code of this Home Theater System (see 'Adjust settings' > 'General setup' > [DivX(R) VOD Code]).
- You can play DivX video files of up to 4GB.
- If the subtitle does not appear correctly, change the character set (see 'Adjust settings' > 'Preferences' > [DivX Subtitle]).
- This Home Theater System can display up to 45 characters in the subtitle.

Play music

Control audio track play

- **1** Play a track.
- 2 Use the remote control to control the track.

Button	Action
▶11	Starts, pauses or resumes disc play.
	Stops disc play.
	Skips to the next track.
1 2 3 4 5 6 7 8 9 0 0	Skips to the beginning of the current track. Press twice to jump to the previous track. Selects an item to play.
◀◀ / ▶▶	Searches fast-forward (right) or fast-backward (left). Press repeatedly to change the search speed.
REPEAT	Selects or turns off repeat or shuffle mode.

Play MP3/WMA music

MP3/WMA is a type of highly compressed audio file (files with .mp3 or .wma extensions).

- 1 Insert a disc or USB that contains the MP3/WMA music.
- 2 Press DISC or USB.
 - \mapsto A contents menu is displayed.
- **3** Select a folder, then press **OK**.
- 4 Select a track to play, then press ► II.
 - To return to the main menu, press
 ⇒ BACK or press ▲ until 'Previous' folder is selected, then press OK.

Note

- For disc recorded in multiple sessions, only the first session is played.
- This Home Theater System does not support MP3PRO audio format.
- If any special characters are present in the MP3 track name (ID3) or album name, it might not be displayed correctly on the screen because these characters are not supported.
- Some WMA files are protected by Digital Rights Management and cannot be played on this Home Theater System.
- Folders/files that exceed the supported limit of this Home Theater System will not be displayed or played.

🔆 Тір


 You can select the display of data contents, view folders or files (see 'Adjust settings' > 'Preferences' > [MP3/JPEG Display]).

Play photo

Play photo as slideshow

This Home Theater System can play JPEG photos (files with .jpeg or .jpg extensions).

- 1 Insert a disc or USB that contains the JPEG photos.
- 2 Press DISC or USB.
 - ➡ Slideshow begins (for Kodak disc) or a contents menu (for JPEG disc) is displayed.
- **3** Select the folder/album you want to play.
 - To preview the photos in the folder/ album, press ① **INFO**.

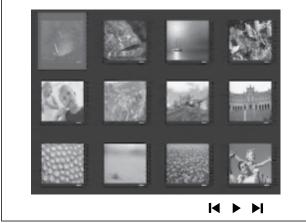

- To go to previous or next screen display, press I◀ / ►I.
- To select a photo, press the Navigation buttons.
- To display the selected photo only, press **OK**.
- 4 Press ►II to start slideshow play.
 - To return to the menu, press ∽ BACK.

- Note

- You may require longer time to display the disc content on the TV due to the large number of songs/photos compiled onto one disc.
- If the JPEG photo is not recorded with an 'exif' type file, the actual thumbnail picture is not be shown on the display. It is replaced by a 'blue mountain' thumbnail picture.
- This Home Theater System can only display digital camera pictures according to the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG and pictures in formats other than JPEG, or sound clips associated with pictures.
- Folders/files that exceed the supported limit of this Home Theater System are not displayed or played.

Control photo play

- 1 Play photo slideshow.
- 2 Use the remote control to control the photo.

Button	Action
•	Skips to the previous photo.
•	Skips to the next photo.
A	Rotates the photo clockwise.
▼	Rotates the photo anti-
	clockwise.
ZOOM	Zooms in or out of the
	picture.
	Play pause in zoom mode.
	Stops play.

Play musical slideshow


Play MP3/WMA music files and JPEG photo files simultaneously to create musical slideshow. The MP3/WMA and JPEG files must be stored on the same disc or USB device.

- 1 Play MP3/WMA music.
- 2 Navigate to the photo folder/album and press **OK** to start slideshow play.
 - → Slideshow begins and continues till the end of the photo folder or album.
 - → Audio continues to play till the end of the disc.
 - To stop slideshow play, press■.
 - To stop music play, press 🔳 again.

Play from USB device

This Home Theater System plays/views MP3, WMA, DivX (Ultra) or JPEG files on the following USB devices:

- digital camera that complies with the PTP standard
- flash drive
- memory card reader
- HDD (external power source needed)

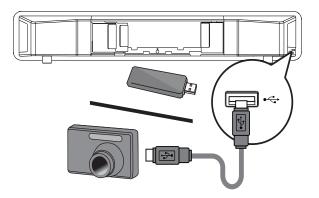

- Connect a USB device to the ← (USB) jack.
- 2 Press USB.
 - \mapsto A contents menu is displayed.
- 3 Select a file to play, then press ►II.
 → Play starts.
 - To stop play, press∎ or remove the USB device.


- Note

- If the device does not fit into the USB jack, connect it through a USB extension cable.
- If you connect a multiple USB card/device reader, only one card/device can be accessed.

Play

Play from portable media player

Simply connect your portable media player (e.g. MP3 player) to this Home Theater System to enjoy superb sound quality from your music collections.

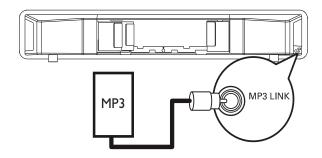


- 1 Connect a 3.5mm stereo audio cable (not supplied) from the **MP3 LINK** jack on this Home Theater System to the 'headphone' jack on the portable media player.
- 2 Press AUDIO SOURCE repeatedly until 'MP3 LINK' is displayed.
- **3** Start play on your portable media player.
 - To stop play, press **STOP** on the portable media player.



- Control playback is only possible on the portable media player.
- Stop play on the portable media player before you switch to other play media/source.

Play from radio

Check if the FM antenna has been connected to this Home Theater System. If not, connect the supplied FM antenna to the **FM75** Ω jack and fix its ends to the wall.

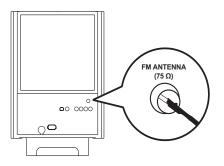

🔆 Тір

- For better FM stereo reception, connect an external FM antenna (not supplied).
- Position the antenna as far away as possible from your TV, VCR or other radiation source to prevent interference.

First time tuning

When you access to radio mode for the first time, follow the instructions to install the radio stations.

- 1 Press RADIO.
 - → 'AUTO INSTALL ... PRESS PLAY' is displayed.
- 2 Press ►II.
 - → All detected radio stations are stored.
 - → Once complete, it tunes to the first preset radio station.
 - To stop auto tuning, press 🔳.

Note

- This Home Theater System can store up to a maximum of 40 radio stations.
- If auto installation is not activated or less than 5 radio stations are stored, you will be prompted to install the radio stations again.

Listen to radio

1 Press RADIO.

2 Use the remote control to control the radio.

Button	Action
	Selects a preset radio station.
AV	Tunes the radio frequency up or
	down.
	Press and hold this button to
	erase the current radio station
	from the preset list.
	The preset number for other
	radio stations remain unchanged.

🔆 Тір

• Press AUDIO SYNC to toggle between FM stereo and FM mono mode.

Reinstall all the radio stations

- 1 Press RADIO.
- 2 Press and hold **PROGRAM** for more than 5 seconds.
 - → All previously stored radio stations are replaced.

Note

• Check the radio antenna connection if no stereo signal is detected or less than 5 stations are detected during radio installation.

Search and store radio stations individually

- 1 Press RADIO.
- 2 Press ◀◀ / ▶►.
 - → It starts searching until a radio station is detected.
- **3** Repeat step 2 until you tune to the radio station you wish to store.
 - To finetune the radio frequency, press ▲ / ▼.


4 Press **PROGRAM**.

- \mapsto The preset station number blinks.
- ➡ If no action is carried out within 20 seconds after the above step, it exits the preset mode.
- 5 Press I < / ► (or the Numeric buttons) to select a preset number to store.
- 6 Press **PROGRAM** to confirm.

Control the volume


- Press → +/- (VOL +/-) to increase or decrease the volume.
 - To mute, press 🕷.
 - To restore the volume, press ^I A again or press VOL +.

Adjust Bass/Treble

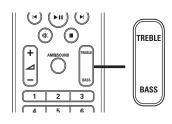

- 1 Press TREBLE or BASS.
- 2 Within 5 seconds, press ∠ +/- (VOL +/-) to set the high (TREBLE) or low (BASS) tone level.

 
Select Ambisound



1 Press AMBISOUND repeatedly to select the best Ambisound output that most suitable for the video or music you play.

Option	Description
AUTO	Surround output based on the
	audio stream.
MULTI-	5.1 multi-channel output for a
CHANNEL	standard movie experience.
STEREO	Stereo sound from two front
	speakers.

 Select a preset sound



1 Press **SOUND MODE** repeatedly to select the sound effect that most suitable for the video or music you play.

Video/Music	Description
ACTION / ROCK	Enhanced low and high range for great sounding movie effects and atmosphere. Great for action movies and rock/pop music.
CONCERT/ CLASSIC	Flat and pure sound mode. Ideal for listening to classical music and watching live concert disc.
DRAMA / JAZZ	Clear mid and high range. Recreates the atmosphere of a live club with the artist just in front of you. Good for jazz music and watching dramas.
NEWS	Enhanced mid range for clear vocals/speech.
GAMING / PARTY	Slightly enhanced low range and strong mid range ideal for party music and video gaming.
SPORTS	Moderate mid range and surround effects for clear vocals and the atmosphere of a live sports venue.

Adjust sound

7 Adjust settings

You can customize various kinds of settings as you prefer. Refer to the following instructions to navigate through the setup menus.

Symbol	Options
*	[General Setup]
	[Audio Setup]
0	[Video Setup]
	[Preferences]
- Note	

• If the setup option is grayed out, it means the setting cannot be changed at the current state.

General setup

	General Setup	
	EasyLink Setup	
-	Disc Lock	
	Display Dim	
	OSD Language	
	Screen Saver	
	Sleep Timer	
	Low Power Standby	
	DivX(R) VOD Code	

Press 🗈 SETUP.

→ [General Setup] menu is displayed.

2 Press ►.

3 Select an option, then press **OK**.

- 4 Select a setting, then press OK.
 - To return to the previous menu, press → BACK.
 - To exit the menu, press 🗈 SETUP.

Note

• See the explanations of the above options in the following pages.

[EasyLink Setup]

If this Home Theater System is connected to HDMI CEC compliant TV/devices, all connected devices can respond to the following commands simultaneously:

Option	Description
[EasyLink]	Turns off or on all EasyLink
	features.
	To disable this feature, select
	[Off].
[One	When you press PLAY , the
Touch	TV and Home Theater System
Play]	are turned on. Disc play starts
	if there is a disc in the Home
	Theater System.
	To disable this feature, select
	[Off].

Option	Description
[One	When you press and hold
Touch	STANDBY for at least 3 seconds,
Standby]	the Home Theater System and all
	the HDMI CEC devices switch to
	standby simultaneously.
	To disable this feature, select
	[Off].
[System	When you play audio that is routed
Audio	from the connected devices, this
Control]	Home Theater System switches
	to the corresponding audio source
	automatically.
	To enable this feature, select
	[On]. Then proceed to [Audio
	Input Mapping] to scan and map
	all the connected devices.
[Audio	When you map the audio
Input	input correctly, this Home
Mapping]	Theater System switches to the
	audio from the played device
	automatically.
	;

- Note

- You must turn on the HDMI CEC operations on the TV/devices before you can enjoy the EasyLink controls. See the TV/devices manual for details.
- Philips does not guarantee 100% interoperability with all HDMI CEC compliant devices.

[Disc Lock]

Sets play restriction for a specific discs. Before you start, place the disc in the disc compartment (maximum 40 discs can be locked).

- **[Lock]** Restricts access to the current disc. Once activated, a password is needed to unlock and play the disc.
- **[Unlock]** Plays all discs.

🔆 Тір

 You can set or change the password (see 'Adjust settings' > 'Preferences' > [Password]).

[Display Dim]

Changes the brightness level of the display panel on this Home Theater System.

- [100%] Normal brightness.
- **[70%]** Medium brightness.
- [40%] Dimmest display.

[OSD Language]

Selects the default on-screen menu language.

[Screen Saver]

Turns off or on the screen saver mode. Helps to protect the TV screen from being damaged due to over exposure to a static image for too long.

- **[On]** Sets the screen saver to appear after 15 minutes of inactivity (for example, in pause or stop mode).
- [Off] Disables screen saver mode.

[Sleep Timer]

Switches to standby automatically after the preset time.

- **[15 mins]**, **[30 mins]**, **[45 mins]**, **[60 mins]** – Selects the count down time before the Home Theater System switches to standby.
- [Off] Disables sleep timer mode.

[Low Power Standby]

Turns off or on the low power standby mode. Reduces power consumption in standby mode.

- **[On]** Sets the standby mode to low power.
- **[Off]** Sets the standby mode to normal power.

[DivX(R) VOD Code]

Displays the DivX® registration code.



• Enter this Home Theater System DivX registration code when you rent or purchase video from www.divx.com/vod. The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

[PBS Setup]

PBS (Professional and Business Solution) contains a list of configuration parameters of this Home Theater System. Once the settings have been configured, you can clone the PBS setup via a USB to the next Home Theater System in one single process. See 'Getting started' > 'Use PBS to configure and clone the settings'.



If the [PBS Setup] is not shown in the [General Setup] menu, do the following steps to call out the menu: 1) Press ▲ to open the disc compartment. 2) Press ■. 3) Press the Numeric buttons '181' to set PBS menu on.

Option	Description
[PBS	Turns on or off PBS setting.
Mode]	If activated, access to other setup
	options are blocked.
[High	Defines access to PBS setup
Security]	menu when PBS mode is
	activated.
	[On] - Press 'D' on PBS green
	setup remote control. [Off]
	- Press ' D ' on PBS green setup
	remote control or press ' 999981 '
	on Home Theater System
	remote control while in the no
	disc state to call out the setup
	menu.

Option	Description
[Local	Enables or disables the functions
Key Lock]	of front control buttons on this
	Home Theater System.
	If activated, all the front control
	buttons are blocked once the
	Home Theater System is turned
	on, only (Standby-On) button
	can be used to turn off the Home
	Theater System.
[RC Key	Enables or disables the functions
Lock]	of remote control buttons of this
	Home Theater System. If activated, all the remote control
	buttons are blocked once the
	Home Theater System is turned
	on, only ' 999981 ' keycode and
	'D ' button on PBS green setup
	remote control can be used to
	access PBS setup.
[Max	Sets the maximum volume, bass
Setting]	and treble level.
[Switch-	Sets the level of volume, bass and
on	treble when switching on this
Setting]	Home Theater System.
[Sound	Enables or disables the functions
Presets]	of SOUND buttons on this
	Home Theater System.
[Radio	Enables or disables the functions
Presets]	of changing the radio presets on
[Clana]	this Home Theater System.
[Clone]	Copies the PBS configurations
	(HTS6XXX.dat) to a USB device. A USB device must be inserted
	to this Home Theater System.
	The USB minimum storage
	capacity is 512KB.

Audio setup

Audio Setup	
Ambisound Setup	
HDMI Audio	
Night Mode	

1 Press I SETUP.

→ [General Setup] menu is displayed.

- 2 Press ▼ to select [Audio Setup], then press ►.
- **3** Select an option, then press **OK**.
- 4 Select a setting, then press OK.
 - To return to the previous menu, press → BACK.
 - To exit the menu, press 🗈 SETUP.

• See the explanations of the above options in the following pages.

[Ambisound Setup]

Optimizes the Ambisound based on this Home Theater System setup in the room (see 'Getting Started' > 'Start Ambisound setup').

Option	Description
[Setup	Guides you through the
Guide]	complete setup requirements.
[Room	Selects the type of walls that
Acoustics]	surround the room.
[Room	Selects the placement in the
Placement]	room.
[Height]	Selects the height at which it is
	placed.
[Listening	Selects the distance between
Position]	the listening postion and this
	Home Theater System.

[HDMI Audio]

Selects the HDMI audio setting when you connect this Home Theater System and the TV with a HDMI cable.

- [On] Allows audio output through the TV and the speaker system. If the audio format on the disc is not supported, it will be downmixed to two-channel sound (linear-PCM).
- [Off] Disables audio output from the TV. The sound is only output through the speaker system.

[Night Mode]

Makes loud sound level softer and soft sound level louder so that you can watch the DVD movies at a low volume, without disturbing others.

- **[On]** Enjoys quiet viewing at night.
- **[Off]** Enjoys surround sound with a full dynamic range.

Note

• Applicable only to Dolby Digital encoded discs.

Note

Video setup

Video Setup	
TV System	
TV Display	
Picture Setting	
HDMI Setup	
Closed Caption	
Progressive	

- Press SETUP.
 → [General Setup] menu is displayed.
- 2 Press ▼ to select [Video Setup], then press ►.
- **3** Select an option, then press **OK**
- 4 Select a setting, then press OK.
 - To return to the previous menu, press → BACK.
 - To exit the menu, press 🗈 SETUP.

- Note

• See the explanations of the above options in the following pages.

[TV System]

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- [NTSC] For NTSC-system TV.
- [Multi] For TV that is compatible with both PAL and NTSC.

[TV Display]

Selects one of the following display formats:



- **[4:3 Pan Scan]** For 4:3 screen TV: fullheight display with the trimmed sides.
- **[4:3 Letter Box]** For 4:3 screen TV: wide-screen display with black bars on the top and bottom of the screen.
- **[16:9 Wide Screen]** For wide-screen TV: display ratio 16:9.

[Picture Setting]

Selects a predefined set of picture color settings or customize the personal setting.

- [Standard] Original color setting.
- [Bright] Vibrant color setting.
- [Soft] Warm color setting.
- **[Personal]** Customizes the color setting. Set the level of brightness, contrast, sharpness/tint and color saturation, then press **OK**.

[HDMI Setup]

Selects the HDMI video setting when you connect this Home Theater System and the TV with a HDMI cable.

• **[Wide Screen Format]** – Defines wide screen format for disc play.

Option	Description
[Superwide]	Center position of the screen
	is stretched less than the side.
	Applicable only to 720p and
	above video resolution setting.
[4:3 Pillar	No stretching of picture. Black
Box]	bars are displayed on both
	sides of the screen.
[Off]	Picture is displayed according to
	the disc format.

- This setting is only available if you have set the **[TV Display]** setting to **[16:9 Wide Screen]**.
- **[HDMI Video]** Selects the HDMI video output resolution that is compatible with your TV display capability.

Option	Description
[Auto]	Detects and selects the best
	supported video resolution
	automatically.
[480i], [480p],	Selects a video resolution
[576i] , [576 p],	that is best supported by the
[720p] ,	TV. See the TV manual for
[1080i] ,	details.
[1080 _P]	

Note

• If the setting is not compatible with your TV, a blank screen appears. Wait for 15 seconds for auto recover or press **HDMI** repeatedly until the picture appears.

[Closed Caption]

Turns off or on display captions.

- **[On]** Shows the sound effects in subtitles. Applicable only to discs with Closed Caption information included and the TV supports this feature.
- **[Off]** Disables closed caption.

[Progressive]

If the TV supports progressive scan output, you can turn on the progressive scan mode to enhance the picture quality. Video connection through Component Video is required.

- **[On]** Turns on progressive scan mode.
- [Off] Disables progressive scan mode.



 There is more detailed description available (see 'Get started' > 'Turn on Progressive Scan').

Preferences

- Note

• Stop disc play before you can access to [Preferences].

Preferences		
Audio		
Subtitle		
Disc Menu		
Parental		
PBC		
MP3/JPEG Display		
Password		
DivX Subtitle	▼	

1 Press SETUP.

→ [General Setup] menu is displayed.

- 2 Press ▼ to select [Preferences], then press ►.
- **3** Select an option, then press **OK**.
- 4 Select a setting, then press OK.
 - To return to the previous menu, press → BACK.
 - To exit the menu, press 🗈 SETUP.

Note

• See the explanations of the above options in the following pages.

[Audio]

Selects the default audio language for disc play.

[Subtitle]

Selects the default subtitle language for disc play.

[Disc Menu]

Selects the language for disc menu.

English



Note

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some discs, the subtitle/audio language can only be changed from the disc menu.
- To select the languages that are not listed in the menu, select [Others]. Then check the Language Code list at the back of this user manual and enter the respective 4-digit language code.

[Parental]

Restricts access to discs that are unsuitable for children. These types of discs must be recorded with ratings.

1) Press OK.

2) Select a rating level, then press **OK**.

3) Press the Numeric buttons to enter the password.



Note

- Rated discs above the level you set in **[Parental]** require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select '8'.
- Some discs have ratings printed on them but are not recorded with ratings. This function has no effect on such discs.

Tip

• You can set or change the password (see 'Preferences' > [Password]).

[PBC]

Turns off or on the content menu of VCDs/ SVCDs with PBC (playback control) feature.

- [On] Displays index menu when you load a disc for play.
- **[Off]** Skips the menu and start play from the first title.

[MP3/]PEG Display]

Selects to display the folders or display all the files.

- [View Folders] Displays the folders of MP3/WMA files.
- [View Files] Displays all the files.

[Password]

Sets or changes the password for locked discs and play restricted DVDs.

Change Password	
Old Password	
New Password	
Confirm Password	
	ОК

1) Press the Numeric buttons to enter

'136900' or the last set password at **[Old Password]** field.

- 2) Enter the new password at **[New** Password] field.
- 3) Enter the new password again at [Confirm Password] field.
- 4) Press **OK** to exit the menu.

Note

• If you forget the password, enter '136900' before you set a new password.

[DivX Subtitle]

Selects a character set that supports the DivX subtitle.

[Standard]	English, Irish, Danish, Estonian, Finnish, French, German, Italian,
	Portuguese, Luxembourgish,
	Norwegian (Bokmål and
	Nynorsk), Spanish, Swedish,
	Turkish
[Central	Polish, Czech, Slovak, Albanian,
Europe]	Hungarian, Slovene, Croatian,
	Serbian (Latin script), Romanian
[Cyrillic]	Belarusian, Bulgarian, Ukrainian,
	Macedonian, Russian, Serbian
[Greek]	Greek
[Hebrew]	Hebrew
-	

Note

• Ensure that the subtitle file has the exact same file name as the movie file. If for example the file name of the movie is 'Movie.avi', then you will need to name the text file 'Movie.sub' or 'Movie.srt'.

[Version Info.]

Displays the software version of this Home Theater System.



• This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this Home Theater System.

[Default]

Resets all the settings of this Home Theater System to factory default, except for **[Disc** Lock], **[Password]** and **[Parental]** settings.

8 Additional Information

Update software

To check for new updates, compare the current software version of your Home Theater System with the latest software version (if available) at the Philips website.

Preferences		
Disc Menu		
Parental		
PBC		
MP3/JPEG Display		
Password		
DivX Subtitle		
Version Info.		
Default		

- 1 Press SETUP.
- 2 Select [Preferences] > [Version Info.], then press OK.
- **3** Write down the version number, then press **E SETUP** to exit the menu.
- **4** Go to www.philips.com/support to check the latest software version available for this Home Theater System.
- 5 If the latest software version is higher than the software version of this Home Theater System, download it and store onto a CD-R or USB flash drive.
- 6 Insert the CD-R or USB flash drive to this Home Theater System.
- 7 Press **DISC** or **USB**, then follow the instruction on the TV to confirm update operation.
 - → Once software update is complete, this Home Theater System turns off to standby automatically.

- Note

- Do not remove the CD-R or USB when software updating is in progress.
- **8** Disconnect the power cord for a few seconds and connect again to reboot the system.

Care

Caution

• Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.

Clean discs

Wipe the disc with a micro fibre cleaning cloth from the centre to the edge in a straight line movement.

Clean main unit screen

Wipe the screen surface with a micro fibre cleaning cloth.

9 Specifications

Note

• Specification and design are subject to change without notice

Playback media

 DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture CD, MP3-CD, WMA-CD, DivX-CD, USB flash drive

Amplifier

- Total output power: 600 W RMS
 - FTC mode: 350 W (10% THD)
- Frequency response: 30 Hz \sim 20 kHz / \pm 3dB
- Signal-to-noise ratio: > 65 dB (CCIR)
- Input sensitivity:
 - AUX1/2/3: 250 mV
 - MP3 LINK: 100 mV

Disc

- Laser Type: Semiconductor
- Disc diameter: 12cm / 8cm
- Video decording: MPEG1/ MPEG2 / DivX / DivX Ultra
- Video DAC: 12 bits, 108 MHz
- Signal system: PAL / NTSC
- Video S/N: 56 dB
- Audio DAC: 24 bits / 96 kHz
- Frequency response:
 - 4 Hz 20 kHz (44.1 kHz)
 - 4 Hz 22 kHz (48 kHz)
 - 4 Hz 44 kHz (96 kHz)
- PCM: IEC 60958
- Dolby Digital: IEC 60958, IEC 61937
- DTS: IEC 60958, IEC 61937

Radio

•

- Tuning range: FM 87.5-108 MHz (100 kHz)
- 26 dB quieting sensitivity: FM 22 dBf
- IF rejection ratio: FM 60 dB
 - Signal-to-noise ratio: FM 60 dB
- Harmonic distortion: FM 3%
- Frequency response: FM 180 Hz~10 kHz / ±6dB
- Stereo separation: FM 26 dB (1 kHz)
- Stereo Threshold: FM 29 dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)
- File system: FAT12, FAT16, FAT32

Main Unit

- Dimensions (WxHxD): 958 x 163 x 141 (mm)
- Weight: 7 kg
- Center speaker:
 - Speaker impedance: 8 ohm
 - Speaker driver: 2 x 63.5mm woofer + 19mm tweeter
 - Frequency response: 120 Hz 20 kHz
 - Left/Right surround speakers:
 - Speaker impedance: 8 ohm
 - Speaker driver: 4 x 63.5mm full range woofer
 - Frequency response: 120 Hz 20 kHz

Power (Subwoofer)

- Power supply: 120V; ~ 60Hz
- Power consumption: 150 W
- Standby power consumption:
 - Normal: <3 W
 - Low Power: < 0.3 W
 - System: Bass Reflex System
- Impedance: 4 ohm

•

- Speaker drivers: 165 mm (6.5'') woofer
- Frequency response: 30 Hz ~ 120 Hz
 - Dimensions (WxHxD): 295 x 440 x 295 (mm)
 - Weight: 10 kg

Laser specification

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 645 660 nm (DVD), 770
 800 nm (CD)
- Output power: 6 mW (DVD), 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

Declaration of conformity

- Model number: HTS6120
- Trade Name: Philips
- Responsible Party:

Philips Consumer Lifestyle A Division of Philips Electronics North America Corp. P. O. Box 671539 Marietta, GA 30006-0026

10 Troubleshooting

Warning

• Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you encounter problems when using the product, check the following points before requesting service. If the problem remains unsolved, register your product and get support at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of your Home Theater System. The model number and serial number are on the back or bottom of your Home Theater System. Write the numbers here: Model No. ______ Serial No. ______

Main unit

The buttons on this Home Theater System do not work.

• Disconnect this Home Theater System from the power outlet for a few minutes, then connect again.

Picture

No picture.

- See TVs manual for correct video input channel selection. Change the TV channel until you see the DVD screen.
- Press **DISC**.
- If you have changed the [TV Display] setting, switch back to default mode: 1) Press ▲ to open the disc compartment. 2) Press ◄. 3) Press SUBTITLE.

No picture on HDMI connection.

- Check if the HDMI cable is faulty. Replace a new HDMI cable.
- If this happens when you change the HDMI video resolution, press HDMI repeatedly until the picture appears.

Sound

No sound.

 Ensure that the audio cables are connected and press the correct input source (for example, AUDIO SOURCE, USB) to select the device you want to play.

No sound on HDMI connection.

- Sound cannot transmit through HDMI connection if the connected device is non-HDCP compliant or only DVI-compatible. Make an analog or digital audio connection.
- Ensure that the **[HDMI Audio]** setting is turned on.

No sound from TV program.

• Connect an audio cable from the AUDIO input on this Home Theater System to the AUDIO output on your TV. Then press **AUDIO SOURCE** repeatedly to select the corresponding audio input source.

Play

DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

The aspect ratio of the screen is not aligned with the TV display setting.

• The aspect ratio is fixed on the disc.

DivX subtitle does not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set: 1) Press
 E SETUP. 2) Select [Preferences], then press ▶. 3) Select [DivX Subtitle], then press OK. 4) Select the character set that supports the subtitle.

The contents of the USB flash drive cannot be read.

- The USB flash drive format is not compatible with this Home Theater System.
- Drive is formatted with different file system which is not supported by this unit (e.g. NTFS).
- Maximum size of memory supported is 160GB.

11 Glossary

A

Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

D

DivX Video

DivX® is a digital video format created by DivX, Inc. This is an offical DivX Certified device that plays DivX video. Visit www.divx. com for more information and software tools to convert your files into DivX video.

DivX Video-On-Demand

This DivX Certified® device must be registered in order to play DivX Video-ondemand (VOD) content. To generate the registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX video.

Dolby Digital

A surround sound system developed by Dolby Laboratories that contains up to six channels of digital audio (front left and right, surround left and right, center and subwoofer.)

DTS

Digital Theatre Systems. A surround sound system for providing 5.1 channels of discrete digital audio in consumer electronics products and software content. It is not developed by Dolby Digital.

Η

HDCP

High-bandwidth Digital Content Protection. This is a specification that provides a secure transmission of digital contents between different devices (to prevent unauthorized copyright.)

HDMI

High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality, completely free from noise. HDMI is fully backward-compatible with DVI.

As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (Highbandwidth Digital Content Protection) will result in no Video or Audio output.

JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognized by their file extension '.jpg' or '.jpeg.'

Μ

MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

MPEG

Motion Picture Experts Group. A collection of compression systems for digital audio and video.

Ρ

PBC

Playback Control. A system where you navigate through a Video CD/Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

PCM

Pulse Code Modulation. A digital audio encoding system.

Progressive scan

The progressive scan displays twice the number of frames per second than in an ordinary TV system. It offers higher picture resolution and quality.

W

WMA

Windows Media[™] Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded with Windows Media player version 9 or Windows Media player for Windows XP. Files are recognized by their file extension '.wma.'

PHILIPS LIMITED WARRANTY ONE (I) YEAR

WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth below.

WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

WHAT IS COVERED:

The Philips warranty covers new products if a defect in material or workmanship occurs and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product. Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is given, your product becomes Philips' property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

WHAT IS NOT COVERED - EXCLUSIONS AND LIMI-TATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

This Limited Warranty does not cover:

- Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product to Philips.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

TO OBTAIN ASSISTANCE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at: I 866 771 4018

TO OBTAIN ASSISTANCE IN CANADA...

I 800 661 6162 (French Speaking) I 866 771 4018 (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CON-SUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDEN-TAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PROD-UCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

P&F USA, Inc. PO Box 672768, Marietta, GA. 30006

3121 233 48803



© 2008 Koninklijke Philips Electronics N.V. All rights reserved. Document order number: 000000000000