

Quick Start Guide





Step A *Connect*

Step B *Setup*



Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

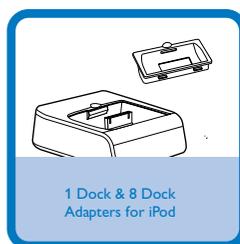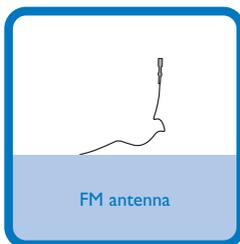

Pull out the plastic protective sheet before use.

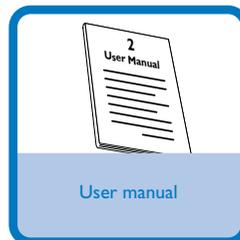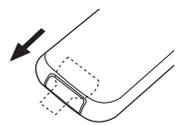

PHILIPS

Step A *Connect*

1

Connect the speaker cables.

2


Connect the FM antenna.

3

Connect the AC power cord of the system.

Tip

See the User Manual for how to connect other equipment to this system.

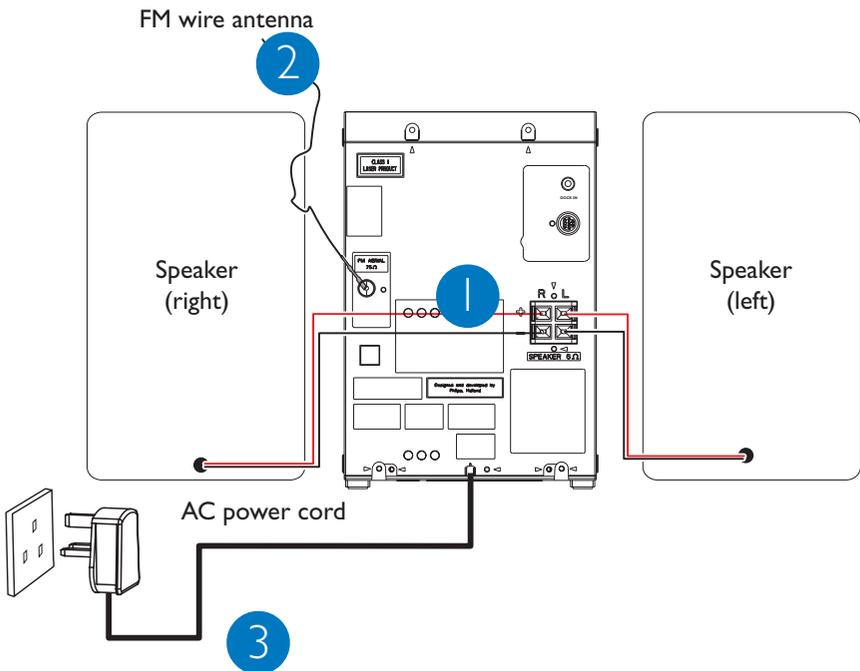


Step B Setup

Setting the clock

IMPORTANT!

– To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY-ON**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

- 1** In standby mode, press and hold **CLOCK/RDS** on the remote control.
→ **SET CLOCK** is displayed briefly. Then, the clock digits for the hours flash.
- 2** Press **■** on the remote control to select clock mode.
→ "12 TO 24 HOUR" or "24 TO 12 HOUR" scrolls once. Then, the clock digits for the hours continue to flash.
- 3** Adjust **VOLUME +/-** (or press **VOL +/-** on the remote control) to set the hours.
- 4** Press **CLOCK/RDS** again.
→ The clock digits for the minutes flash.
- 5** Adjust **VOLUME +/-** (or press **VOL +/-** on the remote control) to set the minutes.
- 6** Press **CLOCK/RDS** to confirm the time.

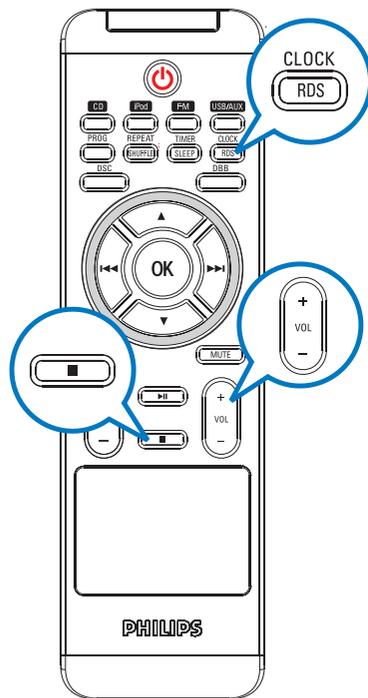

Step C Enjoy

Playing a disc

- 1** Press **OPEN/CLOSE**  to open the disc tray and load in a disc, then press the same button again to close the disc tray.
→ Make sure the label side of the disc is facing up.
- 2** Press **▶ ||** to start playback.
- 3** To stop playback, press **■**.




Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more (or **USB/AUX** on the remote control) to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

Programming and tuning to radio stations

- 1 Press **SOURCE** on the front panel repeatedly (or **FM** on the remote control) to select the FM source.
- 2 Press **PROG** for more than two seconds to program all available stations.
- 3 Press **ALBUM/PRESET**  or  until the desired preset station is displayed.

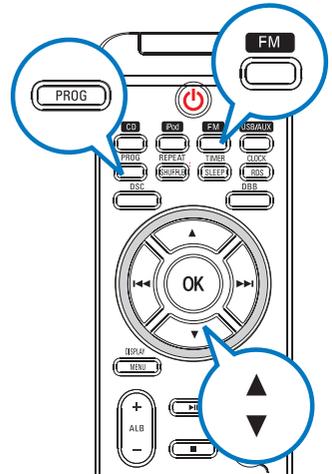


Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

Playing iPod using the dock

- 1 Select the correct dock adaptor supplied, then snap the adaptor into the dock connector (iPod) to provide a snug fit for the player.
 - The indication on the adaptor's back fits specific iPod player.
- 2 Correctly place your player in the dock connector.
- 3 Connect the cables of the dock to **DOCK IN** jacks on the main set correspondingly.
- 4 Press **SOURCE** on the set repeatedly (or **iPod** on the remote control) to select iPod source.
 - The connected player will play automatically.
 - The iPod battery will be charged in either normal standby mode or power-on mode. The charging will not be available in the Eco power standby mode.

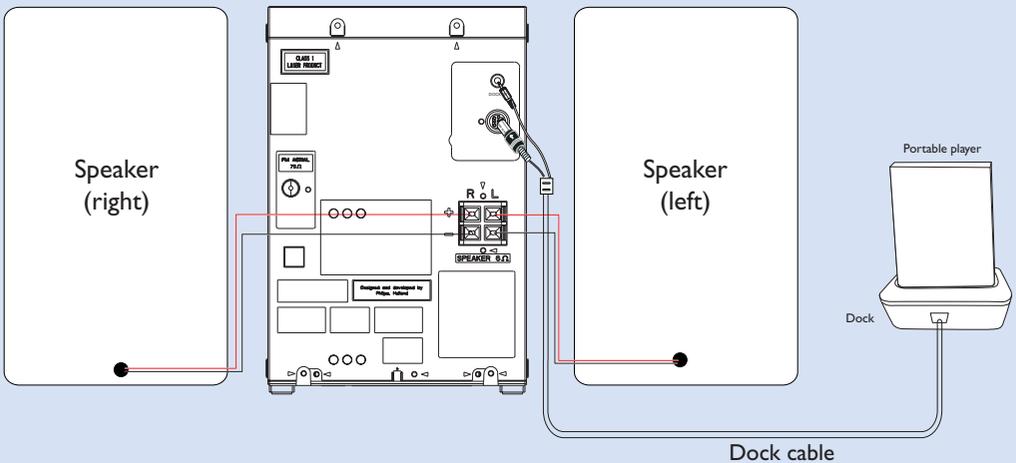

Tip

Refer to the user manual supplied for detailed descriptions of “Compatible portable player”, “Selecting the correct dock adaptor”, “Installing the dock adaptor”, and the important notes for dock operation.

