


3 Enjoy


Start disc play

- 1 Press to open the disc tray.

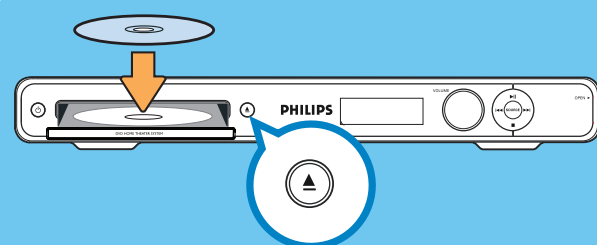


- 2 Place a disc with the disc label facing up.
- 3 Press to close the disc tray and start disc play.
- 4 If the disc menu is displayed on the TV, use cursor buttons to select an option in the menu, then press **OK**.
- 5 To enjoy powerful surround sound, press **SURROUND** to turn on the multi-channel surround mode.
- 6 Press to stop play.

Note When you press , playback resumes from where it was last stopped. To start playback from the beginning, press while the message is displayed.

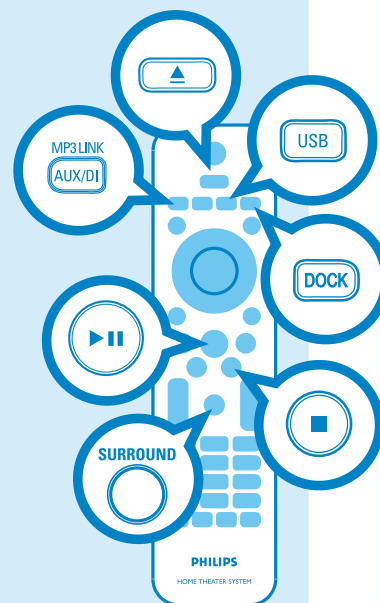

Play other supported devices

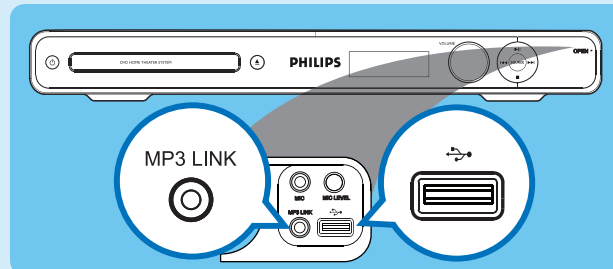


USB device

- 1 Insert your USB device to (USB) socket.
- 2 Press **USB** to switch to 'USB' mode.
- 3 Select a file to play, then press .
- 4 To stop play, press or remove the USB device.

Other portable media player

- 1 Connect a 3.5mm stereo audio cable (not supplied) from the MP3 LINK socket to the headphone output socket on your portable media player.
- 2 Press **AUX/DI /MP3 LINK** repeatedly until 'MP3 LINK' is displayed.
- 3 Press **PLAY** on your portable media player.

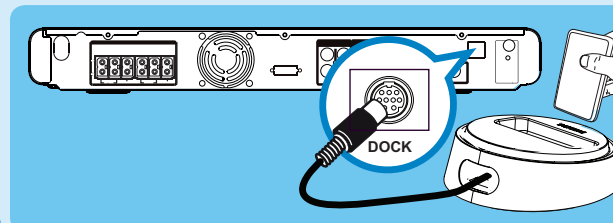

Apple iPod

- 1 Connect the docking station to **DOCK** socket.
- 2 Dock your iPod into the docking station and turn it on.
- 3 Press **DOCK** to switch to 'DOCK' mode.
- 4 Press **PLAY** on your iPod.

Need help?

User Manual

See the user manual that came with your Philips DVD Home Theatre System.



2008 © Koninklijke Philips N.V.
All rights reserved.
www.philips.com
sgpjp-810/98-eng I

Register your product and get support at
www.philips.com/welcome

HTS3568DW




- 1 Connect
- 2 Set up
- 3 Enjoy

Quick Start Guide


What's in the box?



DVD Home Theatre (main unit)

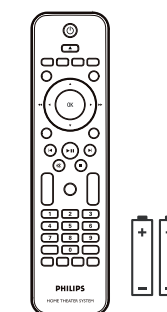


Remote Control and 2 batteries

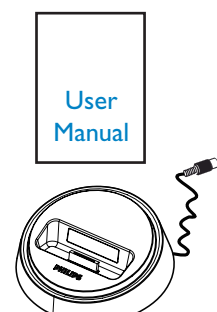


Docking station




FM wire antenna

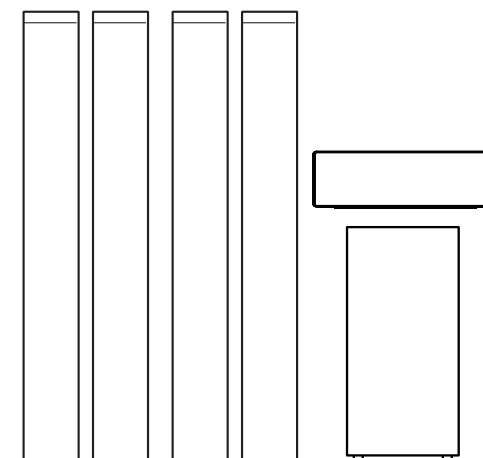

1 centre, 2 front, 2 rear speakers and subwoofer

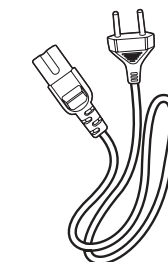

2 Power cables

 


Composite video cable




4 Screws



Speaker cables

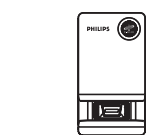

Wireless transmitter

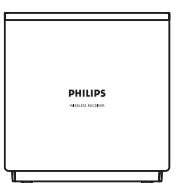


Wireless receiver

PHILIPS

1 Connect


A Placement

Proper speakers system placement is important to ensure optimum sound performance.

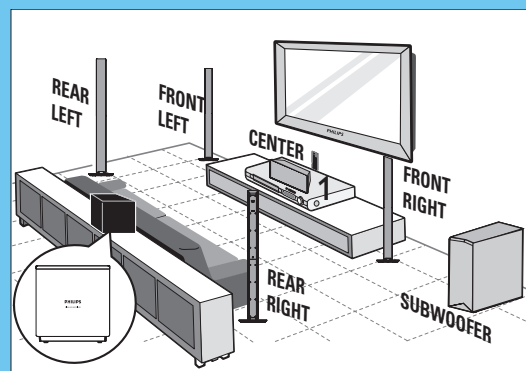

- 1 Place the centre speaker above or close to the TV.
- 2 Place the subwoofer on the floor, at least one metre away from the TV.
- 3 Place the front speakers at equal distances from the TV.
- 4 Place the rear speakers at the back or beside the listening position.
- 5 Place the wireless receiver at the back of the room facing the wireless transmitter at the main unit.


B Connect to TV

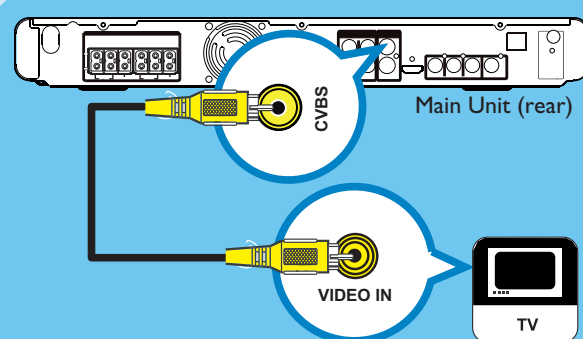

- Connect the composite video cable from the CVBS socket to the VIDEO IN socket on your TV.


Note If your TV supports HDMI, connect this unit to your TV using HDMI connection for better picture quality. See the accompanying user manual for more information.

C Connect wireless transmitter

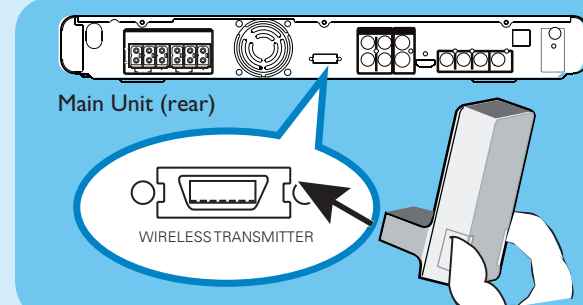

- Connect the wireless transmitter to the WIRELESS TRANSMITTER socket on the main unit.


D Connect speakers and subwoofer

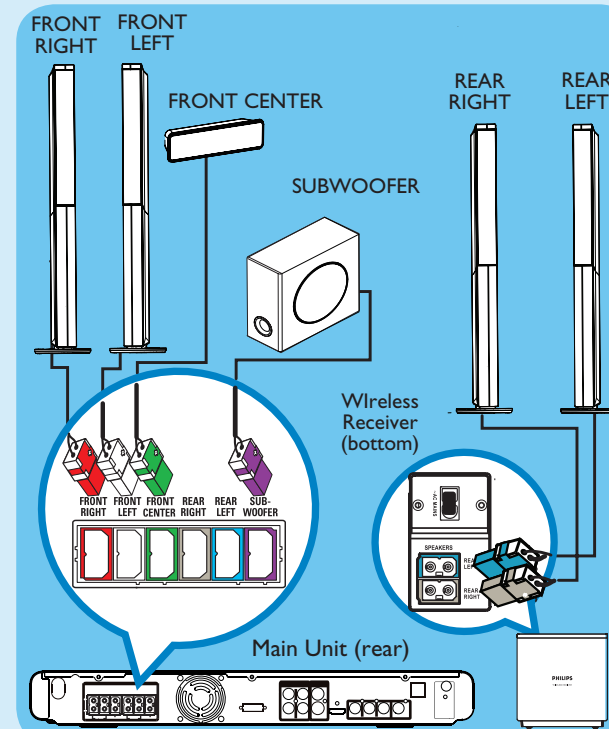

- 1 Connect the speaker cables to the matching colour sockets on the speakers.
- 2 Attach the speakers to speaker stands and secure the position with the supplied screws.
- 3 Connect the subwoofer, front and centre speakers to the same coloured sockets at the rear of the main unit.
- 4 Connect the rear speakers to the same coloured sockets at the bottom of the wireless receiver.

E Connect radio antenna and power cable


Keep the antennas away from the electronic devices to prevent unwanted interference.

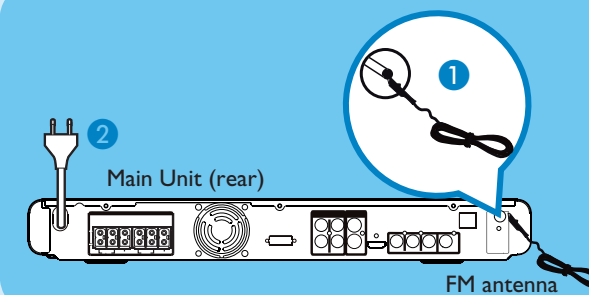

- 1 Connect the FM antenna to the inner pin of the FM 75 Ω socket (for some models, it has been connected in the factory). Extend the wire for optimum reception.
- 2 Connect the power cable from the main unit to the AC power outlet.

F Connect audio output from TV (optional)

To hear the TV audio through this DVD Home Theatre unit, connect an audio cable (not supplied) from the AUDIO IN-AUX1 sockets to the AUDIO OUT sockets on your TV.

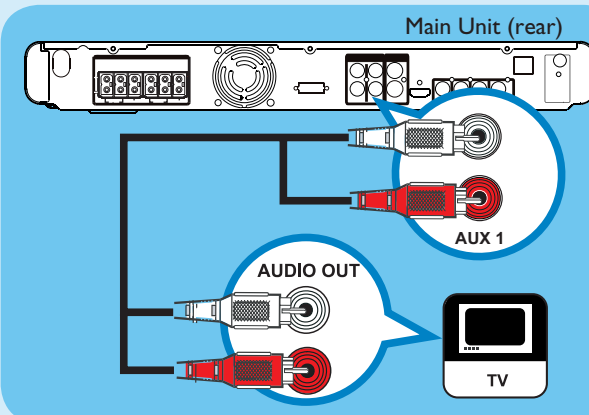

Note To listen to the audio output from this connection, press **AUX/DI/MP3 LINK** repeatedly until 'AUX 1' is displayed on the display panel.

2 Set up

A Find the viewing channel

- 1 Press **⏻** to turn on this DVD Home Theatre unit.
- 2 Turn on the TV. Use the TV's remote control to select the correct viewing channel.

Note To search for the correct viewing channel, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, **⏻** button) until you see the Video In channel.

B Select on-screen display language

- 1 Press **OPTIONS**.
[General Setup] menu is displayed.
- 2 Press **▶**.



- 3 Press **▼** to select [OSD Language], then press **▶**.
- 4 Press **▲▼** to select a language option, then press **OK**.
- 5 Press **OPTIONS** to exit.

Note The language set here is only for the menus that are shown on the TV while operating this DVD Home Theatre unit, not for the DVD disc menu.

There are various setup options (Audio Setup, Video Setup, Preferences) available on this DVD Home Theatre unit. Refer to the user manual for more information.

