# Always there to help you

Register your product and get support at www.philips.com/welcome



# User manual



## Contents

1	Important	3
	Safety	3
	3D health warning	4
	Care for your product	4
	Care of the environment	4
	care of the childring the	· ·
2	Your home theater	5
	Main unit	5 5 5
	Connectors	5
	Remote control	6
3	Connect and set up	8
_	Connect speakers	8
	Connect to TV	9
	Connect audio from TV and other	7
	devices	10
	Set up speakers	11
	Set up EasyLink (HDMI-CEC control)	11
	Connect and set up a home network	12
	Connect and set up a nome network	12
4	Use your home theater	14
	Access the home menu	14
	Discs	14
	Data files	16
	USB storage devices	16
	Audio, video, and picture options	17
	Radio	18
	MP3 player	19
	YouTube videos	19
	Picasa web albums	19
	Smartphone control	20
		20
	Browse PC through DLNA	
	Choose sound	22
5	Change settings	24
	Language settings	24
	Picture and video settings	24
	Audio settings	24
	Parental control settings	25
	Display settings	25
	. ,	25
	Energy saving settings	

Speaker settings Restore default settings	25 26
Update software Check software version Update software through USB Update software through the Internet	27 27 27 28
Product specifications	29
Troubleshooting	32
Notice Copyright Open source software	34 34 34
Trademarks	34
	Restore default settings  Update software Check software version Update software through USB Update software through the Internet  Product specifications  Troubleshooting  Notice Copyright

# 1 Important

Read and understand all instructions before you use your product. If damage is caused by failure to follow instructions, the warranty does not apply.

## Safety

#### Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

#### Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

#### Risk of injury or damage to the home theater!

 For wall-mountable products, use only the supplied wall mount bracket. Secure the

- wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

#### Risk of overheating!

 Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

#### Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaine, etc.).
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

#### Risk of swallowing batteries!

 The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.

- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.



This is CLASS II apparatus with double insulation, and no protective earth provided.

## 3D health warning

- If you or your family has a history of epilepsy or photosensitive seizures, consult a medical professional before exposing yourself to flashing light sources, rapid image sequences or 3D viewing.
- To avoid discomfort such as dizziness, headache or disorientation, we recommend not watching 3D for extended periods of time. If you experience any discomfort, stop watching 3D and do not immediately engage in any potentially hazardous activity (for example driving a car) until your symptoms have disappeared. If symptoms persist, do not resume watching 3D without consulting a medical professional first.
- Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above. Watching 3D is not recommended

for children under 6 years of age as their visual system is not fully developed yet.

## Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

## Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

 
Please visit www.recycle.philips.com for additional information on a recycling center in your area.

# 2 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers(e.g. notification of product software upgrade), register your product at www.philips.com/welcome.

## Main unit

This section includes an overview of the main unit.




- 1 Disc compartment
- Display panel
- (3) ≜ (Open/Close)

  Open or close the disc compartment.
- (4) ► II (Play/Pause)
  Start, pause or resume play.
- (5) SOURCE
  Select an audio or video source for the home theater
- 6 & (Standby-On)
  Switch the home theater on or to standby.


## Connectors

 This section includes an overview of the connectors available on your home theater.

#### Front connectors



 - (USB)
  - Audio, video or picture input from a USB storage device.
  - Connect to a Wi-Fi dongle (Model: Philips WUB1110, sold separately).
- 2 MUSIC iLINK
  Audio input from an MP3 player.



- AC MAINS
   Connect to the power supply.
- 2 AUDIO IN-AUX Connect to an analog audio output on the TV or an analog device.
- VIDEO OUT

  Connect to the composite video input on the TV
- 4 HDMI OUT (ARC)
  Connect to the HDMI input on the TV.
- (5) LAN

  Connect to the LAN input on a broadband modem or router
- 6 DIGITAL IN-OPTICAL Connect to an optical audio output on the TV or a digital device.
- ⑦ DIGITAL IN-COAXIAL Connect to a coaxial audio output on the TV or a digital device.


# 8 ANTENNA FM Fixed FM antenna

#### (9) SPEAKERS

Connect to the supplied speakers and subwoofer.

## Remote control

This section includes an overview of the remote control

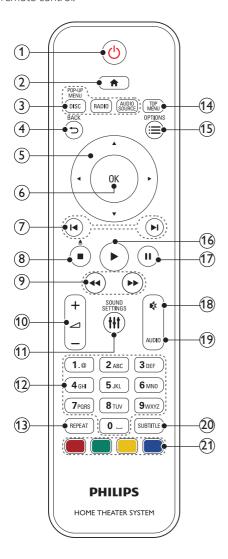

#### 1 (Standby-On)

- Switch the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

## (2) ♠ (Home)

Access the home menu.

#### (3) Source buttons

- DISC/POP-UP MENU: Switch to disc source. Access or exit the disc menu when you play a disc.
- RADIO: Switch to FM radio.
- AUDIO SOURCE: Select an audio input source.

#### 4 → BACK

- · Return to a previous menu screen.
- In radio mode, press and hold to erase the current preset radio stations.

#### 5 Navigation buttons

- · Navigate menus.
- In radio mode, press left or right to start auto search.
- In radio mode, press up or down to tune the radio frequency.

## 6 OK

Confirm an entry or selection.

## (7) I ✓ / ►I (Previous/Next)

- Skip to the previous or next track, chapter or file.
- In radio mode, select a preset radio station.

## 8 ■ (Stop) / ≜ (Eject/Open/Close)

- Stop play.
- Press and hold for three seconds to open or close the disc compartment, or eject the disc.

#### (9) ◀◀/►► (Fast Backward / Fast Forward) Search backwards or forward. Press repeatedly to change the search speed.

## 10 4/- (Volume)

Increase or decrease volume.

#### (11) HI SOUND SETTINGS

Access or exit sound options.

#### (12) Alphanumeric buttons

Enter values or letters (using SMS style entry).

#### (13) REPEAT

Select or turn off repeat mode.

#### (14) TOP MENU

Access the main menu of a disc.

#### (15) **≡** OPTIONS

- · Access more play options while playing a disc or a USB storage device.
- In radio mode, set a radio station.

#### (16) ► (Play)

Start or resume play.

#### (17) **II** (Pause)

Pause play.

#### (18) **♦** (Mute)

Mute or restore volume.

#### (19) AUDIO

Select an audio language or channel.

#### (20) SUBTITLE

Select subtitle language for video.

#### (21) Color buttons

Select tasks or options for Blu-ray discs.

# 3 Connect and set up

This section helps you connect your home theater to a TV and other devices, and then set it up.

For information about the basic connections of your home theater and accessories, see the quick start guide.




#### Note

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

## Connect speakers

The speaker cables are color-coded for easy connection. To connect a speaker to your home theater, match the color on the speaker cable to the color on the connector.

Speaker position plays a critical role in setting up a surround sound effect. For best effect, position all the speakers towards the seating position and place them close to your ear level (seated).

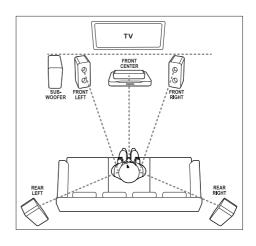



#### Note

 Surround sound depends on factors such as room shape and size, type of wall and ceiling, windows and reflective surfaces, and speaker acoustics. Experiment with the speaker positions to find the optimum setting for you.

Follow these general guidelines for speakers placement.

- 1 Seating position:
  This is the center of your listening area.
- **2 FRONT CENTER** (front center) speaker: Place the center speaker directly in front of the seating position, either above or below your TV.
- **3** FRONT LEFT (front left) and FRONT RIGHT (front right) speakers:
  Place the left and right speakers in the front, and at equal distance from the center speaker. Make sure that the left, right, and the center speakers are at equal distance from your seating position.
- 4 REAR LEFT (rear left) and REAR RIGHT (rear right) speakers:
  Place the rear surround speakers to the left and right side of your seating position,
- either in line with it or slightly behind it.

  5 SUBWOOFER (subwoofer):

Place the subwoofer at least one meter to the left or right of the TV. Leave about 10-centimeter clearance from the wall.

## Connect to TV


Connect your home theater to a TV to watch videos. You can listen to the TV audio through your home theater speakers.

Use the best quality connection available on your home theater and TV.

# Option 1: Connect to TV through HDMI (ARC)

#### Best quality video

Your home theater supports HDMI version with Audio Return Channel (ARC). If your TV is HDMI ARC compliant, you can hear the TV audio through your home theater by using a single HDMI cable.

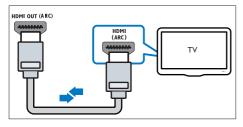


- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI ARC connector on the TV.
  - The HDMI ARC connector on the TV might be labeled differently. For details, see the TV user manual.
- On your TV, turn on HDMI-CEC operations. For details, see the TV user manual
  - HDMI-CEC is a feature that enables CEC compliant devices that are connected through HDMI to be controlled by a single remote control, such as volume control for both the

- TV and the home theater. (see 'Set up EasyLink (HDMI-CEC control)' on page 11)
- If you cannot hear the TV audio through your home theater, set up the audio manually. (see 'Set up the audio' on page 12)

# Option 2: Connect to TV through standard HDMI

#### Best quality video

If yourTV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.

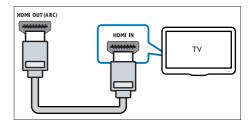

- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI connector on the TV.
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 10).
- 3 On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
  - HDMI-CEC is a feature that enables CEC compliant devices that are connected through HDMI to be controlled by a single remote control, such as volume control for both the TV and the home theater. (see 'Set up EasyLink (HDMI-CEC control)' on page 11)
- 4 If you cannot hear the TV audio through your home theater, set up the audio

manually. (see 'Set up the audio' on page 12)




Vote

 If yourTV has a DVI connector, you can use an HDMI/ DVI adapter to connect to TV. However, some of the features may not be available.

# Option 3: Connect to the TV through composite video
 
#### Basic quality video

If yourTV does not have HDMI connectors, use a composite video connection. A composite connection does not support high-definition video.



- Using a composite video cable, connect the VIDEO OUT connector on your home theater to the VIDEO IN connector on the TV.
  - The composite video connector might be labeled AV IN, COMPOSITE, or BASEBAND.
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 10).
- When you watch TV programs, press SOURCE on your home theater repeatedly to select the correct audio input.
- 4 When you watch videos, switch your TV to the correct video input. For details, see the TV user manual.

# Connect audio from TV and other devices

Play audio from TV or other devices through your home theater speakers.
Use the best quality connection available on your TV, home theater, and other devices.

 


#### Note

 When your home theater and TV are connected through HDMI ARC, an audio connection is not required (see 'Option 1: Connect to TV through HDMI (ARC)' on page 9).

# Option 1: Connect audio through a digital optical cable


Best quality audio



- Using an optical cable, connect the OPTICAL connector on your home theater to the OPTICAL OUT connector on the TV or other device.
  - The digital optical connector might be labeled SPDIF or SPDIF OUT.

# Option 2: Connect audio through a digital coaxial cable

Best quality audio

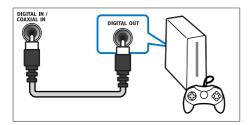


- Using a coaxial cable, connect the COAXIAL connector on your home theater to the COAXIAL/DIGITAL OUT connector on the TV or other device.
  - The digital coaxial connector might be labeled DIGITAL AUDIO OUT.

# Option 3: Connect audio through analog audio cables

#### Basic quality audio

1 Using an analog cable, connect the AUX connectors on your home theater to the AUDIO OUT connectors on the TV or other device.

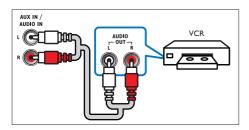

## Set up speakers

Set up the speakers manually to experience customized surround sound.

#### Before you start

Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

1 Press ♠ (Home).

- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [Speaker Setup].
- 4 Enter the distance for each speaker, and then listen to the test tones and change the volume. Experiment with the speaker positions to find the ideal setting.

# Set up EasyLink (HDMI-CEC control)

This home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI can be controlled by a single remote control.



#### Vote

- Depending on the manufacturer, HDMI-CEC is known by many names. For information on your device, see the user manual of the device.
- Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

#### Before you start

- Connect your home theater to the HDMI-CEC compliant device through HDMI connection.
- Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

## Enable EasyLink

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [EasyLink] > [EasyLink] > [On].
- 4 On yourTV and other connected devices, turn on HDMI-CEC control. For details, see the user manual of the TV or other devices.

 On your TV, set the audio output to 'Amplifier' (instead of TV speakers).
 For details, see the TV user manual.

## EasyLink controls

With EasyLink, you can control your home theater, TV, and other connected HDMI-CEC compliant devices with a single remote control.

- [One Touch Play] (One-touch play): When a video disc is in the disc compartment, press ▶ (Play) to wake up the TV from standby, and then play a disc.
- [One Touch Standby] (One-touch standby): If one-touch standby is enabled, your home theater can switch to standby with the remote control of the TV or other HDMI-CEC devices.
- [System Audio Control] (System audio control): If system audio control is enabled, the audio of the connected device is output through your home theater speakers automatically when you play the device.
- [Audio Input Mapping] (Audio input mapping):If system audio control does not work, map the connected device to the correct audio input connector on your home theater.



#### Note

To change the EasyLink control settings, press 
 (Home), select [Setup] > [EasyLink].

## Set up the audio

If you cannot hear the audio output of a connected device through your home theater speakers, do the following:

- Check that you have enabled EasyLink on all the devices, (see 'Set up EasyLink (HDMI-CEC control)' on page 11) and
- on your TV, set the audio output to "Amplifier" (instead of TV speakers). For details, see the TV user manual, and

- setup the EasyLink audio control.
- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [EasyLink] > [System Audio Control] > [On].
  - To play the audio from the TV speakers, select [Off], and skip the following steps.
- 4 Select [EasyLink] > [Audio Input Mapping].
- Follow the onscreen instructions to map the connected device to the audio inputs on your home theater.
  - If you connect your home theater to the TV through an HDMI ARC connection, make sure that the TV audio is mapped to the ARC input on your home theater.

# Connect and set up a home network

Connect your home theater to a home network with internet access and enjoy:

- YouTube leanback
- Picasa web albums
- BD-Live applications
- Software update



#### Caution

 Familiarize yourself with the network router and networking principles. If necessary, read documentation that accompanies the network components. Philips is not responsible for lost, damaged, or corrupt data.

#### Before you start


- For software updates, make sure that the network router has access to the Internet with high-speed connection and is not restricted by firewalls or other security systems.
- Make the necessary connections described in the quick start guide, and then switch

the TV to the correct source for your home theater

#### Set up the wired network

#### What you need

- A network cable (RI45 straight cable).
- A network router (with DHCP enabled).

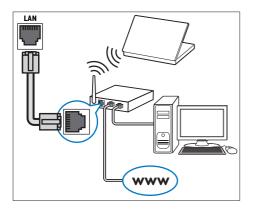


- 1 Using a network cable, connect the LAN connector on your home theater to the network router.
- 2 Press ♠ (Home).
- **3** Select **[Setup]**, and then press **OK**.
- 4 Select [Network] > [Network Installation] > [Wired (Ethernet)].
- 5 Follow the onscreen instructions to complete the setup.
  - If connection fails, select [Retry], and then press OK.
- 6 Select [Finish], and then press OK to exit.
  - To view the network settings, select [Setup] > [Network] > [View Network Settings].

## Set up the wireless network

Your home theater is Wi-Fi ready. Connect a Wi-Fi dongle for easy access to a wireless network.

#### What you need

- A network router (with DHCP enabled).
   For best wireless performance, coverage, and compatibility, use 802.11n router;
- Connect a Wi-Fi dongle (Model: Philips WUB1110, sold separately) to the connector on your home theater.

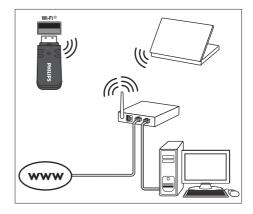

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Network] > [Network installation] > [Wireless (Wi-Fi)], and then press OK.
- 4 Follow the onscreen instructions to select and set up the wireless network.
  - If connection fails, select [Retry], and then press OK.
- 5 Select [Finish], and then press OK to exit.
  - To view the network settings, select [Setup] > [Network] > [View wireless settings].

# 4 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

#### Before you start

- Make the necessary connections described in the Quick start guide and the user manual.
- Switch the TV to the correct source for the home theater

## Access the home menu

The home menu provides easy access to connected devices, setup and other useful features in your home theater.

- 1 Press ♠ (Home).
  - → The home menu is displayed.
- Press the Navigation buttons and OK to select the following:
  - [play Disc]: Start disc play.
  - [browse USB]: Access the USB content browser
  - [browse PC]: Access the computer content browser.
  - **[YouTube]**: Access YouTube Leanback page.
  - [Picasa]: Access Picasa web albums.
  - [Setup]: Access menus to change video, audio and other settings.
- 3 Press ♠ (Home) to exit.

## **Discs**

Your home theater can play DVDs, VCDs, CDs, and Blu-ray discs. It can also play discs that you've made at home, such as CD-R discs of photos, videos, and music.

1 Insert a disc into the home theater.

- 2 If the disc does not play automatically, press DISC or select [play Disc] from the home menu.
- 3 Use the remote control to control play (see 'Remote control' on page 6).
  - It is normal to hear a little noise when you play a Blu-ray disc. This does not mean that your home theater is faulty.

## Play buttons

Button	Action
Navigation	Navigate menus.
buttons	
ОК	Confirm an entry or selection.
► (Play)	Start or resume play.
II	Pause play.
	Stop play.
<b> </b>	Skip to the previous or next track,
	chapter or file.
<b>44</b> / <b>&gt;&gt;</b>	Fast backward or fast forward.
	Press repeatedly to change the
	search speed.
AUDIO	Select an audio language or
	channel.
SUBTITLE	Select subtitle language for video.
DISC/	Access or exit the disc menu.
POP-UP	
MENU	
≔	Access the advanced options
<b>OPTIONS</b>	when you play your audio, video,
	or media files (see 'Audio, video,
	and picture options' on page 17).
REPEAT	Select or turn off repeat mode.

## Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

- 1 Press HI SOUND SETTINGS.
- 2 Select AUD SYNC, and then press OK.
- 3 Press the Navigation buttons (up/down) to synchronize the audio with the video.

## Play Blu-ray 3D disc

Your home theater can play Blu-ray 3D video. Read the 3D health warning before playing a 3D disc.

#### What you need

- A 3DTV
- A pair of 3D glasses that are compatible with your 3DTV
- A 3D Blu-ray video
- A high speed HDMI cable
- 1 Using the high speed HDMI cable, connect your home theater to a 3D compatible TV.
- Make sure that the 3D video setting is enabled. Press ♠ (Home), select [Setup] > [Video] > [Watch 3D video] > [Auto].
  - To play 3D discs in 2D mode, select [Off].
- 3 Play a Blu-ray 3D disc and put on the 3D glasses.
  - During video search and in certain play modes, the video is displayed in 2D.
     The video display returns to 3D when you resume play.

## Bonus View on Blu-ray

On Blu-ray discs that support the Bonus View, enjoy extra content such as commentaries in a small screen window. Bonus View is also known as picture-in-picture.

- 1 Enable Bonus View in the Blu-ray disc menu.
- While you play the movie, press OPTIONS.
  - → The options menu is displayed.
- 3 Select [PIP selection] > [PIP].
  - Depending on the video, PIP menu [1] or [2] is displayed.
  - To disable Bonus View, select [Off].
- 4 Select [2nd audio language] or [2nd Subtitle Language].

## 5 Select the language, and then press OK.

## BD-Live on Blu-ray

Access additional features on the Blu-ray discs with BD-Live content, such as internet chats with the director, the latest movie trailers, games, wallpaper, and ringtones.

BD-Live services and content vary from disc to disc.

#### What you need

- Blu-ray disc with BD-Live content
- a USB storage device, with at least 1 GB of memory
- 1 Connect your home theater to a home network with Internet access (see 'Connect and set up a home network' on page 12).
- 2 Connect a USB storage device to your home theater:
- 3 Press ♠ (Home) and select [Setup].
- 4 Select [Advanced] > [BD-Live security] > [Off] to enable BD-Live.
  - To disable BD-Live, select [On].
- 5 Select the BD-Live icon in the disc menu, and then press **OK**.
  - → BD-Live starts to load. The loading time depends on the disc and your internet connection.
- 6 Press the Navigation buttons to navigate BD-Live, and then press OK to select an option.



#### Note

To clear the memory on the storage device, press
 (Home), select [Setup] > [Advanced] > [Clear memory].

## Data files

Your home theater can play pictures, audio and video files contained in a disc or a USB storage device. Before you play a file, check that the file format is supported by your home theater (see 'File formats' on page 29).

- 1 Play the files from a disc or USB storage device.
- 2 To stop play, press ■.
  - To resume the video from where you stopped, press ► (Play).
  - To play the video from the start, press OK.



#### Note

 To play DivX DRM protected files, connect your home theater to a TV through an HDMI cable.

#### Subtitles

If your video has subtitles in multiple languages, select a subtitle language.



#### Note

- Make sure that the subtitle file has the exact same name as the video file. For example, if the video file is named 'movie.avi', name the subtitle file as 'movie.srt' or 'movie.sub'.
- Your home theater supports the following file formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. If the subtitles do not appear correctly, change the character set.
- 1 While playing video, press **SUBTITLE** to select a language.
- 2 For DivX videos, if the subtitles do not appear correctly, continue the following steps to change the character set.
- 3 Press OPTIONS.
  - → The options menu is displayed.
- 4 Select [Character set], and then select a character set that supports the subtitle.

#### Europe, India, LATAM, and Russia

Character	Language
Set	
[Standard]	English, Albanian, Danish, Dutch, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish
[Central Europe]	Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Sorbian
[Cyrillic]	Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian and Ukrainian
[Greek]	Greek
[Baltic]	Estonian, Latvian and Lithuanian

#### VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [DivX® VOD Code].
  → The DivX VOD registration code for
  - → The DivX VOD registration code for your home theater is displayed.

## USB storage devices

Enjoy pictures, audio, and video stored on a USB storage device such as an MP4 player or digital camera.

#### What you need

- A USB storage device that is formatted for FAT or NTFS file systems, and complies with the Mass Storage Class.
- A media file in one of the supported file formats (see 'File formats' on page 29).



- If you use a USB extension cable, USB HUB, or USB multi-reader, the USB storage device may not be recognized.
- 1 Connect a USB storage device to the (USB) connector on your home theater.
- 2 Press ♠ (Home).
- 3 Select [browse USB], and then press OK.

  → A content browser is displayed.
- 4 Select a file, and then press OK.
- Press the play buttons to control play (see 'Play buttons' on page 14).

# Audio, video, and picture options

Use advanced features when you play pictures, audio and video files from a disc or a USB storage device.

## Audio options

While playing audio, repeat an audio track, a disc, or a folder.

- 1 Press **OPTIONS** repeatedly to cycle through the following functions:
  - RPT TRK / RPT FILE: Repeat the current track or file.
  - RPT DISC / RPT FOLD: Repeat all the tracks on the disc or the folder:
  - RPT RDOM: Play audio tracks in random order.
  - RPT OFF: Turn off the repeat mode.

## Video options

While watching video, select options such as subtitles, audio language, time search, and picture settings. Depending on the video source, some options are not available.

1 Press ≡ OPTIONS.

- → The video options menu is displayed.
- Press the Navigation buttons and OK to select and change:
  - [Audio language]: Select audio language for video.
  - [Subtitle Language]: Select subtitle language for video.
  - [Subtitle shift]: Change the subtitle position on the screen.
  - [Info]: Display information about what is playing.
  - [Character set]: Select a character set that supports the DivX subtitle.
  - [Time search]: Skip to a specific part of the video by entering the time of the scene.
  - [2nd audio language]: Select the second audio language for Blu-ray video.
  - [2nd Subtitle Language]: Select the second subtitle language for Blu-ray video.
  - [Titles]: Select a specific title.
  - [Chapters]: Select a specific chapter.
  - [Angle list]: Select a different camera angle.
  - [Menus]: Display the disc menu.
  - [PIP selection]: Display Picture-in-Picture window when playing a Blu-ray disc that supports the Bonus View.
  - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
  - [Repeat]: Repeat a chapter or title.
  - [Repeat A-B]: Mark two points within a chapter or track to repeat play, or turn off the repeat mode.
  - [Picture settings]: Select a predefined color setting.

## Picture options

While viewing a picture, zoom into the picture, rotate it, add animation to a slideshow, and change the picture settings.

1 Press **≡ OPTIONS**.

- → The picture options menu appears.
- 2 Press the Navigation buttons and OK to select and change the following settings:
  - [Rotate +90]: Rotate the picture 90 degree clockwise.
  - **[Rotate -90]**: Rotate the picture 90 degree counter-clockwise.
  - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
  - [Info]: Display picture information.
  - [Duration per slide]: Select the display speed for each picture in a slide show.
  - [Slide animation]: Select animation for the slide show.
  - [Picture settings]: Select a predefined color setting.
  - [Repeat]: Repeat a selected folder.

#### Musical slideshow

If the picture and audio files are from the same disc or USB storage device, you can create a musical slideshow.

- 1 Select an audio track, and then press **OK**.
- 2 Press SACK, and go to the picture folder.
- 3 Select a picture, and then press ► (Play) to start the slideshow.
- 4 Press to stop slideshow.
- 5 Press again to stop music.



#### Note

 Make sure that the picture and audio formats are supported by your home theater (see 'File formats' on page 29).

## Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.



#### Vote

- AM and digital radio are not supported.
- If no stereo signal is detected, or if fewer than five stations are found, you are prompted to install the radio stations again.
- 1 Extend the FM antenna at the back of your home theater and place it away from the TV or other sources of radiation.
- 2 Press RADIO.
  - If you have already installed the radio stations, the last channel that you listened to is played.
  - If you have not installed any radio stations, the message AUTO
    INSTALL...PRESS PLAY appears on the display panel. press ► (Play).
- 3 Use the remote control to listen or to change radio stations.

Button	Action	
I <b>⊲</b> / ▶I	Select a preset radio station.	
or	•	
Alphanumeric		
buttons		
Navigation	Left/Right: Search for a radio	
buttons	station.	
	Up/Down: Fine tune a radio	
	frequency.	
	Press to stop the installation	
	of radio stations.	
<b>⇒</b> BACK	Press and hold to erase the	
	preset radio station.	
OPTIONS	Manual:	
	<ol> <li>Press ≡ OPTIONS.</li> </ol>	
	2) Press I◀ / ▶I to select	
	your preset. 3) Press <b>≔</b>	
	<b>OPTIONS</b> again to store the	
	radio station.	
	Automatic: Press and hold for	
	three seconds to reinstall the	
	radio stations.	
SUBTITLE	Toggle between the stereo	
	and mono sounds.	

## Tuning grid

In some countries, you can toggle the FM tuning grid between 50 kHz and 100 kHz. Switching the tuning grid erases all preset radio stations.

- 1 Press RADIO.
- 2 Press ■.
- Press and hold ► (Play) to toggle between 50 kHz or 100 kHz.

## MP3 player

Connect a MP3 player to play audio files.

#### What you need

- An MP3 player.
- A 3.5mm stereo audio cable.
- Using the 3.5mm stereo audio cable, connect the MP3 player to the MUSIC iLINK connector on your home theater.
- Press AUDIO SOURCE repeatedly until MUSIC I-LINK appears on the display panel.
- 3 Press the buttons on the MP3 player to select and play audio files.

## YouTube videos

Enjoy YouTube videos through your home theater.

- 1 Connect your home theater to a home network with a high-speed Internet access (see 'Connect and set up a home network' on page 12).
- 2 Press ♠ (Home).
- 3 Select [YouTube], and then press OK.
  - → The YouTube Leanback page is displayed.
- 4 Follow the onscreen instructions to browse the YouTube page.

Use the remote control to select and navigate the application.

Button	Action	
Navigation	Up: Access the onscreen	
buttons	keyboard.	
	Down: Access the onscreen	
	playback buttons.	
	Left/Right: Select a video from the	
	playlist.	

- If you do not press a button within few seconds, the onscreen buttons and menu exit automatically.
- 6 Press ♠ (Home) to exit YouTube page.

## Picasa web albums

Access Picasa Web Albums through your home theater.

#### What you need

- An account with Picasa Web Albums.
- 1 Connect your home theater to a home network with Internet access (see 'Connect and set up a home network' on page 12).
- Press ♠ (Home).
- 3 Select [Picasa], and then press OK.
- 4 Log in to your Picasa web account.
  - The first time you log in, select [New user], and then enter your user name and password. Save your login information for subsequent use.
  - If you have logged in before, select a stored user name and enter the password.
- 5 Select the onscreen options to view the albums or photos.
- 6 Press ♠ (Home) to exit Picasa menu.

#### View slideshow

- 1 Select [My photos] from the Picasa menu, and then press OK.
  - → The photo albums in your Picasa Web Albums are displayed.
- Select a photo, and then press OK to view the photo in full screen.
- 3 Press OK again to view the photos in a slideshow.
- 4 While viewing a slideshow, press OPTIONS to access more play options.
- 5 Press SACK to return to the previous screen

## Smartphone control

Use your mobile device such as iPhone (iOS 3.1.3 and above), Android phone (2.1 and above), iPad, or tablet to:

- · Control your home theater
- Browse a data disc or USB storage device
- Personalize your sound settings
- Stream and share content from the devices on your home network

#### Before you start

- Connect your home theater, mobile device, and other DLNA-compatible devices to the same home network.
  - For better video quality, use wired connection whenever possible.
- Personalize the network name for your home theater.
- Download Philips MyRemote application on your mobile device.
  - For iPhone or iPad, search for the app in **App Store** (App Store).
  - For Android based phone or tablet, search for the app in Market (Market).

## Control your home theater

- 1 On the mobile device, access MyRemote application.
- 2 Select your home theater (by its network name) from the home screen.
  - → A browsing bar is displayed at the bottom of the screen.
  - If your home theater is not found, check the network connection or tap the **Devices** tab on your mobile device to search again.
- 3 Select one of the following tabs to access more options.
  - To return to the previous screen, press back button.

Option	Action
Арр	Return to the home screen of your
Home	device.
Media	DISC: Browse and play a file stored
	on a data disc.
	USB: Browse and play a file stored
	on a USB storage device.
Remote	Access the remote control on your
	mobile device. Swipe the screen
	to the left or right to access more
	buttons. Only the relevant buttons
	are enabled on your mobile device.
	Some functions such as standby and
	long press, are not available on the
	mobile device.
	-

4 Follow the onscreen instructions to select an option or complete the set up.

## Browse PC through DLNA

Access and play the pictures, audio and video files from a computer or media server on the home network through your home theater.

#### Before you start

 Install a DLNA-compliant media server application on your device. Make sure that you download an application that works best for you. For example,

- Windows Media Player 11 or higher for PC
- Twonky Media Server for Mac or PC
- Enable media sharing of files. For ease of use, we have included the steps for the following applications:
  - Windows Media Player 11 (see 'Microsoft Windows Media Player 11' on page 21)
  - Windows Media Player 12 (see 'Microsoft Windows Media Player 12' on page 21)
  - Twonky Media for Mac (see 'Macintosh OS XTwonky Media (v4.4.2)' on page 22)



 For additional help on these applications or other media servers, check the user manual of the media server software software.

## Set up media server software

To enable media sharing, set up the media server software.

#### Before you start

- Connect your home theater to a home network. For better video quality, use wired connection whenever possible.
- Connect the computer and other DLNAcompatible devices to the same home network.
- Make sure that your PC firewall allows you to run Media Player programs (or the firewall's exemption list has the media server software included).
- Switch on your computer and the router.

## Microsoft Windows Media Player 11

- 1 Start Windows Media Player on your PC.
- 2 Click the Library tab, and then select Media Sharing.

- The first time you select Media Sharing on your PC,a pop-up screen appears. Check the Share my media box and click OK.
  - → The **Media Sharing** screen is displayed.
- 4 In the Media Sharing screen, make sure that you see a device marked as Unknown Device.
  - If you don't see an unknown device after a minute or so, check that your PC firewall is not blocking the connection.
- Select the unknown device and click **Allow**.
  - → A green tick appears next to the device.
- 6 By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, select Library > Add to Library.
  - → The Add to Library screen is displayed.
  - If necessary, select Advanced options to display a list of monitored folders.
- 7 Select My folders and those of others I can access, and then click Add.
- **8** Follow the onscreen instructions to add the other folders that contain your media files.

## Microsoft Windows Media Player 12

- 1 Start Windows Media Player on your PC.
- In Windows Media Player, click the **Stream** tab, and then select **Turn on media streaming**.
  - → The **Media streaming options** screen is displayed.
- 3 Click Turn on media streaming.
  - → You return to Windows Media Player screen.
- 4 Click the Stream tab and select More streaming options.
  - → The **Media streaming options** screen is displayed.
- 5 Make sure that you see a media program in the **Local network** screen.

- → If you don't see a media program, check that your PC firewall is not blocking the connection.
- 6 Select the media program and click Allowed.
  - → A green arrow appears next to the media program.
- By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, click the Organize tab and select Manage libraries > Music.
  - → The Music Library Locations screen is displayed.
- Follow the onscreen instructions to add the other folders that contain your media files.

#### Macintosh OS X Twonky Media (v4.4.2)

- 1 Visit www.twonkymedia.com to purchase the software, or download a free 30-day trial to your Macintosh.
- 2 Start Twonky Media on the Macintosh.
- In the Twonky Media Server screen, select Basic Setup and First Steps.
  - → The First steps screen is displayed.
- **4** Type a name for your media server, and then click Save changes.
- Back in the Twonky Media screen, select Basic Setup and Sharing.
  - → The **Sharing** screen is displayed.
- 6 Browse and select folders to share, and then select Save Changes.
  - Your Macintosh rescans the folders automatically so that they are ready to share.

## Play files from your PC



#### Note

- Before you play multimedia content from the computer, make sure that the home theater is connected to the home network, and the media server software is properly set up.
- 1 Press ♠ (Home).
- 2 Select [browse PC], and then press OK.
  - → A content browser is displayed.
- **3** Select a device on the network.
  - → The folders in the selected device are displayed. Depending on the media server, the folder names may vary.
  - If you cannot see the folders, check that you have enabled media sharing on the selected device so that the content is available for sharing.
- 4 Select a file, and then press **OK**.
  - Some media files may not play due to compatibility issues. Check the file formats supported by your home theater.
- 5 Press the play buttons to control play (see 'Play buttons' on page 14).

## Choose sound

This section helps you choose the ideal sound for your video or music.

- 1 Press # SOUND SETTINGS.
- Press the Navigation buttons (left/ right) to access the sound options on the display.

Sound settings	Description	
SOUND	Select a sound mode.	
SURROUND	Select surround sound or	
	stereo sound.	
TREBLE	Change the high frequency	
	output.	
MID	Change the middle frequency	
	output.	
BASS	Change the low frequency	
	output.	
AUD SYNC	Delay the audio to match the	
	video.	

3 Select an option, and then press **OK**.

Press S BACK to exit.
If you do not press a button within a minute, the menu exits automatically.

#### Sound mode

Select predefined sound modes to suit your video or music.

- 1 Press ## SOUND SETTINGS.
- 2 Select **SOUND**, and then press **OK**.
- 3 Press the Navigation buttons (up/down) to select a setting on the display:
  - MOVIE: Enjoy a cinematic audio experience, specially enhanced for movies.
  - MUSIC: Recreate the original recording environment of your music, in the studio or at a concert.
  - ORIGINAL: Experience the original sound of your movies and music, without added sound effects.
  - NEWS: Hear every word with optimized speech and clear vocals.
  - GAMING: Enjoy thrilling arcade sounds, ideal for action-packed video games or loud parties.
- 4 Press **OK** to confirm.

#### Surround sound mode

Experience an immersive audio experience with surround sound modes.

- 1 Press Ht SOUND SETTINGS.
- 2 Select SURROUND, and then press OK.
- 3 Press the Navigation buttons (up/down) to select a setting on the display:
  - AUTO: Surround sound based on the audio stream.
  - MULTI-CH: Immersive multi-channel sound for an enhanced movie experience.
  - STEREO: Two-channel stereo sound. Ideal for listening to music.
- 4 Press **OK** to confirm.

## Equalizer

Change the high frequency (treble), mid frequency (mid), and low frequency (bass) settings of the home theater:

- 1 Press HI SOUND SETTINGS.
- 2 Select TREBLE, MID or BASS, and then press OK.
- 3 Press the Navigation buttons (up/down) to change the frequency.
- 4 Press **OK** to confirm.

# Change settings

The home theater settings are already configured for optimal performance. Unless you have a reason to change a setting, we recommend that you keep the default setting.



- · You cannot change a setting that is grayed out.
- To return to the previous menu, press SACK, To exit the menu, press **f** (Home).

## Language settings

- Press **(Home)**.
- Select [Setup], and then press OK.
- Select [Preference], and then press OK.
- Press the Navigation buttons and OK to select and change:
  - [Menu language]: Select a display language for menu.
  - [Audio]: Select an audio language for
  - [Subtitle]: Select a subtitle language for discs.
  - [Disc Menu]: Select a menu language for discs.



- · If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 36).
- · If you select a language that is not available on a disc, the home theater uses the default language of the disc.

## Picture and video settings

- Press ♠ (Home).
- Select [Setup], and then press OK.
- Select [Video], and then press OK.
- Press the Navigation buttons and OK to select and change:
  - [Tv type]: If the video does not appear correctly, select a TV type (color system).
  - [TV Display]: Select a picture format to fit the TV screen.
  - [HDMI Video]: Select the resolution of video signal that is output from HDMI OUT (ARC) on your home theater. To enjoy the selected resolution, make sure that your TV supports the selected resolution.
  - [HDMI Deep Color]: Recreate the natural world on your TV screen by displaying vivid images using billion colors. Your home theater must be connected to a Deep Color enabled TV through an HDMI cable.
  - [Picture Settings]: Select pre defined color settings for the video display.
  - [Watch 3D video]: Set HDMI video to support 3D or 2D video.



#### Note

 If you change a setting, make sure that the TV supports the new setting.

## Audio settings

- Press **\Pi** (Home).
- Select [Setup], and then press OK.
- Select [Audio], and then press OK.
- Press the Navigation buttons and OK to select and change:

24

- [Night mode]: For quiet listening, decrease the volume of loud sounds on your home theater. Night mode is only available in DVDs and Blu-ray discs with Dolby Digital, Dolby Digital Plus, and Dolby True HD soundtracks.
- [HDMI Audio]: Set the HDMI audio output from your TV, or disable HDMI audio output from the TV.

## Parental control settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference], and then press OK.
- 4 Press the Navigation buttons and OK to select and change:
  - [Change Password]: Set or change your password for parental control access. If you do not have a password or have forgotten your password, enter 0000.
  - [Parental control]: Restrict access to discs that are recorded with age ratings. To play all discs, irrespective of the ratings, select 8 or [Off].

## Display settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference], and then press OK.
- Press the Navigation buttons and OK to select and change:
  - [Auto subtitle shift]: Enable or disable automatic repositioning of subtitles on TVs that support this feature.
  - [Display panel]: Set the brightness of the home theater front panel display.
  - **[VCD PBC]**: Enable or disable the content menu navigation of VCD and

SVCD discs with Play Back Control feature.

## Energy saving settings

- 1 Press **(Home)**.
- 2 Select [Setup], and then press OK.
- 3 Select [Preference], and then press OK.
- 4 Press the Navigation buttons and OK to select and change:
  - [Screen saver]: Switch the home theater to screen saver mode after 10 minutes of inactivity.
  - [Auto standby]: Switch the home theater to standby after 30 minutes of inactivity. This timer works only when a disc or USB play is paused or stopped.
  - [Sleep timer]: Set the duration of the sleep timer so that the home theater is switched to standby after the specified period.

## Speaker settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced], and then press OK.
- 4 Press the Navigation buttons and OK to select and change:
  - [Enhanced audio]: Select [On] to enable audio post processing at the speaker and enable karaoke settings (if your product supports Karaoke). To play the original audio of the disc, select [Off].



 Enable audio post processing before you select a predefined sound mode (see 'Sound mode' on page 23).

## Restore default settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Restore default settings], and then press OK.
- 4 Select [OK], and then press OK to confirm.
  - → Your home theater is reset to its default settings except for some settings such as parental control and DivX VOD registration code.

# 6 Update software

Philips continually tries to improve its products. To get the best features and support, update your home theater with the latest software.

Compare the version of your current software with the latest version on www.philips.com/ support. If the current version is lower than the latest version available on the Philips support website, upgrade your home theater with the latest software.



#### Caution

 Do not install a lower version of software than the current version installed on your product. Philips is not liable for problems caused due to software downgrade.

## Check software version

Check the version of the current software installed on your home theater.

- 1 Press **(Home)**.
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Version information].
  - ightharpoonup The software version is displayed.

# Update software through USB

## What you need

- A USB flash drive that is FAT or NTFSformatted, with at least 75MB of memory.
   Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format.

## Step 1: Download the latest software

- 1 Connect a USB flash drive to your computer.
- 2 In your web browser, go to www.philips.com/support.
- At the Philips Support website, find your product and locate the **Software and drivers**.
  - → The software update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the software update file in the root directory.
  - → The files are extracted under the UPG\_ALL folder of your USB flash drive.
- **6** Disconnect the USB flash drive from your computer.

## Step 2: Update the software



#### Caution

- Do not switch off the home theater or remove the USB flash drive during the update.
- 1 Connect the USB flash drive containing the downloaded file to your home theater.
  - Make sure that the disc compartment is closed and no disc inside.
- Press ♠ (Home).
- 3 Select [Setup], and then press OK.
- 4 Select [Advanced] > [Software Update] > [USB].
- Follow the onscreen instructions to confirm the update.
  - Once complete, the home theater automatically switches off . If it does not, disconnect the power cord for a few seconds and then reconnect it.

# Update software through the Internet

- 1 Connect your home theater to a home network with a high-speed Internet access. (see 'Connect and set up a home network' on page 12)
- 2 Press ♠ (Home).
- 3 Select [Setup], and then press OK.
- 4 Select [Advanced] > [Software Update] > [Network].
  - If an upgrade media is detected, you are prompted to start or cancel the update.
- Follow the instruction on the TV to confirm the update.
  - When the software update is complete, the home theater automatically switches off. If it does not, disconnect the power cord for a few seconds and then reconnect it.

## Note

- If the home theater cannot connect to the Philips server, press (Home).
- Select [Setup] > [Network] > [Network Installation] to set up the network.

28

# 7 Product specifications



Note

 Specifications and design are subject to change without notice.

## Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

Country	DVD	BD
Europe, United Kingdom		
Asia Pacific, Taiwan, Korea		
Latin America		
Australia, New Zealand		
Russia, India		
China		

#### Media formats

 AVCHD, BD, BD-R/ BD-RE, BD-Video, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX Plus HD media, USB storage device

#### File formats

- Audio: .aac, .mka, .mp3, .wma, .wav
- Video: .avi, .divx, .mp4, .mkv, .mpg, .mpeg
- Picture: .jpg, .jpeg, .gif, .png

#### Audio formats

Your home theater supports the following audio files.

Extension	Container	Audio codec	Bit rate
.mp3	MP3	MP3	32 kbps ~ 320 kbps
.wma	ASF	WMA	64 kbps ~ 160 kbps
.aac	AAC	AAC, HE- AAC	192 kbps
.wav	WAV	PCM	1.4 Mbps
.m4a	MKV	AAC	192 kbps
.mka	MKA	PCM	27.648 Mbps
.mka	MKA	Dolby Digital	640 kbps
.mka	MKA	DTS core	1.54 Mbps
.mka	MKA	MPEG	912 kbps
.mka	MKA	MP3	32 kbps ~ 320 kbps
.mka	MKA	WMA	64 kbps ~ 160 kbps
.mka	MKA	AAC, HE- AAC	192 kbps

#### Video formats

If you have a high definition TV, your home theater allows you to play your video files with:

- Resolution: 1920 x 1080 pixels at
- Frame rate: 6 ~ 30 frames per second.

#### avi files in AVI container

Audio	Video codec	Bit rate
codec		
PCM, Dolby Digital, DTS core, MP3, WMA	DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x	10 Mbps max
	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max
	H.264/AVC	20 Mbps
	HP@4.1/4.0;	(peak 40
	MP@3.2/3.1/3.0	Mbps)

#### .divx files in AVI container

Audio	Video codec	Bit rate
codec		
PCM, Dolby Digital, MP3, WMA	DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x	10 Mbps max
	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max

#### .mp4 or .m4v files in MP4 container

Audio codec	Video codec	Bit rate
Dolby Digital, MPEG, MP3, AAC, HE-AAC	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max
	H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)

#### .mkv files in MKV container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital, DTS core, MPEG, MP3, WMA, AAC, HE- AAC	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max
	H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)

#### .mpg and .mpeg files in PS container

Audio	Video codec	Bit rate
codec		
PCM,	MPEG 1,	20 Mbps (peak 40
DTS core,	MPEG 2	Mbps)
MPEG, MP3		
	MPEG 1,	20 Mbps (peak 40
	MPEG 2	Mbps)

## Amplifier

- Total output power: 770 W RMS (10%THD)
- Frequency response: 20 Hz-20 kHz / ±3 dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX: 2 V
  - Music iLink: 1 V

#### Video

- Signal system: PAL / NTSC
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p24

#### Audio

• S/PDIF Digital audio input:

- Coaxial: IEC 60958-3
- Optical:TOSLINK
- Sampling frequency:
  - MP3: 32 kHz, 44,1 kHz, 48 kHz
  - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 32 kbps 320 kbps
  - WMA: 48 kbps 192 kbps

#### Radio

- Tuning range:
  - Europe/Russia/China: FM 87.5-108 MHz (50 kHz)
  - Asia Pacific/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM > 45 dB
- Frequency response: FM 180 Hz-12.5 kHz / ±3 dB

#### **USB**

- Compatibility: Hi-Speed USB (2.0)
- Class support: USB Mass Storage Class (MSC)
- File system: FAT16, FAT32, NTFS
- Maximum memory support: < 160 GB</li>

#### Main unit

- Power supply: 220-240 V~, 50 Hz
- Power consumption: 180 W
- Standby power consumption: ≤ 0.5 W
- Dimensions (WxHxD): 360 x 58 x 325 mm
- Weight: 2.81 kg

#### Subwoofer

- Output power: 128 W RMS (10% THD)
- Impedance: 4 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Dimensions (WxHxD): 195 x 339 x 391
   mm
- Weight: 4.89 kg

## **Speakers**

#### Center speaker:

- Output power: 128 W RMS (10% THD)
- Speaker impedance: 4 ohm
- System: Full range satellite
- Speaker drivers: 1 x 3" full range
- Dimensions (WxHxD): 161 x 95 x 92 mm
- Weight: 0.53 kg

#### Front/Rear speaker:

- Output power: 4 x 128 W RMS (10% THD)
- Speaker impedance: 4 ohm
- System: Full range satellite
- Speaker drivers: 1 x 3" full range
- Dimensions (WxHxD): 87 x 161 x 95 mm
- Weight: 0.47 kg/each

#### Remote control batteries

2 x AAA-R03-1.5 V

#### Laser

- Laser Type (Diode): InGaN/AlGaN (BD), AlGaInP (DVD/CD)
- Wave length: 405 +7 nm/-7 nm (BD), 655 +10 nm/-10 nm (DVD), 790 +10 nm/-20 nm (CD)
- Output power (Max. ratings): 20 mW (BD), 6 mW (DVD), 7 mW (CD)

# 8 Troubleshooting

## A

#### Warning

 Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www. philips.com/support.

#### Main unit

## The buttons on the home theater do not work.

 Disconnect the home theater from the power supply for a few minutes, then reconnect.

#### **Picture**

#### No picture.

 Make sure that the TV is switched to the correct source for the home theater.

#### No picture on a TV connected through HDMI.

- Make sure that you use a High Speed HDMI cable to connect the home theater and TV. Some Standard HDMI cables do not display properly for some images, 3D video, or Deep Color.
- Make sure that the HDMI cable is not faulty. If it is faulty, replace it with a new cable.
- Press (Home) and then 731 on the remote control to restore the default picture resolution.
- Change the HDMI video setting, or wait for 10 seconds for auto recovery (see 'Picture and video settings' on page 24).

#### Disc does not play high-definition video.

- Make sure that the disc contains highdefinition video.
- Make sure that the TV supports highdefinition video.
- Use an HDMI cable to connect to the TV.

#### Sound

#### No sound from home theater speakers.

- Connect the audio cable from your home theater to your TV or other devices. You do not need a separate audio connection when the home theater and TV are connected through an HDMI ARC connection
- Set up the audio for the connected device. (see 'Set up the audio' on page 12)
- Reset your home theater to its factory settings (see 'Restore default settings' on page 26), then switch it off and switch on again.
- On your home theater, press SOURCE repeatedly to select the correct audio input.

#### Distorted sound or echo.

 If you play audio from the TV through the home theater, make sure that the TV is muted.

#### Audio and video are not synchronized.

1) Press Iff SOUND SETTINGS. 2) Press
the Navigation buttons (left/right) to
select AUD SYNC, and then press OK. 3)
Press the Navigation buttons (up/down)
to synchronize the audio with the video.

## Play

#### Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 29).
- Make sure that the home theater supports the region code of the disc.
- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized.

#### Cannot play a DivX file.

- Make sure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Make sure that the DivX file is complete.

#### DivX subtitles do not display correctly.

- Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 16).
- Select the correct character set: 1) Press
   OPTIONS. 2) Select [Character set]. 3)
   Select the supported character set. 4)
   Press OK.

## Cannot read the contents of a USB storage device.

- Make sure that the format of the USB storage device is compatible with the home theater.
- Make sure that the file system on the USB storage device is supported by the home theater.

#### 'No entry' or 'x' sign appears on the TV.

• The operation is not possible.

#### EasyLink does not work.

- Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is turned on (see 'Set up EasyLink (HDMI-CEC control)' on page 11).
- ForTVs from different manufacturers, the HDMI CEC could be called differently. Check theTV user manual on how to enable it.

# When you switch on the TV, the home theater automatically switches on.

 This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

#### Cannot access BD-Live features.

- Make sure that the home theater is connected a home network with internet access. (see 'Connect and set up a home network' on page 12)
- Make sure that the network is set up (see 'Connect and set up a home network' on page 12).

- Make sure that the Blu-ray disc supports BD-Live features.
- Clear memory storage (see 'BD-Live on Blu-ray' on page 15).

#### My 3D video played in 2D mode.

- Make sure that your home theater is connected to a 3DTV through an HDMI cable.
- Make sure that the disc is a Blu-ray 3D disc, and the Blu-ray 3D video option is on (see 'Play Blu-ray 3D disc' on page 15).

# TV screen is black when you play a Blu-ray 3D video or a DivX copy protected video.

- Make sure that the home theater is connected to the TV through an HDMI cable.
- Switch to the correct HDMI source on the TV.

#### Poor playback on YouTube Leanback or Picasa.

- Make sure that the home theater is connected to a home network and is properly set up (see 'Connect and set up a home network' on page 12).
- Make sure that the internet connection speed is higher than 2 MBPS to obtain optimum performance.

#### Network

#### Wireless network distorted or not found.

- Make sure that the wireless network is not disturbed by microwave ovens, DECT phones, or other neighboring Wi-Fi devices.
- Place the wireless router and the home theater within five meters of each other.
- Use a USB extension cable to connect the Wi-Fi dongle to the home theater.
- If the wireless network does not work properly, try a wired network installation. (see 'Set up the wired network' on page 13)

## 9 Notice

This section contains the legal and trademark notices.

## Copyright



Be responsible Respect copyrights

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

#### Cinavia notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at http://www.cinavia.com. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

## Open source software

#### Open source software

Philips Electronics Hong Kong Ltd. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open.source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands." If you do not receive timely confirmation of your letter; please email to the email address above.

## **Trademarks**



"Blu-ray 3D" and "Blu-ray 3D" logo are trademarks of Blu-ray Disc Association.



Java and all other Java trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535;

7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio | Essential is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



# TRUE TO

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

## DIVX:+

DivX \*, DivX Certified \*, DivX Plus \* HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

ABOUT DIVX VIDEO: DivX ° is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified ° device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified ° device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified \* to play DivX \* and DivX Plus \* HD (H.264/MKV) video up to 1080p HD including premium content.

## HDMI

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.

# 10 Language code

Abkhazian	8083 8285 8185 8277 8279 8278 8377 8371 8365 8367 8382 8378 8381 8368 8373
Afrikaans         6570         Islenska         7383         Quechua           Amharic         6577         Italiano         7384         Raeto-Romance           Arabic         6582         Ivrit         7269         Romanian           Armenian         7289         Japanese         7465         Rundi           Assamese         6583         Javanese         7486         Samoan           Avestan         6569         Kalaallisut         7576         Sango           Aymara         6589         Kannada         7578         Sanskrit           Azerhaijani         6590         Kashmiri         7583         Sardinian           Bahasa Melayu         7783         Kazakh         7575         Serbian           Bashkir         6665         Kernewek         7587         Shoip           Belarusian         66678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sinhalese           Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovenian           Brezhoneg         6682         K	8185 8277 8279 8278 8377 8371 8365 8367 8382 8378 8381 8368
Amharic         6577         Italiano         7384         Raeto-Romance           Arabic         6582         Ivrit         7269         Romanian           Armenian         7289         Japanese         7465         Rundi           Assamese         6583         Javanese         7486         Samoan           Avestan         6569         Kalaallisut         7576         Sango           Aymara         6589         Kannada         7578         Sarskrit           Azerhaijani         6590         Kashmiri         7583         Sardinian           Bahasa Melayu         7783         Kazakh         7575         Serbian           Bashkir         6665         Kernewek         7587         Shona           Belarusian         6669         Khmer         7577         Shqip           Bengali         6678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sinhalese           Bislama         6673         Komi         7586         Slovenisky           Bokmål, Norwegian         7866         Korean         7579         Slovenian           Brezhoneg         6682         Kurdish<	8277 8279 8278 8377 8371 8365 8367 8382 8378 8381 8368
Arabic         6582         Ivrit         7269         Romanian           Armenian         7289         Japanese         7465         Rundi           Assamese         6583         Javanese         7486         Samoan           Avestan         6569         Kalaallisut         7576         Sango           Aymara         6589         Kannada         7578         Sanskrit           Azerhaijani         6590         Kashmiri         7583         Sardinian           Bahasa Melayu         7783         Kazakh         7575         Serbian           Bashkir         6669         Khmer         7577         Shona           Belarusian         6669         Khmer         7577         Shqip           Bengali         6678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sinbalese           Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovenian           Brezhoneg         6882         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao	8279 8278 8377 8371 8365 8367 8382 8378 8381 8368
Arabic         6582         Ivrit         7269         Romanian           Armenian         7289         Japanese         7465         Rundi           Assamese         6583         Jayanese         7486         Samoan           Avestan         6569         Kalaallisut         7576         Sango           Aymara         6589         Kannada         7578         Sanskrit           Azerhaijani         6590         Kashmiri         7583         Sardinian           Bahasa Melayu         7783         Kazakh         7575         Serbian           Bashkir         6665         Kernewek         7587         Shona           Belarusian         6669         Khmer         7577         Shqip           Bengali         6678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sinbalese           Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovensky           Bosanski         6683         Kuanyama; Kwanyama         7574         Somali           Brezhoneg         6682         Kurdi	8279 8278 8377 8371 8365 8367 8382 8378 8381 8368
Armenian         7289         Japanese         7465         Rundi           Assamese         6583         Javanese         7486         Samoan           Avestan         6569         Kalaallisut         7576         Sango           Aymara         6589         Kannada         7578         Sanskrit           Azerhaijani         6590         Kashmiri         7583         Sardinian           Bahasa Melayu         7783         Kazakh         7575         Serbian           Bashkir         6665         Kernewek         7587         Shona           Belarusian         6669         Khmer         7577         Shqip           Bengali         6678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sinhalese           Bokmäl, Norwegian         7866         Korean         7579         Slovensky           Bosanski         6683         Kuanyama; Kwanyama         7574         Somali           Brezhoneg         6682         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789	8278 8377 8371 8365 8367 8382 8378 8381 8368
Assamese 6583	8377 8371 8365 8367 8382 8378 8381 8368
Avestan         6569         Kalaallisut         7576         Sango           Aymara         6589         Kannada         7578         Sanskrit           Azerhaijani         6590         Kashmiri         7583         Sardinian           Bahasa Melayu         7783         Kazakh         7575         Serbian           Bashkir         6665         Kernewek         7587         Shona           Belarusian         6669         Khmer         7577         Shqip           Bengali         6678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sinhalese           Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovenian           Bosanski         6682         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789         Latina         7665         Sundanese           Castellano, Español         6983         Latvian         7686         Swomi           Catalán         6765	8371 8365 8367 8382 8378 8381 8368
Aymara         6589         Kannada         7578         Sanskrit           Azerhaijani         6590         Kashmiri         7583         Sardinian           Bahasa Melayu         7783         Kazakh         7575         Serbian           Bashkir         6665         Kernewek         7587         Shona           Belarusian         6669         Khmer         7577         Shqip           Bengali         6678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sinbalese           Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovenian           Bosanski         6683         Kuanyama; Kwanyama         7574         Somali           Brezhoneg         6682         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789         Latina         7665         Sundanese           Castellano, Español         6983         Latvian         7686         Swati           Chamorro         6772	8365 8367 8382 8378 8381 8368
Azerhaijani         6590         Kashmiri         7583         Sardinian           Bahasa Melayu         7783         Kazakh         7575         Serbian           Bashkir         6665         Kernewek         7587         Shona           Belarusian         6669         Khmer         7587         Shqip           Bengali         6678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sinhalese           Bokmäl, Norwegian         7866         Korean         7589         Slovensky           Bosanski         6683         Kuanyama; Kwanyama         7574         Somali           Brezhoneg         6682         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789         Latina         7665         Sundanese           Castellano, Español         6983         Latvian         7686         Suomi           Catalán         6765         Letzeburgesch;         7666         Swatil           Chamorro         6772         Limburgar; Limburger         7673         Swati           Chechen <td>8367 8382 8378 8381 8368</td>	8367 8382 8378 8381 8368
Bahasa Melayu         7783         Kazakh         7575         Serbian           Bashkir         6665         Kernewek         7587         Shona           Belarusian         6669         Khmer         7577         Shqip           Bengali         66678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sindalese           Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovenian           Bosanski         6683         Kuanyama; Kwanyama         7574         Somali           Brezhoneg         6682         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789         Latina         7665         Sundanese           Castellano, Español         6983         Latvian         7686         Soumi           Catalán         6765         Letzeburgesch;         7666         Swahili           Chamorro         6772         Limburgan; Limburger         7678         Svenska           Chechen	8382 8378 8381 8368
Bashkir         6665         Kernewek         7587         Shona           Belarusian         6669         Khmer         7577         Shqip           Bengali         6678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sinhalese           Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovenian           Bosanski         6683         Kuanyama; Kwanyama         7574         Somali           Brezhoneg         6682         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789         Latina         7665         Sundanese           Castellano, Español         6983         Latvian         7686         Suomi           Catalán         6765         Letzeburgesch;         7666         Swahili           Chamorro         6772         Limburgan; Limburger         7673         Swati           Chechen         6769         Lingala         7678         Svenska           Chewa; Chichewa; Nyanja	8378 8381 8368
Belarusian         6669         Khmer         7577         Shqip           Bengali         6678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sindalese           Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovensky           Bosanski         6683         Kuanyama; Kwanyama         7574         Somali           Brezhoneg         6682         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789         Latina         7665         Sundanese           Castellano, Español         6983         Latvian         7686         Suomi           Catalán         6765         Letzeburgesch;         7666         Swahili           Chamorro         6772         Limburgan; Limburger         7673         Swati           Chechen         6769         Lingala         7678         Svenska           Chewa; Chichewa; Nyanja 7889         Lithuanian         7684         Tagalog           中文	8381 8368
Bengali         6678         Kinyarwanda         8287         Sindhi           Bihari         6672         Kirghiz         7589         Sinhalese           Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovenian           Bosanski         6683         Kuanyama; Kwanyama         7574         Somali           Brezhoneg         6682         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789         Latina         7665         Sundanese           Castellano, Español         6983         Latvian         7686         Suomi           Catalán         6765         Letzeburgesch;         7666         Swahili           Chamorro         6772         Limburgan; Limburger         7673         Swati           Chechen         6769         Lingala         7678         Svenska           Chewa; Chichewa; Nyanja 7889         Lithuanian         7684         Tagalog           中文         9072         Luxembourgish;         7666         Tahitian           Churds, Zhang <td>8368</td>	8368
Bihari         6672         Kirghiz         7589         Sinhalese           Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovenian           Bosanski         6683         Kuanyama; Kwanyama         7574         Somali           Brezhoneg         6682         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789         Latina         7665         Sundanese           Castellano, Español         6983         Latvian         7686         Suomi           Catalán         6765         Letzeburgesch;         7666         Swahili           Chamorro         6772         Limburgan; Limburger         7673         Swati           Chechen         6769         Lingala         7678         Svenska           Chewa; Chichewa; Nyanja 7889         Lithuanian         7684         Tagalog           中文         9072         Luxembourgish;         7666         Tahitian           Chuang; Zhuang         9065         Macedonian         7775         Tajik           Church Slav	
Bislama         6673         Komi         7586         Slovensky           Bokmål, Norwegian         7866         Korean         7579         Slovenian           Bosanski         6683         Kuanyama; Kwanyama         7574         Somali           Brezhoneg         6682         Kurdish         7585         Sotho; Southern           Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789         Latina         7665         Sundanese           Castellano, Español         6983         Latvian         7686         Suomi           Catalán         6765         Letzeburgesch;         7666         Swahili           Chamorro         6772         Limburgan; Limburger         7673         Swati           Chechen         6769         Lingala         7678         Svenska           Chewa; Chichewa; Nyanja 7889         Lithuanian         7684         Tagalog           中文         9072         Luxembourgish;         7666         Tahitian           Church Slavic; Slavonic         6785         Malagasy         7771         Tamil           Chuvash         6786         Magyar         7285         Tatar	8373
Bokmål, Norwegian   7866   Korean   7579   Slovenian   7579   Slovenian   7579   Slovenian   7579   Somali   7574   Somali   7574   Somali   7574   Somali   7574   Somali   7574   Somali   7575   Sotho; Southern   7585   Sotho; Southern   7585   Sotho; Southern   7585   Sotho; Southern   7585   Sotho; Southern   South Ndebele   Surmese   7789   Latina   7665   Sundanese   7686   Suomi   7688   Suomi   7688   Svenska   7688   Svenska   7688   Tagalog   1688   1688   1688   1688   7775   Tajik   7686   Tahitian   7688   7771   Tamil   7775   Tamil   7775   Tamil   7775   Tamil   7775   7776   7777   7777   7777   7777   7777   7777   7777   77777   7777	
Bosanski   6683   Kuanyama; Kwanyama   7574   Somali	8373
Brezhoneg 6682 Kurdish 7585 Sotho; Southern Bulgarian 6671 Lao 7679 South Ndebele Burmese 7789 Latina 7665 Sundanese Castellano, Español 6983 Latvian 7686 Suomi Catalán 6765 Letzeburgesch; 7666 Swahili Chamorro 6772 Limburgan; Limburger 7673 Swati Chechen 6769 Lingala 7678 Svenska Thewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 中文 9072 Luxembourgish; 7666 Tahitian Church Slavic; Slavonic 6785 Malagasy 7771 Tamil Chuvash 6786 Magyar 7285 Tatar	8376
Bulgarian         6671         Lao         7679         South Ndebele           Burmese         7789         Latina         7665         Sundanese           Castellano, Español         6983         Latvian         7686         Suomi           Catalán         6765         Letzeburgesch;         7666         Swahili           Chamorro         6772         Limburgan; Limburger         7673         Swati           Chechen         6769         Lingala         7678         Svenska           Chewa; Chichewa; Nyanja 7889         Lithuanian         7684         Tagalog           中文         9072         Luxembourgish;         7666         Tahitian           Chuang; Zhuang         9065         Macedonian         7775         Tajik           Church Slavic; Slavonic         6785         Malagasy         7771         Tamil           Chuvash         6786         Magyar         7285         Tatar	8379
Burmese   7789	8384
Castellano, Español 6983 Latvian 7686 Suomi Catalán 6765 Letzeburgesch; 7666 Swahili Chamorro 6772 Limburgari, Limburger 7673 Swati Chechen 6769 Lingala 7678 Svenska Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 中文 9072 Luxembourgish; 7666 Tahitian Chuang; Zhuang 9065 Macedonian 7775 Tajik Church Slavic; Slavonic 6785 Malagasy 7771 Tamil Chuvash 6786 Magyar 7285 Tatar	7882
Catalán 6765 Letzeburgesch; 7666 Swahili Chamorro 6772 Limburgar; Limburger 7673 Swati Chechen 6769 Lingala 7678 Svenska Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 中文 9072 Luxembourgish; 7666 Tahitian Chuang; Zhuang 9065 Macedonian 7775 Tajik Church Slavic; Slavonic 6785 Malagasy 7771 Tamil Chuvash 6786 Magyar 7285 Tatar	8385
Catalán         6765         Letzeburgesch;         7666         Swahili           Chamorro         6772         Limburgan; Limburger         7673         Swati           Chechen         6769         Lingala         7678         Svenska           Chewa; Chichewa; Nyanja 7889         Lithuanian         7684         Tagalog           中文         9072         Luxembourgish;         7666         Tahitian           Chuang; Zhuang         9065         Macedonian         7775         Tajik           Church Slavic; Slavonic         6785         Malagasy         7771         Tamil           Chuvash         6786         Magyar         7285         Tatar	7073
Chamorro 6772 Limburgan; Limburger 7673 Swati Chechen 6769 Lingala 7678 Svenska Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 中文 9072 Luxembourgish; 7666 Tahitian Chuang; Zhuang 9065 Macedonian 7775 Tajik Church Slavic; Slavonic 6785 Malagasy 7771 Tamil Chuvash 6786 Magyar 7285 Tatar	8387
Chechen 6769 Lingala 7678 Svenska Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 中文 9072 Luxembourgish; 7666 Tahitian Chuang; Zhuang 9065 Macedonian 7775 Tajik Church Slavic; Slavonic 6785 Malagasy 7771 Tamil Chuvash 6786 Magyar 7285 Tatar	8383
Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 中文 9072 Luxembourgish; 7666 Tahitian Chuang; Zhuang 9065 Macedonian 7775 Tajik Church Slavic; Slavonic 6785 Malagasy 7771 Tamil Chuvash 6786 Magyar 7285 Tatar	8386
中文 9072 Luxembourgish; 7666 Tahitian Chuang; Zhuang 9065 Macedonian 7775 Tajik Church Slavic; Slavonic 6785 Malagasy 7771 Tamil Chuvash 6786 Magyar 7285 Tatar	8476
Chuang; Zhuang         9065         Macedonian         7775         Tajik           Church Slavic; Slavonic         6785         Malagasy         7771         Tamil           Chuvash         6786         Magyar         7285         Tatar	8489
Church Slavic; Slavonic 6785 Malagasy 7771 Tamil Chuvash 6786 Magyar 7285 Tatar	8471
Chuvash 6786 Magyar 7285 Tatar	8465
	8484
	8469
Česky 6783 Maltese 7784 Thai	8472
Dansk 6865 Manx 7186 Tibetan	6679
Deutsch 6869 Maori 7773 Tigrinya	8473
6 /	8479
8 6 ( 8 8 6 7	
	8483
Esperanto 6979 Moldavian 7779 Tswana	8478
Estonian 6984 Mongolian 7778 Türkçe	8482
Euskara 6985 Nauru 7865 Turkmen	8475
Ελληνικά 6976 Navaho; Navajo 7886 Twi	8487
Faroese 7079 Ndebele, North 7868 Uighur	8571
Français 7082 Ndebele, South 7882 Ukrainian	8575
Frysk 7089 Ndonga 7871 Urdu	8582
Fijian 7074 Nederlands 7876 Uzbek	8590
Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese	8673
Gallegan 7176 Norsk 7879 Volapuk	8679
Georgian 7565 Northern Sami 8369 Walloon	8765
Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh	6789
Guarani 7178 Norwegian Nynorsk; 7878 Wolof	8779
Gujarati 7185 Occitan; Provencal 7967 Xhosa	8872
Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish	8973
Herero 7290 Oriya 7982 Yoruba	8979
Hindi 7273 Oromo 7977 Zulu	9085
Hiri Motu 7279 Ossetian; Ossetic 7983	
Hrwatski 6779 Pali 8073	
Ido 7379 Panjabi 8065	
Interlingua (International)7365 Persian 7065	
Interlingue 7365 Polski 8076	
Inuktitut 7385 Português 8084	
10.00	

# 11 Index

		copyright protection	34
2			
2nd audio language	15	D	
2nd subtitle language	15	data files	16
5 5		deep color	24
		default settings	26
3		disc language	24
3D disc in 2D mode	15	disc menu	24
3D video	15	display panel	25
		DivX	16
5			
5.1 speakers	8	E	
		Easylink (HDMI-CEC)	11
		eject disc	
A		enhanced audio	25
advanced settings	25		
amplifier	30	_	
audio connection (analog cable)	11	F	
audio connection (HDMI ARC)	9	factory settings	26
audio formats	29	file formats	29
audio from other devices	10		
audio language	24	<del> </del>	
audio options	17	Н	
audio post processing	25	HDMIARC	Ç
audio settings	24	HDMI audio	24
auto standby	25	HDMI-CEC	11
auto subtitle shift	25	home menu	14
		home network	12
В	_		
batteries	31		
BD-Live	15	internet	12
Blu-ray	14		
Bonus View	15	<del>.</del>	
brightness	25	L	
		language code	36
С		<del></del>	
change password	25	M	
character set	16	main unit	
clear BD-Live memory	15	manual setup	11
connect to TV	9	media formats	29
connectors	5	media sharing	20

control buttons (disc)

control buttons (USB)

14 14

34

menu language	24	software version	27
MP3	19	sound	22
musical slideshows	18	speaker position	{
		speaker setup	1′
		speaker specifications	29
N		subtitle language	24
network	12	subtitle position	25
night mode	24	surround sound	23
		synchronize picture and sound	14
0			
one-touch play	12	T	
one-touch standby	12	troubleshooting (network)	33
options	17	troubleshooting (picture)	32
		troubleshooting (play)	32
		troubleshooting (sound)	32
P		tune radio stations	18
parental control	25	tuning grid	19
PBC (play back control)	25		
Picasa web albums	19		
picture options	17	U	
picture resolution	24	update software (through Internet)	28
picture settings	24	update software (through USB)	27
picture-in-picture	15	USB storage device	16
play disc	14		
play from PC	22	\ <u>\</u>	
play music	19	V	
play radio	18	VCD	2.5
play USB storage device	16	video connection (composite video)	1(
power settings	25	video connection (HDMI ARC)	(
predefined sound mode	23	video connection (standard HDMI)	2
preference	24	video formats	30
program radio stations	18	video options	17
		video settings	24
R		VOD code (DivX)	16
radio	18		
region codes	29	W	
remote control	6	watch 3D	15
repeat	17	wired network	13
		wireless network	13
S			
shuffle	17	Y	
sleep timer	25	YouTube videos	19
slide animation	17		
software update	27		

W	Δ	R	R	Δ	N	П	TY

This APPARATUS IS covered under warranty against any defect arising out of faulty or defective material or workmanship for a period of 6 months from date of purchase.

Should a defect develop during the period of warranty, Philips Electronics India Limited undertakes to repair the apparatus free of charge through an Authorised Philips service Center. If the purchaser shifts his residence to other town, the warranty will be valid at the nearest Authorised Philips service Center.

This warranty is not valid in case:

- I. The apparatus is not used according to this manual;
- 2. Defects are caused by improper or reckless use;
- 3. Any repair work are done by person other than Authorised Philips Service Center;
- 4. Any modification or alteration of any nature are made in the apparatus;
- 5. The serial number is tampered
- 6. This warranty form is not completed immediately after purchase.

Serial No.:	
Bill No & Date of Purchase:	
Purchaser's Name:	
Location & Tel No:	
Dealer's Name:	
Location & Tel No:	
Dealer's Stamp & Sign:	

#### Maintenance Tips for your DVD Player:

- Always keep a Disc loaded in your DVD Player tray.
- Keep the player away from the dusty areas. Keep it covered with a dust cover.
- Clean your DVD Player Lens after every 20 discs played.

   Allow the 2 hourst Philips DVD have Cleaner SVC2520 for heady.
  - Use the 2 brush Philips DVD Lens Cleaner SVC2520 for best results.
- Clean the CDs / VCD / DVD / MP3 CD before inserting in your DVD Player.

"For unlimited listening pleasure use Philips earphones / headphones". Over 20 models to choose from

## Philips Electronics India Limited

For any sales or service related queries:

Visit us on web at www.philips.com/support or

Call us on Tel No. 1860-180-1111 1800-102-2929

"standard call rates apply"

Email: customercare.india@philips.com



Specifications are subject to change without notice © 2012 Koninklijke Philips Electronics N.V. All rights reserved.

