


# Quick Start Guide


**AZ5737**



# PHILIPS

*Use this simple and quick way to  
watch your favourite DVD movie  
and enjoy your Home Cinema  
experience!*

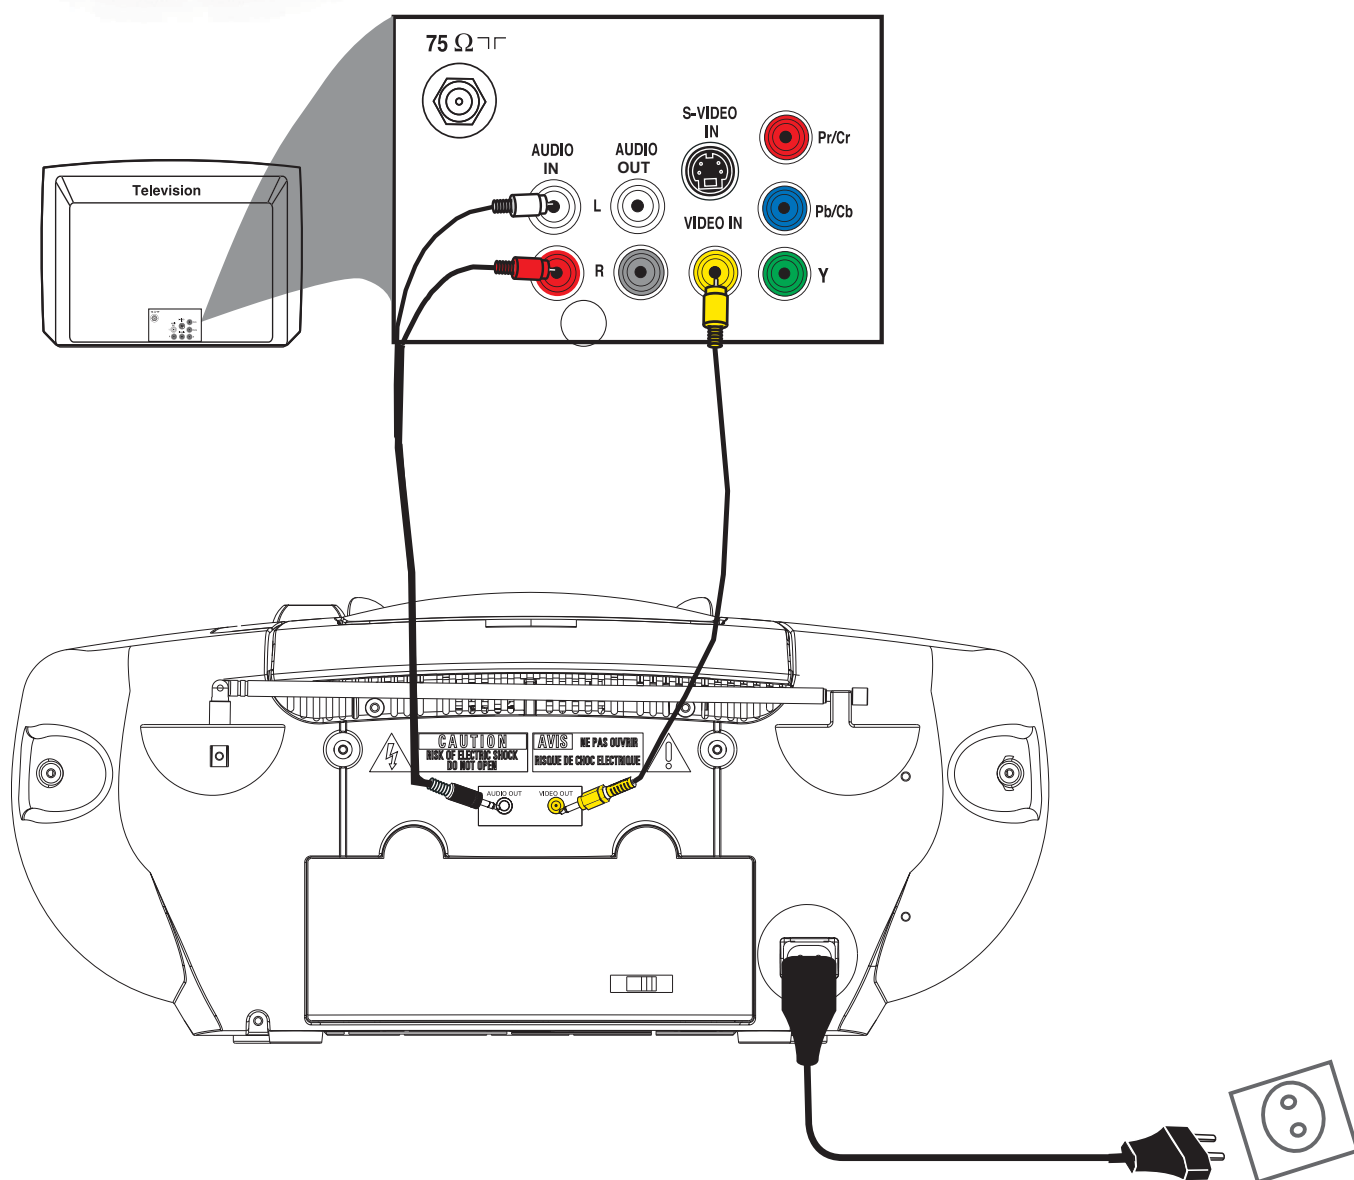

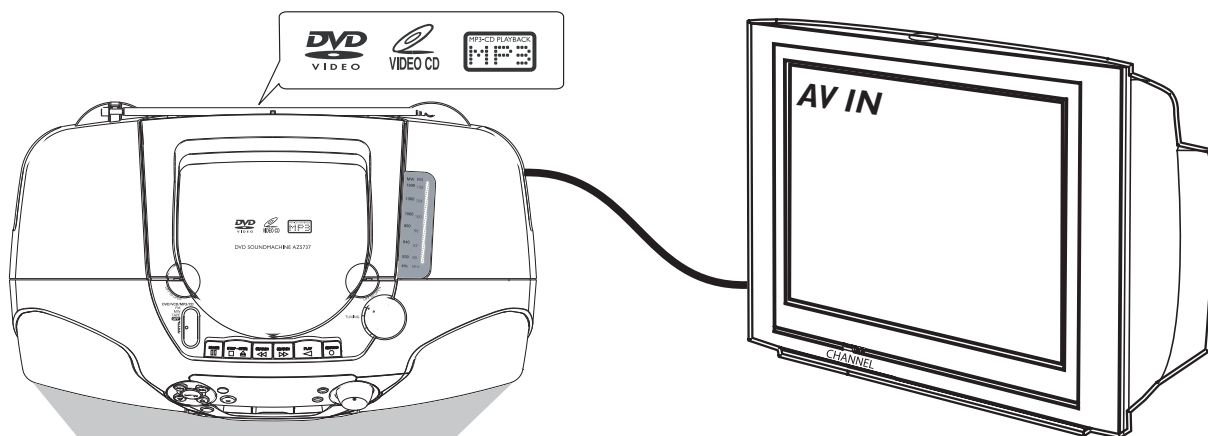

**Make sure your DVD system and TV are connected and turned on!**

### Playing a disc

- 1 Adjust the source switch on the top of the system to select DVD/VCD/MP3/CD.**
- 2 Turn on the TV and select the correct Video In mode.**  
You should see the blue Philips DVD background screen on the TV (If no disc in the DVD system).
- 3 Lift the DVD cover on the top of the DVD system and load a disc, then close the DVD cover to playback the disc.**  
Make sure the disc label is facing up. For double-sided discs, load the side (marked "side A" or "side B") you want to play facing up.
- 4 Playback will start automatically.**  
If a disc menu appears, use ▲ / ▼ / ◀ / ▶ buttons on the remote to make the necessary selection, then press OK to confirm. Or, use the numeric keypad on the remote to select features. Follow the instructions given in the disc menu.
- 5 To stop playback, press STOP ■.**

### Region Codes

**DVDs must be labeled for ALL regions or Region 3, in order to play on this DVD system.**



### Notes for the remote control:

- The remote control is available only in disc mode.
- The supplied remote control is for discs operation only.
- First, select the disc (DVD/VCD/MP3/CD) source on the set, then select the desired function (◀◀, ▶▶ or ▶ for example).

**You should find the below accessories in the packaging box.**

<p>Composite video cable (yellow)</p>	<p>Audio cables (white, red)</p>	<p>AC power cable</p>	<p>Remote control</p>
---------------------------------------	----------------------------------	-----------------------	-----------------------



**Detailed playback features and additional functions are described in the accompanying owner's manual**