Quick Start Guide




What's in the Box?


You should find these items upon opening the box.







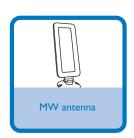

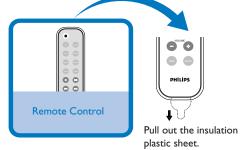




Connection

1 For radio reception, connect the supplied MW antenna to the AM aerial terminal.

2 Connect the speaker wires to the **SPEAKERS** terminals.


Connect the power cord of the system to the AC power outlet.

TipIt is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.

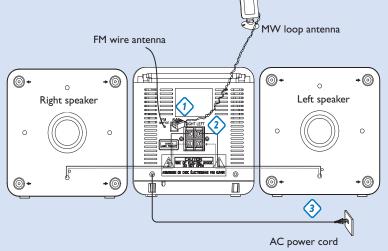

Setting the clock


- 1 In standby mode, press PROG/CLOCK button. The clock digits for the hours flash.
- 2 Press | to set the hours.
- **3** Press **PROG/CLOCK** again. The clock digits for the minutes flash.
- **4** Press **◄ / ▶ I** to set the minutes.
- **5** Press **PROG/CLOCK** to confirm the time.

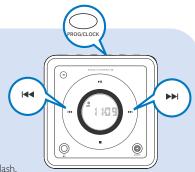

Step B Enjoy

Playing a disc

- 1 Select CD source.
- Press **OPEN•CLOSE** on the top of the system to open the CD door.
- Insert a disc with the printed side facing up and press down on **OPEN•CLOSE** to close the CD door.
- 4 Press ► II to start playback.
- **5** Press to stop playback.

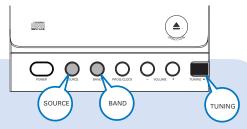

Listening to radio

- 1 Select TUNER source.
- 2 Press BAND (TUNER on the remote control) to select your waveband.
- **3** Turn **TUNING** to tune to a station.

Tip

Detailed playback features and additional functions are described in the accompanied owner's manual.

