DVD Micro Theater

www.philips.com/welcome

MCD122/51



EN	User manual	1
RU	Руководство пользователя	31
UK	Посібник користувача	71

PHILIPS

Contents

1	Important Safety Notice	2 2 4
2	Your DVD Micro Theater Introduction What's in the box Overview of the main unit Overview of the remote control	6 6 7 8
3	Connect Place the unit Connect speakers Connect FM antenna Connect TV Connect power	10 10 10 10 11 11
4	Get started Prepare the remote control Set clock Turn on Find the correct viewing channel Select the correct TV system Change system menu language Turn on Progressive Scan	13 13 13 13 14 14 14 14
5	Play Play a disc Play from USB Play DivX video Play MP3/WMA/picture files Play control Play options Picture view options	15 15 16 16 16 17 17
6	Adjust settings General setup Audio setup Video setup Preferences	19 19 19 19 19 20

7	Tune to FM radio stations	21
	Program radio stations automatically	21
	Program radio stations manually	21
	Tune to a preset radio station	21
	Set RDS clock	22
	Show RDS information	22
8	Adjust volume level and sound effect	23
Ū	Adjust volume level	23
	Select a sound effect	23
	Mute sound	23
	Listen through headphone	23
	Listeri tili odgri ricadprioric	2
9	Other features	24
	Activate demonstration mode	24
	Adjust brightness of display panel	24
	Set the alarm timer	24
	Set the sleep timer	24
	Connect other devices	24
10	Product information	26
	Specifications	26
	Supported disc formats	27
	USB playability information	27
	RDS program types	28
11	Troubleshooting	29

1 Important

Safety







This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Important Safety Instructions

- 1 Read these instructions.
- (2) Keep these instructions.
- (3) Heed all warnings.
- (4) Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- (10) Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- (12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- (13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).

- Remove batteries when the unit is not used for a long time.
- (15) Apparatus shall not be exposed to dripping or splashing.
- (6) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

Safety-Important notes for users in the U.K.

Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- (1) Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- (3) Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed off to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L).

As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or \(\frac{1}{2} \)) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires. Copyright in the U.K.

Recording and playback of material may require consent. see Copyright Act 1956 and The performer's Protection Acts 1958 to 1972



Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.



Warning

 Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- · Never remove the casing of this unit.
- Never lubricate any part of this unit.
- Place this unit on a flat, hard and stable surface.
- Never place this unit on other electrical equipment.
- Only use this unit indoors. Keep this unit away from water, moisture and liquid-filled objects.
- Keep this unit away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside the unit.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Notice



This product complies with the radio interference requirements of the European Community.

This product complies with the requirements of the following directives and guidelines: 2004/108/EC + 2006/95/EC

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



'DVD Video' is a trademark of DVD Format/ Logo Licensing Corporation.

DOLBY.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

This apparatus includes this label:





Note

 The type plate is located on the bottom of the apparatus.

2 Your DVD Micro Theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this unit, you can:

- watch video from DVD/VCD/SVCD or USB storage devices
- enjoy audio from discs or USB storage devices
- view pictures from discs or USB storage devices
- Listen to FM radio

You can enrich sound output with these sound effects:

- Digital Sound Control (DSC)
- Dynamic Bass Boost (DBB)

The unit supports these media/disc formats:























You can play DVD discs with the following region codes:

DVD region code

Countries




Russia, Ukraine

What's in the box

Check and identify the contents of your package:

- Main unit
- 2 speakers
- Remote control with battery
- Composite video cable (yellow)
- Power cord
- FM antenna
- User manual
- Quick start guide


Overview of the main unit

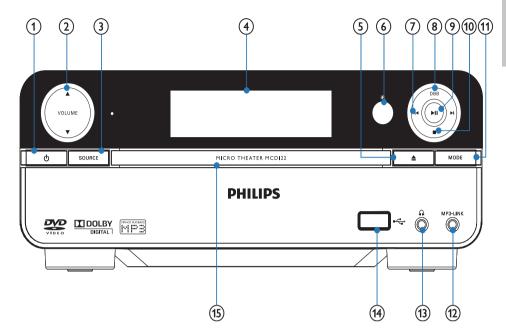

- (1) _(b)
 - Turn on the apparatus or switch to the Eco Power standby mode.
- (2) VOLUME ▲/▼
 - Adjust volume.
 - Adjust time.
 - During timer setting, select a source.
- 3 SOURCE
 - Select a source.
- 4 Display panel
 - Display current status.
- (5) ▲
 - Open or close the disc tray.
- 6 Remote control sensor
- (7) **|√**|**⊳**|
 - Skip to the previous/next track.
 - Skip to the previous/next title or chapter.
 - Select a preset radio station.

- (8) DBB
 - Turn on or off dynamic bass enhancement.
- (9) **▶**II
 - Start or pause play.
- 10
 - Stop play.
 - In demo mode, activate or deactivate demonstration.
- 11 MODE
 - Select repeat play modes.
 - Select shuffle play modes.
- (12) MP3-LINK
 - Jack for an external audio device.
- 13) n
 - Headphone socket.
- (14) USB DIRECT•<
 - USB socket.
- 15 Disc tray

Overview of the remote control

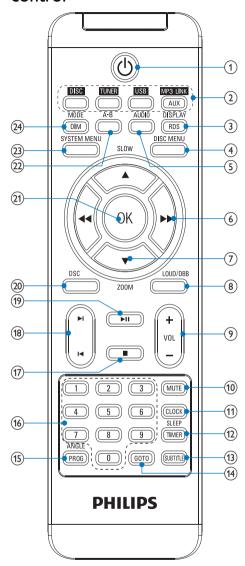

(1) _(j)

 Turn on the apparatus or switch to the Eco Power standby mode.

(2) Source selection keys

Select a source.

(3) DISPLAY/RDS

- Display play information on a connected TV.
- For selected FM radio stations: display RDS information.

(4) DISC MENU

- For video discs: access or exit the disc menu.
- For video discs with playback control(PBC): turn on/off PBC.

(5) AUDIO

- For VCD, select stereo, mono-left or mono-right channel.
- For DVD/DivX video, select an audio language.

(6) ◀◀/▶▶

- Search within a track.
- Tune to a radio station.
- For menus, navigate left/right.
- Move an enlarged image left/right.
- Rotate or invert pictures.

(7) ▲SLOW/▼ZOOM

- For menus, navigate up/down.
- Rotate or invert pictures.
- (\(\begin{align*} \text{SLOW} \)) For video: select a slow play mode.
- (▼ZOOM) For video: zoom in/out.

(8) LOUD/DBB

- Turn on or off automatic loudness adjustment.
- Turn on or off dynamic bass enhancement.

9 VOL +/-

- Adjust volume.
- Adjust time.

10 MUTE

• Mute or restore volume.

(11) CLOCK

Set the clock.

(12) SLEEP/TIMER

- Set the sleep timer.
- Set the alarm timer.

(13) SUBTITLE

• Select a subtitle language.

(14) GOTO

• During disc play, specify a position to start play.

(15) ANGLE/PROG

- Select a DVD camera angle.
- Program radio stations.

(16) Numeric keypad

Select a title/chapter/track directly.

(17)■

• Stop play.

(18) |◀/▶|

- Skip to the previous/next track.
- Skip to the previous/next title or chapter.
- Select a preset radio station.

(19) **▶ | |**

Start or pause play.

(20) DSC

Select a preset sound setting.

(21) OK

• Confirm a selection.

(22) A-B

Repeat a specific section within a track/disc.

23) SYSTEM MENU


Access or exit the system setup menu.

24) MODE/DIM

- Select repeat play modes.
- Select shuffle play modes.
- Select a brightness level for the display screen.

Connect

Place the unit

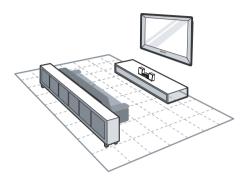

- Place the DVD micro theater near TV.
- Place the left and right speakers at equal distance from the TV and at an angle of approximately 45 degrees from the listening position.



Note

- To avoid magnetic interference or unwanted noise, never place this apparatus and speakers too close to any radiation devices.
- Place this unit on top of a table or mount it on the wall.
- Never place this unit in an enclosed cabinet.
- · Install this unit near the AC outlet where the AC power plug can be easily reached.


Connect speakers




Note

- Ensure that the colors of the speaker wires and terminals are matched.
- · For optimal sound, use the supplied speakers only.
- Connect only speakers with impedance that is the same or higher than the supplied speakers. Refer to the Specifications section of this manual.

- Hold down the socket flap.
- 2 Insert the stripped part of the wire completely.
 - Insert the right speaker wires to "R", left speaker wires to "L".
 - Insert the red wires to "+", black wires to "-".
- Release the socket flap.

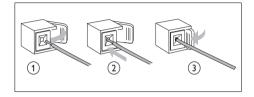

Connect FM antenna

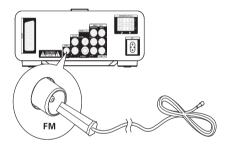



- For optimal reception, fully extend and adjust the position of the antenna.
- For better FM stereo reception, connect an outdoor FM antenna to the FM AERIAL jack.
- · The unit does not support MW radio reception.
- Connect the supplied FM antenna to the FM AFRIAL socket on the unit.

Connect TV


Connect video cables

With this connection, you can watch video from the unit on the TV screen.

You can select the best video connection that your TV supports.

- Option 1: Connect through SCART (for a standard TV).
- Option 2: connect through component video (for a standard TV or Progressive Scan TV).
- Option 3: connect through S-Video (for a standard TV).
- Option 4: connect through composite video (CVBS) (for a standard TV).


Option 1: Connect through SCART

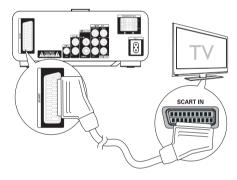

- 1 Connect a scart cable (not supplied) to:
 - the **SCART** socket on this unit.
 - the SCART socket on the TV.

Option 2: Connect through component video

Connect a progressive scan TV through component video for higher quality video.

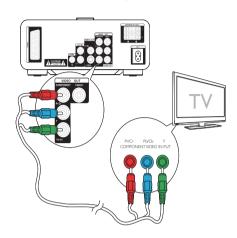




- The progressive scan video quality is only available when a progressive scan TV is connected.
- If your TV does not support progressive scan, you cannot view the picture.
- For how to activate progressive scan on your TV, refer to the TV user manual.

Connect a progressive scan TV through component video for higher quality video.


- 1 Connect component video cables (red/blue/green not supplied) to:
 - the VIDEO OUT (Pr/Cr Pb/Cb Y) sockets on this unit.
 - the component input sockets on the TV.

Option 3: Connect through S-Video

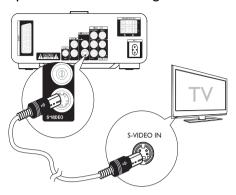


- Connect an S-video cable (not supplied)
 - the **S-Video** socket on this unit.
 - the **S-Video** socket on the TV.

Option 4: Connect through composite video

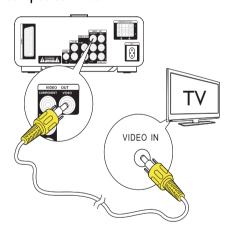


- Connect the supplied composite video cable to:
 - the VIDEO OUT socket on this unit.
 - the video input socket on the TV.

Connect audio cables

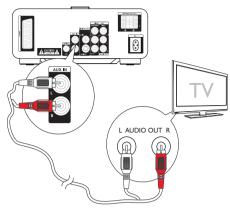

- To play sound from the TV through this unit, connect audio cables (red/white not supplied) to:
 - the AUX IN L/R sockets on this unit.
 - the audio output sockets on the TV.

Connect power

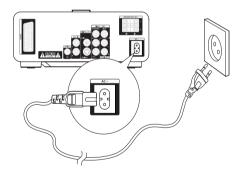

Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.
- Connect the AC power cord to the wall socket.

4 Get started



Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. _.	 	
Serial No		

Prepare the remote control



Caution

 Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.

For first-time use:

1 Remove the protective tab to activate the remote control battery.

To replace the remote control batteries:

- 1 Open the battery compartment.
- 2 Insert one lithium CR2025 battery with correct polarity (+/-) as indicated.
- **3** Close the battery compartment.



Note

- Before you press any function button on the remote control, first select the correct source with the remote control.
- If you are not going to use the remote control for a long time, remove the battery.

Set clock

- In the Eco Power standby mode, press and hold **CLOCK** to activate the clock setting mode.
 - → The hour digits are displayed and begin to blink.
 - If the hour digits are not displayed, press and hold ∅ for 3 seconds to switch to standby mode, then repeat step 1.
- Press + VOL to set the hour, then press CLOCK again.
 - → The minute digits are displayed and begin to blink.
- **3** Press + VOL to set the minute.
- 4 Press CLOCK to confirm the clock setting.

Turn on

- 1 Press O.
 - → The unit switches to the last selected source.

Switch to standby mode

- 1 Press © to switch the unit to Eco Power Standby mode.
 - → The backlight on the display panel turns off.
 - → The blue Eco Power indicator turns on.



Tip

- In the Eco Power mode, you can press **CLOCK** to switch to the standby mode and view the clock (if set).
- If the system remains in the standby mode for more than 90 seconds, it switches to the Eco Power mode automatically.

Find the correct viewing channel

- 1 Press & to turn on the unit.
- 2 Press **DISC** to switch to disc mode.
- 3 Turn on the TV and switch to the correct video-in channel in one of the following ways:
 - Go to the lowest channel on your TV, then press the Channel Down button until you see the blue screen.
 - Press the source button repeatedly on the remote control of your TV.

* Tip

 The video-in channel is between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO etc. See the TV user manual on how to select the correct input on the TV.

Select the correct TV system

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- 1 Press SYSTEM MENU.
- 2 Select [Video Setup].
- 3 Select [TV System] and then press ▶.
- 4 Select a setting and then press **OK**.
 - [NTSC] For TV with NTSC color system.
 - **[PAL]** For TV with PAL color system.
 - [Multi] For TV that is compatible with both PAL and NTSC.
- 5 To exit the menu, press **SYSTEM MENU**.

Change system menu language

- 1 Press SYSTEM MENU.
- 2 Select [General Setup].
- 3 Select [OSD language] and then press ▶.
- **4** Select a setting and then press **OK**.
- 5 To exit the menu, press SYSTEM MENU.

Turn on Progressive Scan

Progressive scan displays twice the number of frames per seconds than interlaced scanning (ordinary TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and quality.

Before you turn on this feature, ensure that:

- The TV supports progressive scan signals.
- You have connected this unit with the TV through component video.
- 1 Turn on the TV.
- 2 Ensure that the TV progressive scan mode is deactivated (see the TV user manual).
- 3 Switch the TV to the correct viewing channel for this unit.
- 4 Press DISC.
- 5 Press SYSTEM MENU.
- 6 Press **△**/▼ to select [Video Setup] in the menu, then press ►.
- 7 Select [Component Video], then press ►►
- 8 Select [P-Scan], then press OK.
 - → The progressive setup is complete.

14 EN

5 Play



Note

With some disc/file types, play may differ.

Play a disc



Caution

- Never look at the laser beam inside the unit.
- Risk of product damage! Never play discs with accessories such as disc stabilizer rings or disc treatment sheets.
- Never put any objects other than discs into the disc compartment.
- 1 Press **DISC** to select the DISC source.
- 2 Press **≜** on the front panel.
 - → The disc tray opens.
- 3 Place a disc onto the tray and press ≜.
 - → Ensure that the label faces up.
- **4** Play starts automatically.
 - To stop play, press ■.
 - To pause or resume play, press ▶■.
 - To skip to the previous/next title/ chapter/track, press I◀/▶I.

If play does not start automatically:

Select a title/chapter/track and then press



Гір

 To play a locked DVD, enter the 4-digit parental control password.

Use the disc menu

When you load a DVD/(S)VCD disc, a menu may be displayed on the TV screen.

To access or exit the menu manually:

1 Press DISC MENU.

For VCD with PlayBack Control (PBC) feature (version 2.0 only):

With the PBC feature, you can play VCD interactively according to the menu screen.

- 1 During play, press **DISC MENU** to enable/disable PBC.
 - → When PBC is enabled, the menu screen is displayed.
 - → When PBC is disabled, normal play is resumed.

Select an audio language

You can select an audio language on DVDs or DiVx video.

- 1 During disc play, press AUDIO.
 - → The language options appear. If the selected audio channels is unavailable, the default disc audio channel is used.



Note

 For some DVDs, the language can only be changed from the disc menu. Press DISC MENU to access the menu.

Select a subtitle language

You can select a subtitle language on DVDs or DivX® Ultra discs.

During play, press SUBTITLE.




Tip

 For some DVDs, the language can only be changed from the disc menu. Press DISC MENU to access the menu.

Play from USB



- Ensure that the USB device contains playable music, pictures or video.
- 1 Insert the USB device.

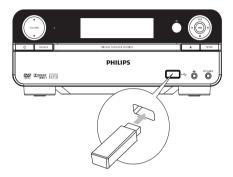

- Press **USB** to select the USB source.
- Press ▲/▼ to select a folder, then press **OK** to confirm.
- Press A/V to select a file from the folder.
- Press ►II to start play.
 - To stop play, press ■.
 - To pause or resume play, press ►II.
 - To skip to the previous/next file, press I√/►I.
 - To return to the upper-level menu, press DISC MENU, then press OK to confirm.

Play DivX video

You can play DivX files copied onto a CD-R/ RW. recordable DVD or USB device.

- Insert a disc or connect a USB device.
- 2 Select a source:
 - For discs, press DISC.
 - For USB devices, press USB.
- 3 Select a file to play and press ►II.

- To stop play, press ■.
- To pause or resume play, press ►II.
- To change a subtitle language, press SUBTITLE



- Note
- · You can only play DivX videos rented or purchased through the DivX registration code of this unit.
- · Subtitle files with the following filename extensions (.srt, .smi, .sub, .ssa, .ass) are supported but do not appear on the file navigation menu.
- The subtitle filename has to be the same as the file name of the video

Play MP3/WMA/picture files

You can play MP3/WMA/picture files copied onto a CD-R/RW. recordable DVD or USB device.

- Insert a disc or connect a USB device.
- Select a source:
 - For discs, press **DISC**.
 - For USB devices, press USB.
- 3 Press ▲/▼ to select a folder, then press OK to confirm.
- Press A/V to select a file from the folder.
- Press ►II to start play.
 - To stop play, press ■.
 - To pause or resume play, press ►II.
 - To skip to the previous/next file, press | **I**
 - To return to the upper-level menu, press DISC MENU, then press OK to confirm.

Play control

Select repeat/shuffle play options

- During play, press MODE/DIM repeatedly to select a repeat option or the shuffle play mode.
 - To resume normal play, press MODE/DIM repeatedly until no option is displayed.

Repeat A-B (DVD/VCD/CD/MP3/ WMA)

- 1 During music or video play, press **A-B** at the start point.
- 2 Press A-B at the end point.
 - → The selected section starts to play repeatedly.
 - To cancel repeat play, press A-B again.



Note

 The section A and B can be set only within the same track/title.

Search forward/backward

- 1 During play, press **◄**/**>** repeatedly to select a search speed.
 - To resume play at normal speed, press ►II.

Search by time or chapter/track number

- During video/audio play, press GOTO until a time field or chapter/track field is displayed.
 - For the time field, enter the play position in hours, minutes and seconds.
 - For the chapter/track field, enter the chapter/track.
 - Play starts automatically at your selected point.

Resume video play from last stopped point



Note

- This feature is only available for DVD/VCD play.
- 1 In stop mode and when the disc has not been removed, press ►II.

To cancel resume mode and stop play completely:

1 In stop mode, press ■.

Play options

Display play information

1 During play, press **DISPLAY/RDS** repeatedly to display play information.

Zoom in/out image

- 1 During video play, press ▼ (**ZOOM**) repeatedly to zoom in/out the image.
 - When the image is zoomed in, you can press ◄◄/▶> to pan through the image.

Slow-motion play

- 1 During video play, press ▲ (SLOW) repeatedly to select a slow play option.
 - → The sound is muted.
 - → To resume play at normal speed, press ► II.

Change the audio channel



Vote

• This feature is only available for VCD/DivX play.

- During play, press AUDIO repeatedly to select an audio channel available on the disc:
 - Mono Left
 - Mono Right
 - Stereo

Select a camera angle



Note

- This feature is only available for DVDs recorded with multiple camera angles.
- 1 During play, press ANGLE/PROG repeatedly to select a camera angle.

Picture view options

Preview pictures

- 1 During play, press ■.
 - → The pictures in current folder are displayed.
- Press ▲/▼ to select a picture from the folder.
 - → A thumbnail of the selected picture is displayed in the right pane.
- **3** Press **OK** to start slideshow from the selected picture.

Rotate picture

1 During play, press ◀◀/▶>/▲/▼ to rotate the picture anti-clockwise/clockwise.

6 Adjust settings

- 1 Press SYSTEM MENU.
- 2 Select a setup page.
- 3 Select an option and then press ▶.
- **4** Select a setting and then press **OK**.
 - To return to the previous menu, press ◀◀.
 - To exit the menu, press SYSTEM MENU.

General setup

On the **[General Setup]** page, you can set the following options:

[OSD language]

Select the preferred language for on-screen display.

[DivX® VOD Code]

Display the DivX® registration code.



Tip

 Enter this DivX registration code when you rent or purchase video from http://vod.divx. com/. The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

Audio setup

On the **[Audio Setup]** page, you can set the following options:

[Digital Output]

Select audio formats supported by the connected device.

- [Off] Turn off the digital output.
- [PCM] If the connected device cannot decode multichannel audio, select this option.
- [AII] If the connected device supports multi-channel audio formats, select this option.

[Night Mode]

Make loud sound level softer and soft sound level louder so that you can watch the DVD movies at a low volume, without disturbing others.

- [On] enjoy quiet viewing at night (DVDs only).
- [Off] enjoy surround sound with its full dynamic range.

Video setup

On the **[Video Setup]** page, you can set the following options:

[TV System]

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- [NTSC] For TV with NTSC color system.
- **[PAL]** For TV with PAL color system.
- **[Multi]** For TV that is compatible with both PAL and NTSC.

[TV Display]

The TV format determines the aspect ratio of display according to the type of TV you have connected.







4:3 Pan Scan (PS)

4:3 Letter Box (LB)

16:9 (Wide Screen)

- [4:3 Pan Scan] For 4:3 screen TV: full-height display with the trimmed sides.
- [4:3 Letter Box] For 4:3 screen TV: wide-screen display with black bars on the top and bottom of the screen.
- **[Wide Screen]** For wide-screen TV: display ratio 16:9.

[Picture Setting]

Customize picture color settings.

[Component Video]

Set the video output according to the video connection. If the composite connection is used, this setting is not required.

- [S-VIDEO] If the S-Video connection is used, select this option.
- [RGB] If the SCART connection is used, select this option.
- [Interlaced] For ordinary TV: turn on the interlace mode.
- **[P-Scan]** For progressive scan TV: turn on the progressive scan mode.

Preferences

On the [Preferences] page, you can set the following options:

[Audio]

Select the preferred audio language for disc play.

[Subtitle]

Select the preferred subtitle language for disc play.

[Disc Menu]

Select the preferred disc menu language.



Note

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some discs, the subtitle/audio language can only be changed from the disc menu.

[DivX Subtitle]

Select a character set that supports the DivX subtitle.



Note

 Ensure that the subtitle file has the exact same file name as the movie file. If for example the file name of the movie is 'Movie.avi', then you will need to name the text file 'Movie.sub' or 'Movie.srt'.

[Parental Control]

You can restrict access to discs that are not suitable for children. These types of discs must be recorded with ratings.

Press OK.

Select a rating level, then press **OK**. Press the numeric keys to enter the password.



Note

- To view discs that are rated higher than the level you set in [Parental Control], you need enter a password.
- The rating levels are country dependent. To allow all discs to play, select [8. Adult].
- · Some discs have ratings printed on them but are not recorded with ratings. This function has no effect on such discs.

[Password]

This setting allows you to change the password for parental control. The default password is 0000.

- 1) Press the numeric keys to enter '0000' or your last set password at [Old Password] field
- 2) Enter the new password at [New Password] field.
- 3) Enter the new password again at [Confirm] new password] field.
- 4) Press **OK** to exit the menu.



Note

• If you forget the password, enter '0000' before you set a new password.

[Version Info]

Display the software version of this apparatus. [Default]

Reset all the settings to factory default, except for the password and parental settings.

7 Tune to FM radio stations

- 1 Ensure that you have connected and fully extended the supplied FM antenna.
- 2 Press TUNER.
- **3** Press and hold **◄◄/▶▶**.
- 4 When the frequency indication starts to change, release the button.
 - → The FM tuner tunes to a station with strong reception automatically.
- 5 Repeat steps 3-4 to tune to more stations.

To tune to a weak station:

Press ◀◀/▶▶ repeatedly until you find optimal reception.

Program radio stations automatically



Note

- You can program a maximum of 20 preset radio stations.
- 1 Press **\(\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow\rightarrow**
- Press and hold ANGLE/PROG for 2 seconds to activate automatic programming.
 - → [AUTO] (auto) is displayed briefly.
 - → All available stations are programmed in the order of waveband reception strength.
 - → The first programed radio station is broadcast automatically.

Program radio stations manually



Note

- You can program a maximum of 20 preset radio stations.
- 1 Tune to a radio station.
- Press ANGLE/PROG to activate programming.
- Press ◀◀/▶ to allocate a number from 1 to 20 to this radio station, then press ANGLE/PROG to confirm.
 - → The preset number and the frequency of the preset station are displayed.
- **4** Repeat the above steps to program other stations.



Note

• To overwrite a programmed station, store another station in its place.

Tune to a preset radio station

1 Press | I to select a preset number that you want.



Ιιр

 You can also use the numerical keypad to select a preset station directly.

Set RDS clock

You can use time signal broadcast together with the RDS signal to set the clock of the unit automatically.

- 1 Tune to a RDS radio station that transmits time signals.
 - → The unit reads the RDS time and sets the clock automatically.



• The accuracy of the transmitted time depends on the RDS station that transmits the time signal.

Show RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information. If you tune to a RDS station, a RDS icon and the station name are displayed. When automatic programming is used, RDS stations are programmed first.

- Tune to a RDS station.
- Press DISPLAY/RDS repeatedly to scroll through the following information (if available):
 - → Station name
 - → Program type such as [NEWS] (news), [SPORT] (sport), [POP M] (pop music)...
 - → Frequency



Note

· See "Product information-RDS program types" for definitions of RDS program types.

8 Adjust volume level and sound effect

Adjust volume level

1 During play, press VOL +/- to increase/ decrease the volume level.

Select a sound effect



Note

 You cannot use different sound effects at the same time.

Select a preset sound effect

- 1 During play, press **DSC** repeatedly to select:
 - [Classic]
 - [Rock]
 - []azz]
 - [Pop]
 - [FLAT] (flat)

Enhance bass

- To turn on bass enhancement, press LOUD/DBB repeatedly during play until the DBB icon is displayed.
 - To turn off bass enhancement, press LOUD/DBB repeatedly until the DBB icon disappears.

Select automatic loudness control

Automatic loudness control increases the treble and bass effect at low volume levels (the higher the volume, the lower the treble and bass levels).

- To turn on automatic loudness control, press LOUD/DBB during play until the loudness icon is displayed.
 - To turn off automatic loudness control, press LOUD/DBB until the loudness icon disappears.

Mute sound

During play, press MUTE to mute/unmute sound.

Listen through headphone

1 Plug a headphone into the ∩ socket on the unit.

9 Other features

Activate demonstration mode

You can see an overview of all features.

- 1 In standby mode, press on the main unit to activate the demonstration mode.
 - → A demonstration of major available features starts.

To deactivate the demonstration mode:

1 Press ■ on the main unit again.

Adjust brightness of display panel

1 In standby mode, press MODE/DIM repeatedly to select different levels of brightness for the display panel.

Set the alarm timer

- 1 Ensure that you have set the clock correctly.
- 2 In standby mode, press and hold SLEEP/TIMER.
 - → The hour digits are displayed and begin to blink
- Press + VOL to set the hour, then press SLEEP/TIMER again.
 - The minute digits are displayed and begin to blink.
- 4 Press + VOL to set the minute.
- 5 Press SLEEP/TIMER to confirm.
 - → [OFF] (off) begins to blink.
- To activate the wake-up timer, press + VOL - to select [ON] (on) while [OFF] (off) is blinking.
 - → A clock icon appears on the display.

- → The unit turns on automatically at the set time and switches to the last selected source.
- → To deactivate the alarm timer, select [OFF] (off) at step 6.


Set the sleep timer

- 1 When the unit is turned on, press SLEEP/ TIMER repeatedly to select a set period of time (in minutes).
 - → The unit turns off automatically after the set period of time.

Connect other devices

Listen to an audio player

You can listen to audio player through this unit.

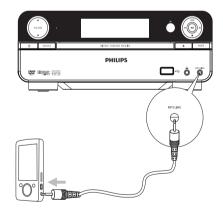


- 1 Connect the audio player.
 - For audio players with red/white audio output sockets:
 Connect a red/white audio cable (not supplied) to the AUX IN L/R sockets and to the audio output sockets on the audio player.

- For audio players with headphone sockets:
 - Connect the supplied MP3 Link cable to the MP3 LINK socket and to the headphone socket on the audio player.
- 2 Select the MP3 Link/AUX source.
- 3 Start play on the audio player.

Record to a digital recorder

You can record audio from this unit to a digital recorder.

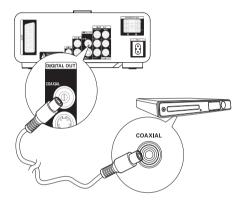

- 1 Connect a coaxial cable (not supplied) to:
 - the COAXIAL socket
 - the digital input socket on the digital recorder
- 2 Play audio to be recorded.
- Begin to record on the digital recorder (see the digital recorder user manual).

10 Product information



• Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power	2X20W RMS
Frequency Response	20 -20000 Hz, ±3dB
Signal to Noise Ratio	>67dB
Aux Input	1 V RMS 20kohm

Disc

Disc	
Laser Type	Semiconductor
Disc Diameter	12cm/8cm
Video Decoding	MPEG-1 / MPEG-2 /
	DivX
Video DAC	12Bits
Signal System	PAL / NTSC
Video Format	4:3 / 16:9
Video S/N	>48dB
Audio DAC	24Bits / 96kHz
Total Harmonic	
Distortion	<1% (1 kHz)
Frequency	4Hz - 20kHz (44.1kHz)
Response	4Hz - 22kHz (48kHz)
	4Hz - 24kHz (96kHz)
S/N Ratio	>67dBA

Tuner (FM)

. ,	
Tuning Range	87.5 - 108MHz
Tuning grid	50KHz
Sensitivity - Mono, 26dB	
S/N Ratio	<22 dBf
Sensitivity - Stereo, 46dB	
S/N Ratio	>43 dBf
Search Selectivity	>28dBf
Total Harmonic	
Distortion	<3%
Signal to Noise Ratio	>50dB

Speakers

Speaker Impedance	8ohm	
Speaker Driver	4" Full range	
Sensitivity	>82dB/m/W	

General information

Cerrer ar innormacion	
AC power	170 - 280 V, 50
	Hz
Operation Power	
Consumption	25W
Eco Standby Power	
Consumption	0.8W
Standby Power	
Consumption	<6W
Composite Video Output	1.0Vp-p, 75ohm
Coaxial Output	0.5Vpp ± 0.1Vpp
	75ohm
Headphone Output	2X15mW 32ohm
USB Direct	Version 2.0
Dimensions	
- Main Unit ($W \times H \times D$)	$220 \times 90 \times$
	240mm
- Speaker Box	$140 \times 220 \times 160$
$(W \times H \times D)$	mm
Weight	
- With Packing	6 kg
- Main Unit	1.65 kg
- Speaker Box	2 × 1.5 kg

Supported disc formats

- Digital Video Discs (DVDs)
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- Digital Video Discs + Rewritable (DVD+RW)
- Compact Discs (CDs)
- Picture (Kodak, IPEG) files on CDR(W)
- DivX(R) disc on CD-R(W):
- DivX 3.11, 4.x and 5.x
- WMA

Supported MP3-CD formats:

- ISO 9660
- Max. title/album name: 12 characters
- Max. title number plus album: 255.
- Max. nested directory: 8 levels.
- Max. album number: 32.
- Max. MP3 track number: 999.
- Supported sampling frequencies for MP3 disc: 32 kHz, 44.1 kHz, 48 kHz.
- Supported Bit-rates of MP3 disc are: 32, 64, 96, 128, 192, 256 (kbps).
- The following formats are not supported:
 - Files like *.VMA, *.AAC, *.DLF, *.M3U.
 - *.PLS. *.WAV
 - Non-English Album/Title name
 - Discs recorded in Ioliet format
 - MP3 Pro and MP3 with ID3 tag

USB playability information

Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this apparatus)

Supported formats:

 USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)

- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/ WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

RDS program types

NO TYPE	No RDS programme type
NEWS	News services
AFFAIRS	Politics and current affairs
INFO	Special information
	programs
SPORT	Sports
EDUCATE	Education and advanced
	training
DRAMA	Radio plays and literature
CULTURE	Culture, religion and
	society
SCIENCE	Science
VARIED	Entertainment programs
POP M	Pop music
ROCK M	Rock music
MOR M	Light music
LIGHT M	Light classical music
CLASSICS	Classical music
OTHER M	Special music programs
WEATHER	Weather
FINANCE	Finance
CHILDREN	Children's programs
SOCIAL	Social Affairs
RELIGION	Religion
PHONE IN	Phone In
TRAVEL	Travel
LEISURE	Leisure
JAZZ	Jazz Music
COUNTRY	Country Music
NATION M	National Music
OLDIES	Oldies Music
FOLK M	Folk Music
DOCUMENT	Documentary
TES	Alarm Test
ALARM	Alarm

11 Troubleshooting

!

Caution

• Never remove the casing of this unit.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this unit, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/support). When you contact Philips, ensure that your unit is nearby and the model number and serial number are available.

No power

- Ensure that the AC cord of the apparatus is connected properly.
- Ensure that there is power at the AC outlet.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

No picture

- Check the video connection.
- Turn on the TV to the correct Video-In channel.
- Progressive scan is activated but the TV does not support progressive scan.

Black and white or distorted picture

- The disc does not match the TV color system standard (PAL/NTSC).
- Sometimes a slight picture distortion may appear. This is not a malfunction.
- Clean the disc.
- A distorted picture may appear during progressive scan setup.

The aspect ratio of the TV screen cannot be changed even though you have set the TV display format.

- The aspect ratio is fixed on the loaded DVD disc.
- The aspect ratio may not be changed for some TV systems.

No sound or poor sound

- Adjust the volume.
- Disconnect the headphones.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/– signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

Disc does not play

- Insert a readable disc and ensure that the label side faces up.
- Check the disc type, color system and regional code. Check for any scratches or smudges on the disc.
- Press **SYSTEM MENU** to exit the system setup menu.
- Disable the password for parental control or change the rating level.
- Moisture has condensed inside the system. Remove the disc and leave the system turned on for about an hour.
 Disconnect and reconnect the AC power plug, and then turn on the system again.
- As a power-saving feature, the system turns off automatically 15 minutes after disc play reaches the end and no control is operated.

Poor radio reception

• Increase the distance between the unit and your TV or VCR.

- Fully extend the FM antenna.
- Connect an outdoor FM antenna instead.

Audio or subtitle languages cannot be set

- The disc is not recorded with sound or subtitles in multiple languages.
- The audio or subtitle language setting is prohibited on the disc.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

The USB device is incompatible with the unit. Try another one.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock/timer.



