



Philips
CD Soundmachine

USB

AZ1048

Enjoy music wherever you go

Handy and compact design, enjoy music from different sources like USB Direct, MP3-CD, radio.

Enjoy your music from different sources

- USB Direct for MP3/WMA music playback
- Play MP3/WMA-CD, CD and CD-RW
- FM/MW tuner for radio enjoyment

Easy to use

- 20-track CD programmable
- CD Shuffle/Repeat for personalized music enjoyment
- Stereo headphone socket

Enhanced bass performance

- Dynamic Bass Boost for deep and dramatic sound

PHILIPS

Specifications

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, program play, repeat, shuffle, stop

Tuner/Reception/Transmission

- Tuner bands: FM, MW
- Antenna: FM antenna

Sound

- Sound enhancement: Dynamic Bass Boost
- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

Convenience

- Display type: LCD display
- Loader type: top

Connectivity

- USB: USB host
- Headphone: 3.5 mm

Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Power supply: 220 - 240 V
- Number of batteries: 6

Accessories

- Cables/Connection: power cord
- Others: User Manual
- Warranty: Warranty Certificate

Dimensions

- Packaging depth: 175 mm
- Gross weight: 2 kg
- Packaging height: 275 mm
- Packaging width: 320 mm
- Weight: 1.5 kg
- Main unit depth: 243 mm
- Main unit height: 146 mm
- Main unit width: 291 mm

Highlights

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

CD Shuffle/Repeat

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

Dynamic Bass Boost

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



Issue date 2014-02-12

Version: 2.0.5

12 NC: 8670 000 59494
EAN: 87 12581 52190 5

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com