

## Portable DVD player

 
Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome)

User manual



# PHILIPS

Meet Philips at the Internet  
<http://www.philips.com>





PET702



Printed in China

  WK731

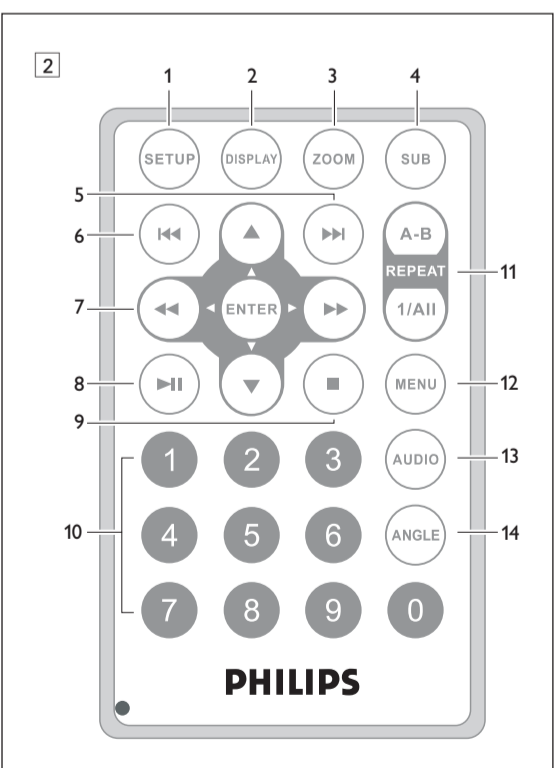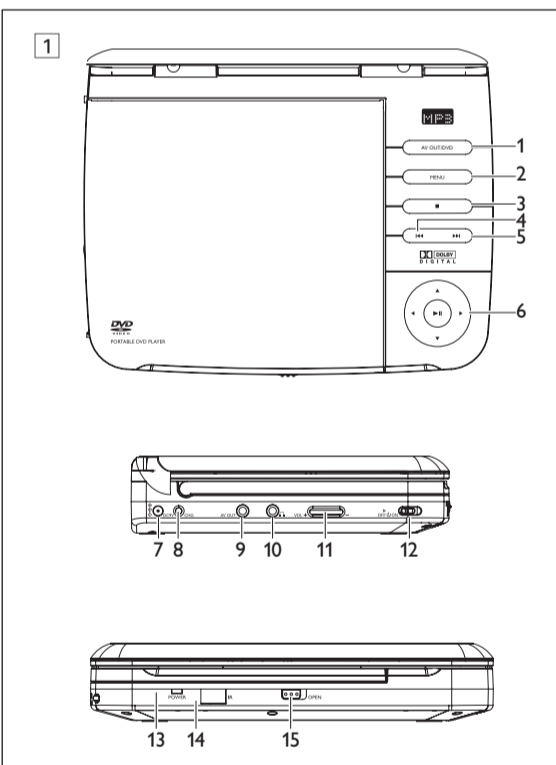

## English FUNCTIONAL OVERVIEW

Congratulations on your purchase and welcome to Philips!  
To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Main unit controls ( see figure 1 )

- ① **AV OUT/DVD** ..... Switch between DVD and AV OUT modes (TFT backlight is off in AV OUT mode).
- ② **MENU** ..... Display the MENU page.
- ③ **■** ..... Stop playback.
- ④ **◀◀** ..... Skip to the previous chapter, track or title.
- ⑤ **▶▶** ..... Skip to the next chapter, track or title.
- ⑥ **▲, ▼, ◀, ▶** ..... Navigate in a menu.  
..... (◀ / ▶) search backward/forward in a disc at different speeds.
- ⑦ **▶II** ..... Start or interrupt playback.  
..... Confirm a selection.

### Left of player ( see figure 1 )

- ⑦ **DC 9V** ..... Power supply socket.
- ⑧ **CHG** ..... Charge indicator.
- ⑨ **AV OUT** ..... Audio/Video output jack.
- ⑩ **📶** ..... Headphone jack.
- ⑪ **VOL** ..... Volume control.
- ⑫ **OFF ON** ..... Switch the power on/off.

### Front of player ( see figure 1 )

- ⑬ **POWER** ..... Power indicator.
- ⑭ **IR** ..... Remote sensor.
- ⑮ **OPEN** ..... Open the disc door to insert or remove disc.

## INTRODUCTION

### Your portable DVD player

Your portable DVD player plays digital video discs conforming to the universal DVD Video standard. With it, you will be able to enjoy full-length movies with true cinema picture quality, and stereo or multichannel sound (depending on the disc and on your playback set-up).

The unique features of DVD-Video, such as selection of soundtrack and subtitle languages, and of different camera angles (again depending on the disc), are all included.

What's more, parental lock lets you decide which discs your children will be able to see. You will find your player remarkably easy to use with the On-Screen Display and player display in combination with the remote control.

### Unpacking

First check and identify the contents of your package, as listed below:

- Portable DVD player
- Remote Control
- Car adaptor (12V)
- Audio / Video cable
- User Manual
- Warranty
- AC power adaptor, DSA-9W-09 F (DVE) or AY4132(PHILIPS)

### Placement

- Place the player on a firm, flat surface.
- Keep away from domestic heating equipment and direct sunlight.
- If the player cannot read CDs/DVDs correctly, try using a commonly available cleaning CD/DVD to clean the lens before taking the player to be repaired. Other cleaning methods may destroy the lens.
- Always keep the disc door closed to avoid dust on the lens.
- The lens may cloud over when the player is suddenly moved from cold to warm surroundings. It is then not possible to play a CD/DVD. Leave the player in a warm environment until the moisture evaporates.

## GENERAL INFORMATION

### Power Sources

- This unit operates on a supplied AC adaptor and car adaptor.
- Make sure that the input voltage of the AC adaptor is in line with the local voltage. Otherwise, the AC adaptor and unit may be damaged.
- Do not touch the AC adaptor with wet hands to prevent electric shock.
- When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.
- Unplug the AC adaptor from the outlet when the unit is not used for long periods of time.
- Hold the plug to disconnect the AC adaptor. Do not pull the power cord.

### Safety and maintenance

- Do not disassemble the unit for laser rays are dangerous to eyes. Any service should be done by qualified service personnel.
- Unplug the AC adaptor to cut the power if liquid or objects get inside the unit.
- Take care not to drop the unit or subject it to strong shocks, which may cause malfunction.
- Important (for models with by-packed headphones): Philips guarantees compliance with the maximum sound power of its audio players as determined by relevant regulatory bodies only with the original model of provided headphones. In case this one needs replacement, we recommend that you contact your retailer to order a model identical to that of the original provided by Philips.
- Traffic safety: do not use while driving or cycling as you may cause an accident.
- Do not expose to excessive heat caused by heating equipment or direct sunlight.
- This product is not waterproof: do not allow your player to be submerged in water. Water entering the player may cause major damage.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player.
- Apparatus shall not be exposed to dripping or splashing. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- Do not touch the lens!

Note: When the player is in use for a long period of time, the surface will be heated. This is normal.

## PREPARATIONS

### Power supply

#### Using the AC / DC adaptor

Turn off the player before connecting the supplied adaptor to it and the main power supply (as shown). The player must be turned off when the battery charges.

- ✓ **TIP**
- To avoid damage to the player, switch off before plugging or unplugging the AC adaptor.

#### Using the car adaptor

Connect the supplied car adaptor to the set and the car cigarette lighter outlet.

- ✓ **TIP**
- To avoid damage to the player, switch off before plugging or unplugging the car adaptor.
- When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.
- Make sure the temperature is below 35°C when the DVD player is connected to DC 16.0V in a car.

#### Powering your remote control

- 1 Open the battery compartment. Remove the protective plastic tab (first time users only).
- 2 Insert 1 x lithium 3V battery, type CR2025, then close the compartment.

### CAUTION

- Batteries contain chemical substances, so they should be disposed of properly.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.

## FUNCTIONAL OVERVIEW

### Remote controls ( see figure 2 )

- ① **SETUP** ..... Enter or exit the system menu.
- ② **DISPLAY** ..... Display information on TFT during playback.
- ③ **ZOOM** ..... Enlarge or reduce a picture or active image on the TFT.
- ④ **SUB** ..... Select a subtitle language.
- ⑤ **◀◀** ..... Skip to the previous chapter, track or title.
- ⑥ **▶▶** ..... Skip to the next chapter, track or title.
- ⑦ **▲, ▼, ◀, ▶** ..... Navigate in a menu.  
..... (◀ / ▶) search backward/forward in a disc at different speeds.
- ENTER** ..... Confirm a selection.
- ⑧ **▶II** ..... Start or interrupt playback.
- ⑨ **■** ..... Stop playback.
- ⑩ **0-9** ..... Numeric Keypad
- ⑪ **REPEAT 1/ALL** ..... Repeat a chapter/track/title.
- A-B** ..... Repeat playback of a specific section on a disc.
- ⑫ **MENU** ..... Enter or exit the disc contents menu.
- ⑬ **AUDIO** ..... Select an audio language when playing a DVD disc or select an audio mode (Stereo, Mono-Left or Mono-Right) when playing a VCD/CD disc.
- ⑭ **ANGLE** ..... Select DVD camera angle.

### CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

## INTRODUCTION

### About Built-in Rechargeable Battery

#### Precautions related to battery recharge

- 1 Once the battery is fully discharged, immediately recharge it (regardless of whether you plan to use the battery or not) in order to maximize the battery life. When the power is low, the battery icon will be shown on the upper-left corner of the TFT for warning.
- 2 To charge the battery, please directly connect this DVD player to AC mains and the charge indicator will turn on.

#### Using and maintaining your rechargeable batteries

- 1 Please make sure you always use only the AC adaptor included with the player to recharge your batteries.
- 2 Recharge efficiency will degrade when the environmental temperature drops below 50°F (10°C) or exceed 95°F (35°C).
- 3 The lasting time of the fully charged battery when a headphone is connected to the DVD player is approximately 2 hours.

#### Playable disc formats

In addition to DVD-Video disc, you will also be able to play all Video CDs and audio CDs (including CD+R, CD+RW, DVD±R and DVD±RW).

#### DVD-Video

Depending on the material on the disc (a movie, video clips, a drama series, etc.) these discs may have one or more Titles, and each Title may have one or more Chapters. To make access easy and convenient, your player lets you move between Titles, and also between Chapters.

#### CD with JPEG files

You can also view JPEG still photos on this player.

## GENERAL INFORMATION

### Hearing Safety

#### Listen at a moderate volume:

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

#### To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

#### Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
- Be sure to use your equipment responsibly and take appropriate breaks.

#### Be sure to observe the following guidelines when using your headphones:

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

## PREPARATIONS

Remove the battery if the remote control is not to be used for a long time.

### Connections

#### Connecting headphones

 
Connect the headphones into the 📶 jack of your set.

#### Connecting additional equipment

- Turn off your set before connecting to any additional equipment.
- You can connect the player to a TV or an amplifier to enjoy DVDs or karaoke.

#### AV OUT

Connect the desired device to this terminal directly (no setting needed in the DVD mode).

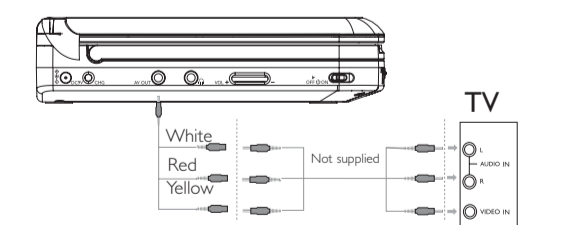

## NOTE



## INTRODUCTION

### Video CD

Depending on the material on the disc (a movie, video clips, a drama series, etc.) these discs may have one or more Tracks, and tracks may have one or more indexes, as indicated on the disc case. To make access easy and convenient, your player lets you move between tracks and between indexes.

### Audio CD / MP3 CD

Audio CDs / MP3-CD contain music tracks only. You can play them in the conventional way through a stereo system using the keys on the remote control and/or main unit, or via the TV using the On Screen Display (OSD).

### Handling discs

- Do not attach paper or tape to the disc.
- Keep the disc away from direct sunlight or heat sources.
- Store the disc in a disc case after playback.
- To clean, wipe the disc outwards from the center with a soft, lint-free clean cloth.

### On handling the LCD screen

The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

### Environmental information

We have reduced the packaging to its minimum and made it easy to separate into mono materials: cardboard, PS, PE and PET. Your set consists of material which can be recycled if disassembled by a specialized company. Please observe the local regulations to dispose of packaging, exhausted batteries and old equipment.

### Copyright information

All other brand and product names are trademarks of their respective companies or organizations. Unauthorized duplication of any recordings downloaded from the internet or made from CDs / VCDs / DVDs is a violation of copyright laws and international treaties.

## GENERAL EXPLANATION

### About this manual

This manual gives the basic instructions for operating this DVD player. Some DVD discs however are produced in a way that requires specific operation or allows only limited operation during playback. In these cases the player may not respond to all operating commands. When this occurs, please refer to the instructions in the disc inlay. When a "Ⓞ" appears on the screen, the operation is not permitted by the player or the disc.

### Remote control operation

- Unless otherwise stated, all operations can be carried out with the remote control. Always point the remote control directly at the player, making sure there are no obstructions in the path of the infrared beam.
- When there are corresponding keys on the main unit, they can also be used.

### Menu navigation

- Your player has an intuitive menu navigation system to guide you through various settings and operations.
- Use the function keys to activate / disable relevant operations.
- Use ▲, ▼, ◀, ▶ to browse through menus.
- Press ENTER key to confirm your selection.

## AUSTRALIA - Philips Manufacturers Warranty for Australia only

**These warranty conditions are valid for the following consumer electronics products:**  
Colour Televisions, Projection TV, Plasma & LCD TV, Video Cassette Recorder, CD Recorder & Players, DVD Players, DVD Recorder, DVD Recorders with HD Audio Systems, Home Theatre systems, Digital Set Top Box & Portable Audio products.

**The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.**

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions:

**1 Year Free Repair Service at Philips ASC**  
Colour Televisions, Plasma Televisions, LCD Televisions, Projection Television, DVD/Hi-Fi Combo, DVD Recorder with Hard Drive, LCD Projectors, Wireless Audio Systems, Audio Systems, Home Theatre Systems & Digital Set Top Boxes.

**1 Year Free Replacement at your Retailer**  
Portable Audio MP3 (not internet) products, Video Camera recorder, DVD Player/DVD/Hi-Fi Combo, Hard Drive DVD Recorder, video CD & Portable DVD/CD players.

**Conditions of Repair Warranty**

- At times for emergency services should be made to your nearest Philips Authorized Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided.
- The warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
- If a replacement product is supplied under the repair option it is warranted under the same conditions as the remainder of the warranty of the original purchased product only.
- Home service is provided only within the normal service area of one of our recommended Authorized Service Centres (ASC). It will be provided for the following reasons only with a screen size of 67cm or above (product includes CRT LCD TV, PDP and Plasma TV). Services with screen size less than that above for all other products may be made or sent by the consumer to the workshop of your nearest Authorized Service Centre at the Consumer's expense.
- The Manufacturer's Warranty is limited to 3 months for the above listed Consumer Electronics products if used in commercial applications.
- Philips may at its discretion choose to replace rather than repair any product covered by this warranty.
- Product accessories are covered by the same warranty period. Please contact the Philips Technology

Care Centre for the replacement of faulty accessories. This Manufacturer's Warranty is neither transferable nor valid in countries other than Australia.

**This warranty does not cover:**

- Damage or fault outside the normal service area controlled by selected Authorized Service Centres.
- Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions or cautions that attend that the product is in normal working order.
- Product failure caused by misuse, neglect, accidental damage, transit damage, insect/pest damage or modification by or subsequent repairs, external fires, lightning strikes, floods, water infiltration or heat damage.
- Cleaning of video or audio heads.
- Inadequate receiving antennas.
- Replacement of worn or used batteries or other consumables.
- Consumer products used in commercial applications (This warranty is limited to 3 months only).
- Second hand products.

**The conditions contained in this warranty shall replace and override the provisions of the Philips WorldWide Guarantee for products purchased in Australia and used in Australia.**

Service is provided through more than 100 accredited Authorized Service Centres throughout Australia. For a list of centres visit the nearest recommended Authorized Service Centre in capital & regional centres. Contact with the nearest

**Authorized Service Centre Network**  
1300 361 392

**Technology Care Centres**  
1300 361 391

Customer support is provided in Australia by our trained call centre staff. For assistance with product features and specifications please visit our website.

**Please request the following information for your records and keep in a safe place. We recommend retaining your purchase receipt to assist with any warranty claim.**

Serial number: \_\_\_\_\_  
Model number: \_\_\_\_\_  
Date of purchase: \_\_\_\_\_  
Retailer: \_\_\_\_\_

**Philips Consumer Electronics**  
a division of Philips Electronics Australia Limited  
ABN 24 028 481 743  
Level 1, 45 Spring Road, NORTH RIDE NSW 2113

Warranty valid for all new products purchased after 17 January 2007

## BASIC FUNCTIONS

### Switching on for OSD language setup

English is the default language of your player's on screen display. You may choose to use English, French, or German for your player's on screen display.

Region	OSD Language Options
Australia	English, French, German

- Slide the **POWER** switch to **ON** to switch on the player.
- Press **SETUP** for the setup menu.
- Select **General Setup Page** and press **ENTER**.
- Scroll and select **OSD Language** and press **▶** to select from OSD language options.
- Select your preferred language and press **ENTER**.



### Loading discs and switching on

- Slide **OPEN** to open the disc door.
- Insert your chosen disc, label side up (also when a double sided DVD disc is inserted). Make sure it is sitting properly in the correct recess.
- Gently push to close the door.
- Slide the **POWER** switch to **ON** to switch on the player.

**TIP**  
A normal mechanical noise is heard during playback.

## BASIC FUNCTIONS

### Playing a DVD disc

After switching on, inserting the disc and closing the door, playback starts automatically. The screen shows the type of disc loaded. The disc may invite you to select an item from a menu. Use the **▲, ▼, ◀, ▶** keys to highlight your selection, and press **ENTER**.

**Note:** Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an optional region code. If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play, and should be unloaded.

### Playing an audio or video CD disc

- After switching on, inserting the disc and closing the door, playback starts automatically. The screen shows the type of disc loaded as well as information about the disc's contents.
- While playing VCD with MTV/Karaoke, press number keys(0-9) to select the track and press **▶II** or **ENTER** to play the track. Press **MENU** to go back to menu of the selection.

## BASIC FUNCTIONS

### Playing an MP3 CD

The following playback features are available for MP3 CDs. Please refer to the corresponding sections for more information. Volume control, skipping tracks, searching, repeat, shuffle, etc. Use the **▲, ▼** keys to highlight your selected music folder. Press **ENTER** to play.

### Playing a JPEG discs

Use the **▲, ▼, ◀, ▶** keys to highlight your selected picture folder. Press **ENTER**. The player will then automatically enter the slide show mode.

During playback, you can:

- Use the **▲, ▼, ◀, ▶** to rotate the picture.
- Use the **▲** to flip up/down.
- Use the **▼** to flip left/right.

- Press **MENU** to go back to folder screen.

- Press **■** to go to group preview.
- Use the **▲, ▼, ◀, ▶** to highlight the preview picture and access the on-screen functions.

- Press **ZOOM** repeatedly to display the picture with different scales.
- Use the **▲, ▼, ◀, ▶** to view the zoomed picture (for picture zoomed in only).

**Note:** Unless stated otherwise, all operations described are based on remote control operation.

## NEW ZEALAND - Guarantee and Service for New Zealand

Thank you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

### Conditions

- The product must have been purchased in New Zealand As proof of purchase, retain the original sales docket indicating the date of purchase.
- The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
- The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
- Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
- In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee. This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

### How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

 
However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

**The Guarantee Controller**  
Philips New Zealand Ltd.  
P.O. Box 41,021  
Auckland  
☎ (09) 84 94 160  
fax ☎ (09) 84 97 858

## GENERAL FEATURES

### Moving to another title / track / chapter

- When a disc has more than one title or track, you can move to another title/track/chapter as follows:
- Press **▶** briefly during play to select the next title/track / chapter.
  - Press **◀** briefly during play to step back to the previous title/track/chapter.
  - To go directly to any title, track or chapter, enter the corresponding number using the numerical keys (0-9).

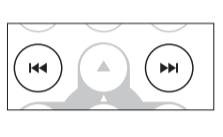

### Search

During playback, press **▶▶** repeatedly for the following forward search options: Press **◀◀** repeatedly for the following backward search options:

Forward Search	Backward Search
2 X backwards	2 X forward
4 X backwards	4 X forward
8 X backwards	8 X forward
16 X backwards	16 X forward
32 X backwards	32 X forward
normal speed	normal speed



Press **ENTER** or **▶II** to resume normal playback.

## GENERAL FEATURES

### Changing the audio output (for VCD/CD)

Press **AUDIO** repeatedly for the following audio options.

Audio Options	Repeat
x 1 Mono left	x 2 Mono right
x 3 Stereo	

**TIP**  
This key is used to select audio languages during DVD playback.

### ZOOM

The Zoom function allows you to enlarge the video image and to pan through the enlarged image. Press **ZOOM** repeatedly to select the following zooming options.

Zoom Options	Normal
Zoom x 1 2X	Zoom x 2 3X
Zoom x 3 4X	Zoom x 4 normal

**TIP**  
During JPEG operation, the sequence is 100%, 125%, 150%, 200%, 50%, 75% and normal.

### REPEAT

Press **REPEAT 1/ALL** repeatedly for the following repeat options:

DVD actions	MP3 actions	CD actions	JPEG actions
x 1 repeats chapter	repeats one	repeats track	repeats one
x 2 repeats title	repeats folder	repeats all	repeats all
x 3 repeats all	repeats all	repeats all	repeats all
x 4 cancels repeat	cancels repeat	cancels repeat	cancels repeat

## GENERAL FEATURES

### DISPLAY

Press **DISPLAY** on the remote repeatedly for the following display options:

DVD	CD/VCD
x 1 Title elapsed	Single elapsed
x 2 Title remained	Single remained
x 3 Chapter elapsed	Total elapsed
x 4 Chapter remained	Total remained
x 5 Display off	Display off

**TIP**  
During JPEG operation, pressing this button enables you to select 17 slideshow modes.

## SPECIAL DVD FEATURES

### Checking the contents of DVD-Video discs: MENU

For titles and chapters, selection menus may be included on the disc. The DVD's menu feature allows you to make selections from these menus. Press the appropriate numerical key, or use the **▲, ▼, ◀, ▶** keys to highlight your selection, and press **ENTER**.

### Disc menu

 
Press **MENU**. The menu may list, for example, camera angles, spoken language and subtitle options, and chapters for the title.



### Changing the language

Press **AUDIO**. If the current disc has different language options, this now appears on the screen.

Press **AUDIO** repeatedly until you have reached your desired language option.



### Subtitle

Press **SUB**. If the current disc has different subtitles options, this now appears on the screen.

Press **SUB** repeatedly until you have reached your desired subtitles option.

 


**TIP**  
The above two features depend on whether your disc contains any language or subtitle options.

## SPECIAL DVD FEATURES

### Playing a title

- Press **DISC MENU** to enter the disc title menu.
- Use **◀▶▶▶▶▶▶▶▶▶▶** or **numeric keys (0-9)** to select a play option.
- Press **ENTER** to confirm.

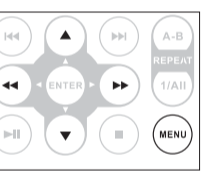

## SETUP OPERATIONS

To maximize your playback experience, use **SETUP** to fine tune your settings. Use the **▲, ▼, ◀, ▶** keys to highlight your selection, and press **ENTER**.

- Press **SETUP**. A list of features is shown.
- Use the **▲, ▼** keys to highlight your selection.

When the cursor highlights these settings, press **ENTER** to:

General Setup Page	select display and other options
Video Setup Page	select video options
Password Setup Page	select password options
Preference Page	select playback preferences
Exit	exit the system menu
3 Press ◀◀	to abort current settings or go back to previous menu level.
4 Press SETUP	to exit.

### General Setup Page

When the cursor highlights these settings, press **ENTER** to:

TV Display	select display ratio
Angle Mark	select angle mark display options
OSD Language	select onscreen display language
Screen Saver	select screen saver options
Last Memory	select last playback memory options
Press ◀◀	to abort current settings or go back to previous menu level.

**Note:** Before using the **▲, ▼** keys to select your desired angle mark, ensure the disc has been recorded with angle mark and you have enabled the angle mark option in the system menu.

## SETUP OPERATIONS

### Video Setup Page

When the cursor highlights these settings, press **ENTER** to:

Brightness	It allows you to adjust the brightness of the screen
Contrast	It allows you to adjust the contrast of the screen
Press ◀◀	to abort current settings or go back to previous menu level

### Password Setup Page

When the cursor highlights these settings, press **ENTER** to:

Password change existing password (3308 by default)  
Press **◀◀** to abort current settings or go back to previous menu level  
**Note:** Parental options are only selectable when password mode is deactivated.

### Preference Page

When the cursor highlights these settings, press **ENTER** to:

Audio	select audio language options
Subtitle	select subtitle language options
Disc Menu	select disc menu language options
Parental	select parental options
Default	restore factory settings

Press **◀◀** to abort current settings or go back to previous menu level.

## TROUBLESHOOTING

If it appears that the DVD-Video player is faulty, first consult this checklist. It may be that something has been overlooked.

**WARNING**  
Under no circumstances should you try to repair the set yourself as this will invalidate the guarantee. If a fault occurs, first check the points listed, before taking the set for repair. If you are unable to solve a problem by following these hints, consult your dealer or service centre.

Symptom	Remedy
<b>No power</b>	- Check if both plugs of the mains cord are properly connected. - Check if there is power at the AC outlet by plugging in another appliance. - Check if the built-in battery is drained. - Check if car adaptor is connected appropriately.
<b>Distorted picture</b>	- Check the disc for fingerprints and clean with a soft cloth, wiping from centre to edge. - Sometimes a small amount of picture distortion may appear. This is not a malfunction.
<b>Completely distorted picture / no colour in the TV screen</b>	- The PAL setting may be in the wrong status. Match your TV's setting with the player's setting.
<b>No sound</b>	- Check audio connections. If using a HiFi amplifier, try another sound source.

## TROUBLESHOOTING

Symptom	Remedy
<b>Disc can't be played</b>	- Ensure the disc label is upwards. - Clean the disc. - Check if the disc is defective by trying another disc.
<b>The player does not respond to the remote control</b>	- Aim the remote control directly at the sensor on the front of the player. Avoid all obstacles that may interfere with the signal path. Inspect or replace the batteries.
<b>Distorted or B/W picture with DVD</b>	- Use only discs formatted according to the TV-set used (PAL).
<b>Player does not respond to all operating commands during playback</b>	- Operations are not permitted by the disc. - Refer to the instructions in the disc inlay.
<b>Player feels warm</b>	- When the player is in use for a long period of time, the surface will be heated. This is normal.
<b>Display goes dimmer when AC is unplugged</b>	- The unit is saving power to ensure longer playtime with battery. It is normal. Adjust the brightness using the rotary brightness control.

**This set complies with the radio interference requirements of the European Union.**

## TECHNICAL DATA

Dimensions	210 x 178 x 39 mm
Weight	8.3 x 7.0 x 1.5 inches
Power supply	0.79 kg / 0.36 pounds
Power Consumption	DC 9V 1.0A
Operating temperature range	9W
Laser wavelength	0 - 45°C
Video system	650nm
Frequency response	NTSC
Signal/noise ratio	20Hz - 20KHz ± 1dB
Audio distortion + noise	≥ 80dB
Channel separation	≤ -80(1KHz)
Dynamic range	≥ 80dB
Output	≥ 80dB
Audio out (analog audio)	Output level: 2V ± 10%
Load impedance:	10KΩ
Video out Output level:	1Vp - p ± 20%
Load impedance:	75Ω

**Philips reserves the right to make design and specification changes for product improvement without prior notice.**

**Modifications not authorized by the manufacturer may void users authority to operate this device.**

**All rights reserved.**