

Quick start guide

EN	Quick start guide	I
FR	Guide de démarrage rapide	9
DE	Kurzanleitung	17
ES	Guía de inicio rápido	25
NL	Handleiding voor snel gebruik	33
IT	Guida di riferimento rapido	41
PO	Início rápido	49
SV	Snabbguide	57

DA	Hurtig start	65
SU	Nopea aloitus	73
CS	Rychlý přehled	81
HU	Gyors áttekintés	89
PL	Krótką instrukcja obsługi	97
SL	Rýchly prehlád	105
RU	Быстрый запуск	113
EL	Γρήγορη έναρξη	121



Need help?

Look up our Support Centre website

www.philips.com/support

or

Call our Customer Care helpline in your country

Besoin d'aide ?

Visitez la page Web de notre centre
d'assistance à l'adresse

www.philips.com/support

ou

Appelez le centre client de votre pays

¿Necesita ayuda?

Consulte nuestra página Web de Soporte técnico,

www.philips.com/support



Llame a nuestra Línea de atención al cliente de su país

Support?

Besuchen Sie unser Support Center auf

www.philips.com/support

oder

wenden Sie sich einfach an den telefonischen Kundendienst
Ihres jeweiligen Landes

Country	Helpdesk	Tariff / min	Keep ready
Europe			
Austria	0820 901115	€0.20	Das Kaufdatum. Modellnummer und Seriennummer
Belgium	070 253 010	€0.17	La date d'achat la référence et le numéro de série du produit
Denmark	3525 8761	Local tariff	Forbrugeren's indkøbsdato, type/model-og serienummer
Finland	09 2290 1908	Paikallinen hinta	Ostopäivä ja tarkka mallinnumero ja sarjanumero
France	08 9165 0006	€0.23	La date d'achat la référence et le numéro de série du produit
Germany	0180 5 007 532	€0.12	Das Kaufdatum. Modellnummer und Serial nummer
Greek	0 0800 3122 1223	Δωρεάν	Την ημερομηνία αγοράς και Τον ακριβήκωδικό μοντέλου και Τον αριθμό σειράς του προϊόντος σας
Ireland	01 601 1161	Local tariff	Date of Purchase. Model number and Serial number
Italy	199 404 042	€0.25	La data di acquisto, numero di modello e numero di serie
Luxemburg	26 84 30 00	Local tariff	La date d'achat, la référence et le numéro de série du produit
Netherlands	0900 0400 063	€0.20	De datum van aankoop, modelnummer en serienummeret
Norway	2270 8250	Local tariff	Datoen da du kjøpte produktet & modellnummer & serienummeret
Portugal	2 1359 1440	Local tariff	A data de compra, número do modelo e número de série
Spain	902 888 785	€0.15	Fecha de compra e número del modelo e número de serie
Sweden	08 632 0016	Local tariff	Inköpsdatum, modellnummer och serienummer
Switzerland	02 2310 2116	Local tariff	Das Kaufdatum und Modellnummer und Seriennummer
UK	0906 1010 017	£0.15	Date of Purchase, Model number and Serial number
North America			
Canada	1-800-661-6162 (Francophone) 1-888-744-5477 (English / Spanish)	Free	Date of Purchase, Model number and Serial number
USA	1-888-744-5477	Free	Date of Purchase, Model number and Serial number
South America			
Argentina	11 4544 2047	Local tariff	Fecha de compra e número del modelo e número de serie
Brazil	0800 701 02 03 (Except Sao Paulo)	Free	A data de compra, número do modelo e número de série
	2121 0203 (Sao Paulo)	Local tariff	
Chile	600 744 5477	Local tariff	Fecha de compra e número del modelo e número de serie
Mexico	01 800 504 6200	Free	Fecha de compra e número del modelo e número de serie
Asia			
China	4008 800 008	Local tariff	Date of Purchase, Model number and Serial number
Hong Kong	2619 9663	Local tariff	Date of Purchase, Model number and Serial number
Korea	02 709 1200	Local tariff	Date of Purchase, Model number and Serial number

Getting started with Micro Jukebox

Please take some time to read this before using your device.
We hope you enjoy your device.

Product Registration

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/register so we can inform you as soon as new free upgrades become available.

Don't forget about upgrades

 
 
We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/support for free upgrades of the latest software and firmware for your product.

These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

Please read the user manual on the included CD for detailed information

English	1
Français	9
Deutsch	17
Español	25
Nederlands	33
Italiano	41
Português	49
Svenska	57
Dansk	65
Suomi	73
Cesky	81
Magyar	89
Polski	97
Slovensky	105
Русский	113
Ελληνικά	121

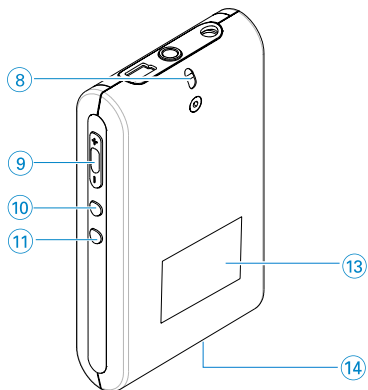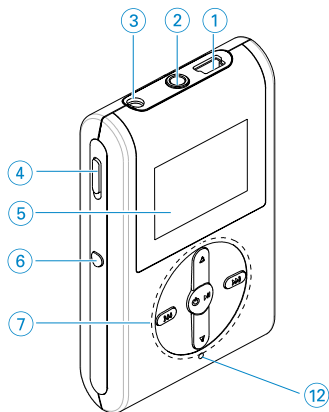

Overview of controls and connections


- | | | |
|---|---|--|
| ① | USB cable connector | |
| ② |  | Headphones jack |
| ③ | 5V DC | Charging socket |
| ④ | HOLD slider | To disable key press |
| ⑤ | LCD display | Dynamically displays menu, options and track information |
| ⑥ | VIEW | To switch between root menu, library and now playing screens |
| ⑦ | ▲ / ▼ | Scroll; SuperScroll; Playmode shortcut and ▲ / ▼ |
| | ⏮ / ⏭ | Rewind / Fast forward; Skip to previous / next; Up / Down to 1 level |
| | ⏻ ⏮⏭ | Power on / off and Play / Pause; |
| ⑧ | Neckstrap eyelet | |
| ⑨ | Volume + / - | Volume control |
| ⑩ | REC | Start or Stop Voice recording |
| ⑪ | PLAYLIST | Add the current track to My Playlist |
| ⑫ | MIC | Microphone |
| ⑬ | Type number | |
| ⑭ | Serial number | |

1

Charge

Your device is powered by a rechargeable battery.

 Please charge for 4 hours for 100% battery power for first time use or fast charge 70% in 1 hour.




2

Power on and play

Press and hold the ►|| key to power ON / OFF.

Basic Operation	Controls to press
To switch between root menu, library and now playing screens*	Press and hold VIEW
Scrolling and browsing	▲, ▼, ◀◀ / ▶▶ for up, down, left, right
Go to different levels of menu	Press ▶▶ for next and ◀◀ for previous
Music	
Play/Pause music	Press ►
Change volume	Press VOLUME + / -
Fast forward/Rewind in a track	Press and hold ▶▶ / ◀◀
Play next or previous track	Press ▶▶ for next and ◀◀ for previous
Add to my playlist	During music playback, press PLAYLIST to add music to my PLAYLIST
Recording	
Start voice recordings	Press REC for 3 seconds

 *Switch between play and library screen

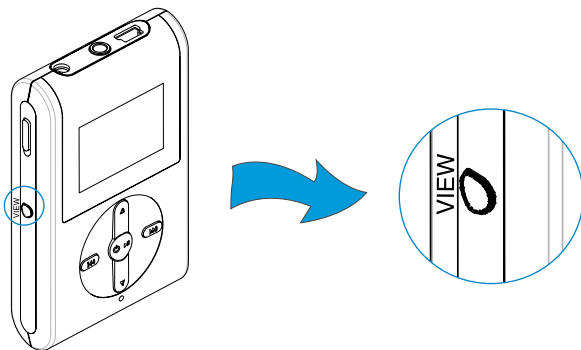

Playback



Library

To switch between now playing and library screens: Press **VIEW**

3

Install

Insert the included CD into your computer's CDROM drive. Select your language and follow screen instructions to complete installation of Windows Media Player 10 (Windows XP) and Philips Device Manager.



System requirements:

- Windows® XP(SP1 or above)
- 64 MB RAM
- 100 MB hard drive space
- Internet connection
- USB port

4

Connect



Connect the by-packed adapter to your device and to the main power supply. Connect the smaller end of your USB cable to your device, the bigger end to your computer's USB port. Your device will be recognized as a portable device on your computer. It is now ready to download music tracks.

Ensure your device is connected before opening WMP for best performance.

5

Transfer

Transfer music files from your PC to your device via Windows Media Player.

Please read "Getting started with Windows Media Player" for detailed information.



How do I reset my device?

If your device hangs up, do not panic. Simply reset your device. Press and hold ►|| and [VOLUME +] for 3 seconds. Then press ►|| to power on again. Your data or your music will not be affected or damaged!

How do I repair my device?

With Philips **Device Manager** you can update and repair the software in your device with a few simple clicks. Install Philips Device Manager from the CD ROM.

- ① Connect your device to your computer.
- ② Launch Device Manager User Interface by right-clicking on this  icon in the taskbar and selecting "Launch Device Manager" or by going to **Start → Programs → Philips Device Manager**
- ③ In the main window, go to the repair tab and click Repair.
- ④ You will be prompted before repair begins.

ATTENTION!

All media contents will be erased!

- ⑤ Click OK to continue. Click Cancel to stop.
- ⑥ The Device Manager will repair your device. Once the repair is complete, the device can be disconnected from the PC and is ready to be used again.

Note: Your device is equipped with data logging function which help us enhance your user experience. Please refer to the user manual for details.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
2005 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

3140 175 20631
wk6112



Printed in China